
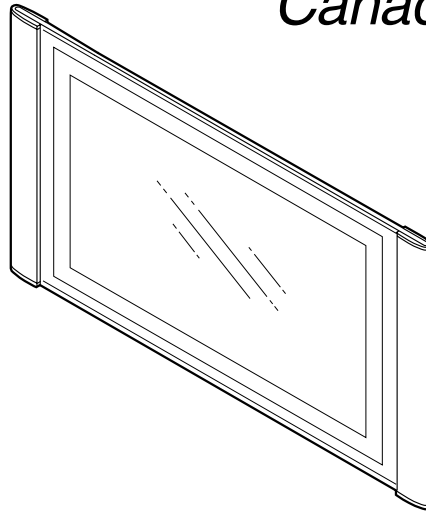


KDE61XBR950

SERVICE MANUAL

US Model
Canadian Model

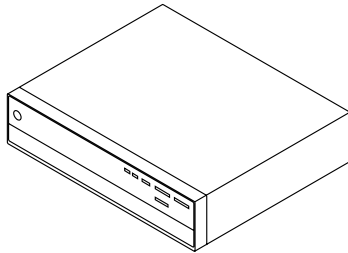

SPECIFICATIONS

Panel System	Plasma Display panel	
Display resolution	1365 pixels (horizontal) × 768 pixels (vertical)	
Antenna	75 ohm external terminal for VHF/UHF	
Television System	NTSC, American TV Standard	
Channel Coverage	VHF	2-13
	UHF	14-69
	DTV	1-999
	CATV	1-125
Power Requirements	120V, 60 Hz	
Inputs/Outputs		
DVI-HDTV	1 terminal, 3.3V T.M.D.S., 50 ohms The DVI-HDTV input terminal is compliant with the EIA-861 standard and is not intended for use with personal computers.	
Video (IN)	3 total (1 on front panel)	1 Vp-p, 75 ohms unbalanced, sync negative
SVideo (IN)	3 total (1 on front panel)	Y: 1 Vp-p, 75 ohms unbalanced, sync negative C: 0.286 Vp-p (Burst signal), 75 ohms
Audio (IN)	6 total (1 on front panel)	500 mVrms (100% modulation) Impedance: 47 kilohm
Component Video Input	2 (Y, PB, PR)	Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative; PB: 0.7 Vp-p, 75 ohms PR: 0.7 Vp-p, 75 ohms
CONTROL S (IN)	1	minijack
CONTROL S (OUT)	1	minijack
Digital Audio Optical Output (PCM/Dolby Digital)	1	Optical Rectangular (1)

FLAT PANEL COLOR TV
SONY®

i.LINK	3 total (1 on front panel)	4-pin S400 i.LINK terminal
Variable/Fixed Audio (OUT)	1	More than 408 mVrms at the maximum volume setting (Variable) More than 408 mVrms (Fixed) Impedance (output): 2 kilohms
Sub woofer (OUT)	1	phono jack
RF Inputs	2	
Screen Size (measured diagonally)	61 inches	
Speaker Output	15W × 2	
Dimensions (W × H × D)	PDM-6110	1797 × 937 × 110 mm (70 7/8 × 37 × 4 3/8 in)
	MBD-XBR950	430 × 79 × 342.8 mm (17 × 3 1/8 × 13 1/2 in)
Mass	Display unit PDM-6110: 71kg (156 lbs 8 oz)	
	Media receiver unit MBD-XBR950: 6.5kg (14 lbs 5 oz)	
Power Consumption	In Use	Display unit PDM-6110: 770 W
		Media receiver unit MBD-XBR950: 53 W
	In Standby	Under 1.5 W
	i.LINK standby	Under 22 W
Supplied Accessories	Media receiver unit Remote Control (1) AA (R6) Batteries (2) AC power code (2) AC plug holder (1) Display interface cable (1) Antenna cable (1) Cleaning cloth (1)	RM-Y1000
	Display unit Frame bars (2) Screws (2)	

Design and specifications are subject to change without notice.

WARNING AND CAUTIONS

CAUTION


These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

WARNING!!

An isolation transformer should be used during any service to avoid possible shock hazard, because of live chassis. The chassis of this receiver is directly connected to the ac power line.



SAFETY-RELATED COMPONENT WARNING!!

Components identified by shading and  mark on the schematic diagrams, exploded views, and in the parts list are critical for safe operation. Replace these components with Sony parts whose part numbers appear as shown in this manual or in supplements published by Sony. Circuit adjustments that are critical for safe operation are identified in this manual. Follow these procedures whenever critical components are replaced or improper operation is suspected.


ATTENTION!!

Ces instructions de service sont à l'usage du personnel de service qualifié seulement. Pour prévenir le risque de choc électrique, ne pas faire l'entretien autre que celui contenu dans le Mode d'emploi à moins que vous soyez qualifié faire ainsi.

Afin d'éviter tout risque d'électrocution provenant d'un châssis sous tension, un transformateur d'isolement doit être utilisé lors de tout dépannage. Le châssis de ce récepteur est directement raccordé à l'alimentation du secteur.



ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

Les composants identifiés par une trame et par une marque  sur les schémas de principe, les vues explosées et les listes de pièces sont d'une importance critique pour la sécurité du fonctionnement. Ne les remplacer que par des composants Sony dont le numéro de pièce est indiqué dans le présent manuel ou dans des suppléments publiés par Sony. Les réglages de circuit dont l'importance est critique pour la sécurité du fonctionnement sont identifiés dans le présent manuel. Suivre ces procédures lors de chaque remplacement de composants critiques, ou lorsqu'un mauvais fonctionnement suspecte.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:


1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are “pinched” or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described right.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

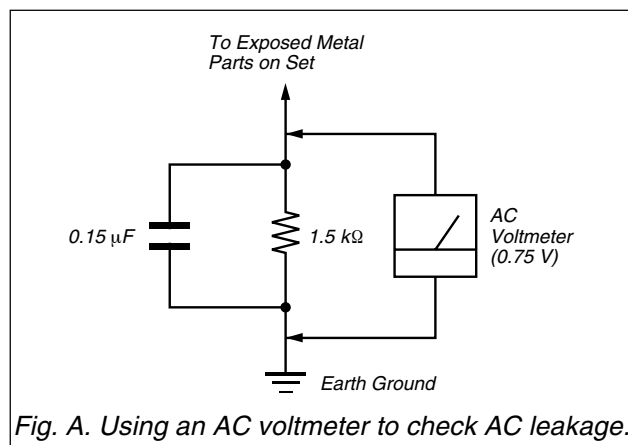

WARNING!!

SAFETY-RELATED COMPONENT WARNING!!
COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

AVERTISSEMENT!!

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!
LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE ! SONT CRITIQUES POUR LA SÉCURITÉ. NE LES REMPLACER QUE PAR UNE PIÈCE PORTANT LE NUMÉRO SPECIFIÉ. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.


TABLE OF CONTENTS

1. DISASSEMBLY	1-1		
1-1. DISPLAY UNIT (PDM-6110)	1-1		
1-1-1. REAR COVER REMOVAL	1-1		
1-1-2. G1 BOARD REMOVAL	1-2		
1-1-3. F1 AND K2 BOARDS REMOVAL	1-2		
1-1-4. DEM AND K3 BOARDS REMOVAL	1-3		
1-1-5. G2 BOARD REMOVAL	1-3		
1-1-6. SPEAKER BOX ASSY REMOVAL	1-4		
1-1-7. FILTER GLASS BRACKET ASSY REMOVAL	1-5		
1-1-8. R1 BOARD REMOVAL	1-6		
1-1-9. R2 BOARD REMOVAL	1-6		
1-1-10. PLASMA DISPLAY PANEL	1-7		
1-2. MEDIA RECEIVER UNIT (MBD-XBR950) ...	1-8		
1-2-1. TOP COVERS REMOVAL	1-8		
1-2-2. QH BOARD REMOVAL	1-8		
1-2-3. H1, H2, H3 AND H4 BOARDS REMOVAL ..	1-9		
1-2-4. G BOARD REMOVAL	1-9		
1-2-5. A BOARD REMOVAL	1-10		
1-3. CABLE ARRANGEMENTS FOR MEDIA RE CEIVER UNIT (MBD-XBR950)	1-11		
1-3-1. CN9401 LEAD ARRANGEMENT ON A BOARD	1-11		
1-3-2. i-LINK CABLE ARRANGEMENT	1-11		
1-3-3. FAN LEAD, RELAY CABLE, AND PIN CABLE ARRANGEMENT	1-11		
1-3-4. CABLE ARRANGEMENTS NEAR ANTENNA SWITCH	1-11		
1-3-5. CABLE ARRANGEMENTS NEAR BLOCK	1-12		
1-3-6. LVDS CABLE ARRANGEMENT	1-12		
2. ADJUSTMENTS	2-1		
2-1. VS, VD Voltage Adjustment	2-1		
2-2. White Balance Adjustment	2-1		
3. DIAGRAMS	3-1		
3-1. BLOCK DIAGRAMS	3-1		
3-1-1. DISPLAY UNIT (PDM-6110)	3-1		
3-1-2. MEDIA RECEIVER UNIT (MBD-XBR950)	3-6		
3-2. FRAME DIAGRAM	3-11		
3-3. CIRCUIT BOARDS LOCATION	3-12		
3-3-1. DISPLAY UNIT (PDM-6110)	3-12		
3-3-2. MEDIA RECEIVER UNIT (MBD-XBR950)	3-12		
3-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS	3-12		
3-4-1. DISPLAY UNIT (PDM-6110)	3-13		
(1) Schematic Diagram of F1 Board	3-13		
(2) Schematic Diagrams of DEM Board	3-14		
(3) Schematic Diagram of G1 Board	3-23		
(4) Schematic Diagram of G2 Board	3-25		
(5) Schematic Diagram of K2 Board	3-27		
(6) Schematic Diagram of K3 Board	3-29		
(7) Schematic Diagram of R1 Board	3-30		
(8) Schematic Diagram of R2 Board	3-30		
3-4-2. MEDIA RECEIVER UNIT (MBD-XBR950)	3-31		
(1) Schematic Diagrams of A Board	3-31		
(2) Schematic Diagram of G Board	3-36		
(3) Schematic Diagrams of H1 Board	3-38		
(4) Schematic Diagrams of H2 Board	3-39		
(5) Schematic Diagram of H3 and H4 Boards	3-41		
(6) Schematic Diagram of IF Board	3-42		
(7) Schematic Diagrams of M Board	3-43		
(8) Schematic Diagram of UD Board	3-49		
3-5. SEMICONDUCTORS	3-51		
4. EXPLODED VIEWS	4-1		
4-1. DISPLAY UNIT-1 (PDM-6110)	4-2		
4-2. DISPLAY UNIT-2 (PDM-6110)	4-3		
4-3. MEDIA RECEIVER UNIT-1 (MBD-XBR950)	4-4		
4-4. MEDIA RECEIVER UNIT-2 (MBD-XBR950)	4-5		
4-5. MEDIA RECEIVER UNIT-3 (MBD-XBR950)	4-6		
4-6. PACKING MATERIALS FOR DISPLAY UNIT (PDM-6110)	4-7		
4-7. PACKING MATERIALS FOR DISPLAY UNIT (MBD-XBR950)	4-8		
5. ELECTRICAL PARTS LIST	5-1		


SECTION 1 DISASSEMBLY

1-1. DISPLAY UNIT (PDM-6110)


1-1-1. REAR COVER REMOVAL

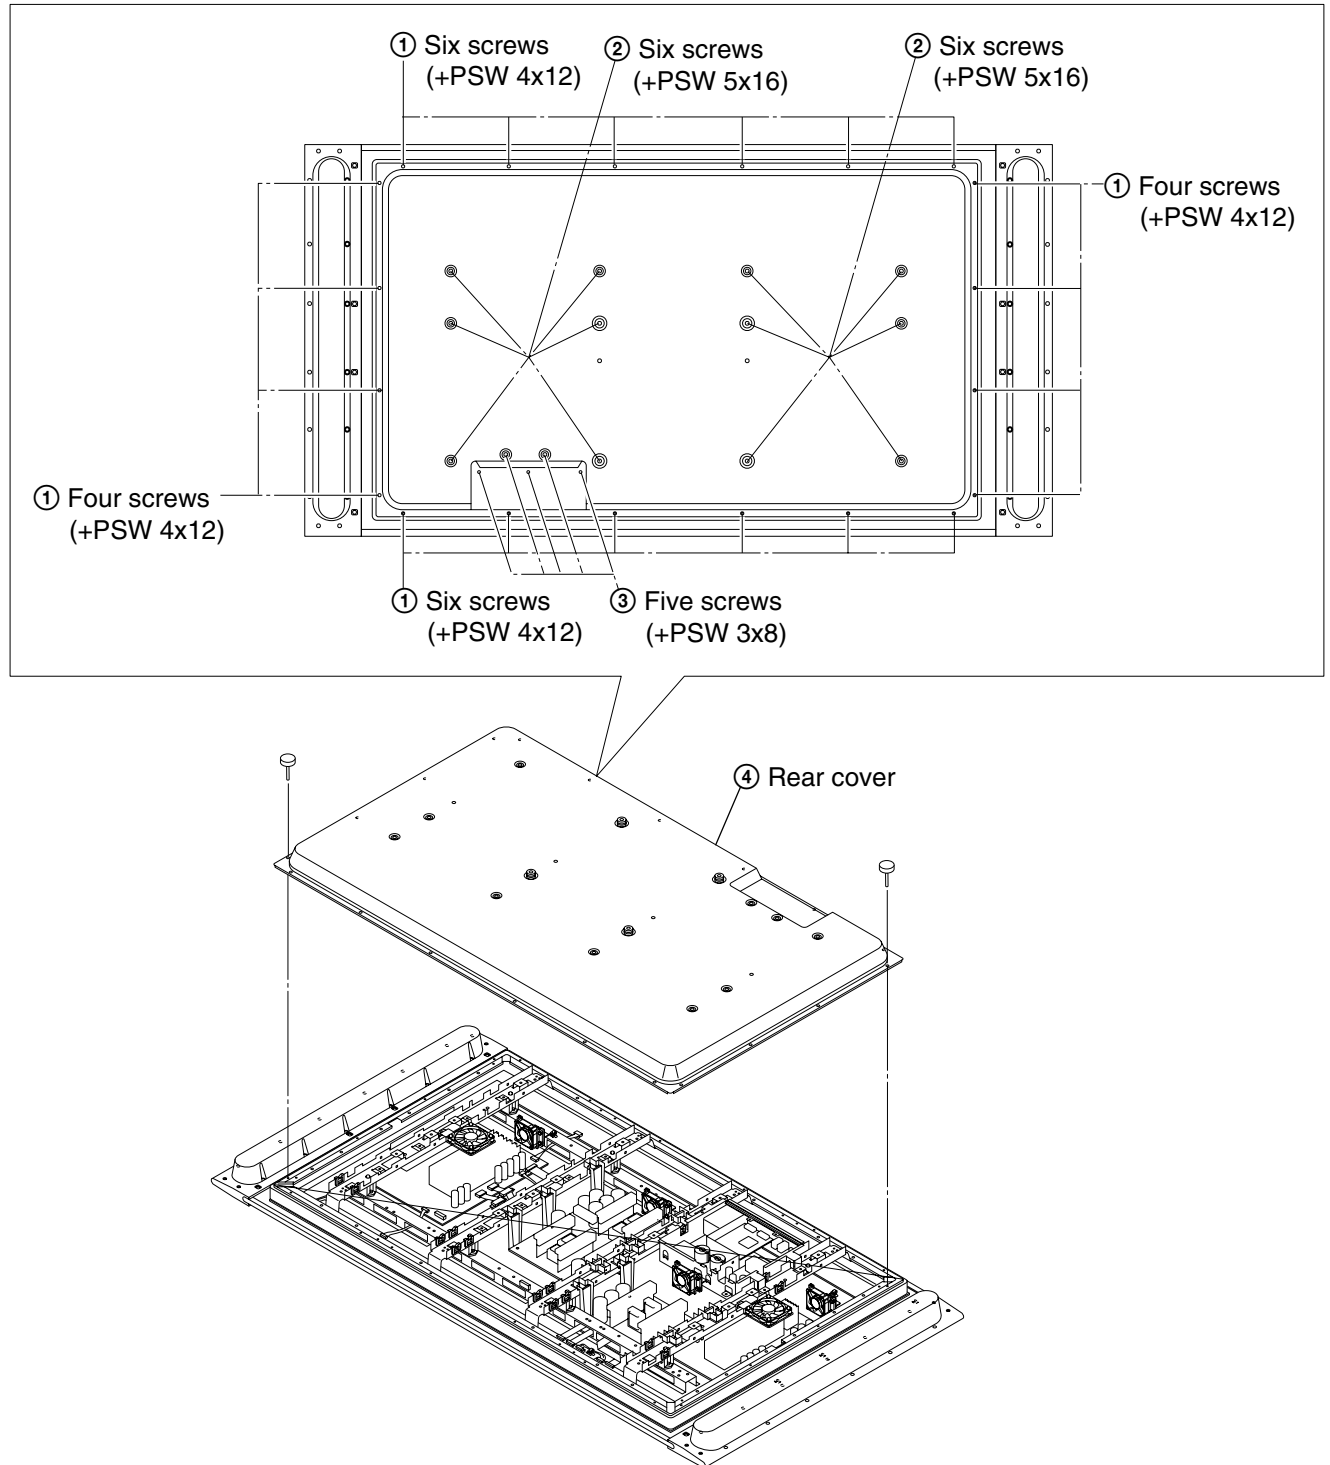


1-1-2. G1 BOARD REMOVAL

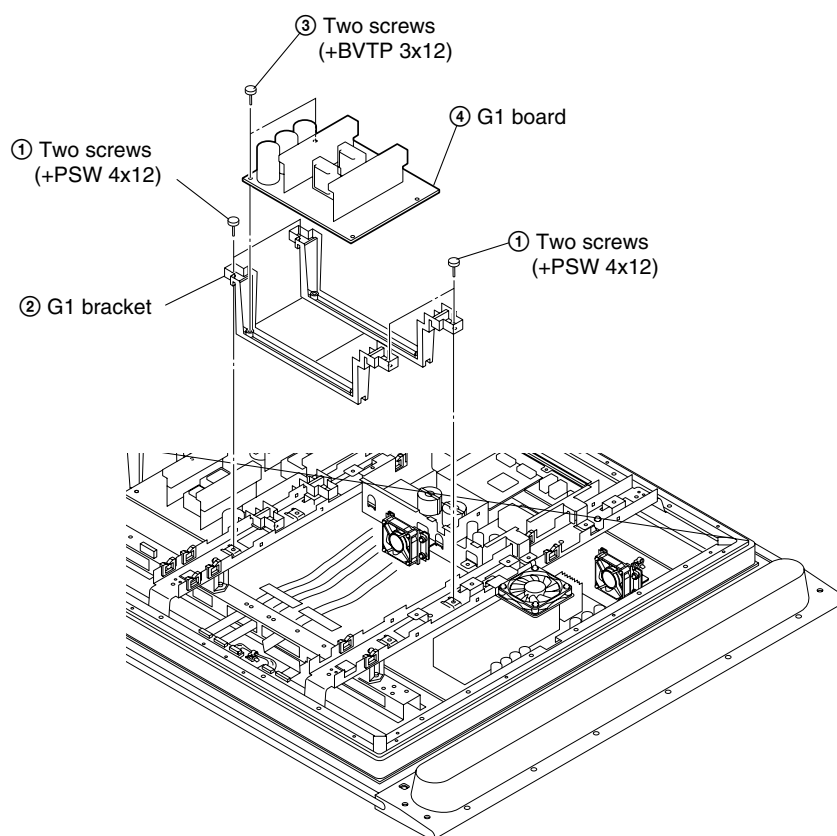


1-1-3. F1 AND K2 BOARDS REMOVAL

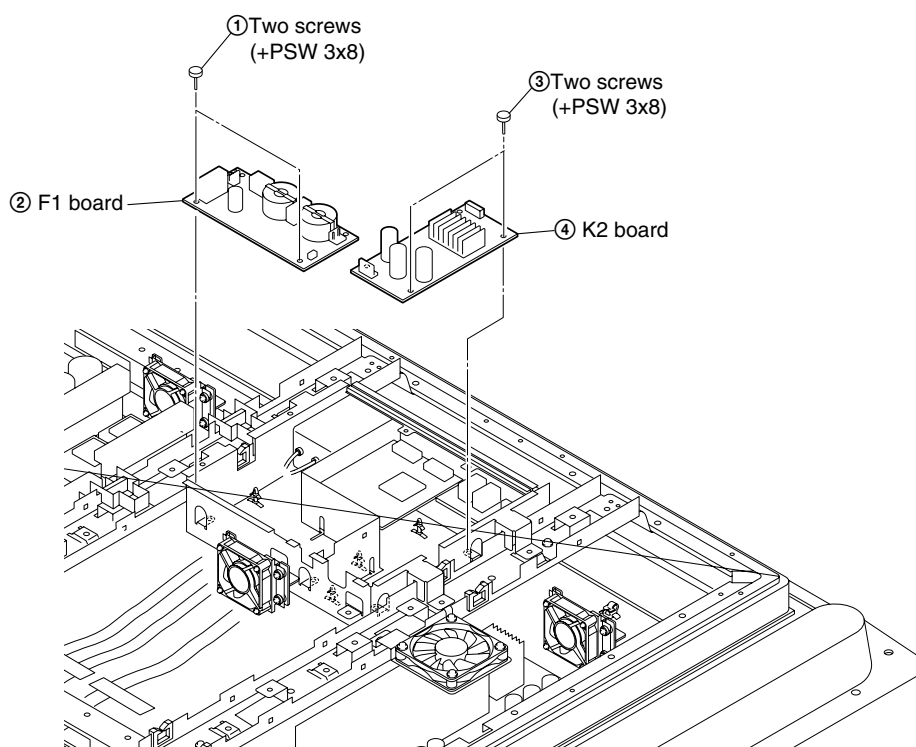


1-1-4. DEM AND K3 BOARDS REMOVAL

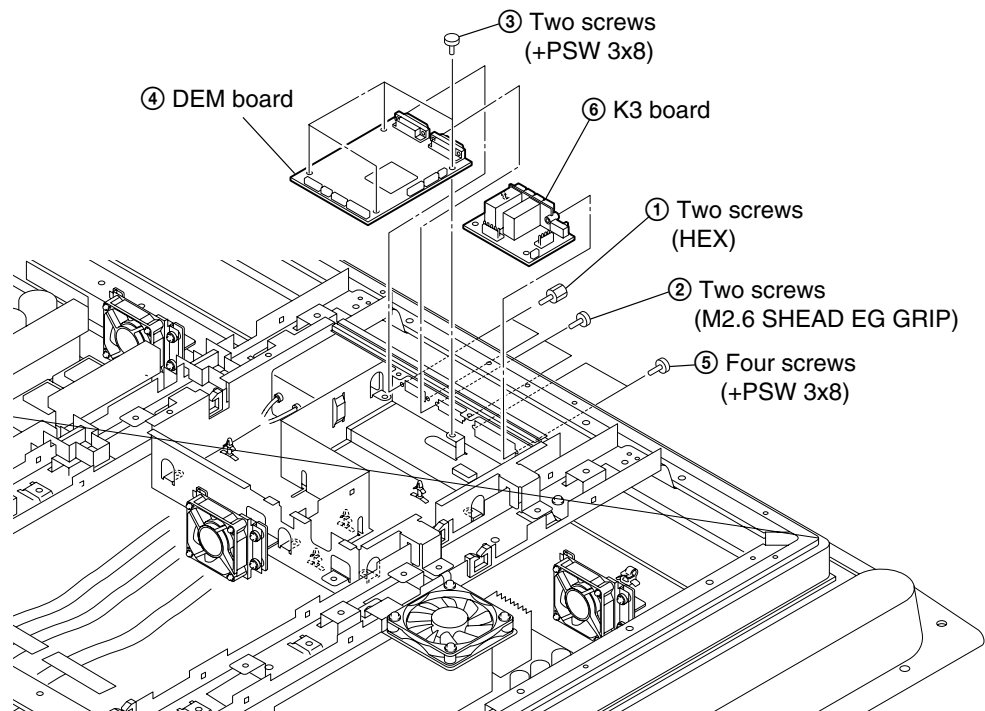


1-1-5. G2 BOARD REMOVAL

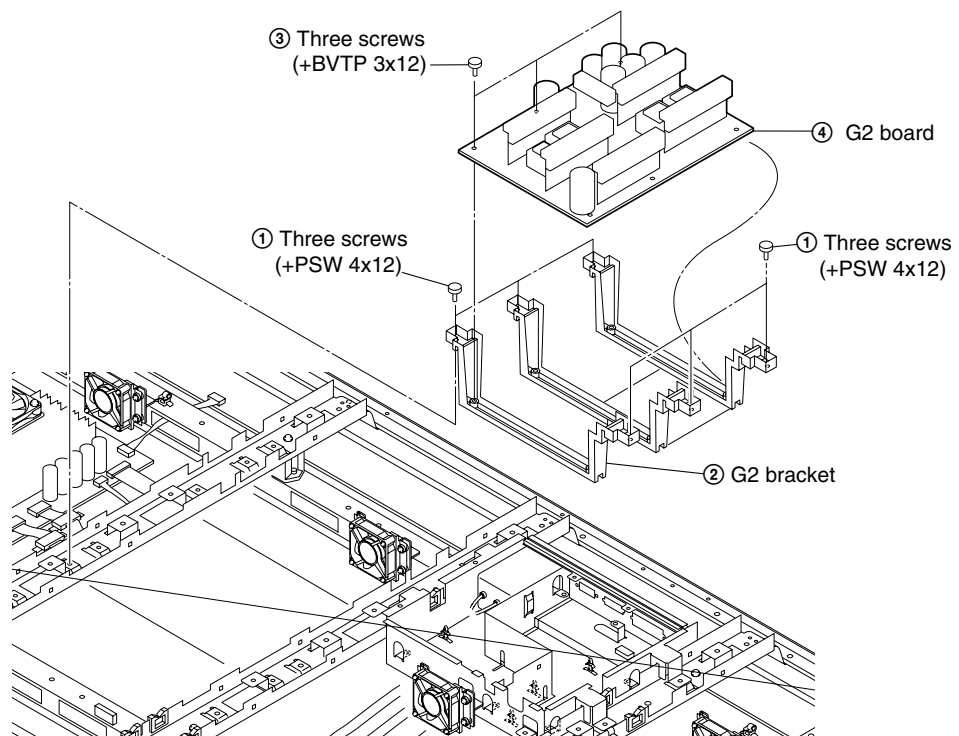


1-1-6. SPEAKER BOX ASSY REMOVAL

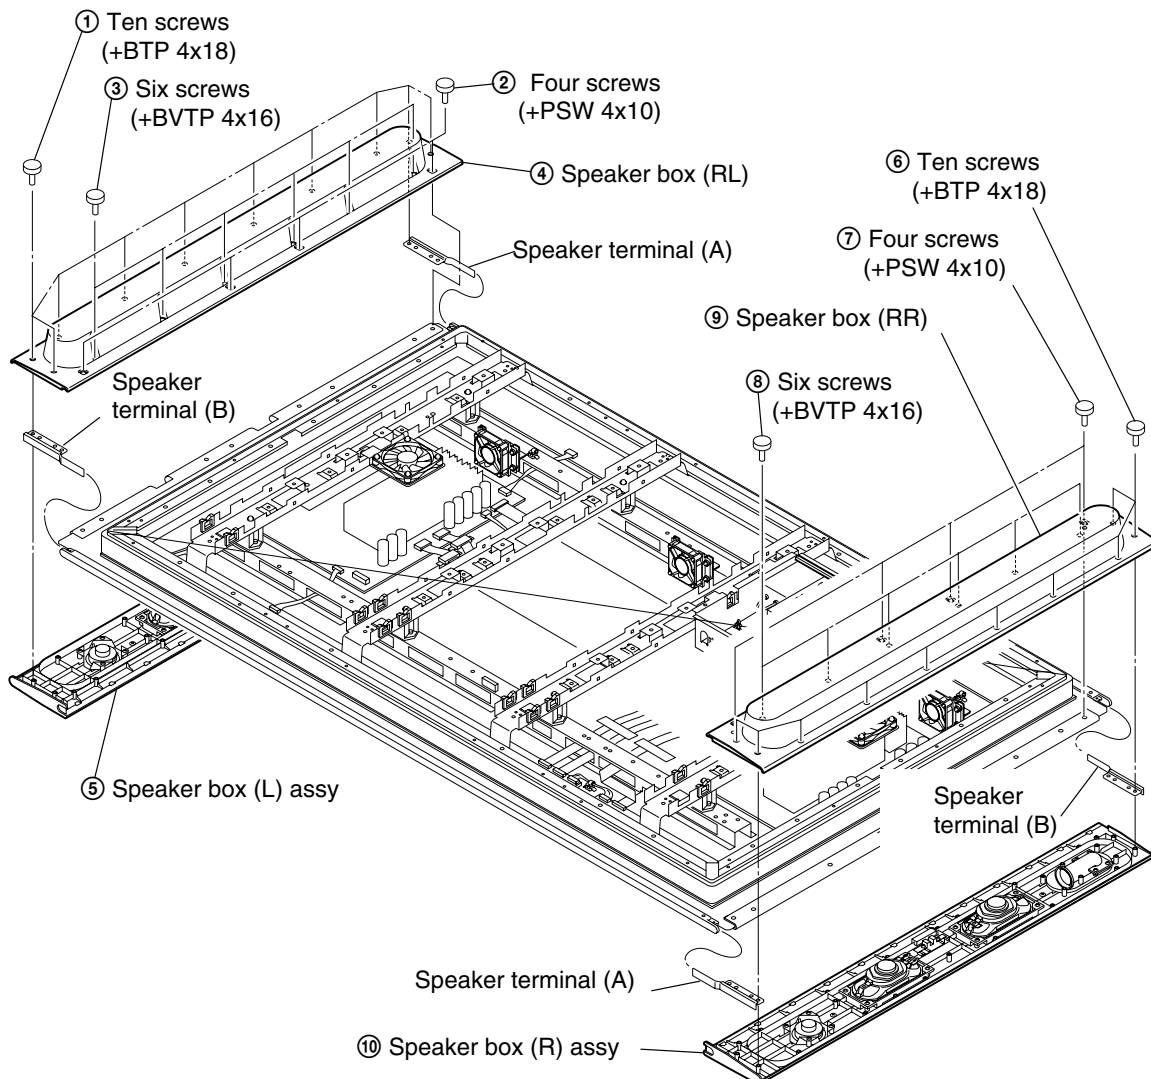


1-1-7. FILTER GLASS BRACKET ASSY REMOVAL

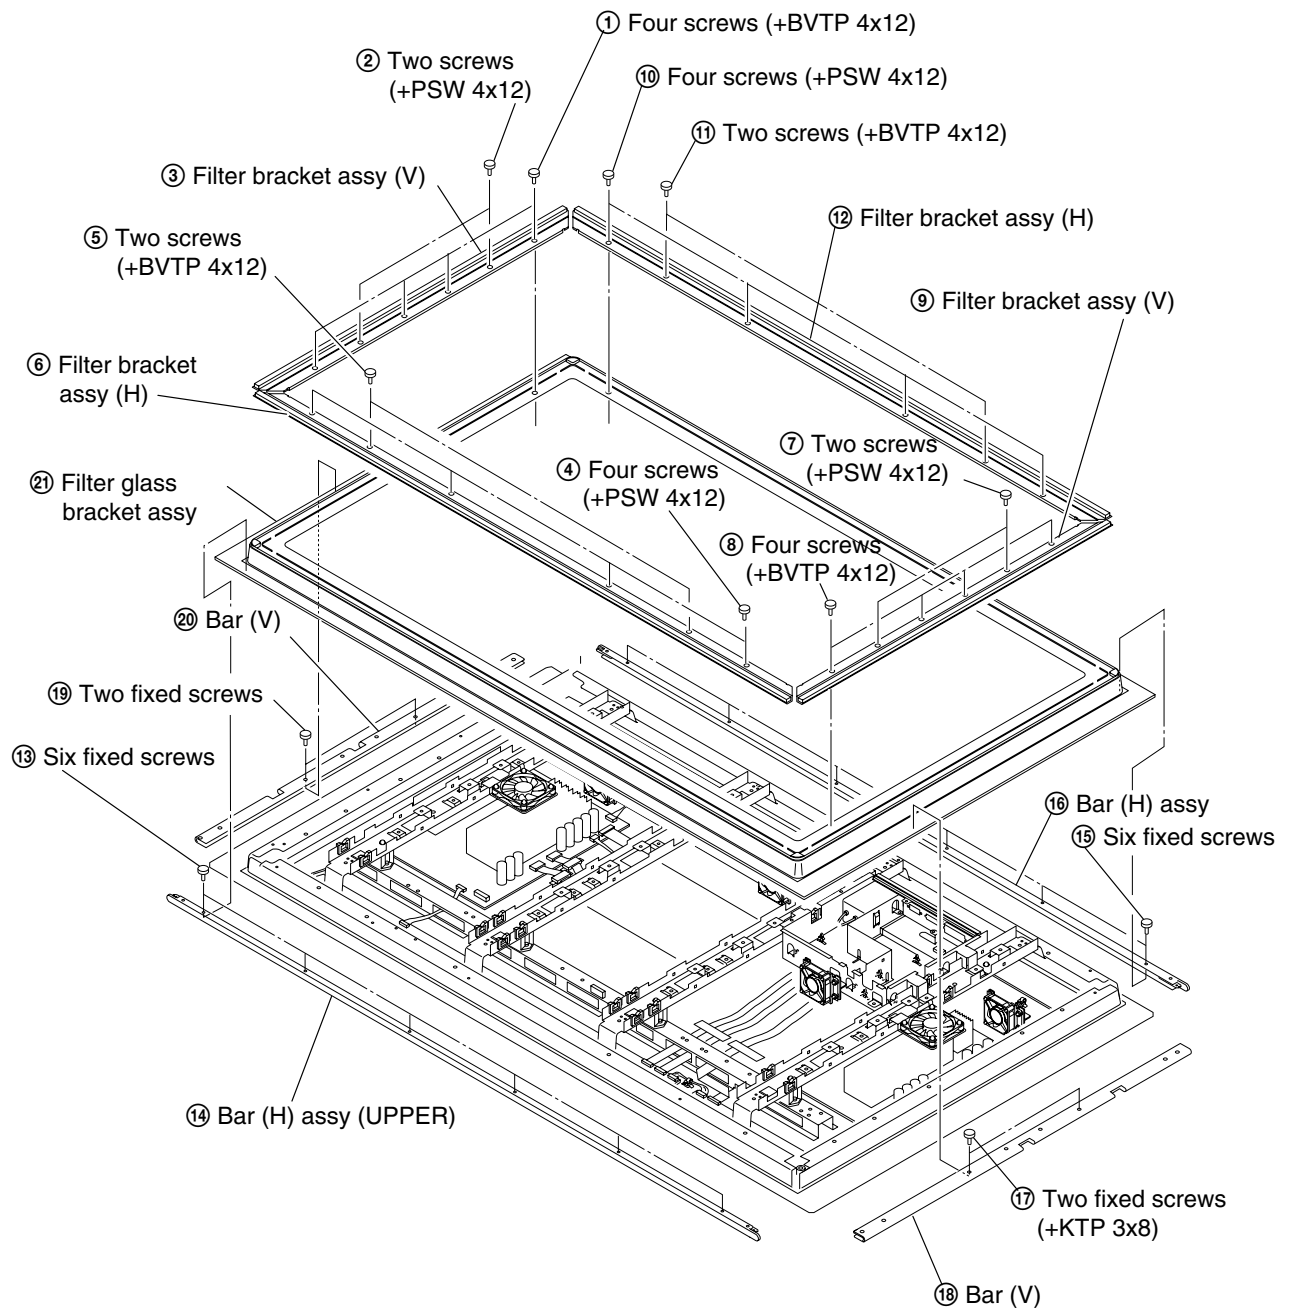


1-1-8. R1 BOARD REMOVAL

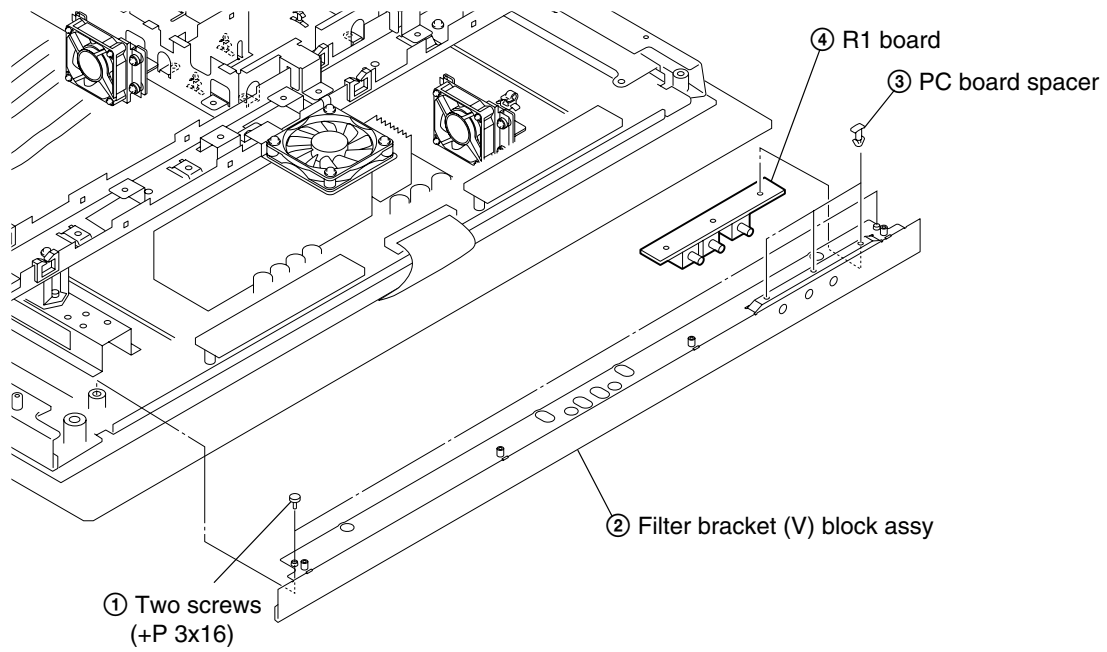

1-1-9. R2 BOARD REMOVAL

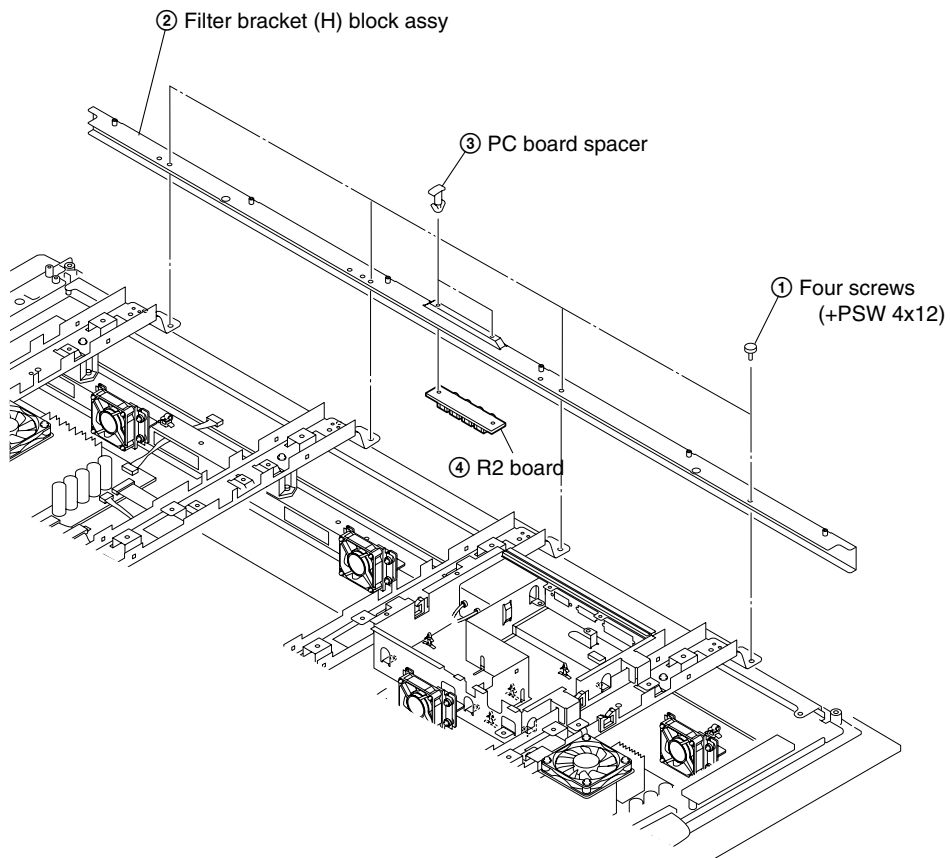


1-1-10. PLASMA DISPLAY PANEL

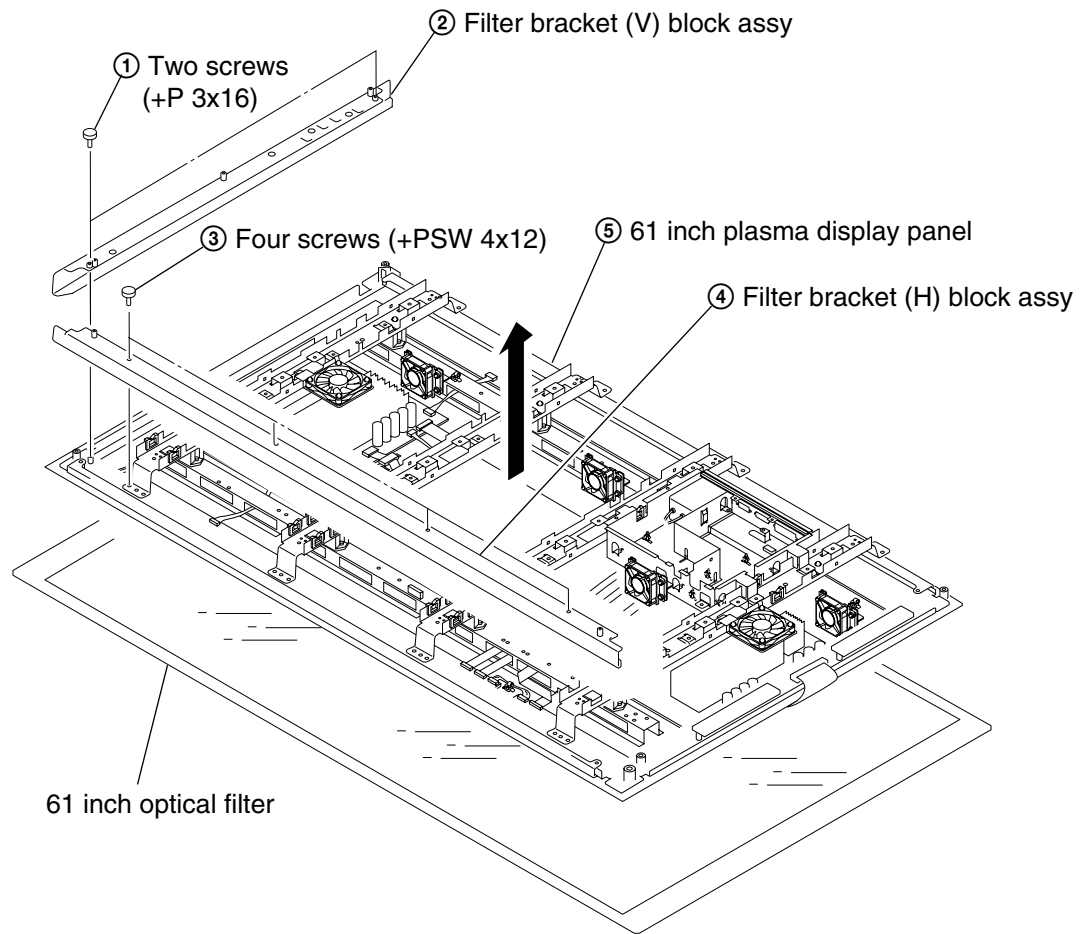


1-2. MEDIA RECEIVER UNIT (MBD-XBR950)


1-2-1. TOP COVERS REMOVAL

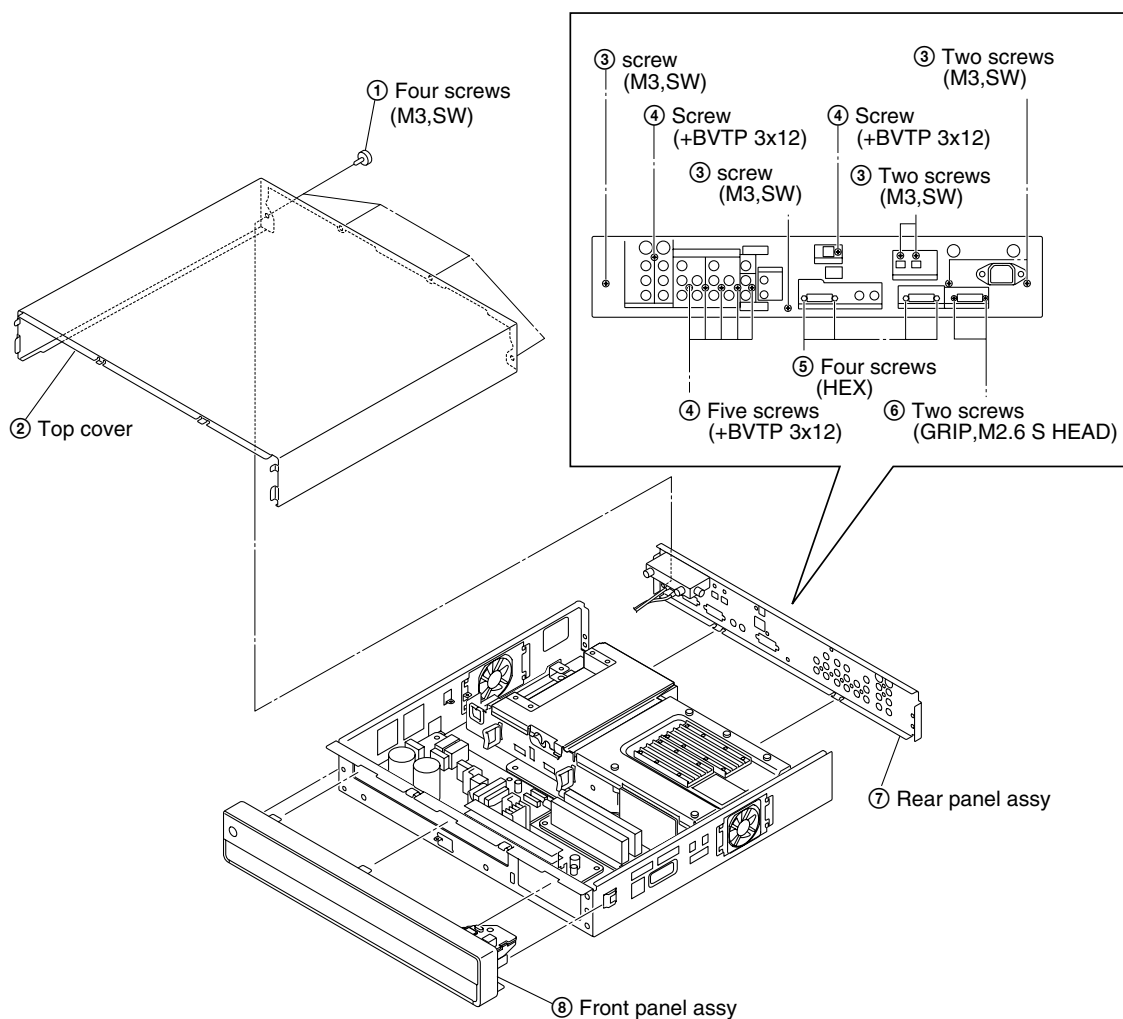


1-2-2. QH BOARD REMOVAL

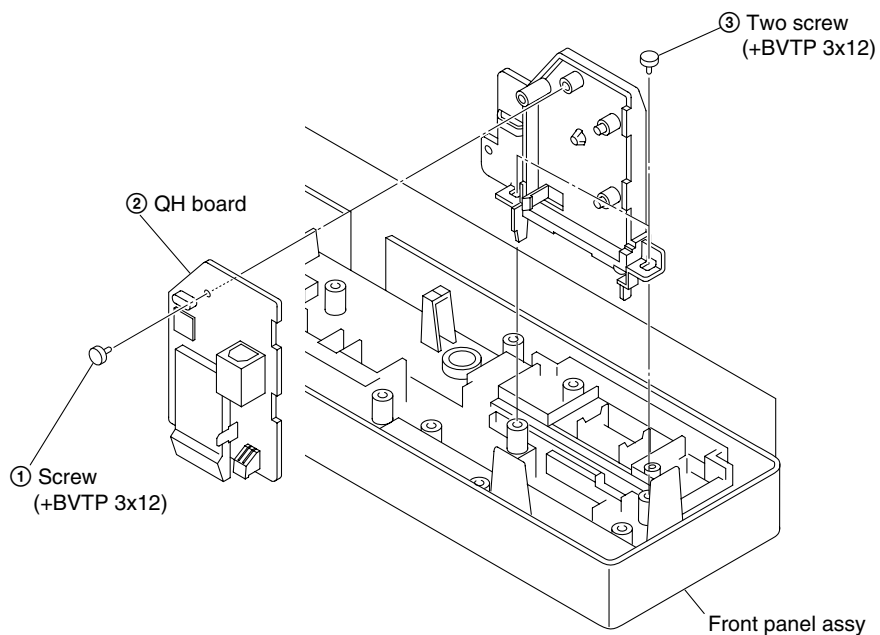


1-2-3. H1, H2, H3 AND H4 BOARDS REMOVAL

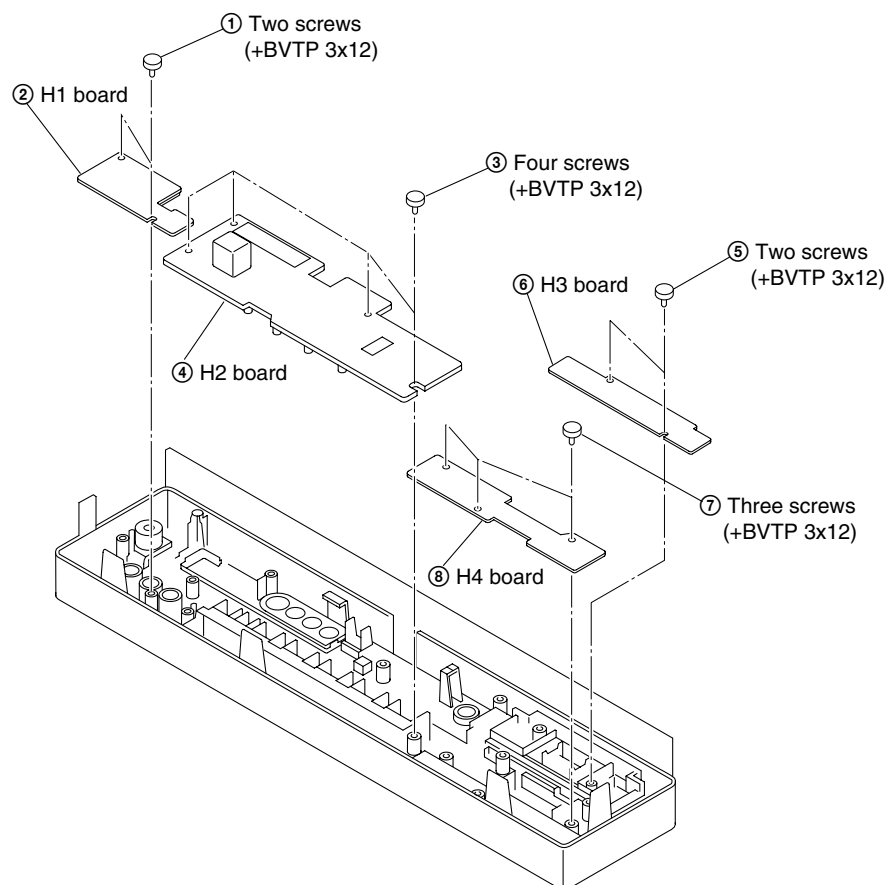

1-2-4. G BOARD REMOVAL

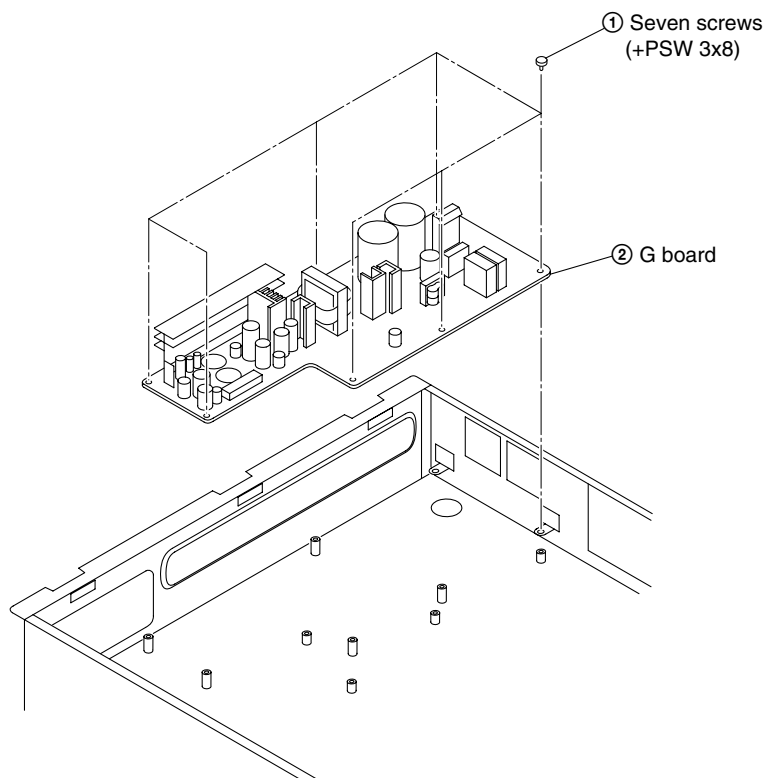


1-2-5. A BOARD REMOVAL

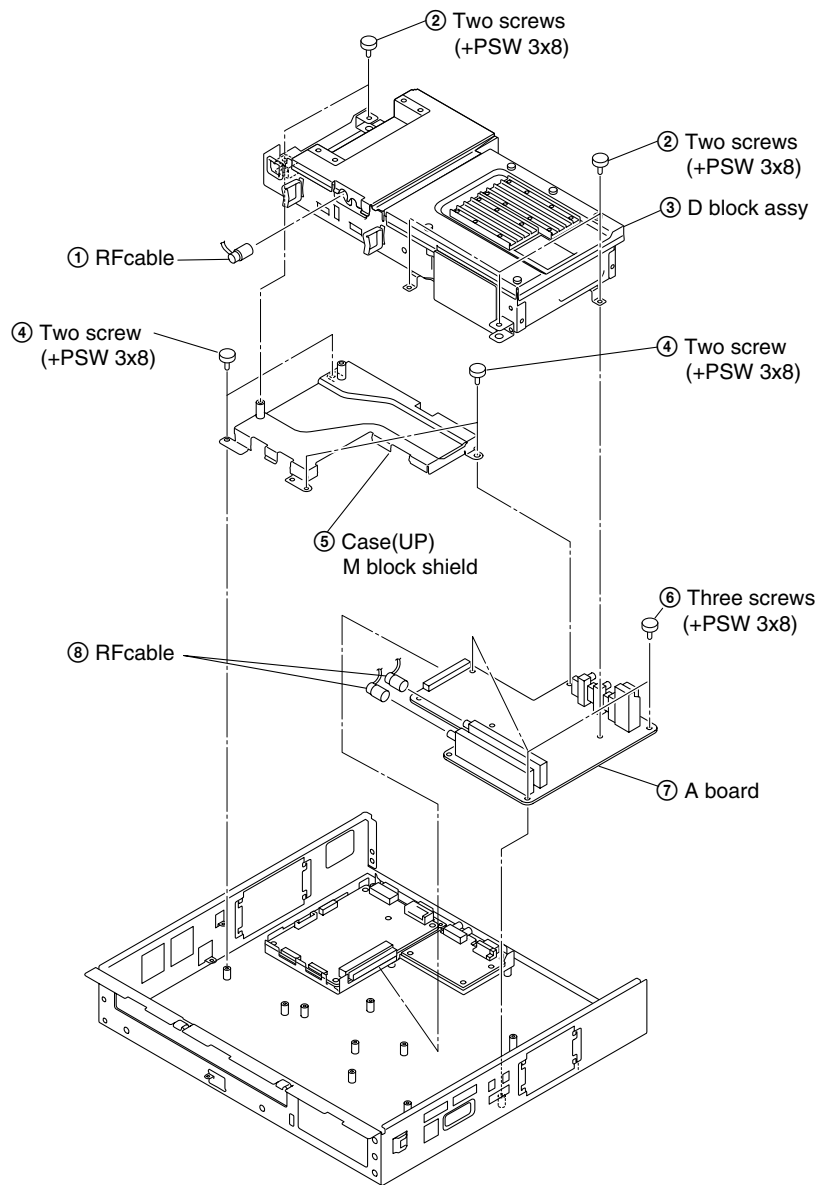


1-3. CABLE ARRANGEMENTS FOR MEDIA RECEIVER UNIT(MBD-XBR950)


1-3-1. CN9401 LEAD ARRANGEMENT ON A BOARD

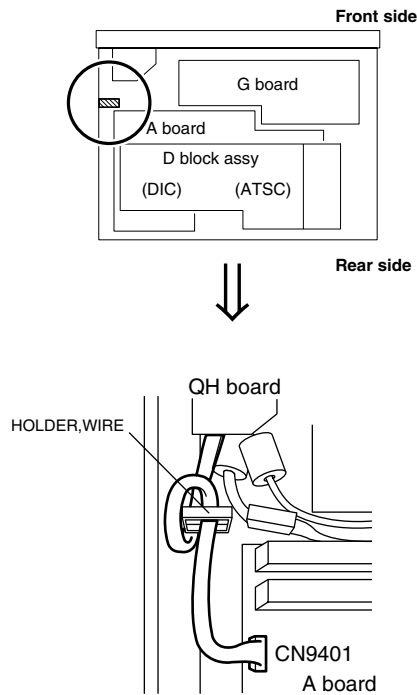


1-3-3. FAN LEAD, RELAY CABLE, AND PIN CABLE ARRANGEMENTS

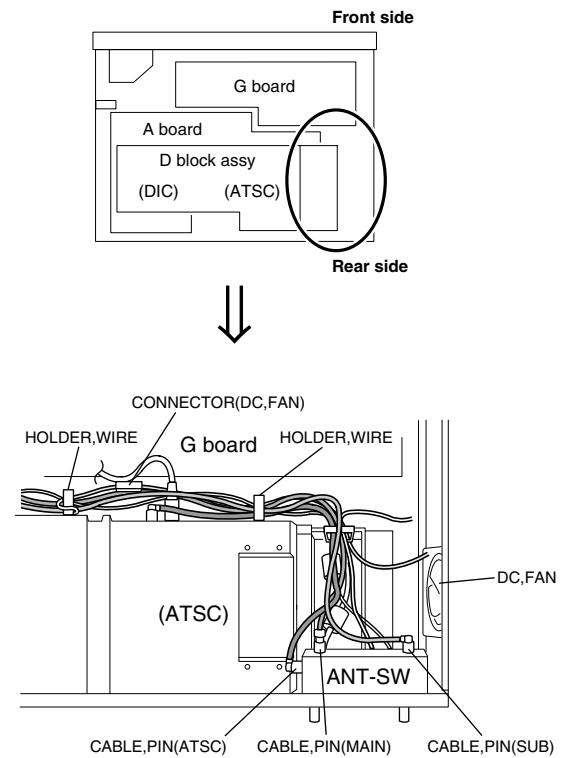

1-3-2. i-LINK CABLE ARRANGEMENT

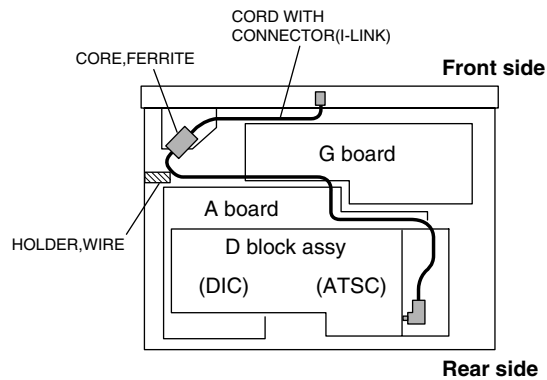

1-3-4. CABLE ARRANGEMENTS NEAR ANTENNA SWITCH

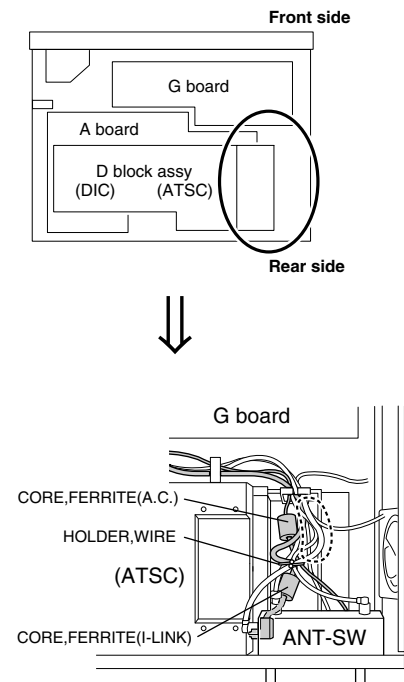

1-3-5. CABLE ARRANGEMENTS NEAR D BLOCK

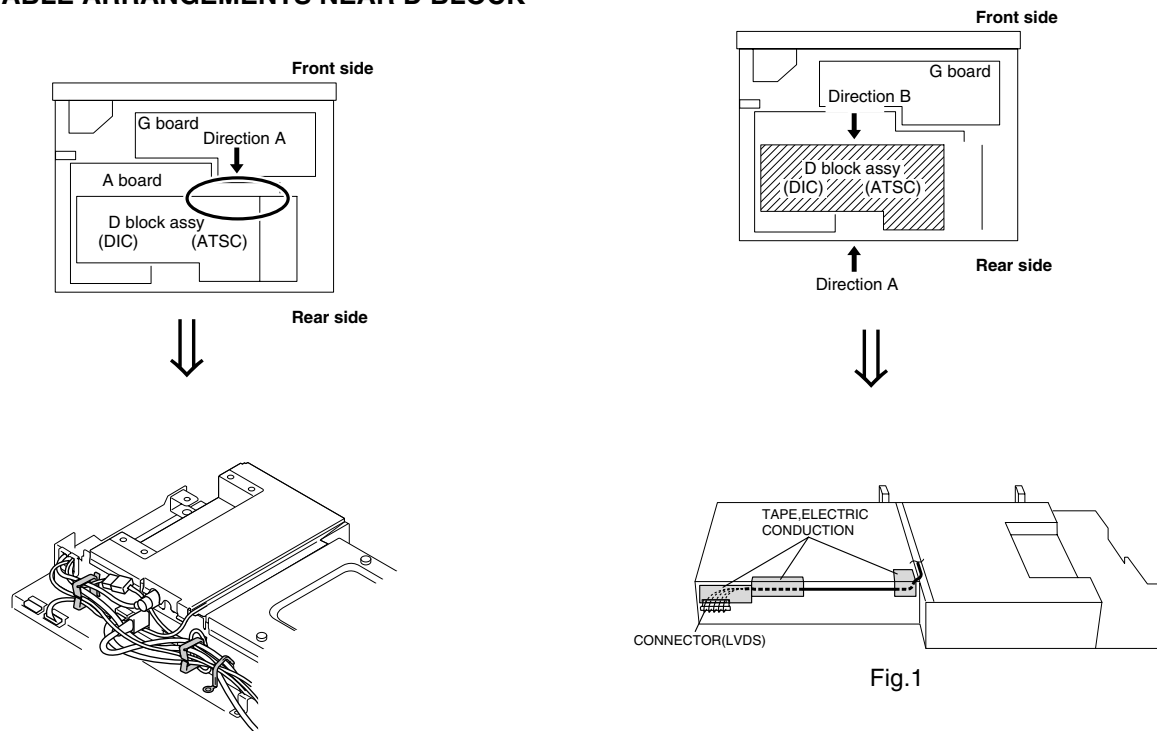


Fig.1

1-3-6. LVDS CABLE ARRANGEMENT (Countermeasure against EMI)

To secure margin against EMI of around 400 MHz, route the LVDS harness using the following procedure:

1. Route the LVDS connector upward from the exit of the D block, and secure it on the side of the shield upper cover of the D block with conductive tape.(Fig.1)
2. Secure the tape (white) portion bundling the LVDS harness to the corner of the DIC shield upper cover of the D block with conductive tape, and bend the harness as shown in Fig. 1.(Fig.2)
3. Route the LVDS harness through the slot on the DIC and ATSC and secure it with conductive tape.(Fig.2)
4. Secure the LVDS harness under the drop-safe part; as a guide, attach tape on the side edge of the shield upper cover.(Fig.3)
5. Secure the LVDS harness upward near the shield clamber of the D block with conductive tape; as a guide, attach tape above the connector on the chassis of the D block. (Fig.4)
6. Route the LVDS harness through the clamber, and secure it with conductive tape so that it is held on the top in the clamber.(Fig.4)

Note :

- 1.Ensure that the LVDS harness has no slack in steps 1 through 6.
- 2.When attaching the drop-safe part, be careful not to entangle it in the portions of LVDS harness described in steps 3 and 4.
The drop-safe part needs to be removed before the above procedure.

The size of each conductive tape should be 19 mm x 40 mm, which is the same size as 4-101-007-01 attached on the exit of the LVDS connector.

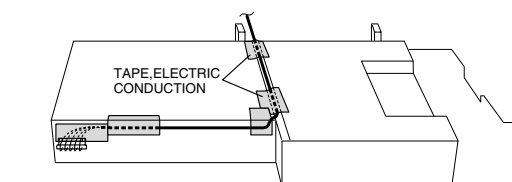


Fig.2

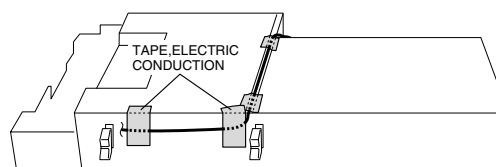


Fig.3

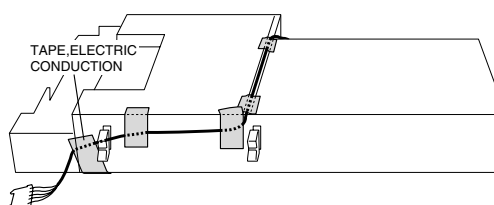


Fig.4

SECTION 2 ADJUSTMENTS

2-1. VS, VD Voltage Adjustment (PDM-6110)

values of 6500K, 8000K, 9300K, 10000K and 13550K to following values of X/Y.

• Preparation for adjustment

1. Slide the DIP switch (S3201) No. 8 of P board to on position with no silkscreen mark ●.
2. Connect a digital voltmeter to the following terminals of G board.

VS voltage=G board TP1701 (VS)-TP1502 (GND)
VD voltage=G board TP1501 (VD)-TP1502 (GND)
3. Connect a AC cord in DISPLAY UNIT.
4. Perform the adjustment in 10 seconds after connecting the cord.

• Procedure for adjustment

1. Slide the DIP switch (S3201) No. 7 of P board to on position with no silkscreen mark ●.
2. Confirm the lighting of SONY LOGO LED.
3. Adjust the VS voltage to the following voltage value.

VS voltage $^{+6V}_{-0V}$ of proper value for each model.
Ex.) VS proper value=185V thru 185.6V at 185V.
(Check the proper value with a seal on upper left of panel unit. Refer to right Fig.)
4. Adjust the VD voltage to the following voltage value.

VD voltage $\pm 0.3V$ of proper value for each model.
Ex.) VD proper value=64.7V thru 65.3V at 65.0V.
(Check the proper value with a seal on upper left of panel unit. Refer to right Fig.)
5. Check a Fan rotation.
6. Slide the DIP Switch (S3201) No. 7 of P board to the off position with the silkscreen mark ●.
7. Slide the DIP Switch (S3201) No. 8 of P board to the off position with the silkscreen mark ●.
8. Disconnect an AC cord of DISPLAY UNIT.
9. Reconnect the AC cord in one second.
10. Assure that "POWER ON/STANDBY" LEDs is flashing amber.

W/B standardized values:

	6500K+8MPCD	8000K+8MPCD	9300K+8MPCD
W/B	0	1	2
X	0.3133 \pm 0.003	0.2944 \pm 0.003	0.2838 \pm 0.003
Y	0.3297 \pm 0.003	0.3100 \pm 0.003	0.2981 \pm 0.003

	10000K	13550K
W/B	3	4
X	0.2806 \pm 0.003	0.2684 \pm 0.003
Y	0.2883 \pm 0.003	0.2700 \pm 0.003

6. After adjusting the values, at the values of the "SCNR" or "SCNB" exceeding 128 (initialize value).
 - 1) Reset a larger value of the "SCNR" or "SCNB" at 128.
 - 2) Set the White Balances with the last of items and "SCNG" to the X/Y values above.
7. After the above step, when these item are nonqualified following conditions, set the largest one at 128 and readjust the White Balance with the last two item.
 - 1) No one of "SCNR", "SCNB" and "SCNG" exceeding 128.
 - 2) Confirm the item value 128 at least one item.
8. As a result above, input the sequential number of value to the "SCNR", "SCNB" and "SCNG".
9. Repeat the same step 5 thru 8 for the W/B 1 thru 4 after setting the "0 WBNO" at each W/B number.
10. Input following signals from the Signal generator (VG-828D).
 - 1) All-white signal (255/255) input
Y (luminance)=45cd/m² or more
 - 2) 1/25Window (255/255) input
Y (luminance)=45cd/m² or more

2-2. White Balance Adjustment (PDM-6110)

• Measurement equipment

1. Color analyzer (CA-100 manufactured by MINOLTA)
1. Signal generator (ASTRO DESIGN VG-828D)


• Measuring procedure


1. Dab the W/B adjustment jig (CA-100) at the glass face of the panel.
2. Connect the Signal generator (VG-828D) to the DVI terminal.
3. Input All-white signal and set the picture mode to DYNAMIC.
4. Select "PNLCTRL" in the service mode menu and set "0 WBNO" at "0"
5. Select "SCNR" "SCNB" of "PDPWB" in the service mode menu, and then adjust following W/B standardized


SECTION 3 DIAGRAMS






3-1. BLOCK DIAGRAMS

3-1-1. DISPLAY UNIT (PDM-6110)

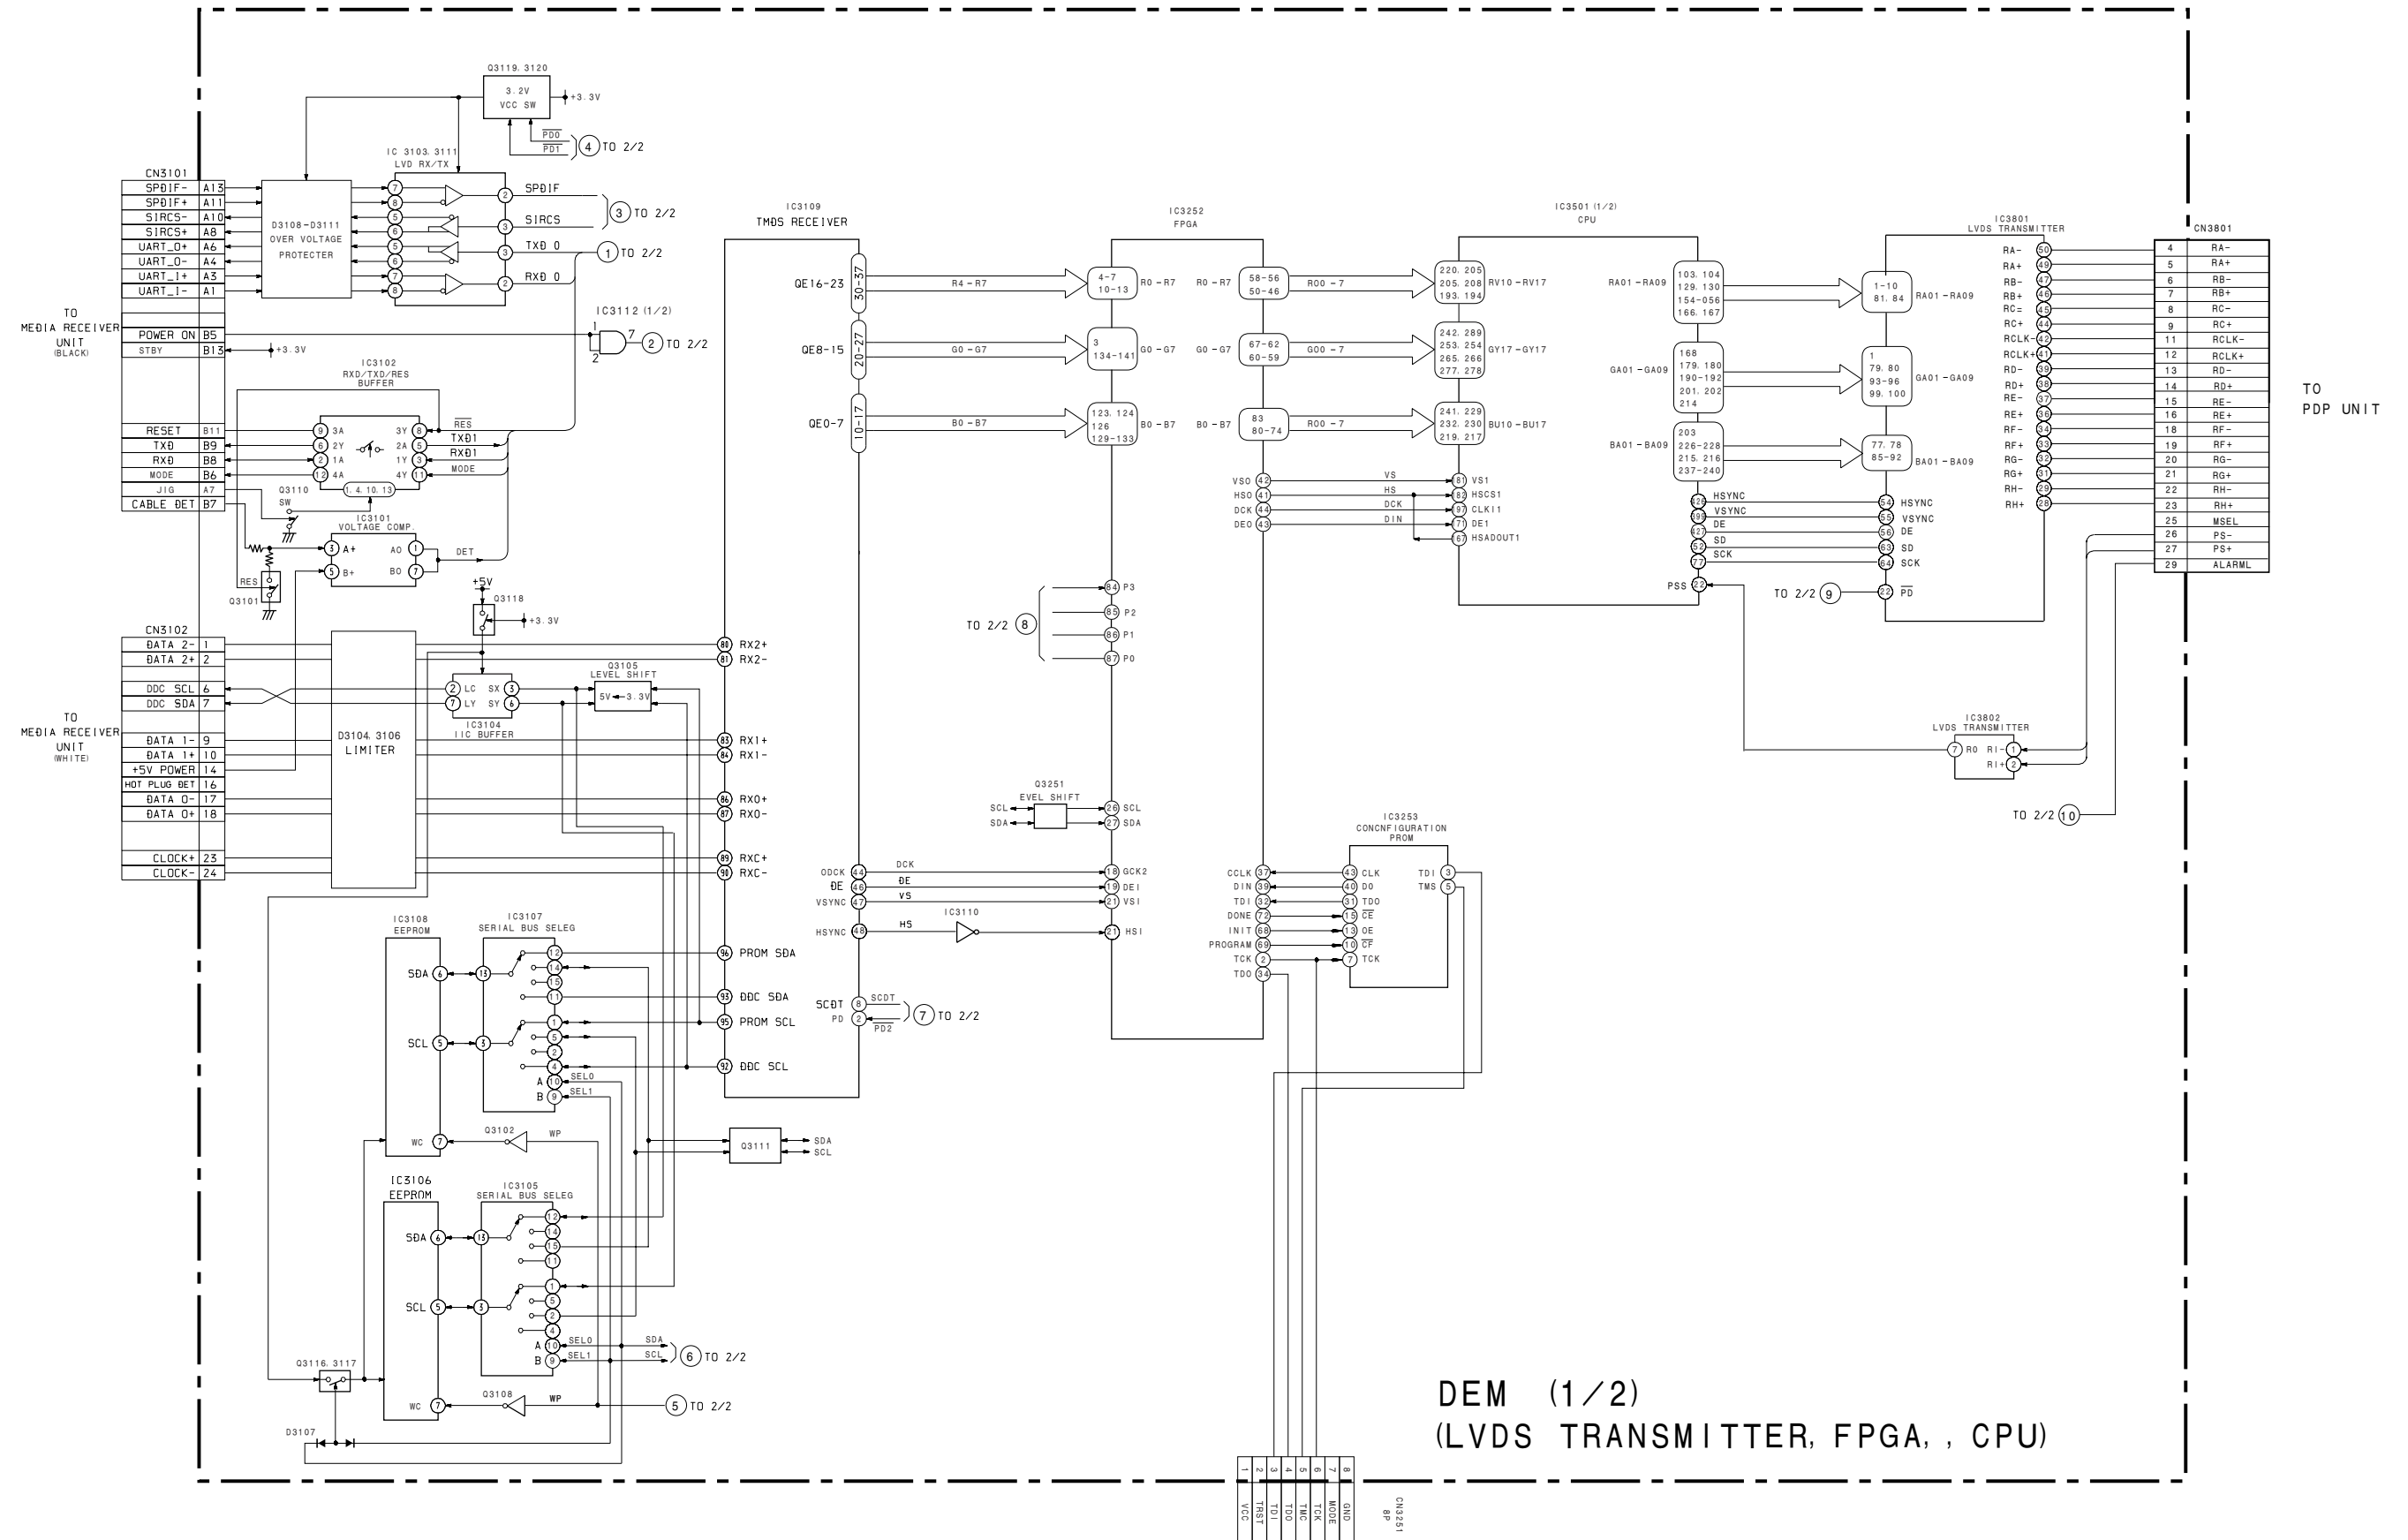


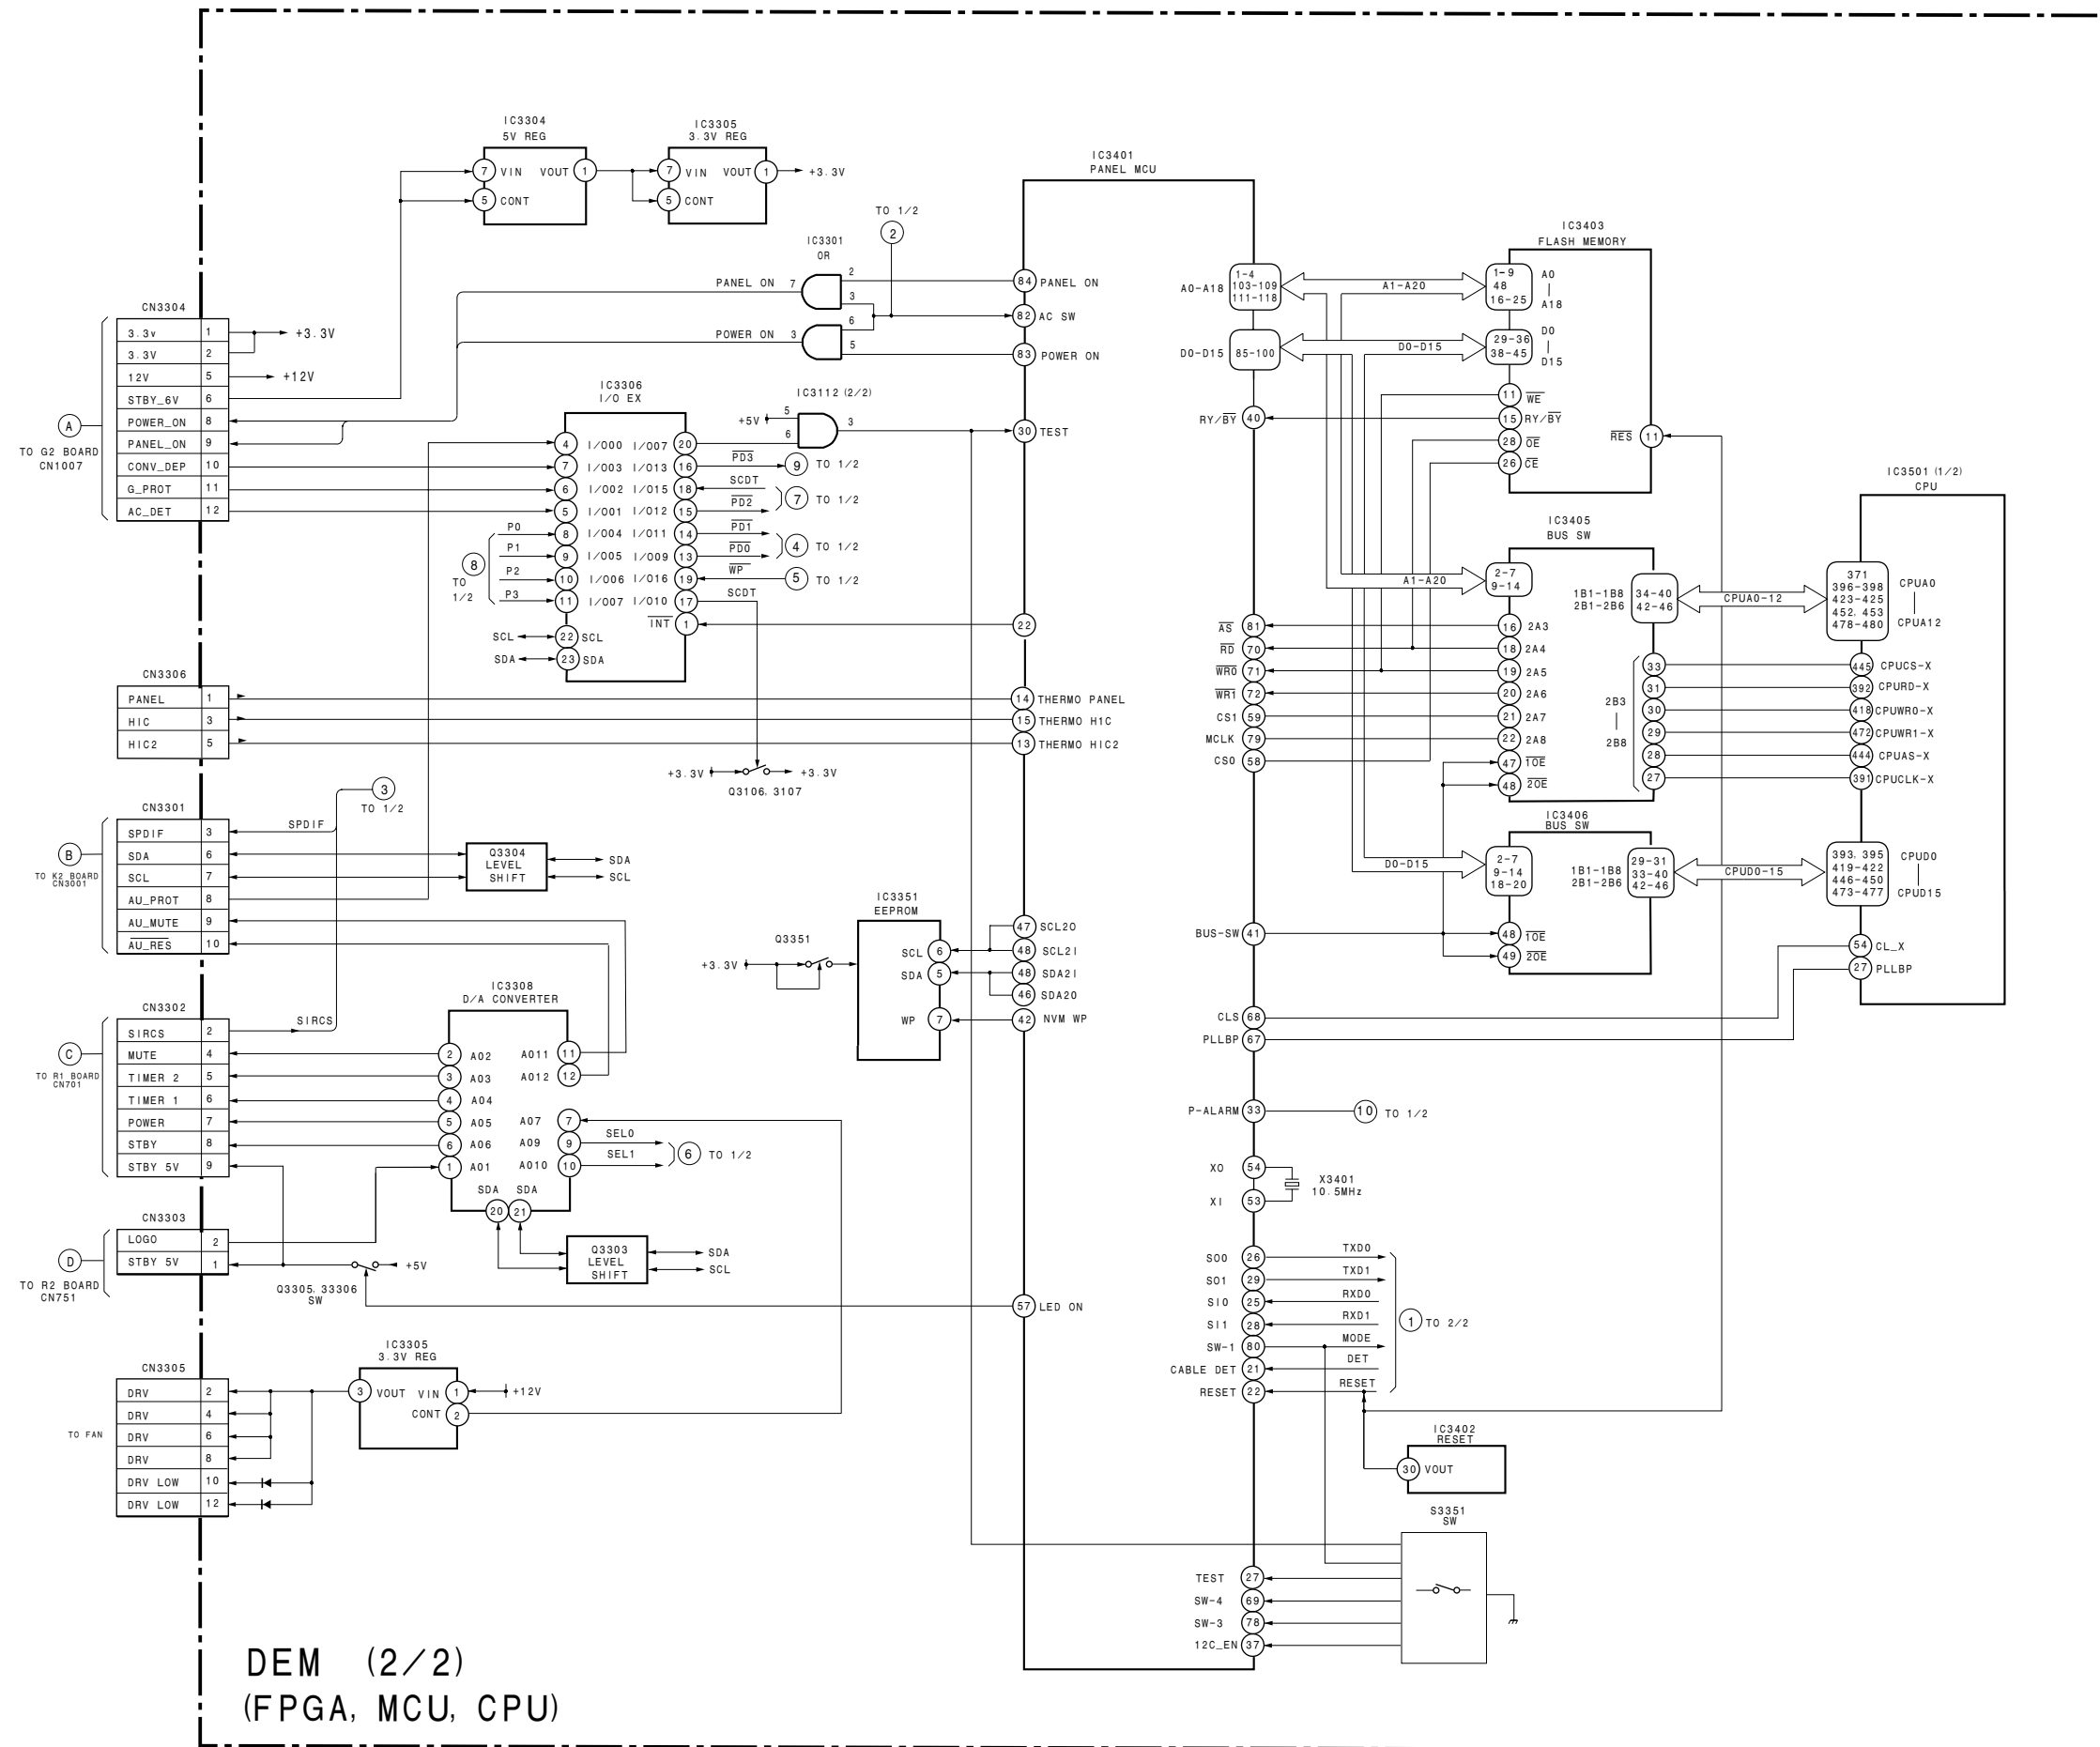





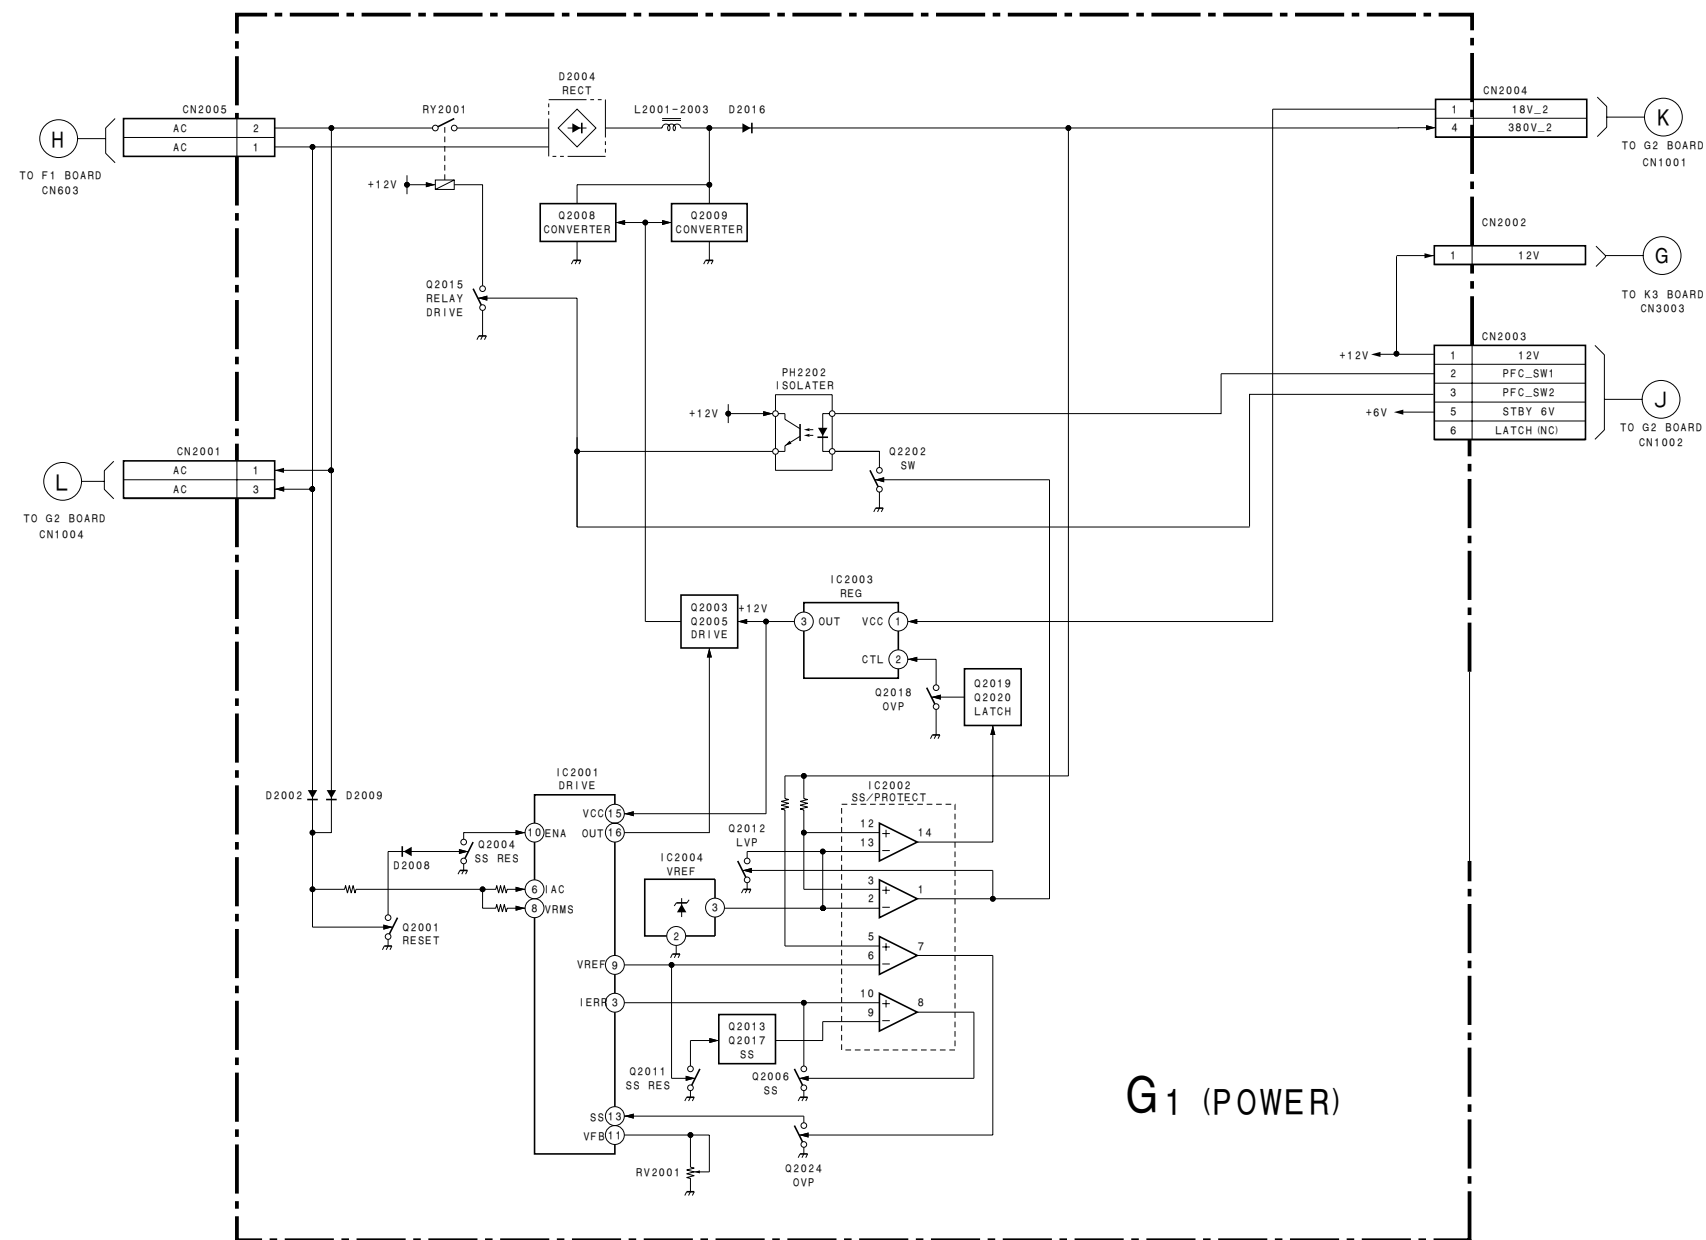


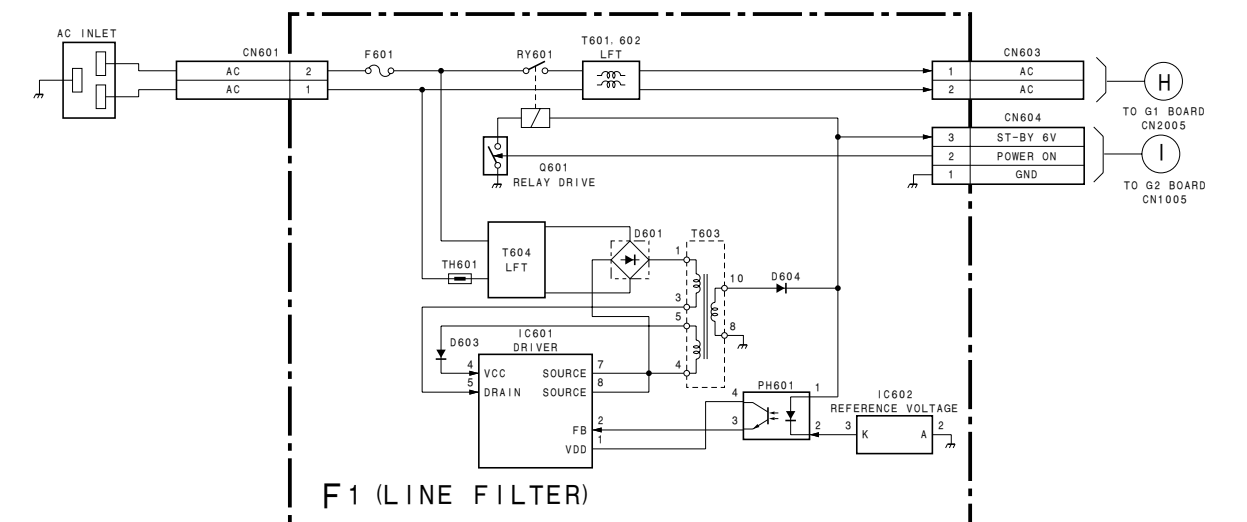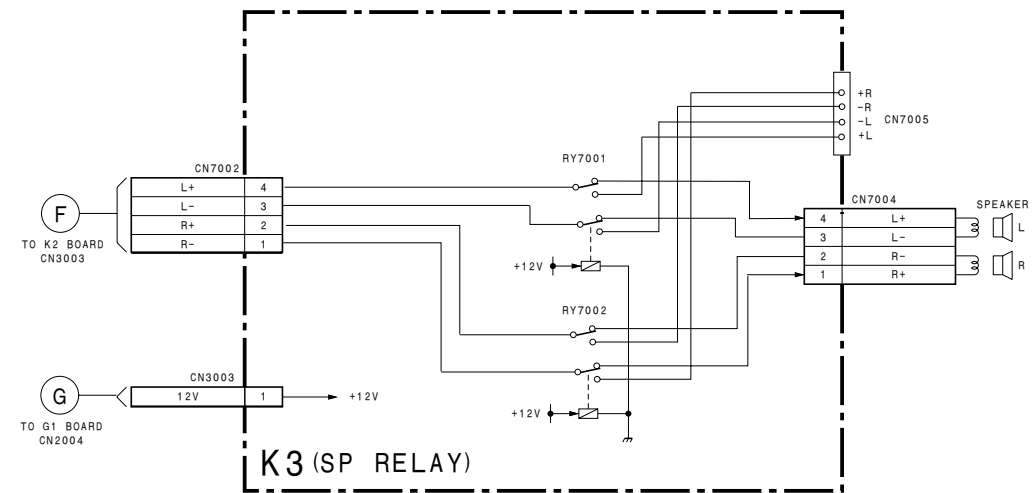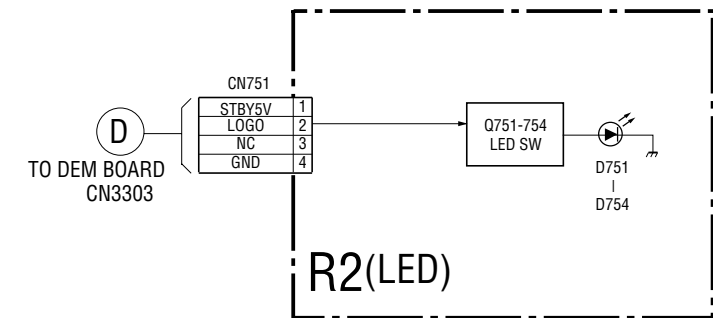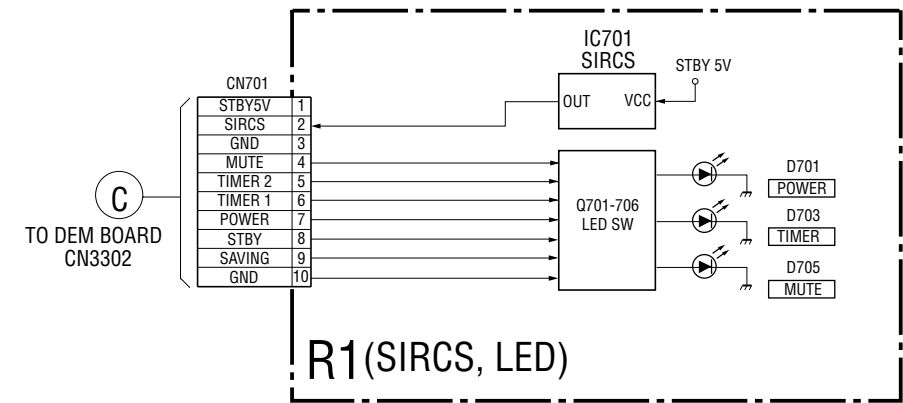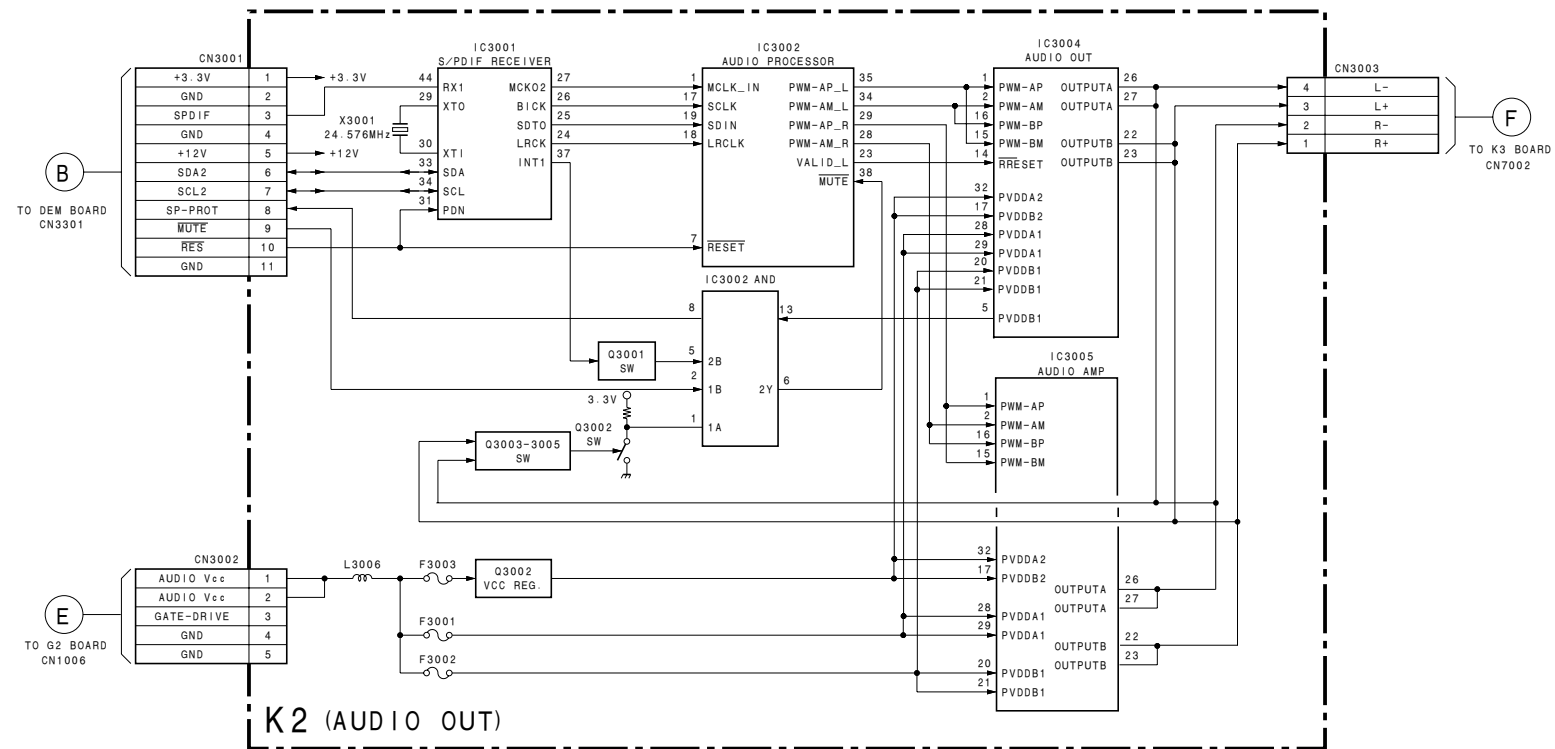



3-1-2. MEDIA RECEIVER UNIT (MBD-XBR950)

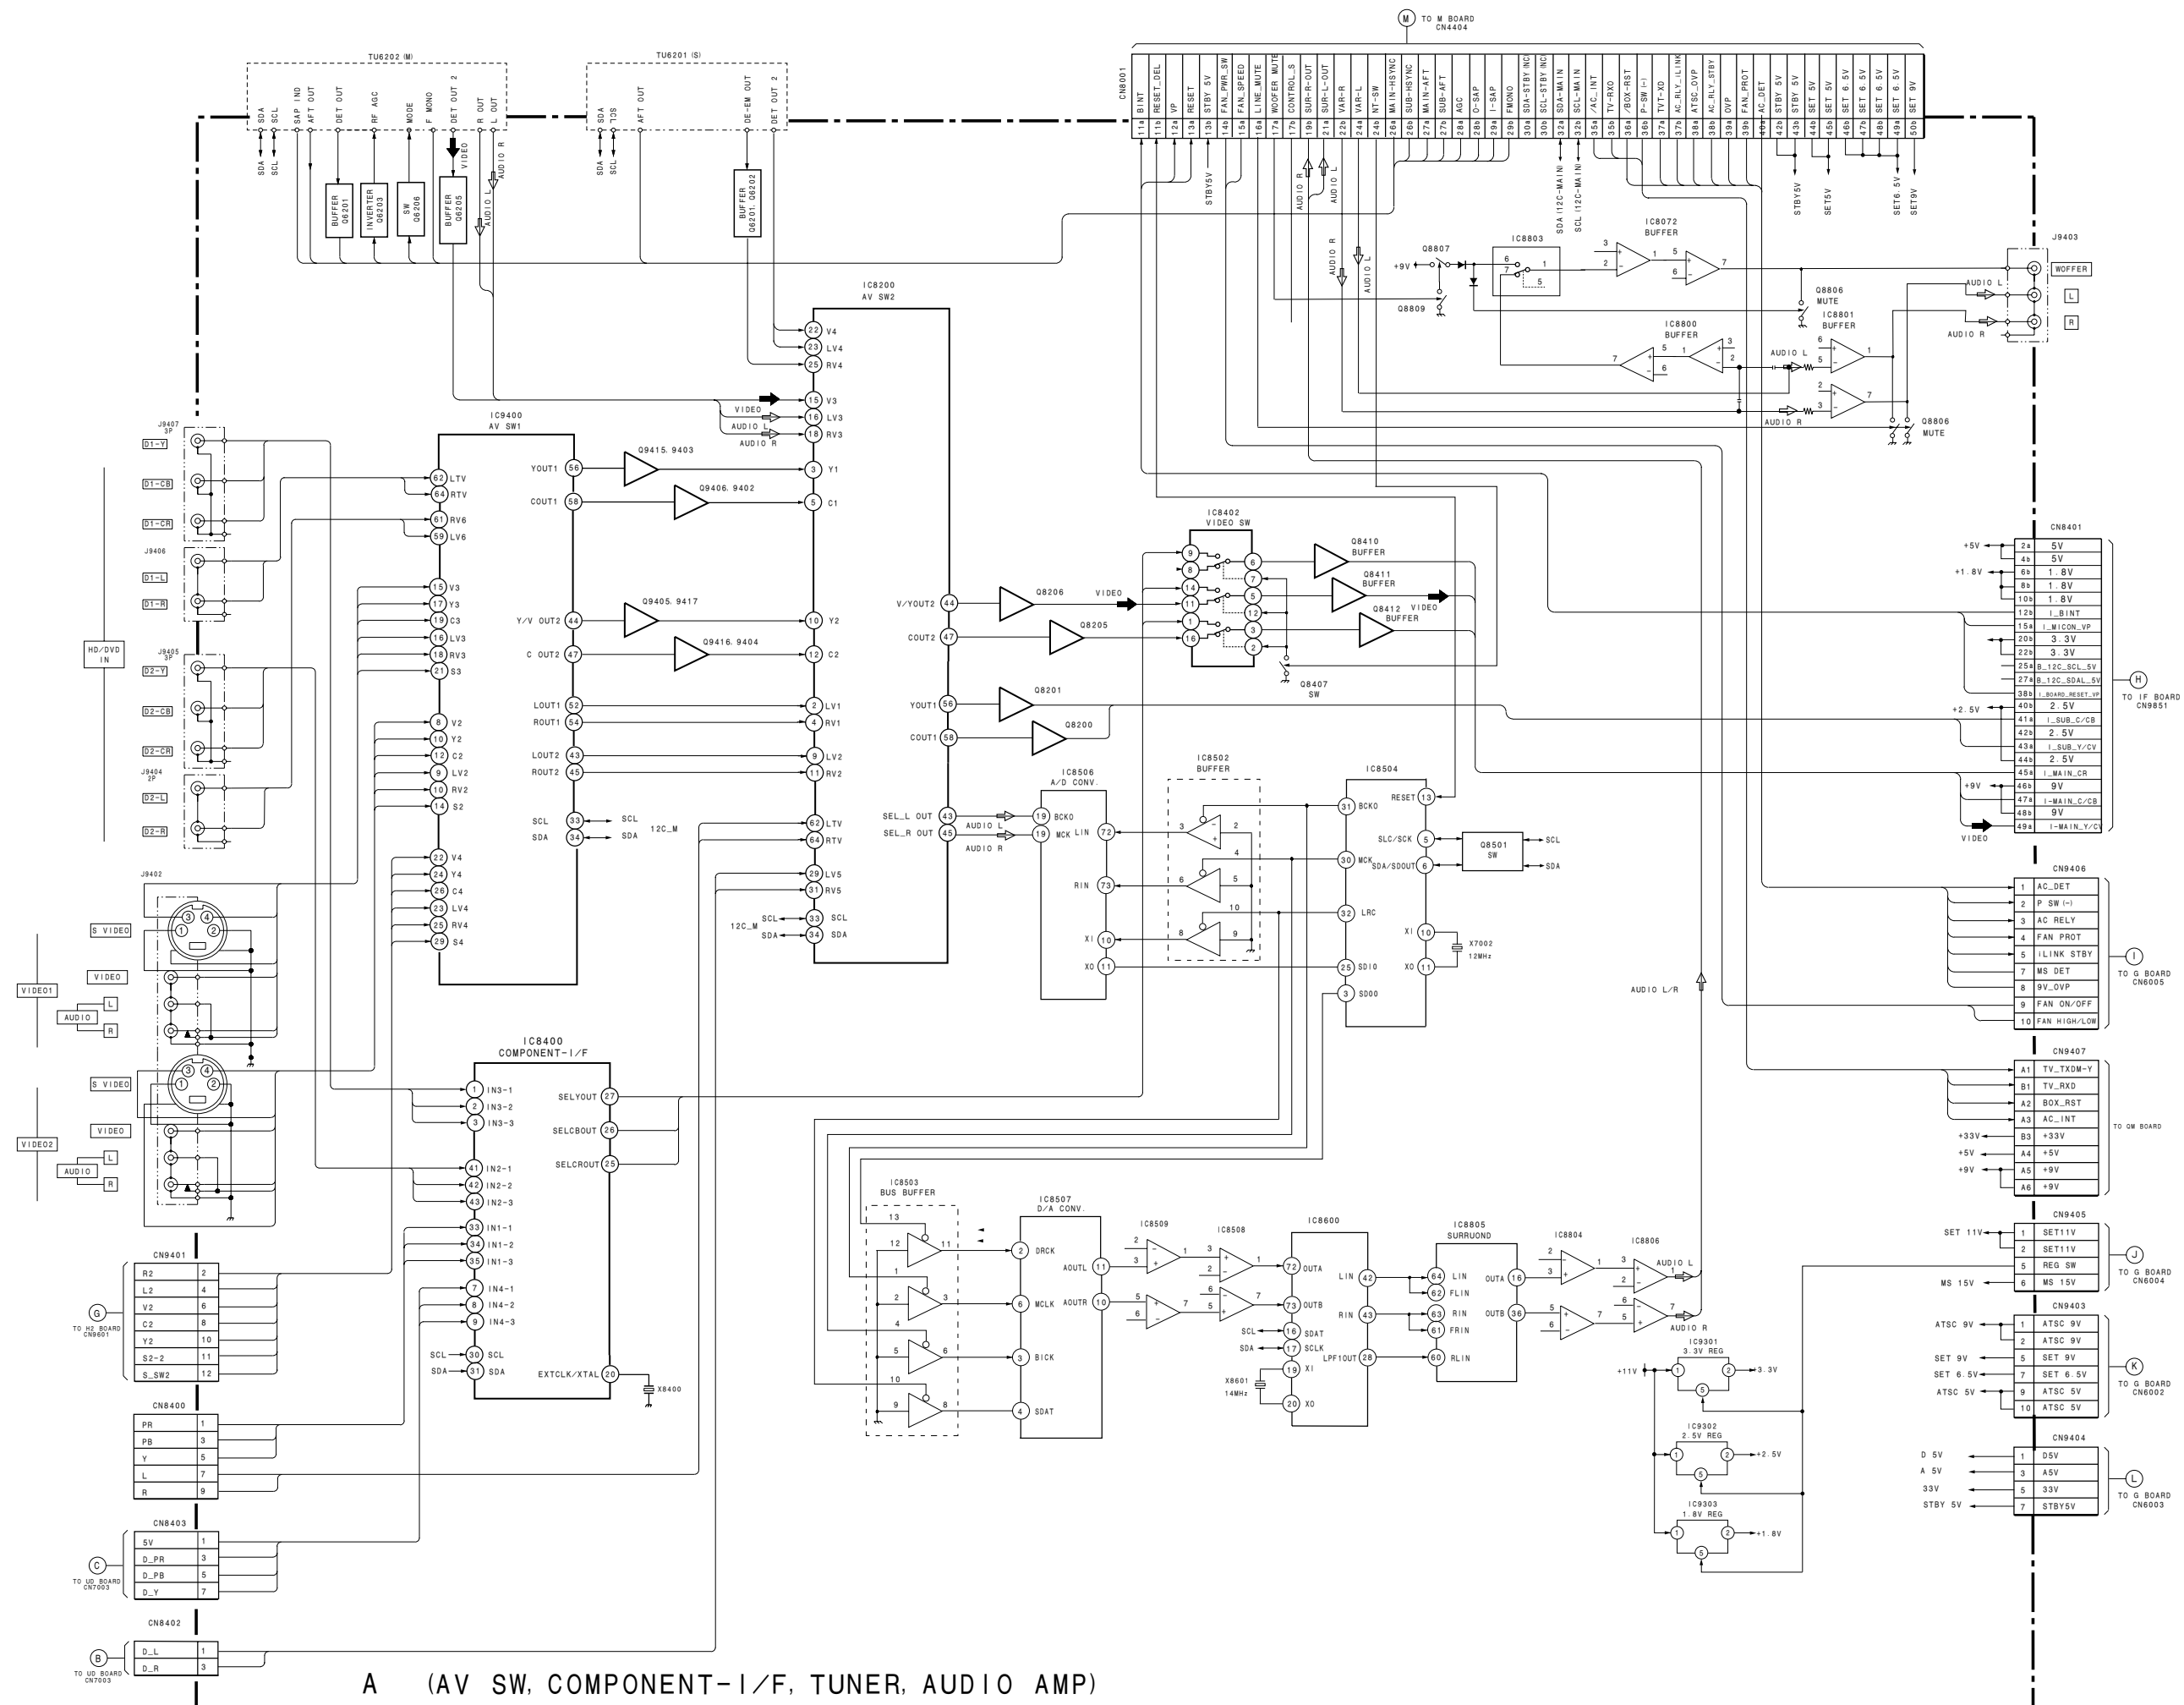




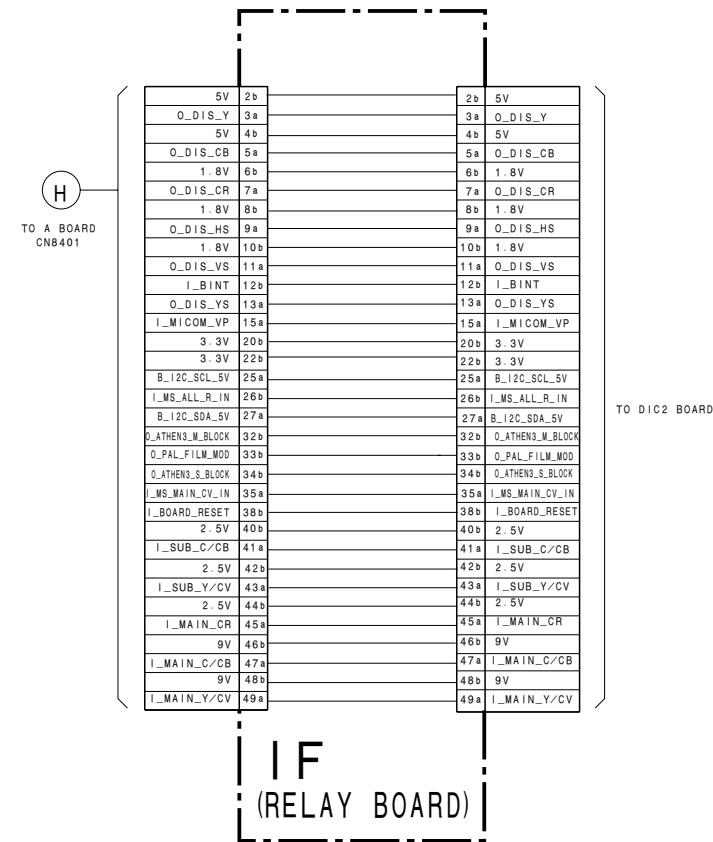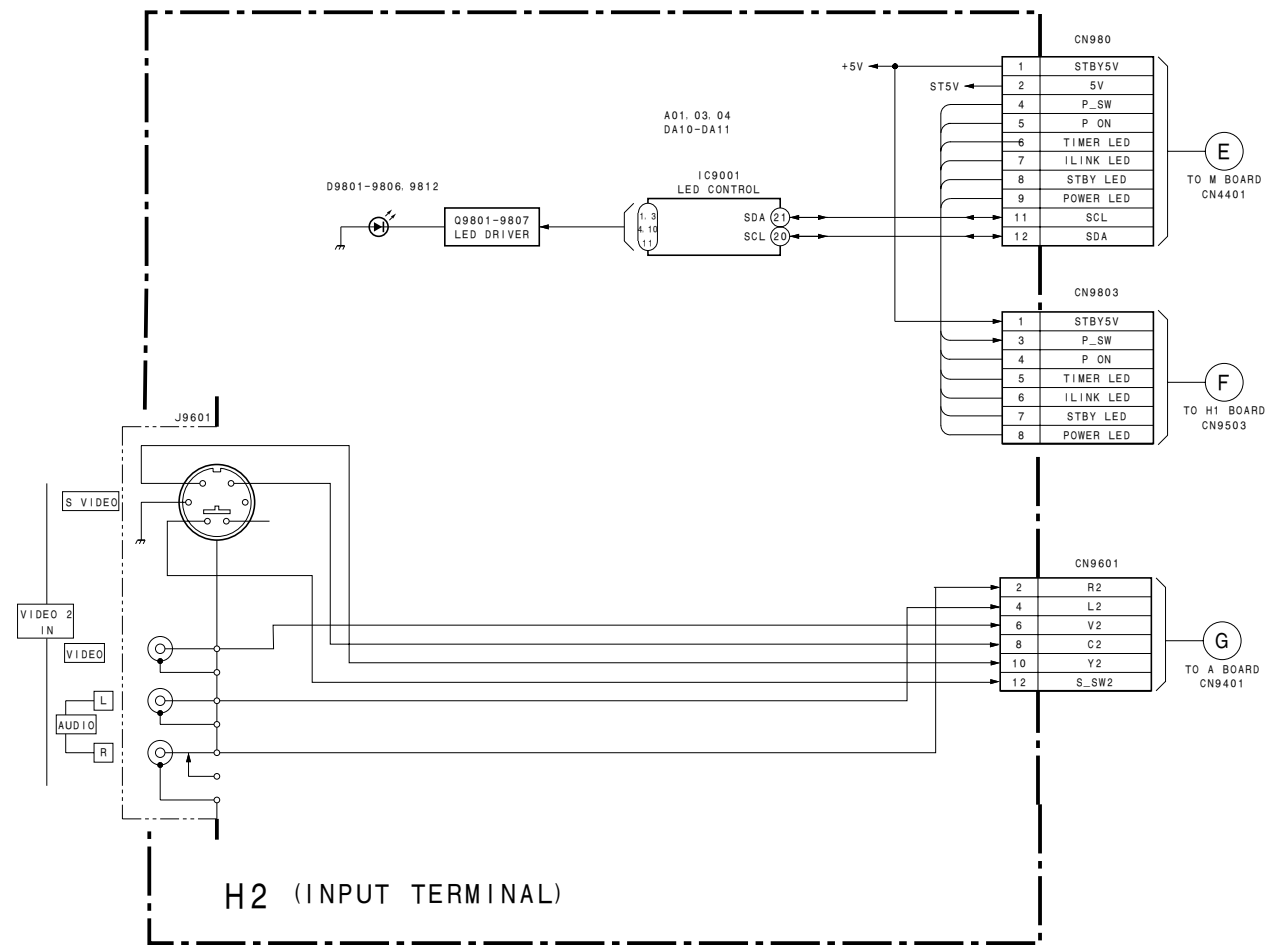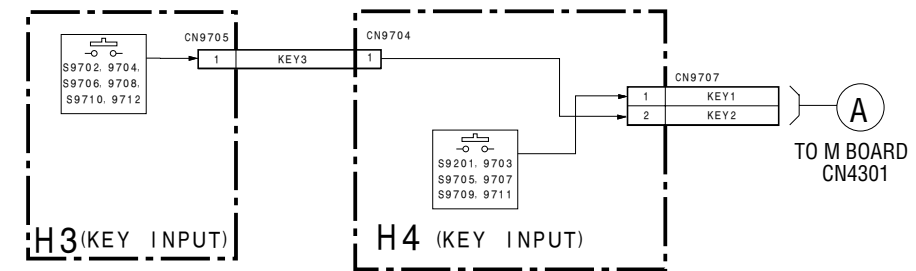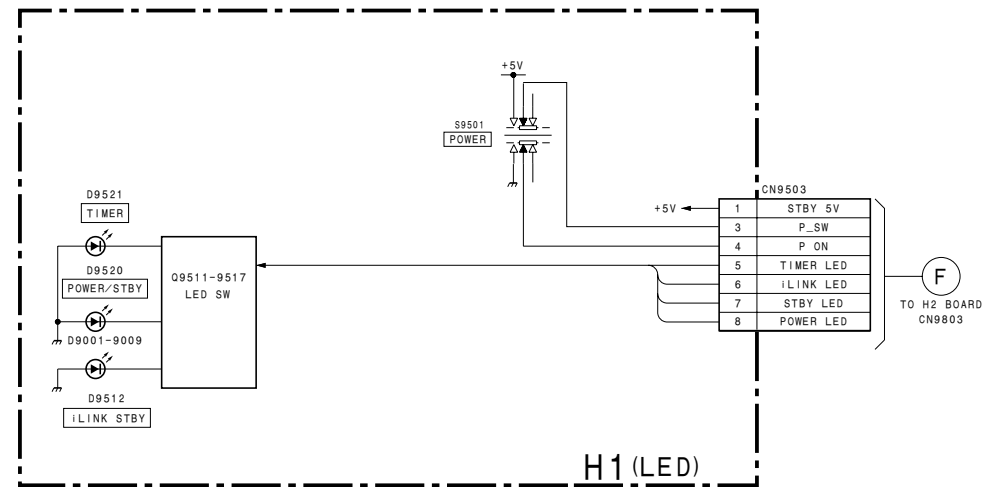

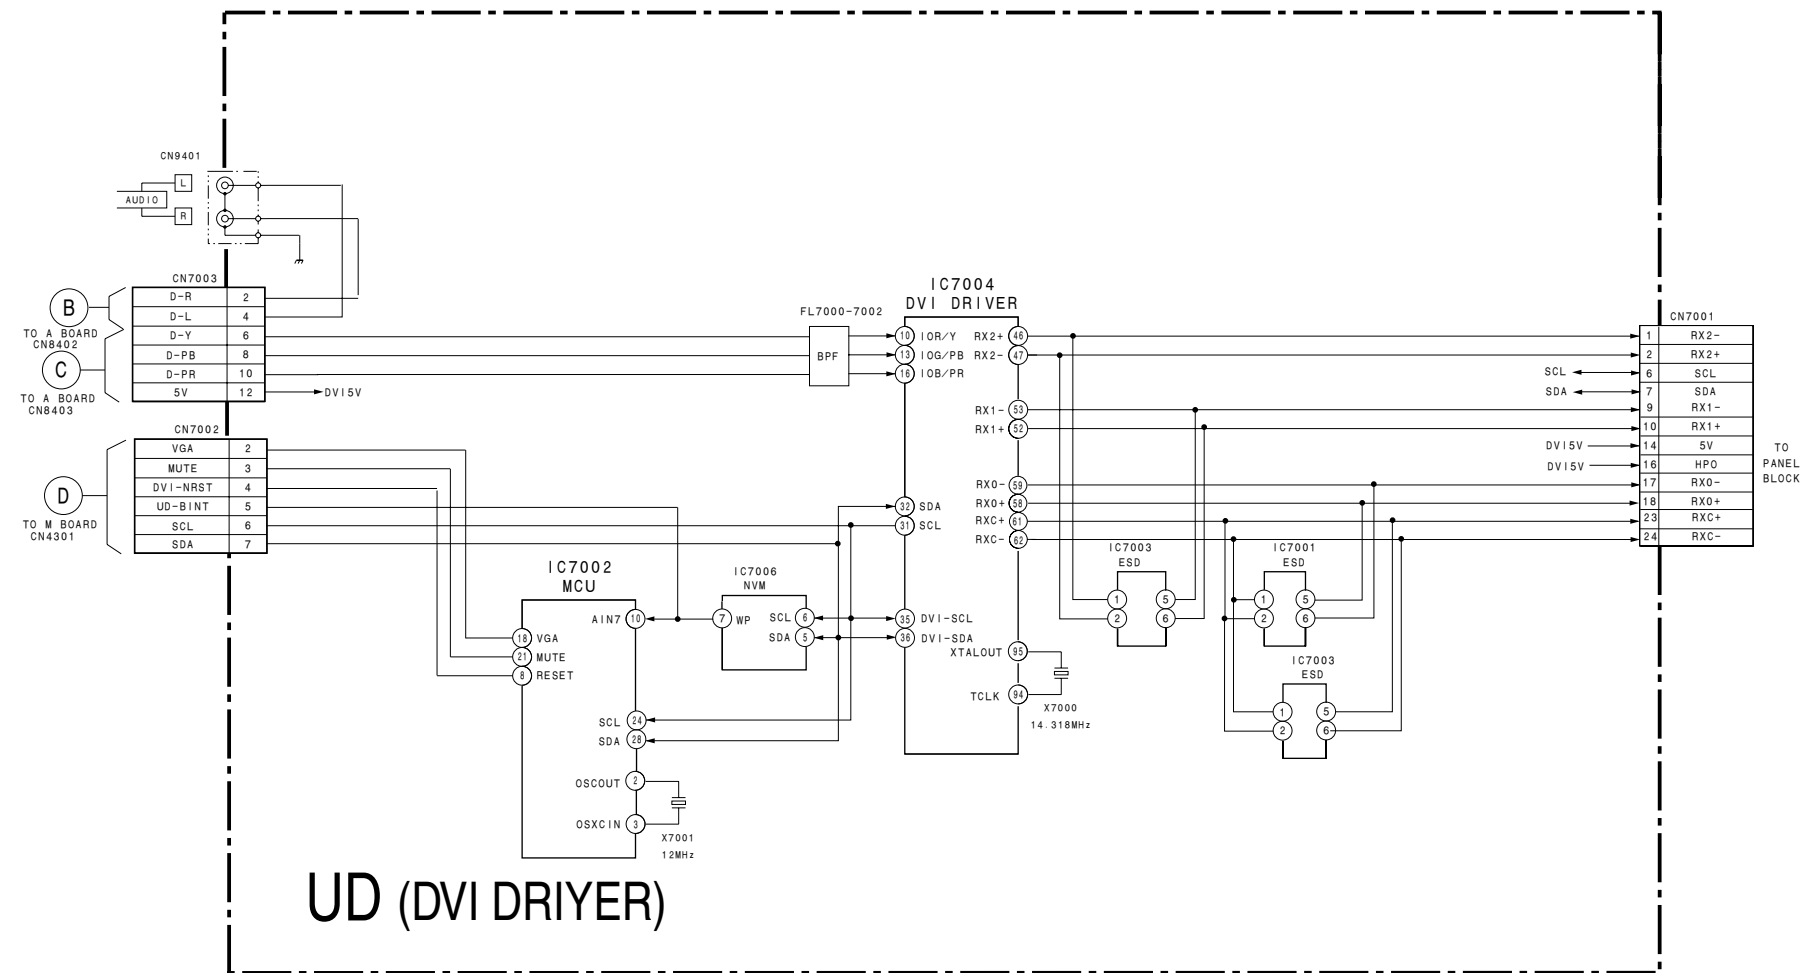

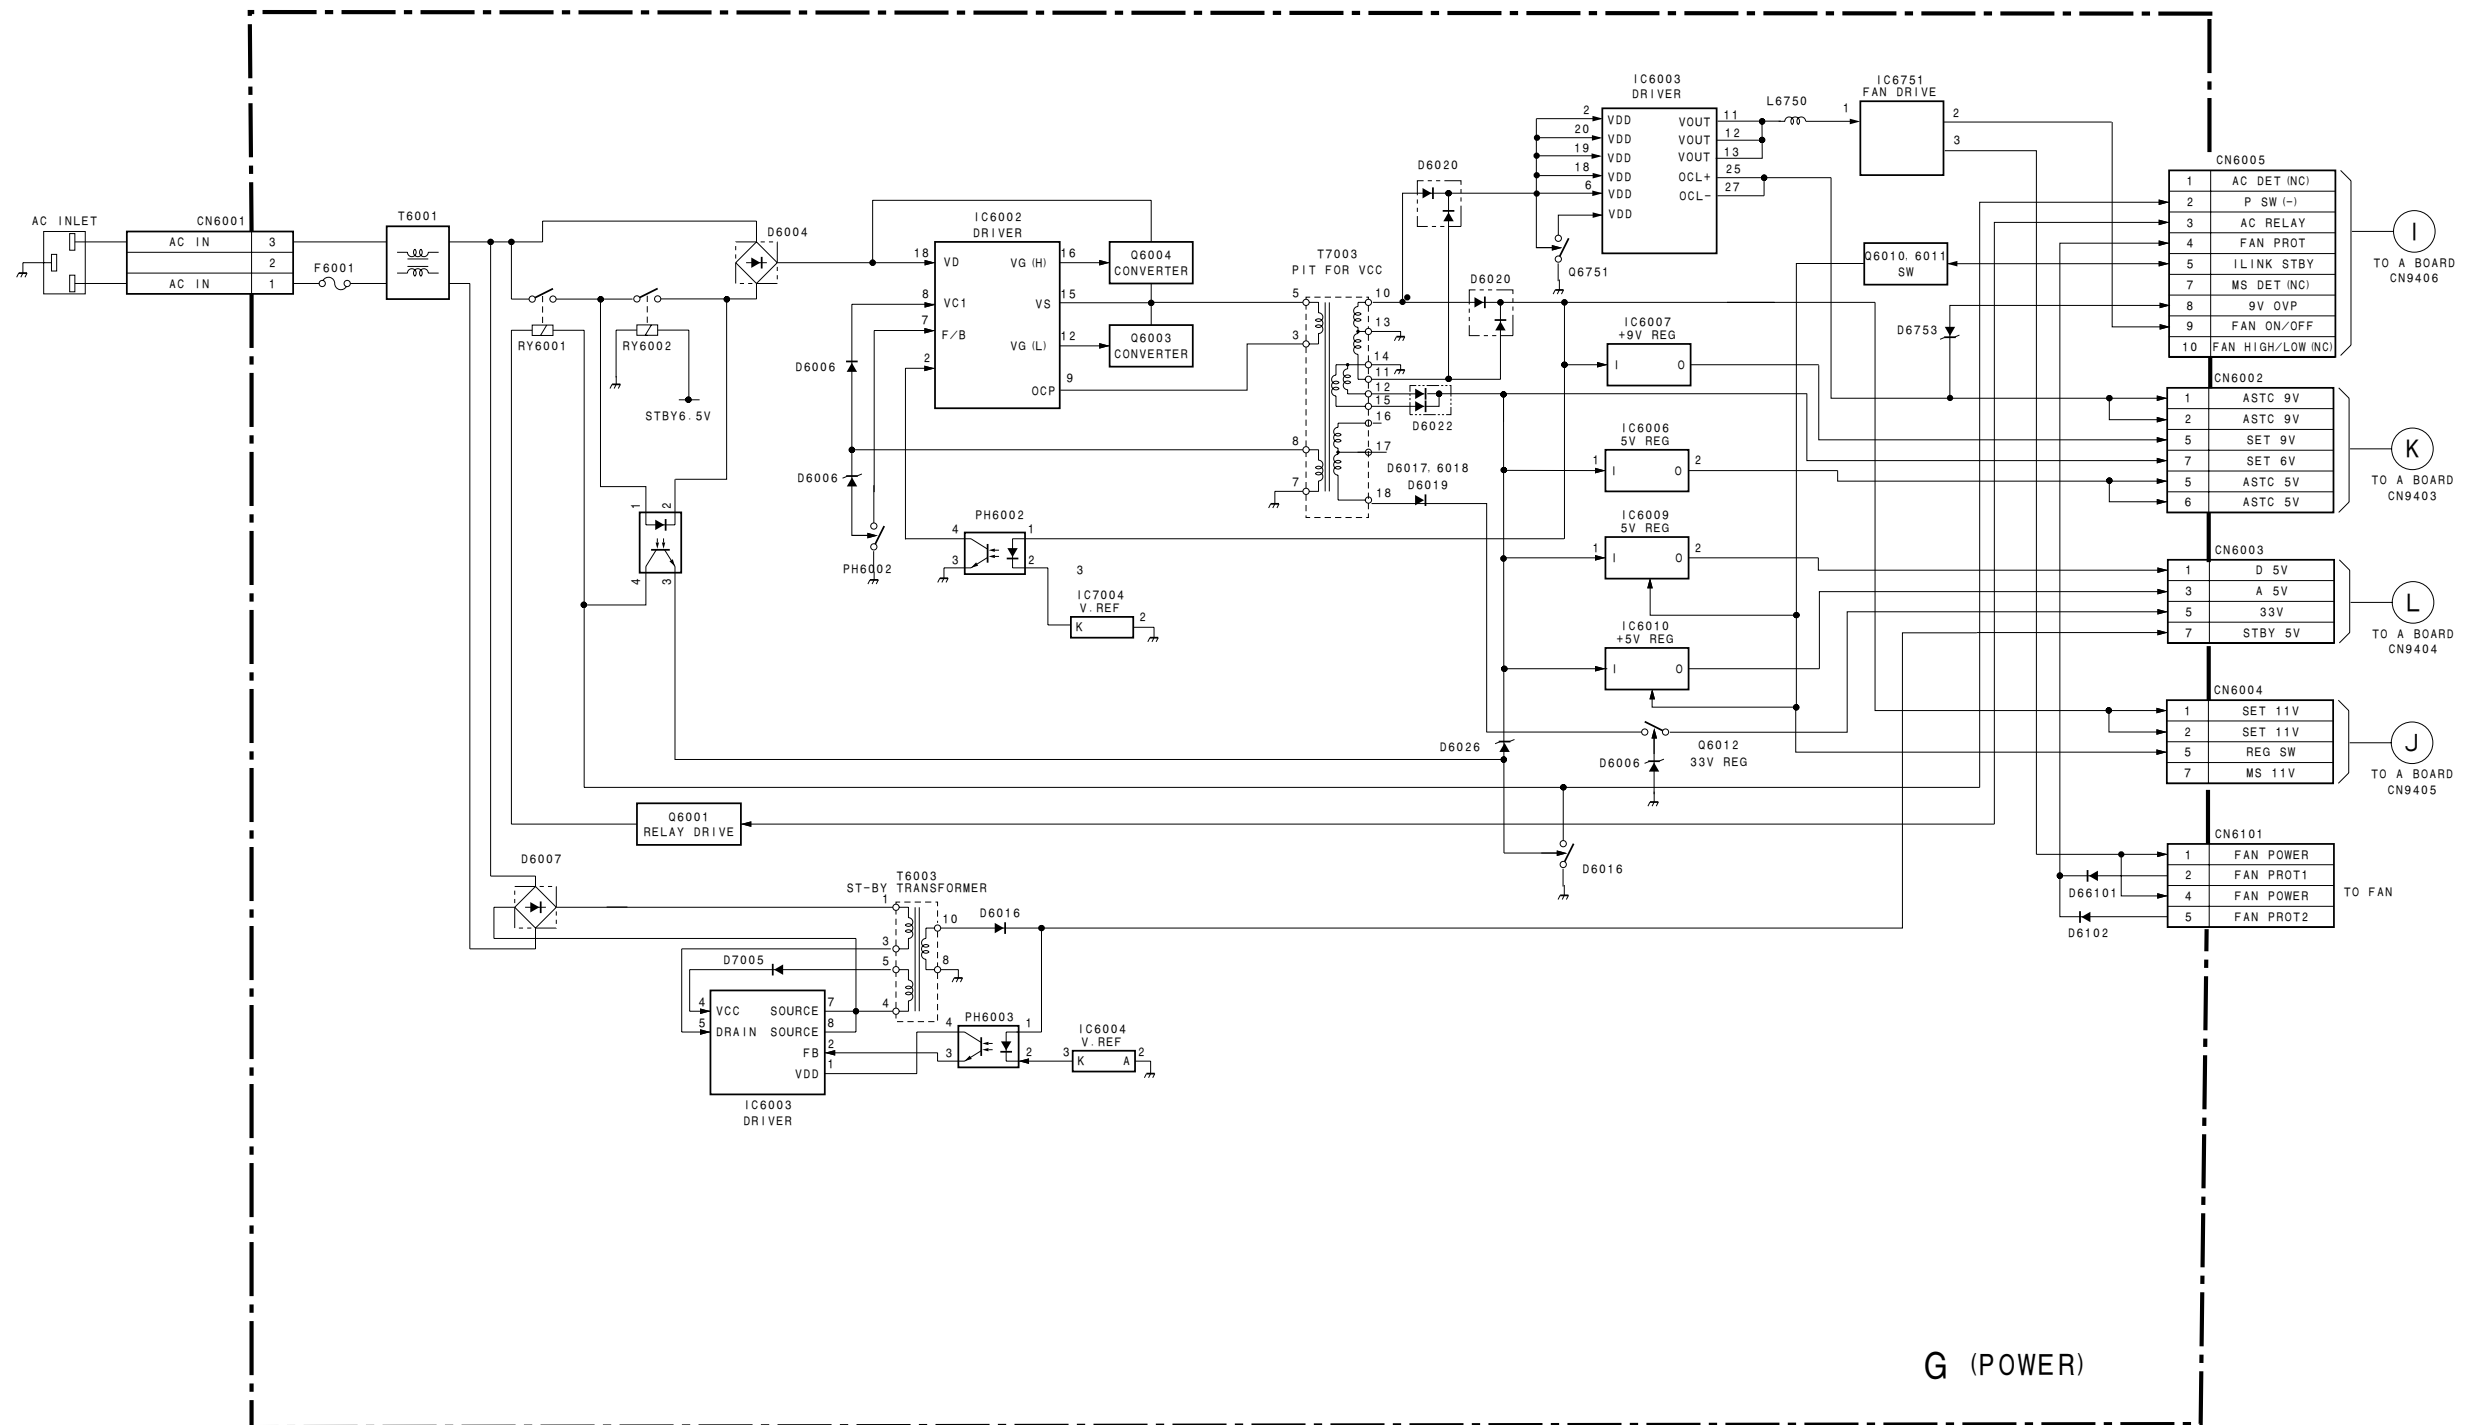


3-2. FRAME DIAGRAM

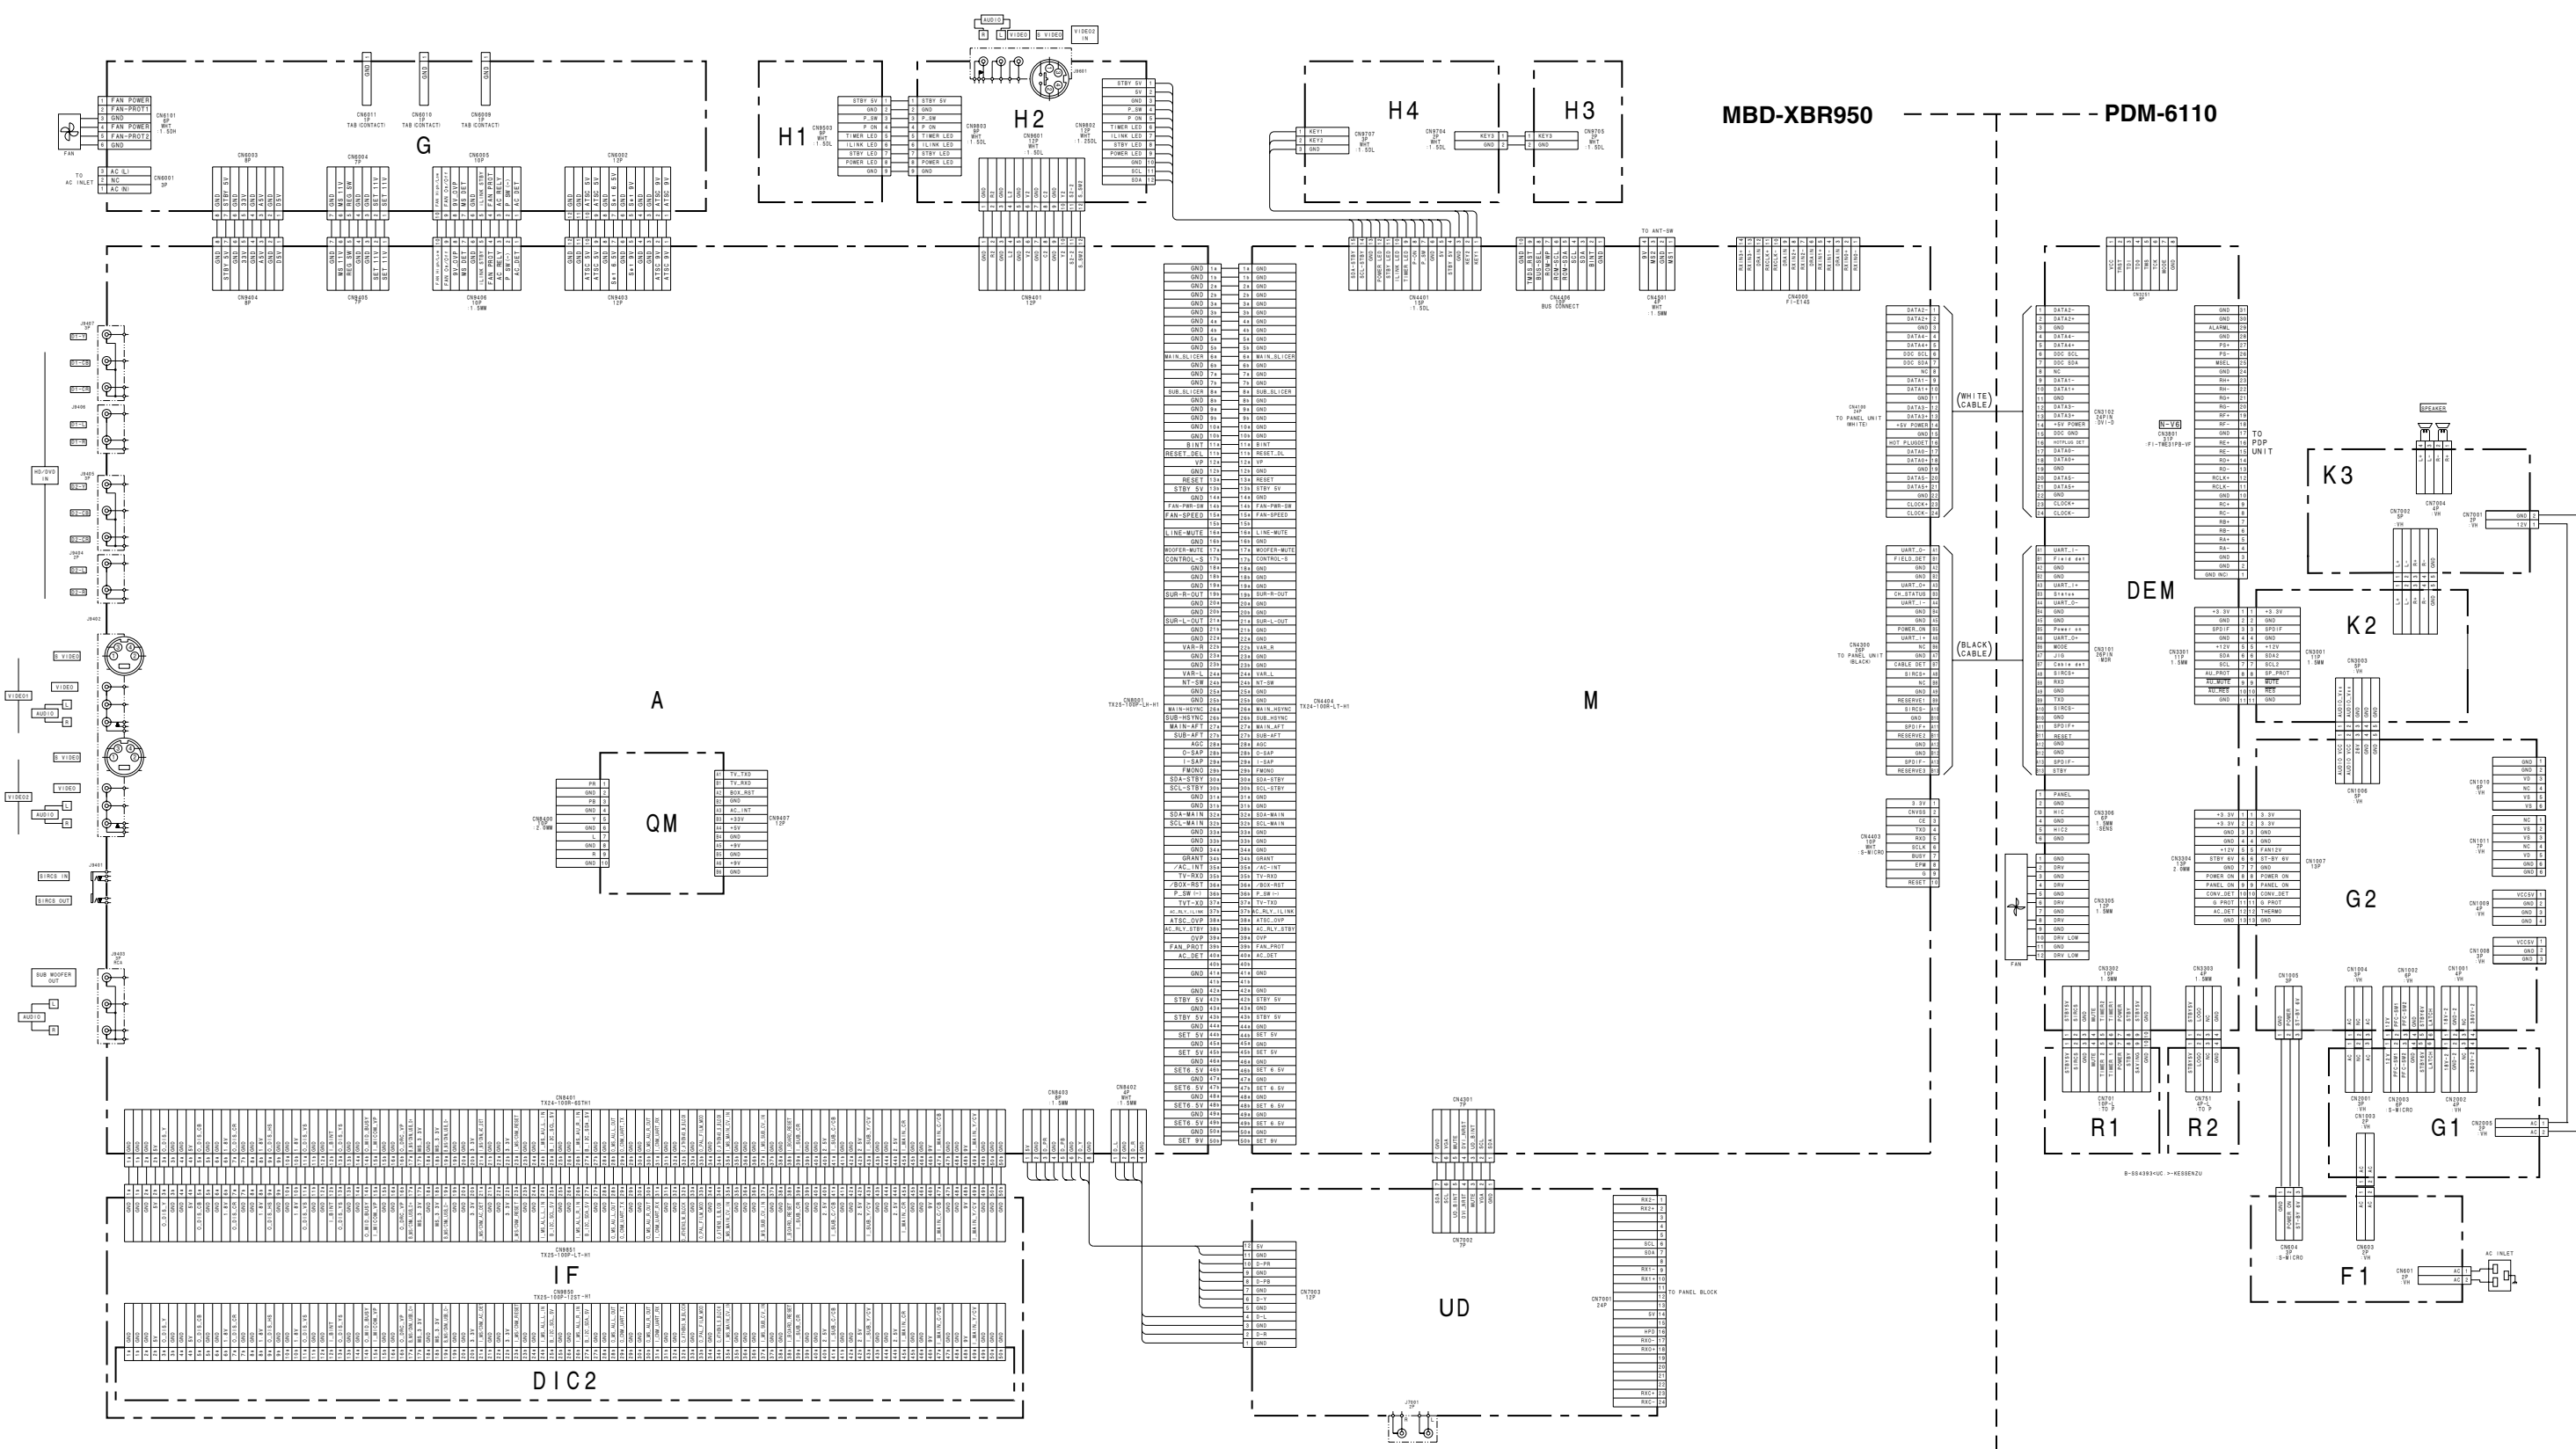


3-3. CIRCUIT BOARDS LOCATION

3-3-1. DISPLAY UNIT (PDM-6110)

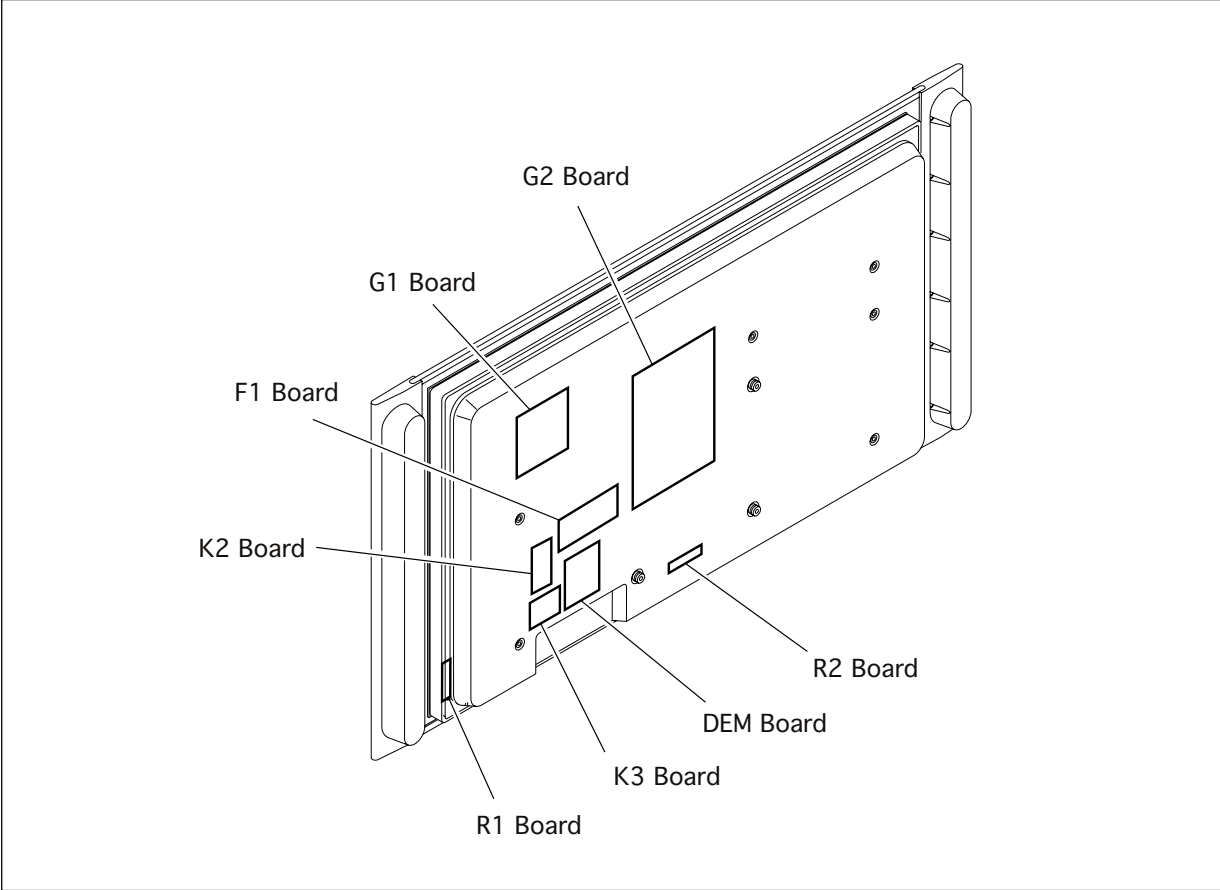

3-3-2. MEDIA RECEIVER UNIT (MBD-XBR950)

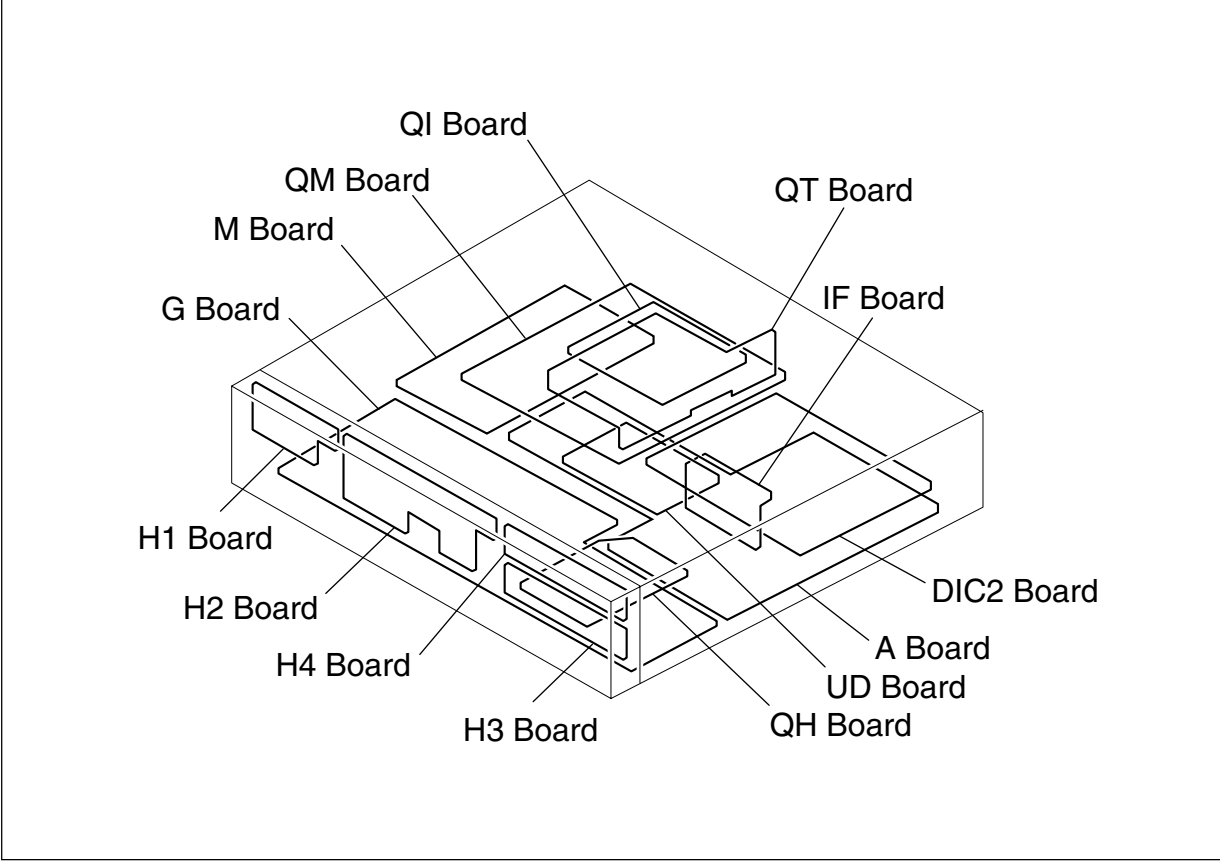

3-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

- Note:**
- All capacitors are in μF unless otherwise noted. (pF: μpF)
Capacitors without voltage indication are all 50 V.
 - Indication of resistance, which does not have one for rating electrical power, is as follows.
Pitch: 5 mm
Rating electrical power 1/4 W (CHIP : 1/10 W)
 - All resistors are in ohms.
 - : nonflammable resistor.
 - : fusible resistor.
 - \triangle : internal component.
 - : panel designation, and adjustment for repair.
 - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
 - \perp : earth-ground.
 - : earth-chassis.
 - When replacing the part in below table, be sure to perform the related adjustment.
 - All voltages are in V.
 - Readings are taken with a 10 M digital multimeter.
 - Readings are taken with a color-bar signal input.
 - Voltage variations may be noted due to normal production tolerances.
 - * : Can not be measured.
 - **Circled numbers are waveform references.**
 - : B + bus.
 - : B - bus.
 - : Signal path.

Note: The components identified by shading and mark \triangle are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un tramé et une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Terminal name of semiconductors in silk screen printed circuit (※)

	Device	Printed symbol	Terminal name	Circuit
①	Transistor		Collector Base Emitter	
②	Transistor		Collector Base Emitter	
③	Diode		Cathode Anode	
④	Diode		Cathode Anode (NC)	
⑤	Diode		Cathode Anode (NC)	
⑥	Diode		Common Anode Cathode	
⑦	Diode		Common Anode Cathode	
⑧	Diode		Common Anode Anode	
⑨	Diode		Common Anode Anode	
⑩	Diode		Common Cathode Cathode	
⑪	Diode		Common Cathode Cathode	
⑫	Diode		Anode Anode Cathode Anode	
⑬	Transistor (FET)		Drain Source Gate	
⑭	Transistor (FET)		Drain Source Gate	
⑮	Transistor (FET)		Source Drain Gate	
⑯	Transistor		Emitter Collector Base	
⑰	Transistor		C2 B1 E1 E2 B2 C1	
⑱	Transistor		C1 B2 E2 E1 B1 C2	
⑲	Transistor		C1 B2 E2 E1 B1 C2	
⑳	Transistor		C1 B2 E2 E1 B1 C2	
㉑	Transistor		E2 B1 E1 C2 C1(B2)	
㉒	Transistor		(B2) B1 E1 E2 C1 C2	
㉓	Transistor		(B2) E2 E1 B1 C2 C1	
—	Discrete semiconductor			

(Chip semiconductors that are not actually used are included.)

Ver.1.6


(1) Schematic Diagram of F1 Board



- **F1 BOARD SEMICONDUCTOR LOCATION**


IC			
	(Component Side)	(Conductor Side)	
IC601	A-2		
IC602	A-1		
TRANSISTOR			
	(Component Side)	(Conductor Side)	*
Q601		A-1	①
DIODE			
	(Component Side)	(Conductor Side)	*
D601	A-3		-
D602	A-2		-
D603	A-2		-
D604	A-1		-
D605	A-3		③


*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)

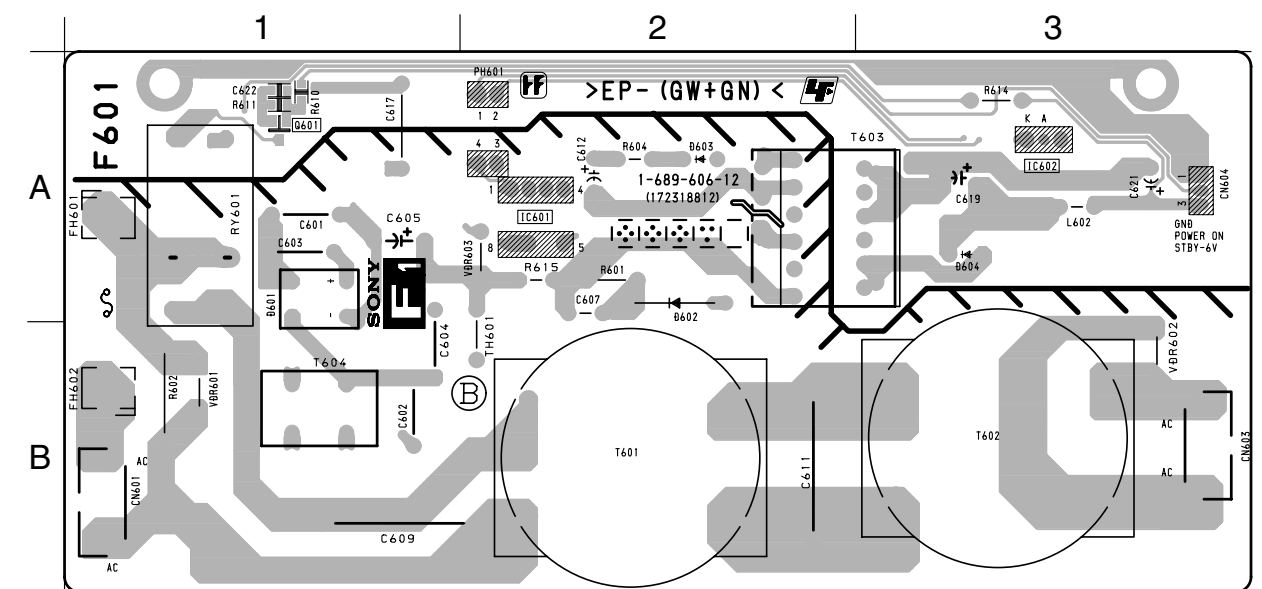



<CONDUCTOR SIDE>


(2) Schematic Diagrams of DEM Board

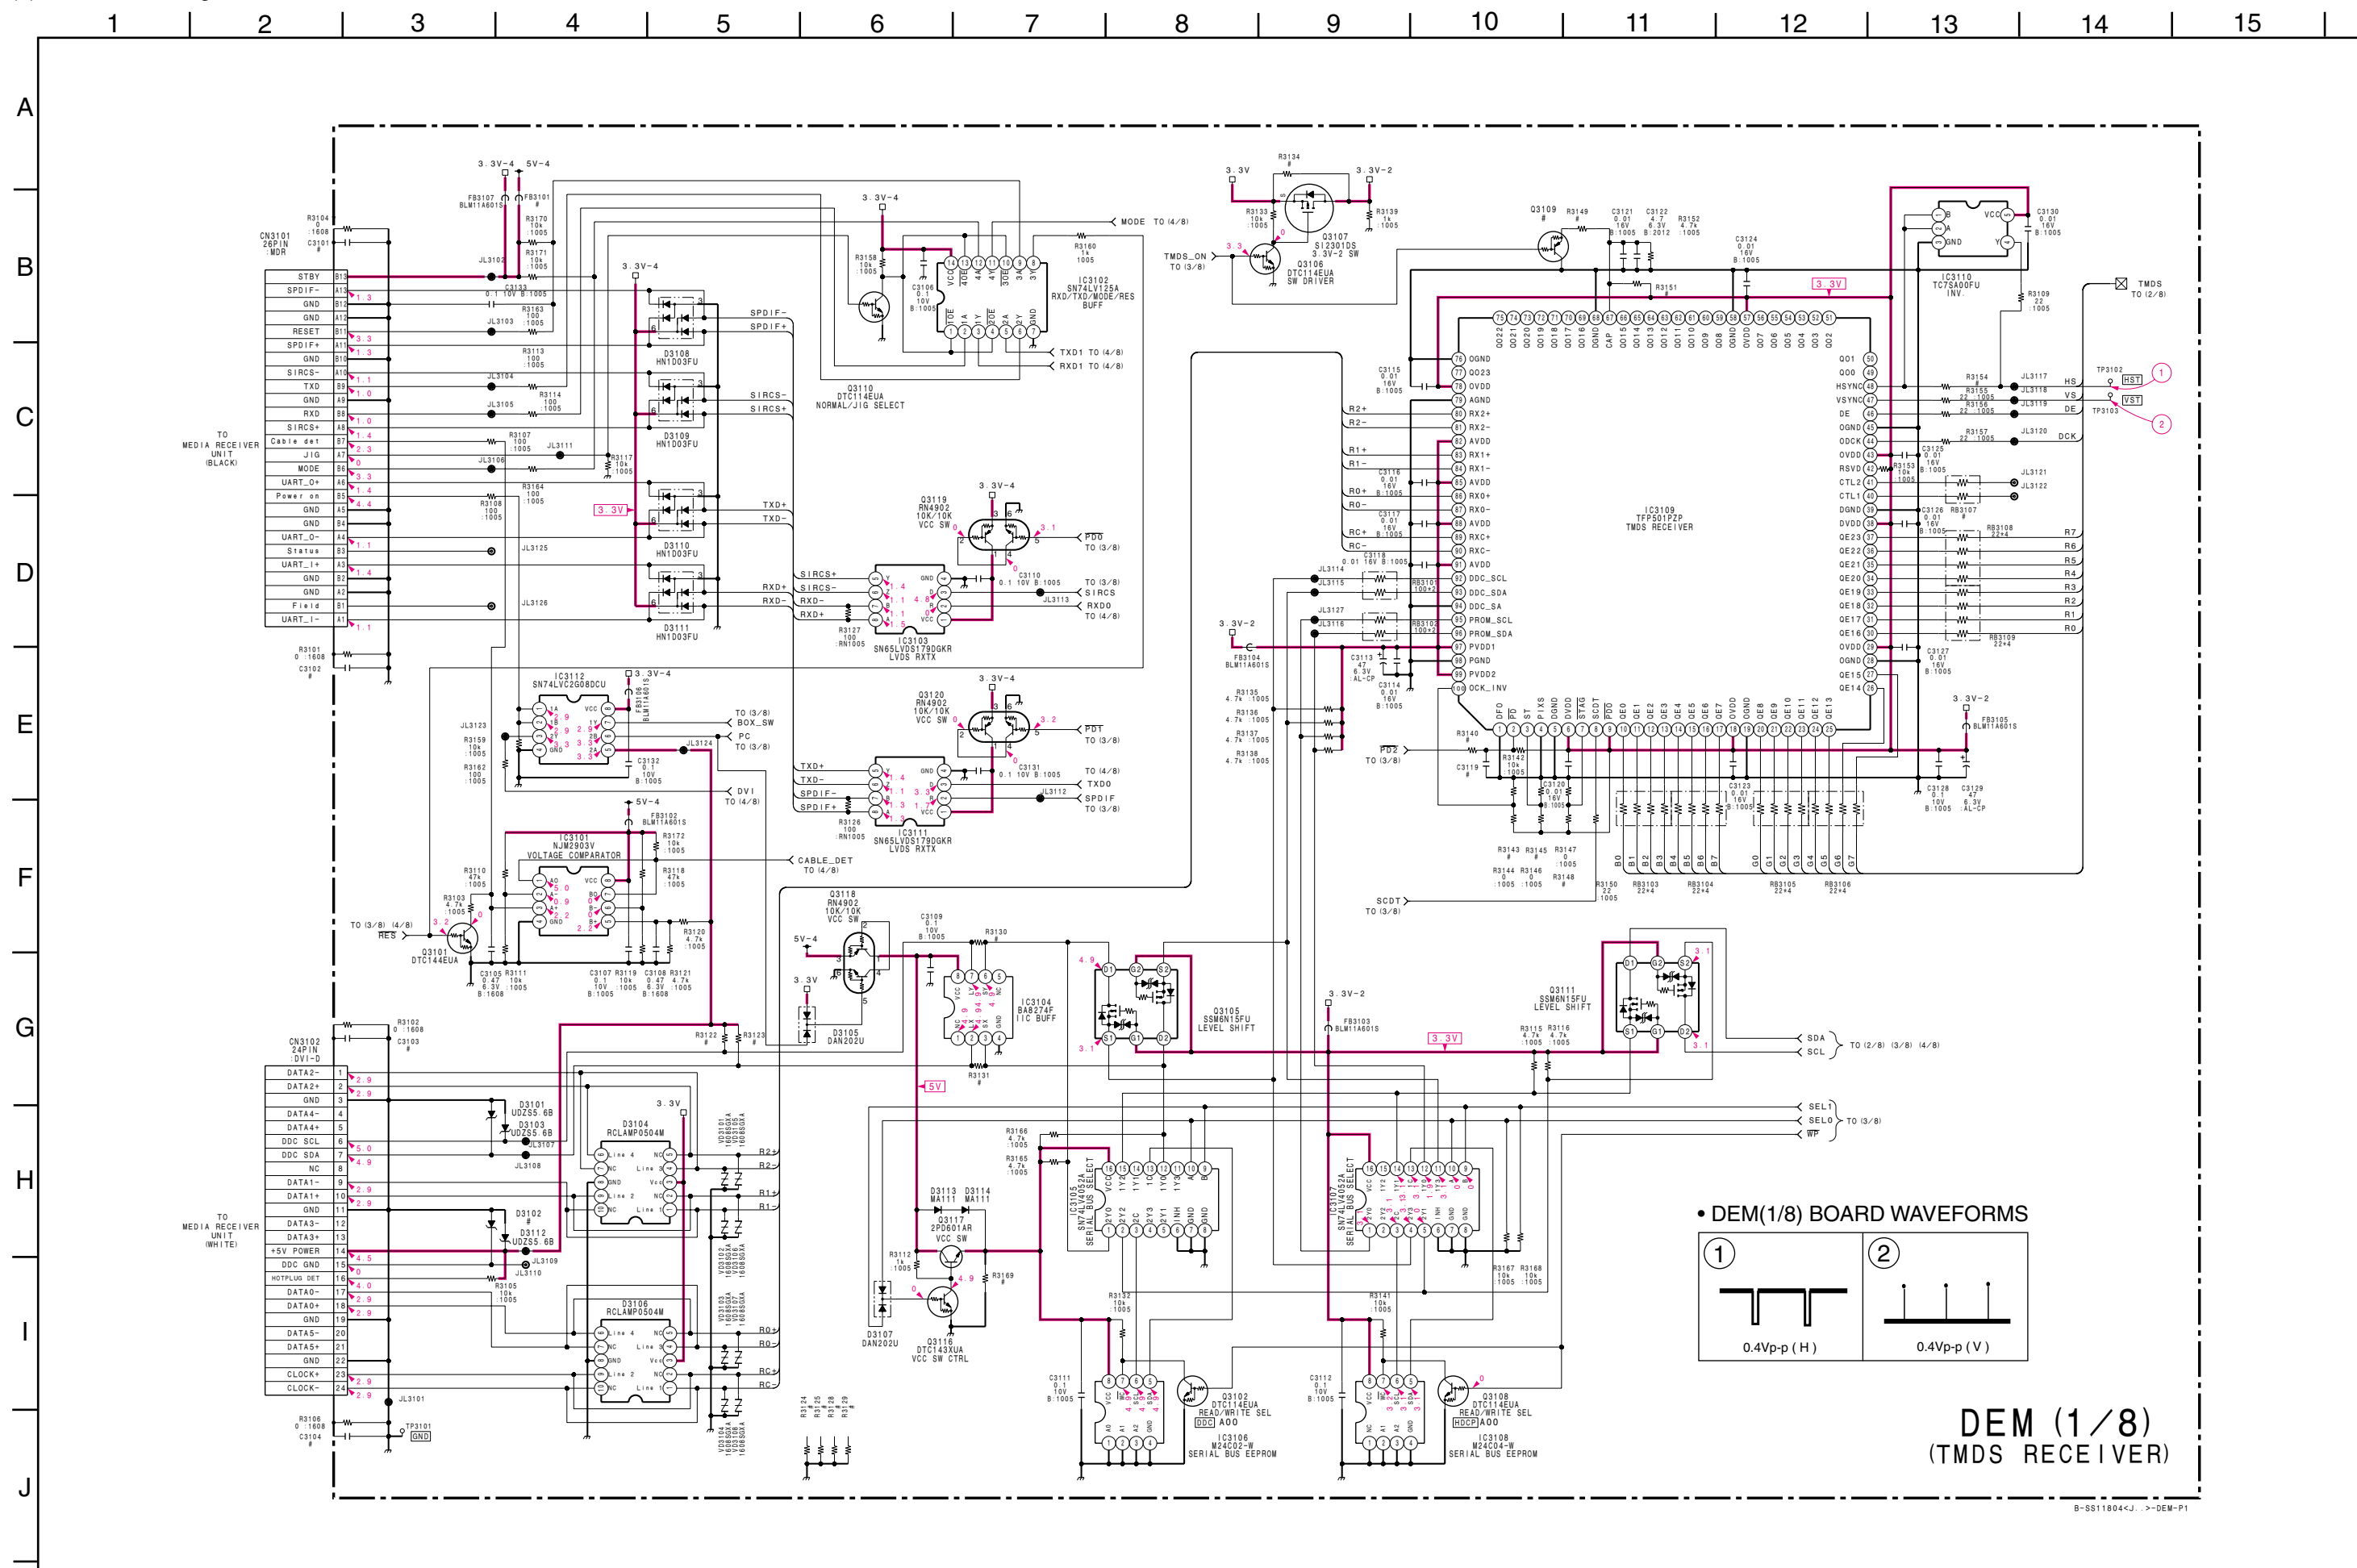


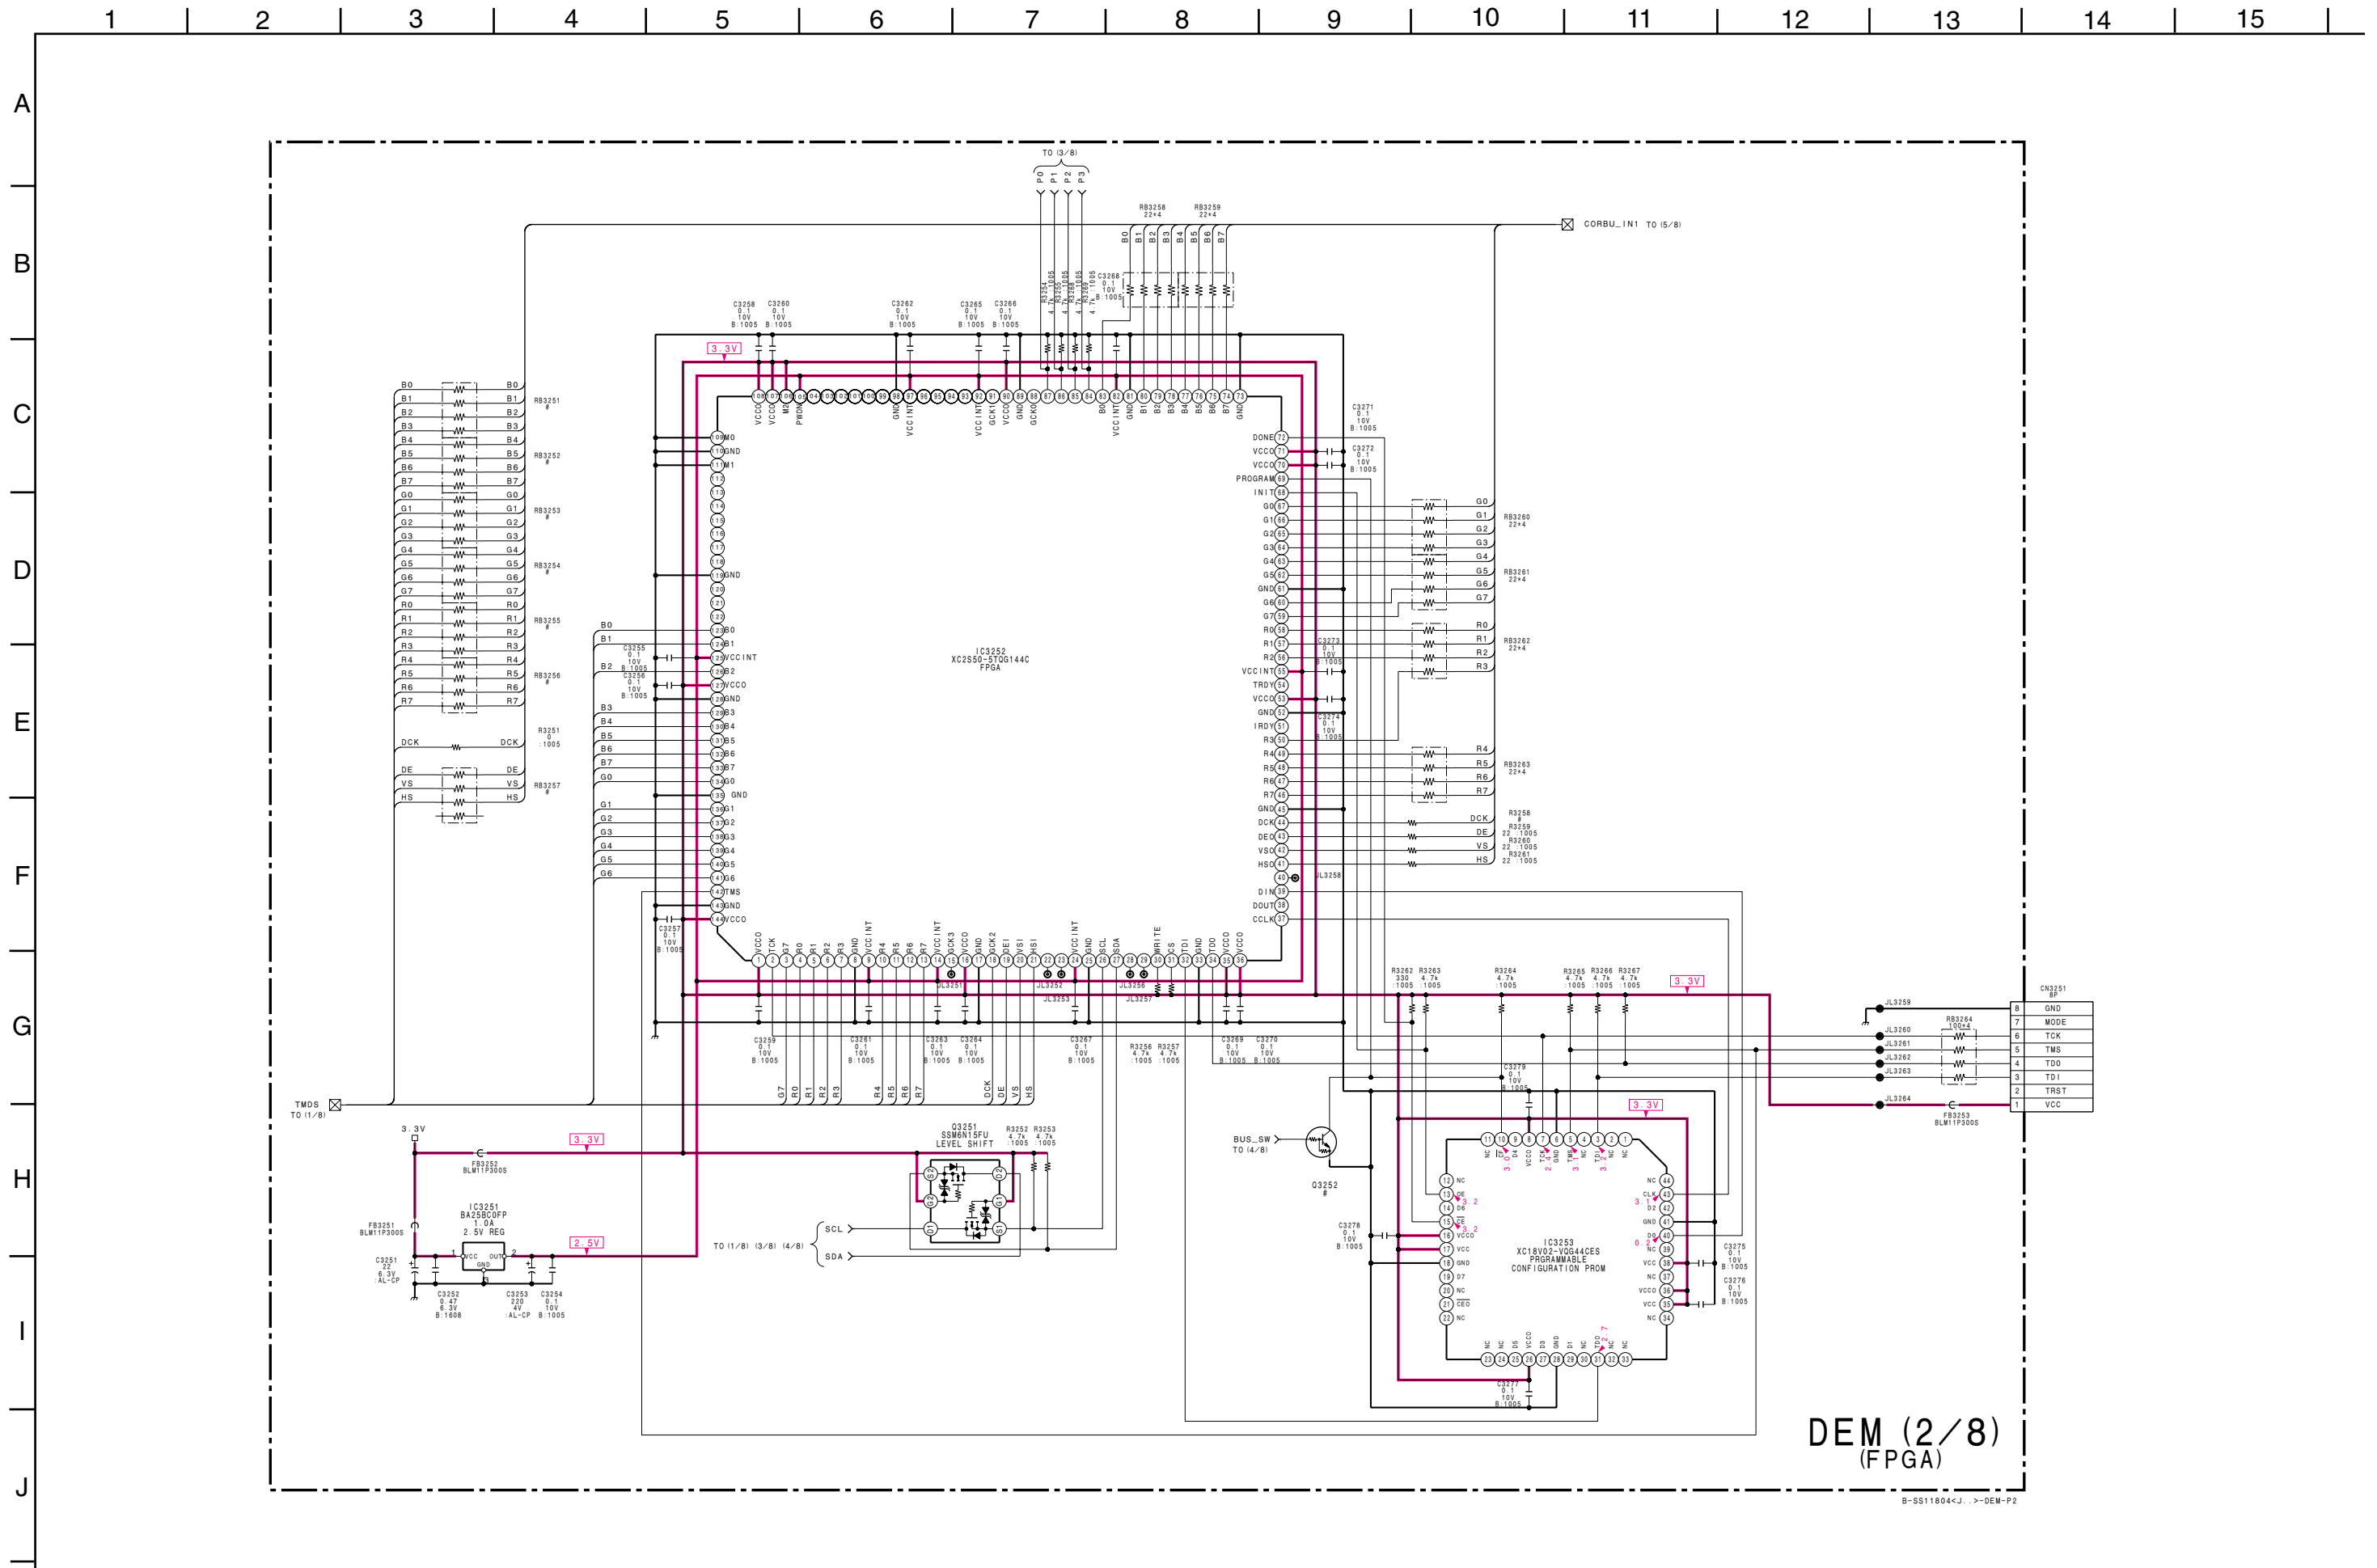



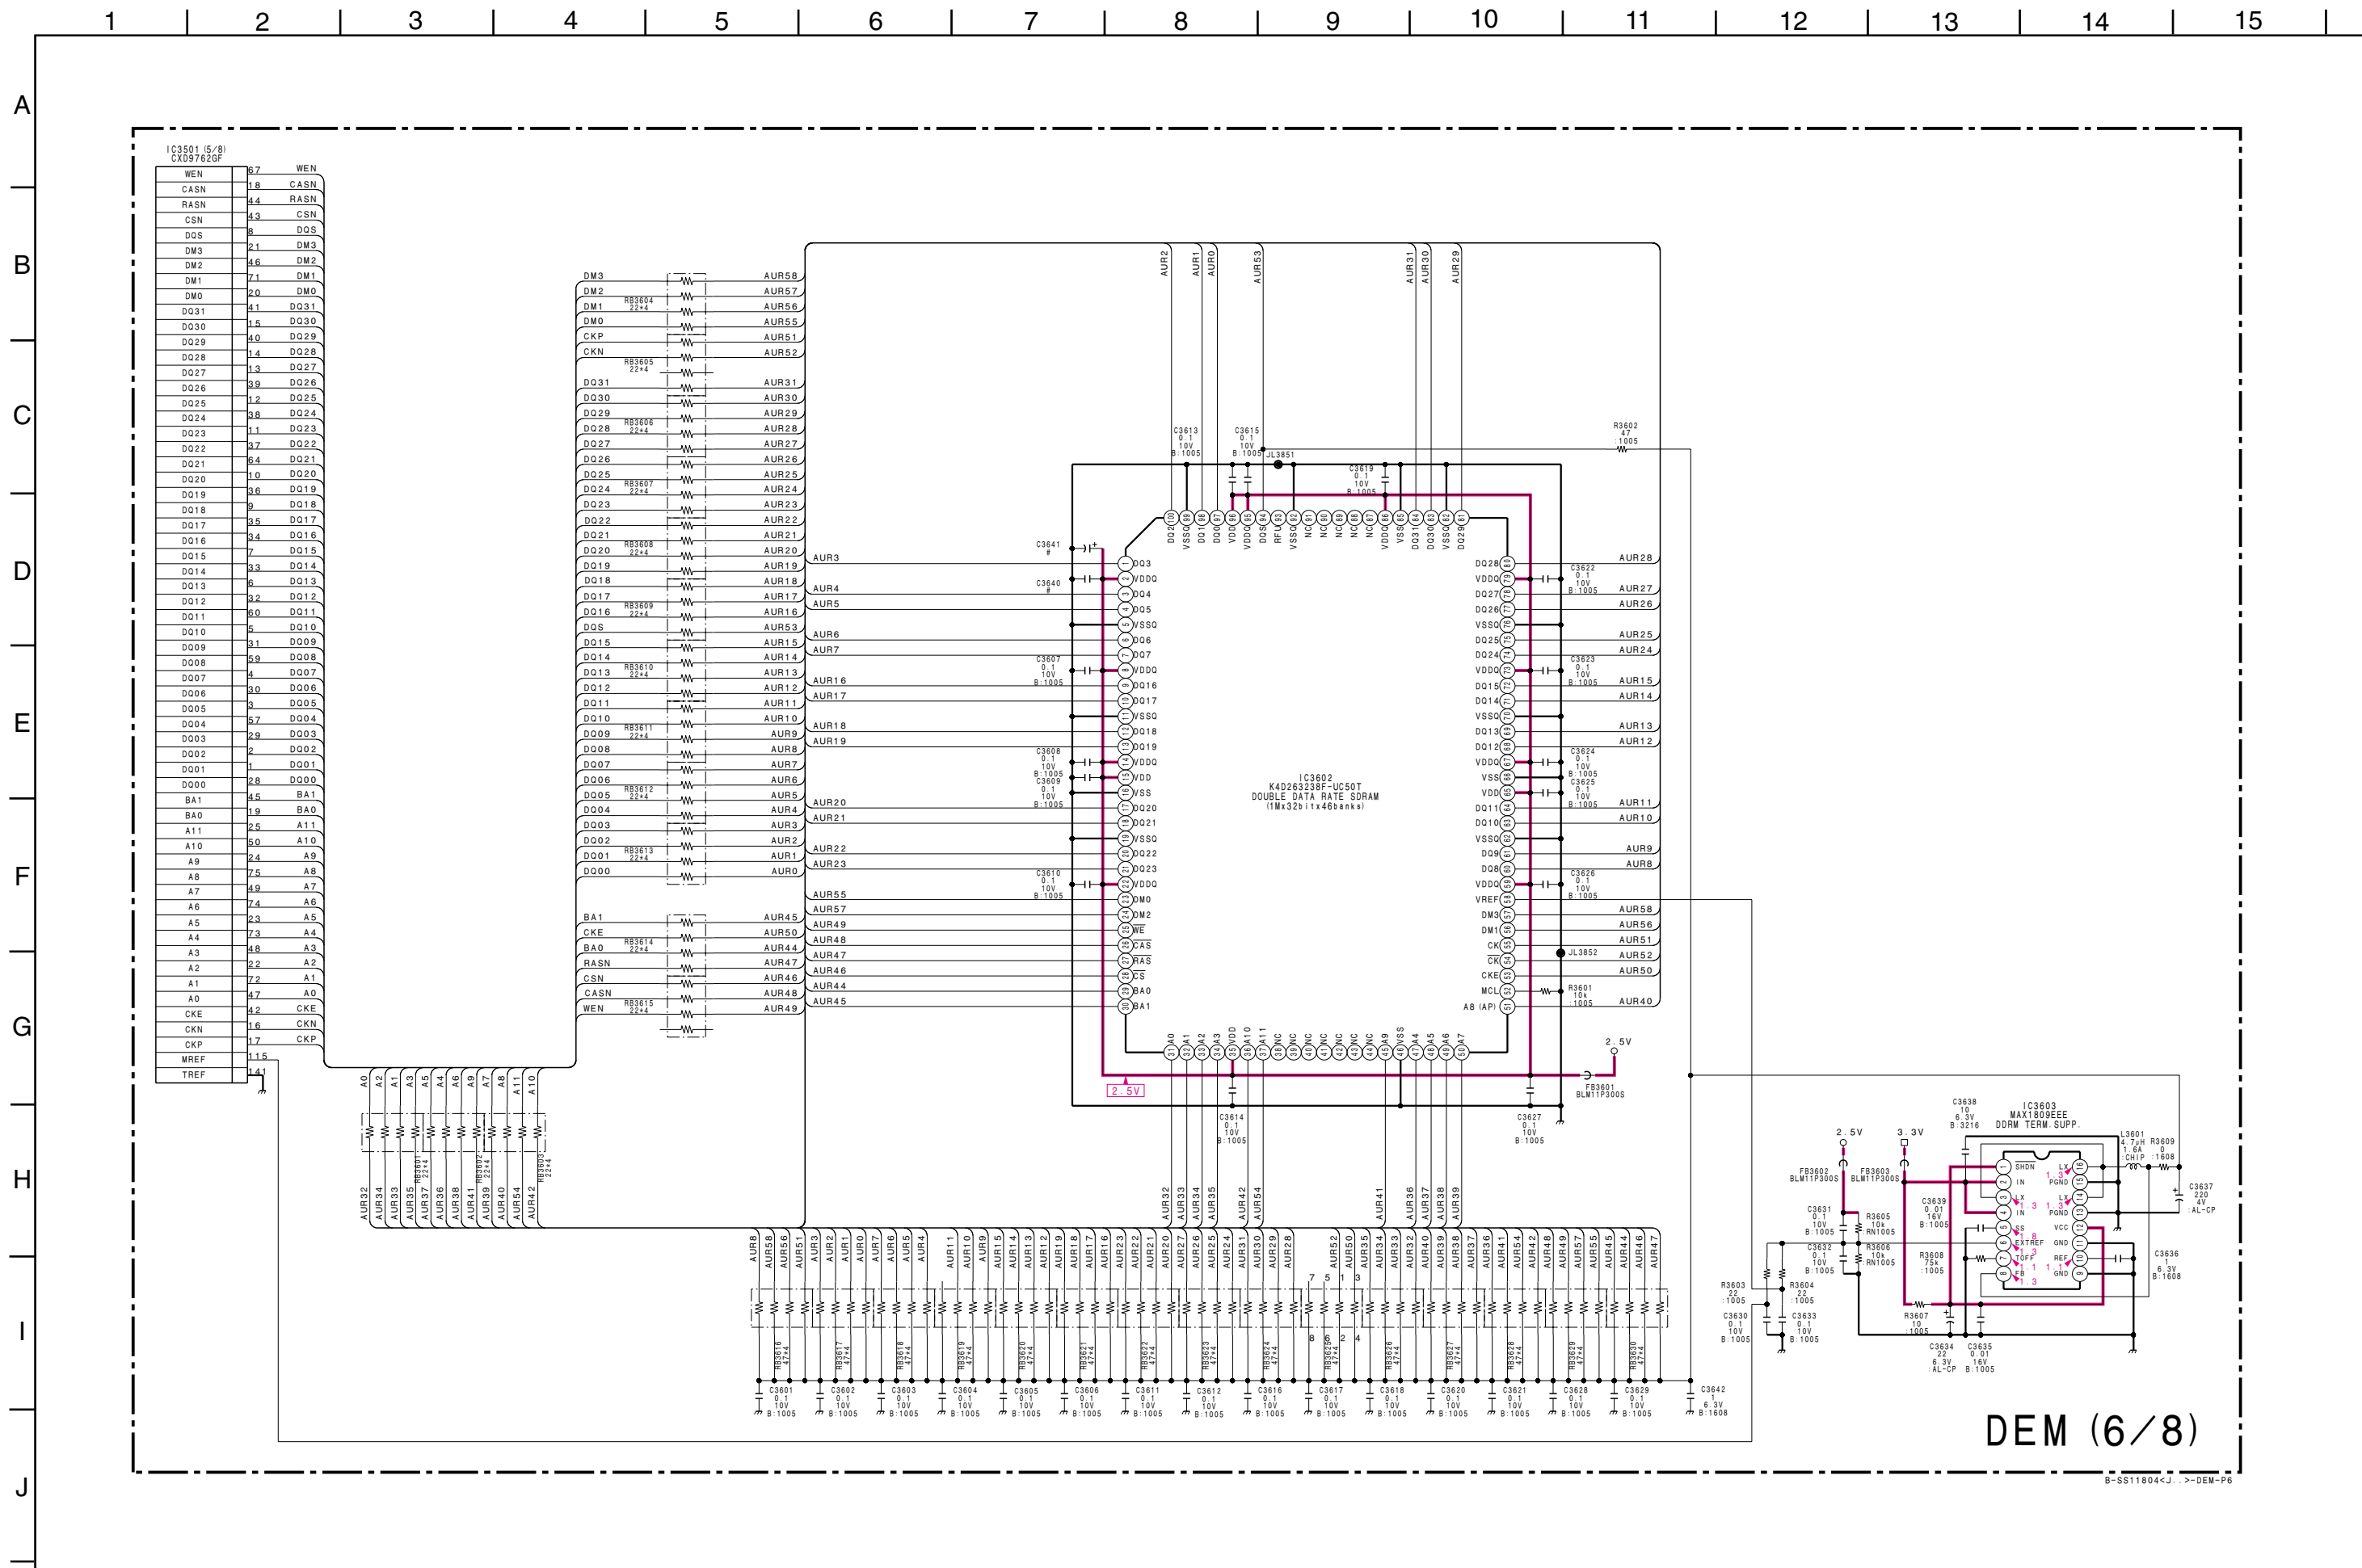

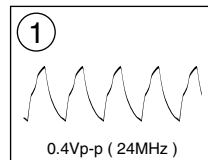





DEM

[TMSDS RECEIVER, MCU, FPGA, LVDS TRANSMITTER]

— DEM BOARD —

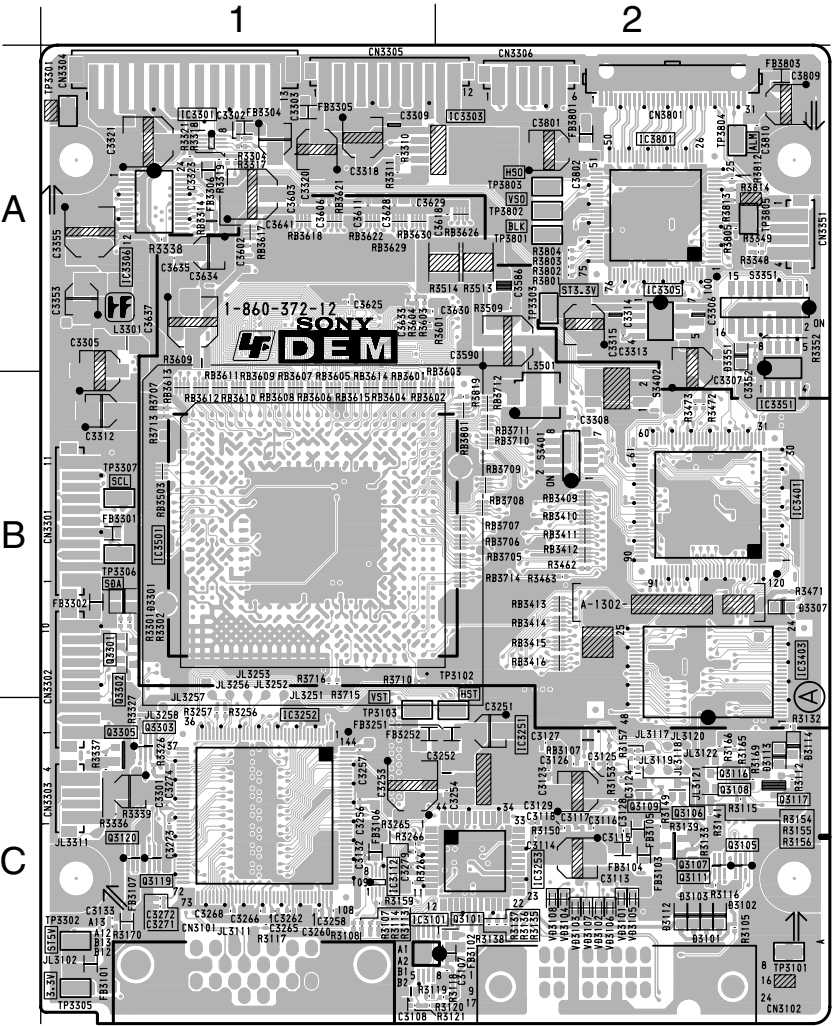

<COMPONENT SIDE>

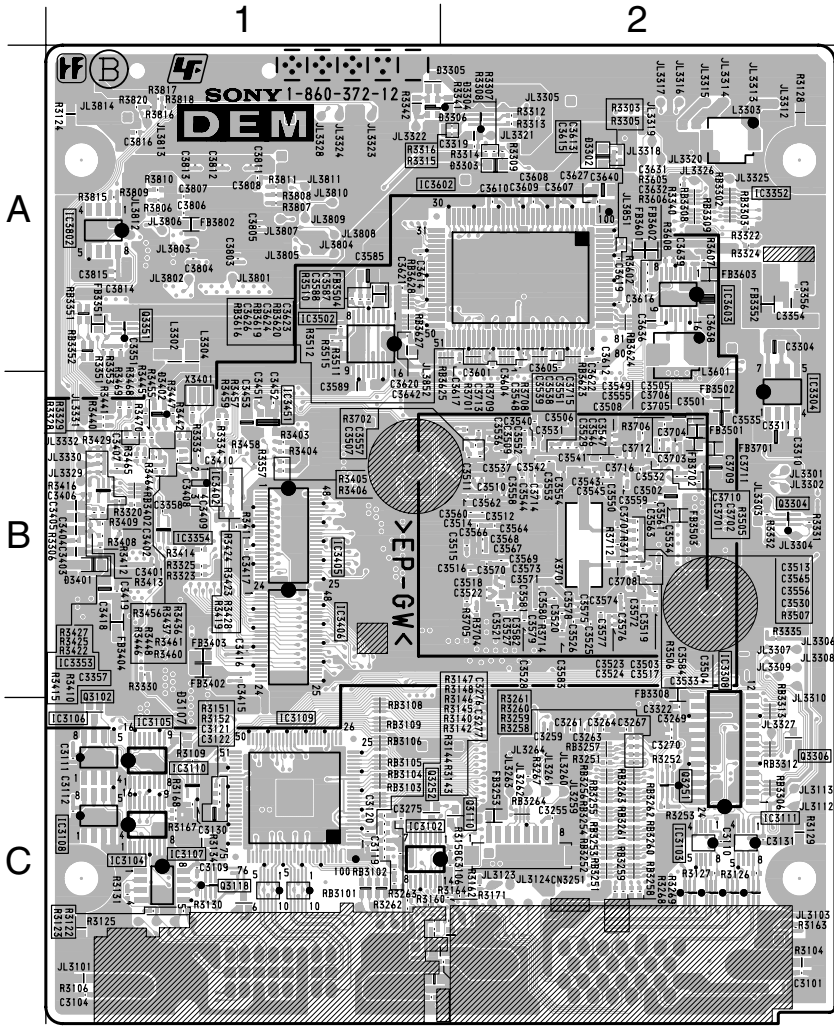

<CONDUCTOR SIDE>

• DEM BOARD SEMICONDUCTOR LOCATION

IC	(Component Side) (Conductor Side)		Q3306	C-2	②
IC3451		B-1		A-1	-
IC3501		A-1			
IC3502		A-2			
IC3602		A-2			
IC3603		A-1			
IC3801		A-1			
IC3802					
DIODE					
		(Component Side) (Conductor Side)		*	
IC3101	C-1		D3101	C-2	③
IC3102		C-1	D3102	C-2	③
IC3103	C-2		D3103	C-2	③
IC3104	C-1		D3104		
IC3105	C-1		D3105	C-1	⑨
IC3106	C-1		D3106	C-1	⑨
IC3107	C-1		D3107	C-1	⑨
IC3108	C-1		D3108	C-2	-
IC3109	C-1		D3109	C-2	-
IC3110	C-1		D3110	C-2	-
IC3111	C-2		D3111	C-2	-
IC3112	C-1		D3112	C-2	③
IC3251	C-2		D3113	C-2	③
IC3252	C-1		D3114	C-2	③
IC3253	C-2		D3301	B-1	③
IC3301	A-1		D3302	A-2	③
IC3303	A-2		D3303	A-2	-
IC3304	B-2		D3304	A-1	⑪
IC3305	A-2		D3305	A-1	-
IC3352	A-2		D3306	A-1	-
IC3353	B-1		D3307	B-2	③
IC3354	B-1		D3351	A-2	③
IC3401	B-2		D3401	B-1	③
IC3402	B-1		D3402	B-1	-
IC3403	B-2				
IC3405	B-1				
IC3406	B-1				
TRANSISTOR					
		(Component Side) (Conductor Side)		*	
Q3101	C-2		Q3101	C-2	②
Q3102		C-1	Q3102	C-1	②
Q3105	C-2		Q3105	C-2	-
Q3106	C-2		Q3106	C-2	-
Q3107	C-2		Q3107	C-2	-
Q3108	C-2		Q3108	C-2	-
Q3109	C-2		Q3109	C-2	-
Q3110	C-2		Q3110	C-2	-
Q3111	C-2		Q3111	C-2	-
Q3116	C-2		Q3116	C-2	-
Q3117	C-2		Q3117	C-2	-
Q3118	C-1		Q3118	C-1	-
Q3119	C-1		Q3119	C-1	-
Q3120	C-1		Q3120	C-1	-
Q3251		C-2	Q3251	C-2	-
Q3252		C-1	Q3252	C-1	②
Q3253	B-1		Q3253	B-1	②
Q3254	B-1		Q3254	B-1	②
Q3255	B-1		Q3255	B-1	②
Q3256	B-1		Q3256	B-1	②
Q3257	B-1		Q3257	B-1	②
Q3258	B-1		Q3258	B-1	②
Q3259	B-1		Q3259	B-1	②
Q3260	B-1		Q3260	B-1	②
Q3261	B-1		Q3261	B-1	②
Q3262	B-1		Q3262	B-1	②
Q3263	B-1		Q3263	B-1	②
Q3264	B-1		Q3264	B-1	②
Q3265	B-1		Q3265	B-1	②
Q3266	B-1		Q3266	B-1	②
Q3267	B-1		Q3267	B-1	②
Q3268	B-1		Q3268	B-1	②
Q3269	B-1		Q3269	B-1	②
Q3270	B-1		Q3270	B-1	②
Q3271	B-1		Q3271	B-1	②
Q3272	B-1		Q3272	B-1	②
Q3273	B-1		Q3273	B-1	②
Q3274	B-1		Q3274	B-1	②
Q3275	B-1		Q3275	B-1	②
Q3276	B-1		Q3276	B-1	②
Q3277	B-1		Q3277	B-1	②
Q3278	B-1		Q3278	B-1	②
Q3279	B-1		Q3279	B-1	②
Q3280	B-1		Q3280	B-1	②
Q3281	B-1		Q3281	B-1	②
Q3282	B-1		Q3282	B-1	②
Q3283	B-1		Q3283	B-1	②
Q3284	B-1		Q3284	B-1	②
Q3285	B-1		Q3285	B-1	②
Q3286	B-1		Q3286	B-1	②
Q3287	B-1		Q3287	B-1	②
Q3288	B-1		Q3288	B-1	②
Q3289	B-1		Q3289	B-1	②
Q3290	B-1		Q3290	B-1	②
Q3291	B-1		Q3291	B-1	②
Q3292	B-1		Q3292	B-1	②
Q3293	B-1		Q3293	B-1	②
Q3294	B-1		Q3294	B-1	②
Q3295	B-1		Q3295	B-1	②
Q3296	B-1		Q3296	B-1	②
Q3297	B-1		Q3297	B-1	②
Q3298	B-1		Q3298	B-1	②
Q3299	B-1		Q3299	B-1	②
Q3300	B-1		Q3300	B-1	②
Q3301	B-1		Q3301	B-1	②
Q3302	B-1		Q3302	B-1	②
Q3303	B-1		Q3303	B-1	②
Q3304	B-1		Q3304	B-1	②
Q3305	B-1		Q3305	B-1	②
Q3306	B-1		Q3306	B-1	②
Q3307	B-1		Q3307	B-1	②
Q3308	B-1		Q3308	B-1	②
Q3309	B-1		Q3309	B-1	②
Q3310	B-1		Q3310	B-1	②
Q3311	B-1		Q3311	B-1	②
Q3312	B-1		Q3312	B-1	②
Q3313	B-1		Q3313	B-1	②
Q3314	B-1		Q3314	B-1	②
Q3315	B-1		Q3315	B-1	②
Q3316	B-1		Q3316	B-1	②
Q3317	B-1		Q3317	B-1	②
Q3318	B-1		Q3318	B-1	②
Q3319	B-1		Q3319	B-1	②
Q3320	B-1		Q3320	B-1	②
Q3321	B-1		Q3321	B-1	②
Q3322	B-1		Q3322	B-1	②
Q3323	B-1		Q3323	B-1	②
Q3324	B-1		Q3324	B-1	②
Q3325	B-1		Q3325	B-1	②
Q3326	B-1		Q3326	B-1	②
Q3327	B-1		Q3327	B-1	②
Q3328	B-1		Q3328	B-1	②
Q3329	B-1		Q3329	B-1	②
Q3330	B-1		Q3330	B-1	②
Q3331	B-1		Q3331	B-1	②
Q3332	B-1		Q3332	B-1	②
Q3333	B-1		Q3333	B-1	②
Q3334	B-1		Q3334	B-1	②
Q3335	B-1		Q3335	B-1	②
Q3336	B-1		Q3336	B-1	②
Q3337	B-1		Q3337	B-1	②
Q3338	B-1		Q3338	B-1	②
Q3339	B-1		Q3339	B-1	②
Q3340	B-1		Q3340	B-1	②
Q3341	B-1		Q3341	B-1	②
Q3342	B-1		Q3342	B-1	②
Q3343	B-1		Q3343	B-1	②
Q3344	B-1		Q3344	B-1	②
Q3345	B-1		Q3345	B-1	②
Q3346	B-1		Q3346	B-1	②
Q3347	B-1		Q3347	B-1	②
Q3348	B-1		Q3348	B-1	②
Q3349	B-1		Q3349	B-1	②
Q3350	B-1		Q3350	B-1	②
Q3351	B-1		Q3351	B-1	②
Q3352	B-1		Q3352	B-1	②
Q3353	B-1		Q3353	B-1	②
Q3354	B-1		Q3354	B-1	②
Q3355	B-1		Q3355	B-1	②
Q3356	B-1		Q3356	B-1	②
Q3357	B-1		Q3357	B-1	②
Q3358	B-1		Q3358	B-1	②
Q3359	B-1		Q3359	B-1	②
Q3360	B-1		Q3360	B-1	②
Q3361	B-1		Q3361	B-1	②
Q3362	B-1		Q3362	B-1	②
Q3363	B-1		Q3363	B-1	②
Q3364	B-1		Q3364	B-1	②
Q3365	B-1		Q3365	B-1	②
Q3366	B-1		Q3366	B-1	②
Q3367	B-1		Q3367	B-1	②
Q3368	B-1		Q3368	B-1	②
Q3369	B-1		Q3369	B-1	②
Q3370	B-1		Q3370	B-1	②
Q3371	B-1		Q3371	B-1	②
Q3372	B-1		Q3372	B-1	②
Q3373	B-1		Q3373	B-1	②
Q3374	B-1		Q3374	B-1	②
Q3375	B-1		Q3375	B-1	②
Q3376	B-1		Q3376	B-1	②
Q3377	B-1		Q3377	B-1	②
Q3378	B-1		Q3378	B-1	②
Q3379	B-1		Q3379	B-1	②
Q3380	B-1		Q3380	B-1	②
Q3381	B-1		Q3381	B-1	②
Q3382	B-1		Q3382	B-1	②
Q3383	B-1		Q3383	B-1	②
Q3384	B-1		Q3384	B-1	②
Q3385	B-1		Q3385	B-1	②
Q3386	B-1		Q3386	B-1	②
Q3387	B-1		Q3387	B-1	②
Q3388	B-1		Q3388	B-1	②
Q3389	B-1		Q3389	B-1	②
Q3390	B-1		Q3390	B-1	②
Q3391	B-1		Q3391	B-1	②
Q3392	B-1		Q3392	B-1	②
Q3393	B-1		Q3393	B-1	②
Q3394	B-1		Q3394	B-1	②
Q3395	B-1		Q3395	B-1	②
Q3396	B-1		Q3396	B-1	②
Q3397	B-1		Q3397	B-1	②
Q3398	B-1		Q3398	B-1	②
Q3399	B-1		Q3399	B-1	②
Q3400	B-1		Q3400	B-1	②
Q3401	B-1		Q3401	B-1	②
Q3402	B-1		Q3402	B-1	②
Q3403	B-1		Q3403	B-1	②
Q3404	B-1		Q3404	B-1	②
Q3405	B-1		Q3405	B-1	②
Q3406	B-1		Q3406	B-1	②

※: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)

G1 (POWER SUPPLY)


B-S511650<J...>-G1



IC					
(Component Side)	(Conductor Side)				
IC2001 D-2	D-2	Q2012 D-3	②	D2004 C-2	-
IC2002 D-3	D-3	Q2013 D-3	②	D2005 D-2	③
IC2003 D-4	D-4	Q2015 A-1	②	D2006 C-2	③
IC2004 D-3	D-3	Q2017 D-3	②	D2007 B-2	-
		Q2018 D-4	②	D2008 D-2	③
		Q2019 D-4	②	D2009 C-1	-
		Q2020 D-4	②	D2010 D-2	③
		Q2023 A-1	②	D2011 C-3	③
		Q2024 D-3	②	D2012 C-4	③
TRANSISTOR		Q2202 A-2	②	D2013 C-4	③
(Component Side) (Conductor Side) *	*	Q2205 A-1	②	D2014 A-4	-
Q2001 D-2	⑬	Q2206 A-1	②	D2015 B-4	③
Q2003 B-4	-	Q2207 A-1	②	D2016 B-4	-
Q2004 D-2	②			D2018 A-2	③
Q2005 C-4	-	DIODE		D2019 A-1	③
Q2006 D-2	②	(Component Side) (Conductor Side) *	*	D2020 D-4	③
Q2007 C-4	-			D2021 C-4	③
Q2008 C-4	-	D2001 D-2	③	D2022 C-4	③
Q2009 B-4	-	D2002 C-1	-	D2023 B-4	③
Q2011 D-3	②	D2003 D-2	③	D2024 D-2	③

3-24 KDE61XBR950 (UC)


(4) Schematic Diagram of G2 Board

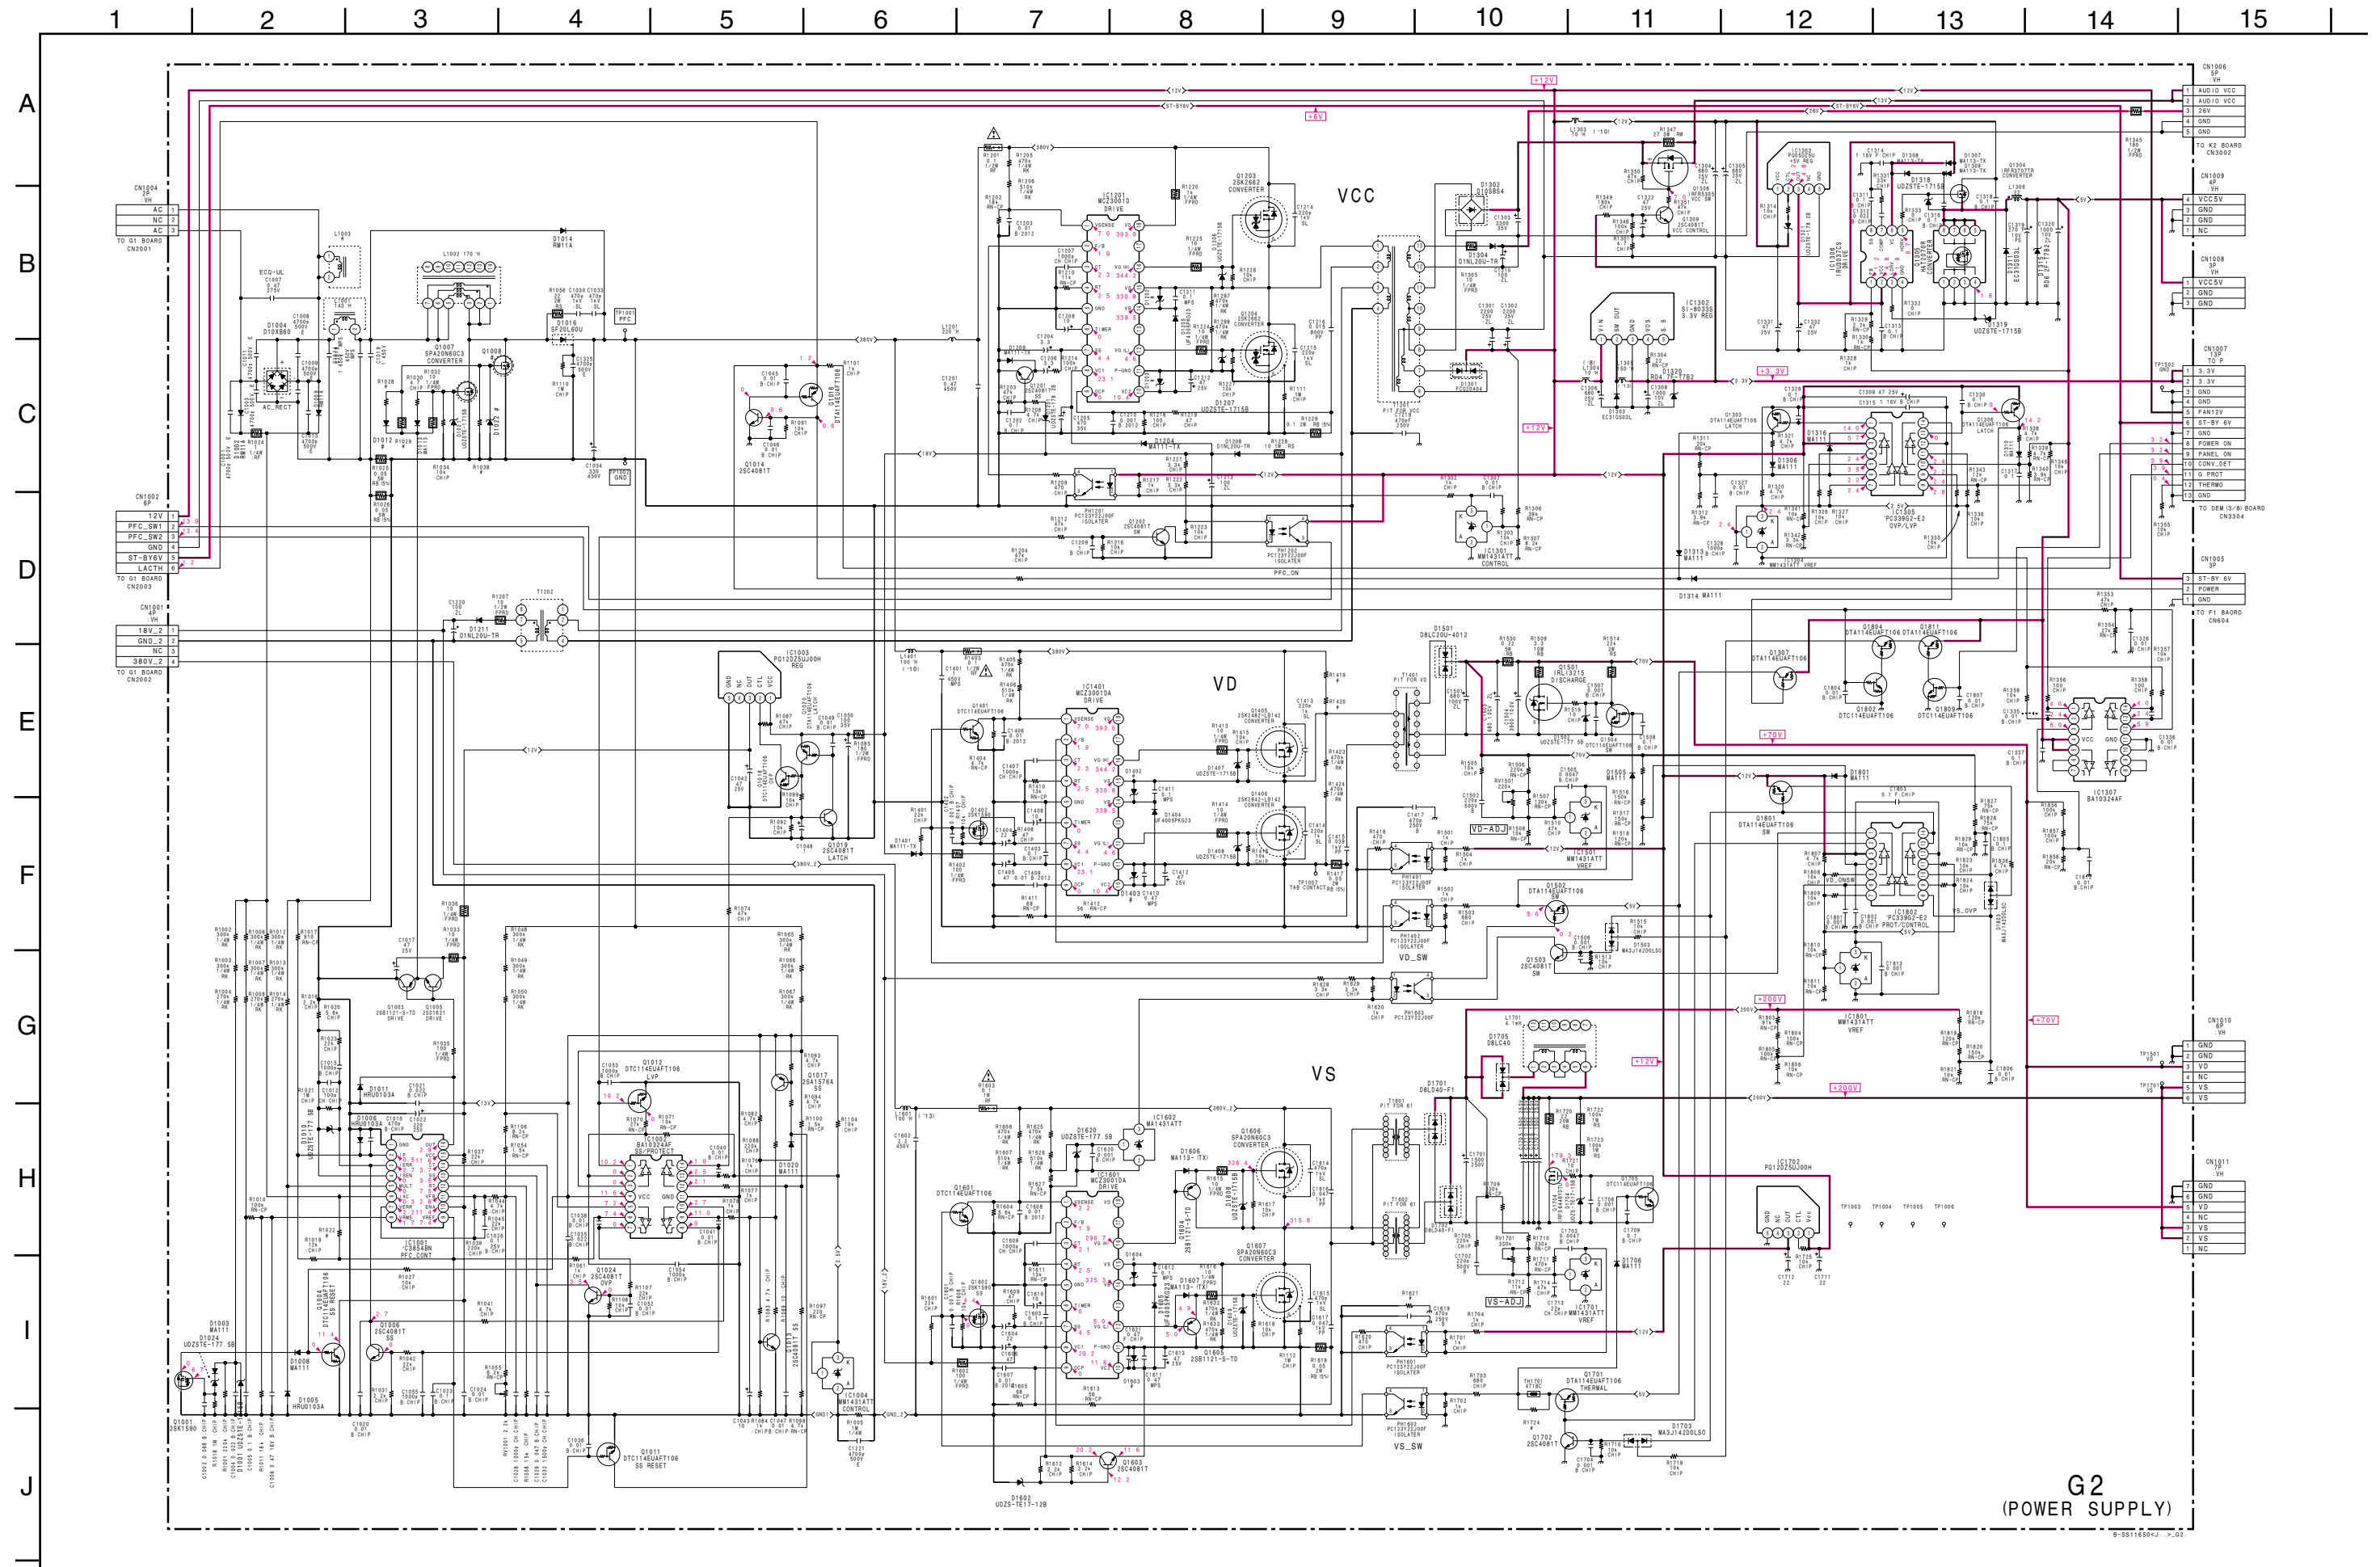


[illegible]

3-26 KDE61XBR950 (UC)


(5) Schematic Diagram of K2 Board

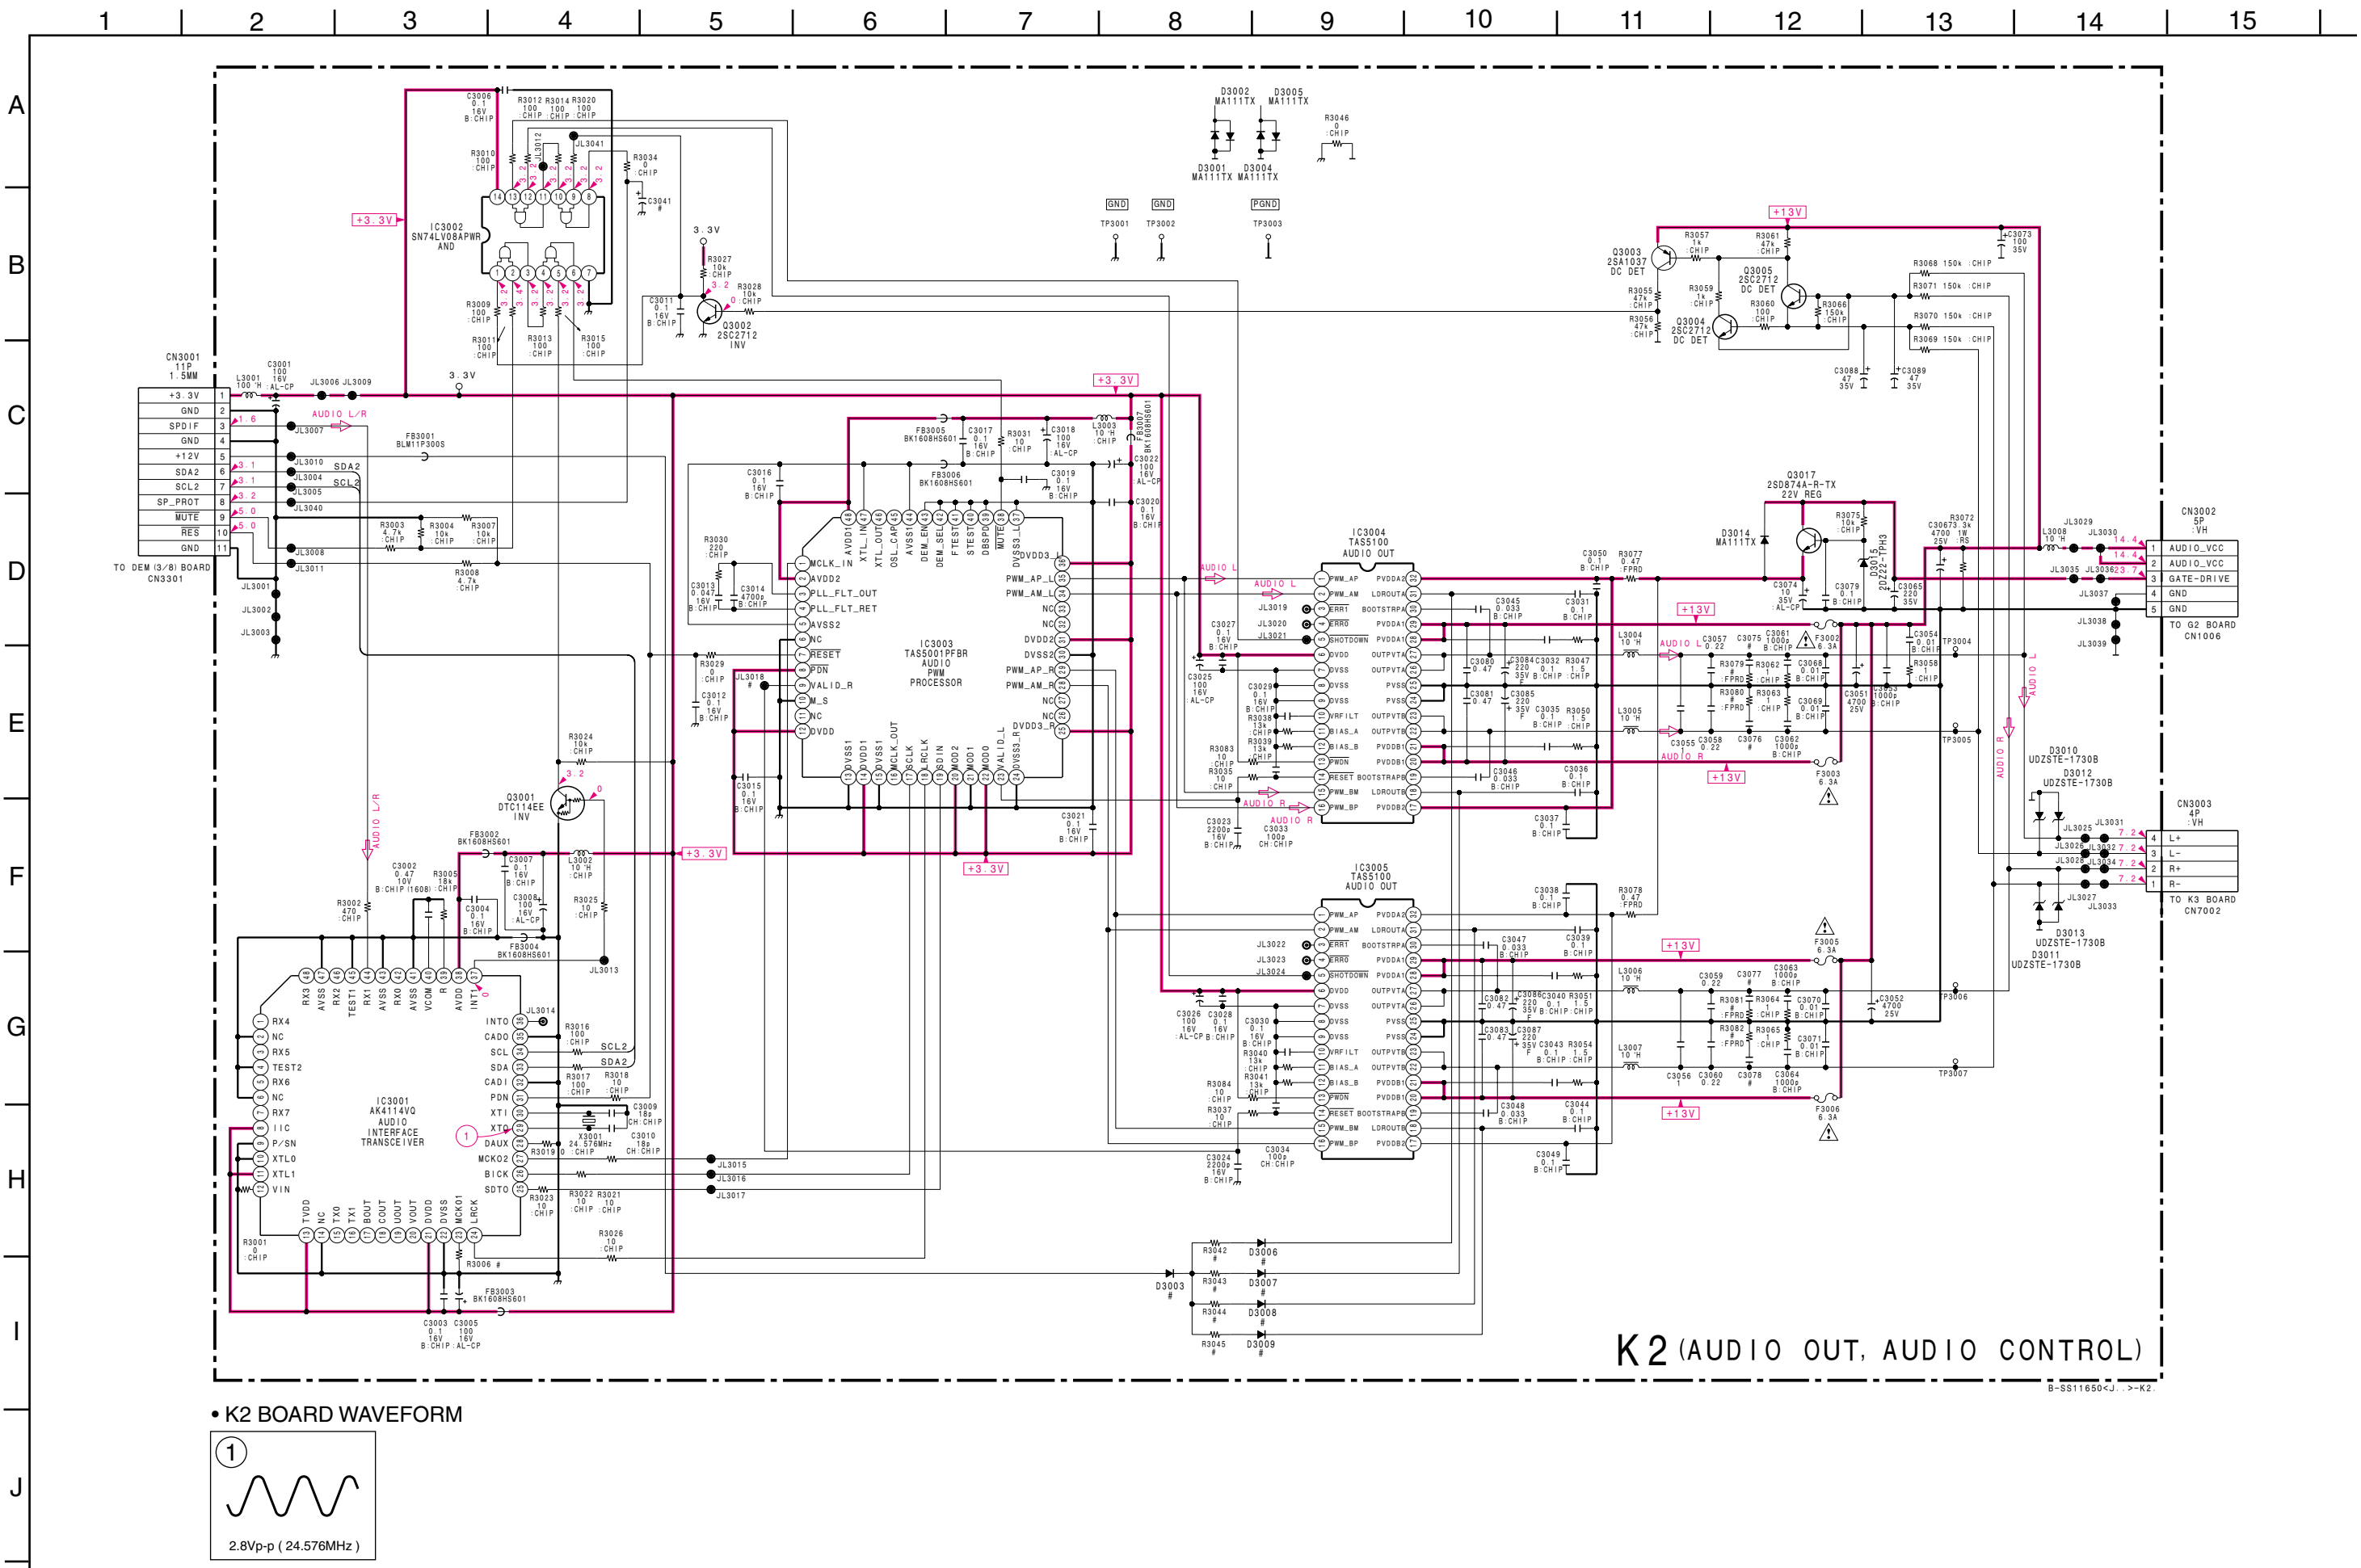

— K2 BOARD —

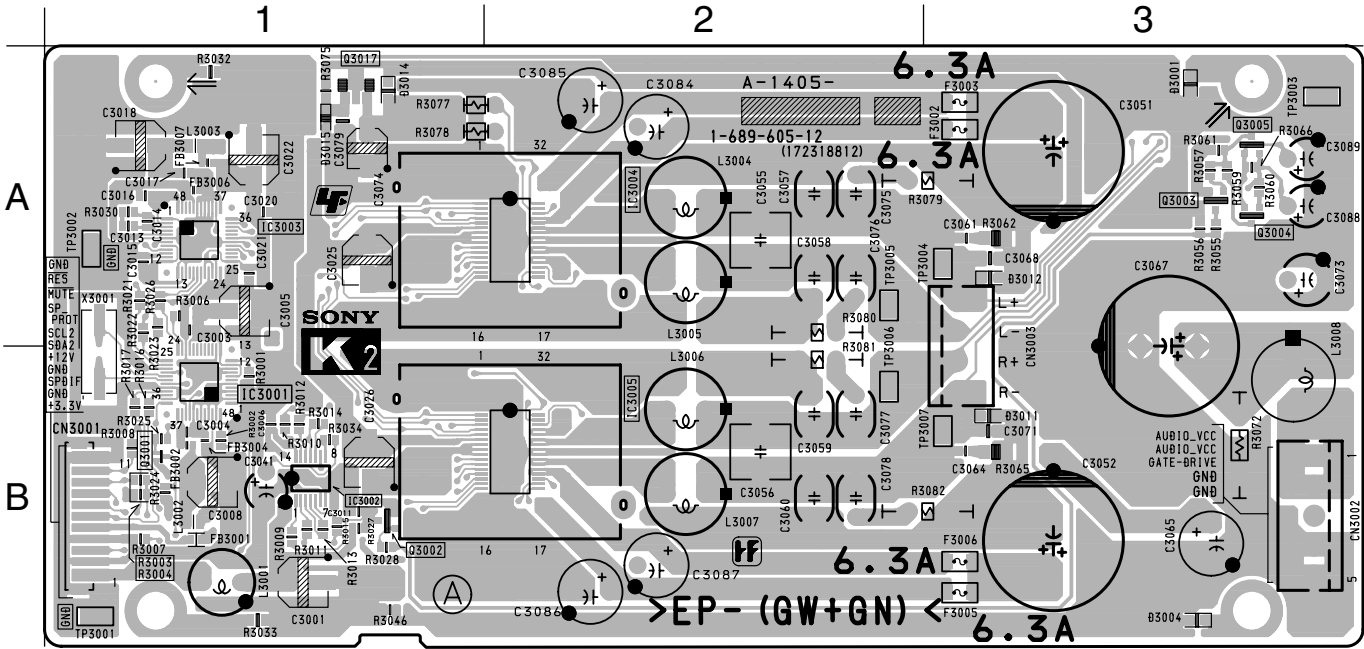

<COMPONENT SIDE>

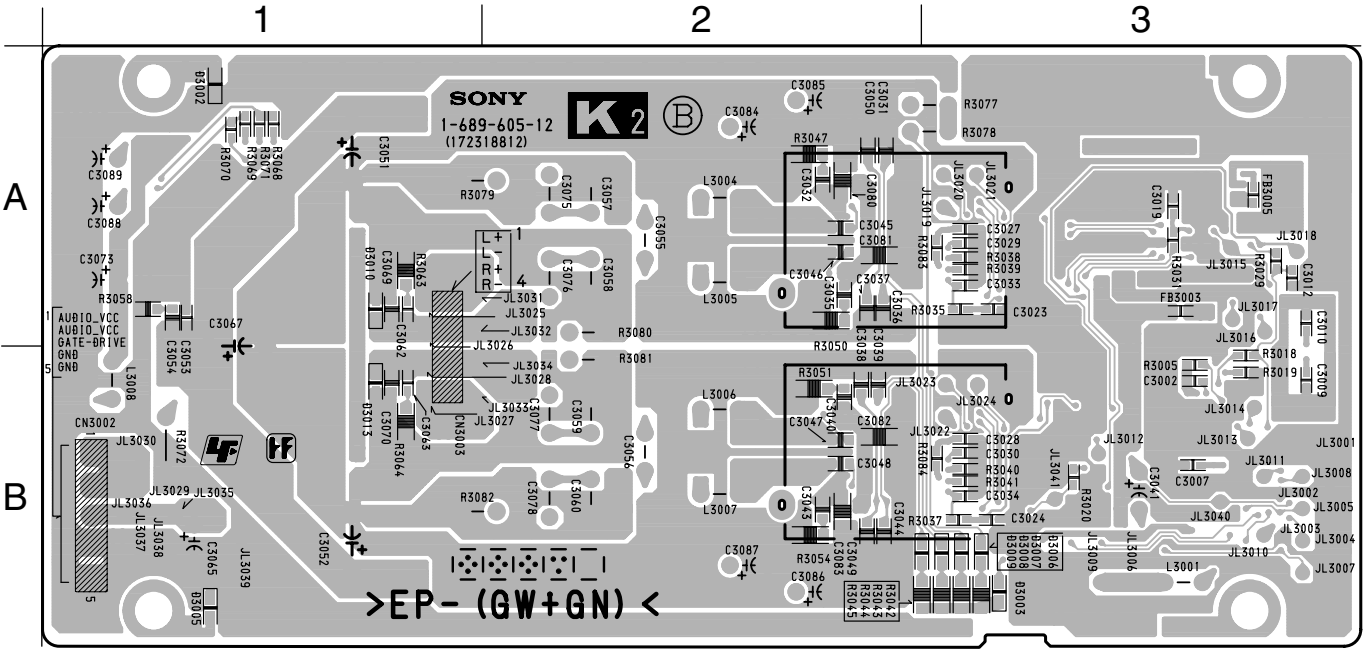


<CONDUCTOR SIDE>

• K2 BOARD SEMICONDUCTOR LOCATION

IC		DIODE		
(Component Side)	(Conductor Side)	(Component Side)	(Conductor Side)	*
IC3001	B-1	D3001	A-3	③
IC3002	B-1	D3002	A-1	③
IC3003	A-1	D3003	B-3	③
IC3004	A-2	D3004	B-3	③
IC3005	B-2	D3005	B-1	③
TRANSISTOR		D3006	B-3	③
		D3007	B-3	③
		D3008	B-3	③
		D3009	B-3	③
		D3010	A-1	③
(Component Side)	(Conductor Side)			
Q3001	B-1	D3011	B-3	③
Q3002	B-1	D3012	A-3	③
Q3003	A-3	D3013	B-1	③
Q3004	A-3	D3014	A-1	③
Q3005	A-3	D3015	A-1	③
Q3017	A-1	-	-	-

※: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)


(6) Schematic Diagram of K3 Board

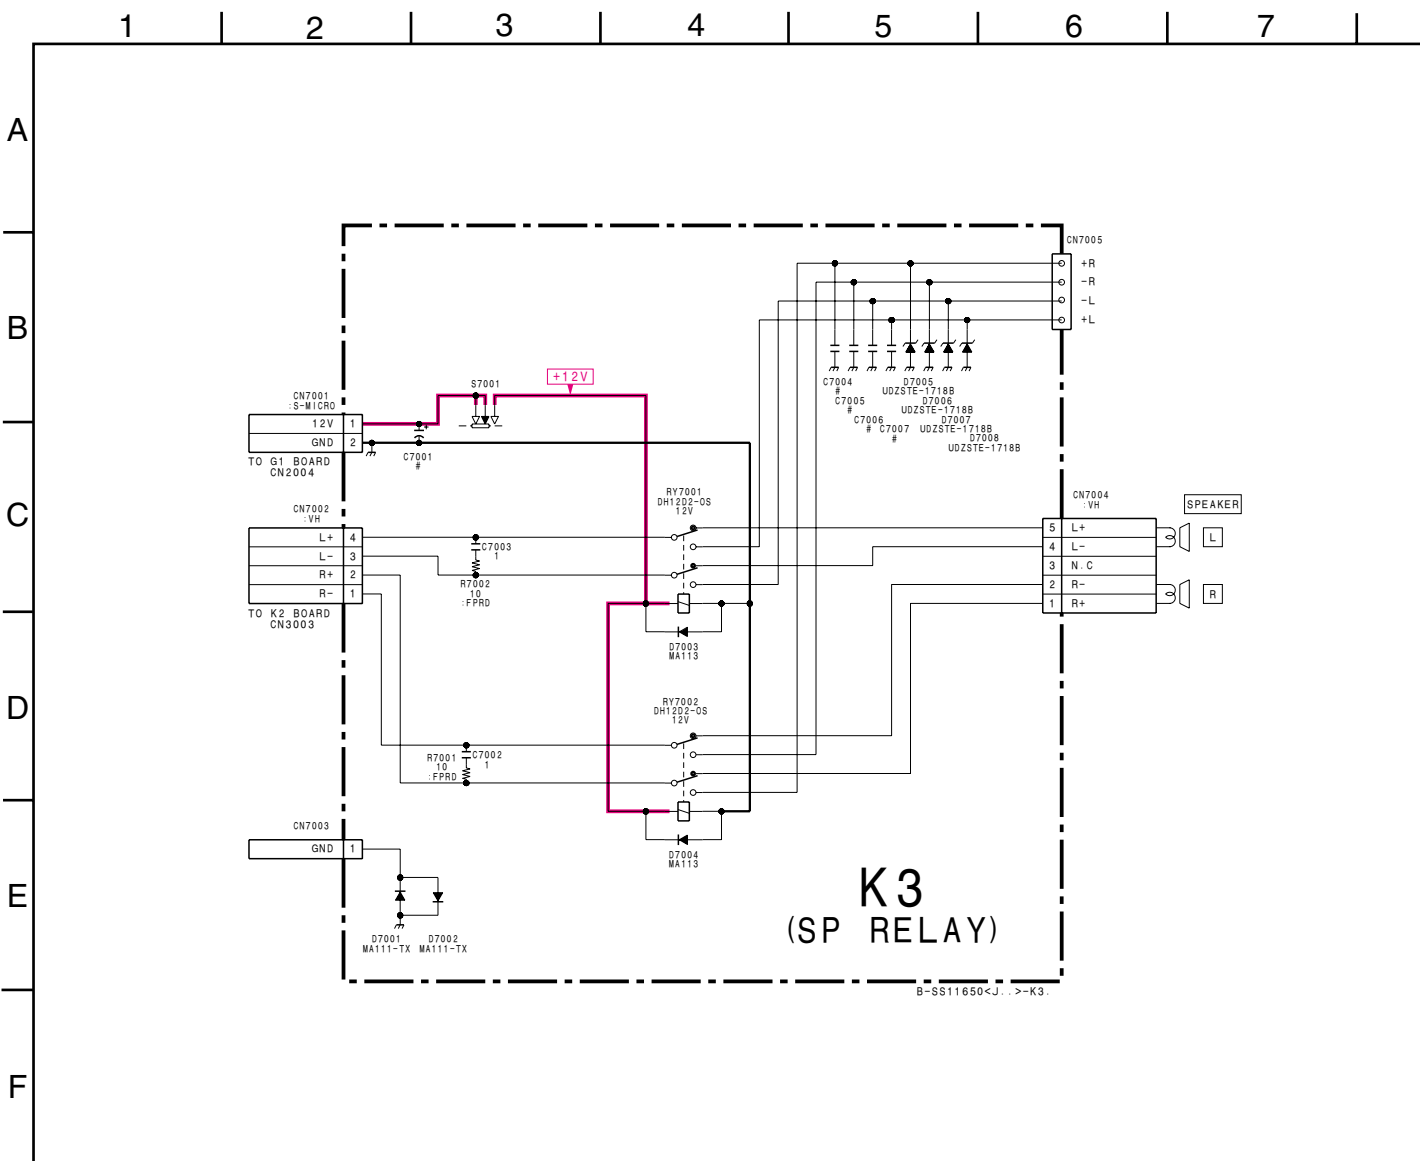


K3

[SP RELAY]

— K3 BOARD —

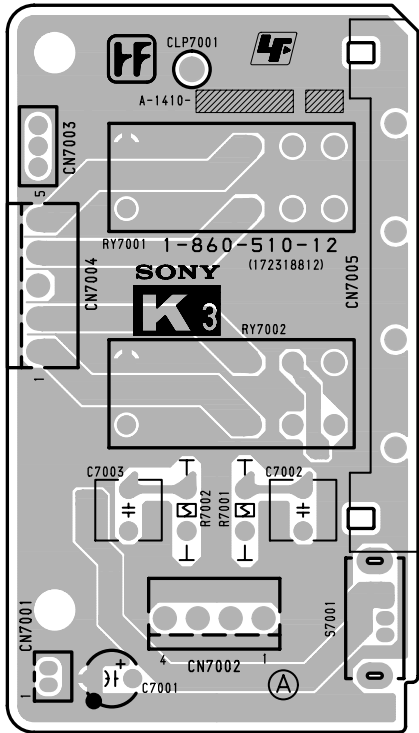

<COMPONENT SIDE>

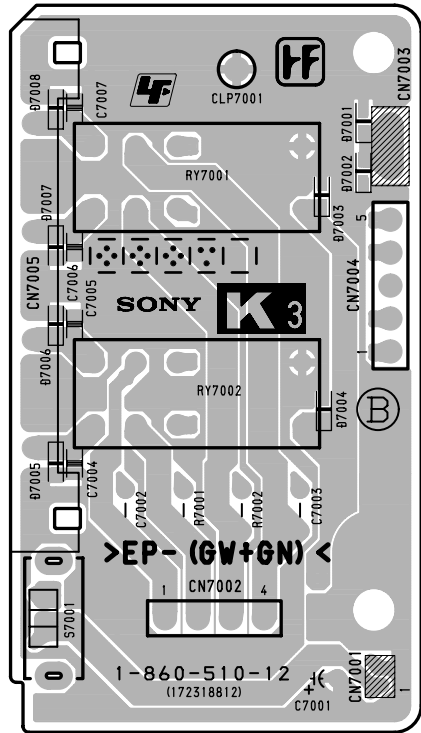

<CONDUCTOR SIDE>

• K3 BOARD SEMICONDUCTOR LOCATION

Ref.	*
D7001-D7008	③

※: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)

(7) Schematic Diagram of R1 Board

1 2 3 4 5 6 7

A

B

C

D

E

The schematic diagram illustrates the internal circuitry of the R1 board. It features a central microcontroller, IC701 (GP1UM27SRK), which is connected to a +5V power supply and a ground. The microcontroller's pins are connected to various components, including LEDs (D701, D703, D705) and resistors (R701, R702, R706, R703, R704, R705). The LEDs are labeled as D701 (SMLU12D16W, RED/GREEN, POWER), D703 (SMLU12D16W, RED/GREEN, TIMER), and D705 (SELU150CM, BLUE, MUTE). The resistors are labeled as R701 (180, CHIP), R702 (100, CHIP), R706 (820, CHIP), R703 (180, CHIP), R704 (820, CHIP), and R705 (270, CHIP). The board also includes a connector, CN701 (10P-L), which is connected to a DEW (3/8) BOARD (CN3302). The connector pins are labeled as STBY5V, SIRCS, GND, MUTE, TIMER 2, TIMER 1, POWER, STBY, SAVING, and GND. The board is labeled R1 (SIRCS, LED) and has a part number B-SS11650<J...>-R1.

STBY5V
SIRCS
GND
MUTE
TIMER 2
TIMER 1
POWER
STBY
SAVING
GND

TO DEW (3/8) BOARD
CN3302

CLP701
GND

IC701
GP1UM27SRK
:SIRCS

R701 180
:CHIP

R702 100
:CHIP

R706 820
:CHIP

R703 180
:CHIP

R704 820
:CHIP

R705 270
:CHIP

D701
SMLU12D16W
:RED/GREEN
[POWER]

D703
SMLU12D16W
:RED/GREEN
[TIMER]

D705
SELU150CM
:BLUE
[MUTE]

C711
#

C712
0.1 25V F:CHIP

C713
#

C714
0.1 25V F:CHIP

C715
0.1 25V F:CHIP

C716
10K :CHIP

C717
10K :CHIP

C718
10K :CHIP

C719
10K :CHIP

C720
10K :CHIP

C721
10K :CHIP

C722
10K :CHIP

C723
10K :CHIP

C724
10K :CHIP

C725
10K :CHIP

C726
10K :CHIP

C727
10K :CHIP

C728
10K :CHIP

C729
10K :CHIP

C730
10K :CHIP

C731
10K :CHIP

C732
10K :CHIP

C733
10K :CHIP

C734
10K :CHIP

C735
10K :CHIP

C736
10K :CHIP

C737
10K :CHIP

C738
10K :CHIP

C739
10K :CHIP

C740
10K :CHIP

C741
10K :CHIP

C742
10K :CHIP

C743
10K :CHIP

C744
10K :CHIP

C745
10K :CHIP

C746
10K :CHIP

C747
10K :CHIP

C748
10K :CHIP

C749
10K :CHIP

C750
10K :CHIP

C751
10K :CHIP

C752
10K :CHIP

C753
10K :CHIP

C754
10K :CHIP

C755
10K :CHIP

C756
10K :CHIP

C757
10K :CHIP

C758
10K :CHIP

C759
10K :CHIP

C760
10K :CHIP

C761
10K :CHIP

C762
10K :CHIP

C763
10K :CHIP

C764
10K :CHIP

C765
10K :CHIP

C766
10K :CHIP

C767
10K :CHIP

C768
10K :CHIP

C769
10K :CHIP

C770
10K :CHIP

C771
10K :CHIP

C772
10K :CHIP

C773
10K :CHIP

C774
10K :CHIP

C775
10K :CHIP

C776
10K :CHIP

C777
10K :CHIP

C778
10K :CHIP

C779
10K :CHIP

C780
10K :CHIP

C781
10K :CHIP

C782
10K :CHIP

C783
10K :CHIP

C784
10K :CHIP

C785
10K :CHIP

C786
10K :CHIP

C787
10K :CHIP

C788
10K :CHIP

C789
10K :CHIP

C790
10K :CHIP

C791
10K :CHIP

C792
10K :CHIP

C793
10K :CHIP

C794
10K :CHIP

C795
10K :CHIP

C796
10K :CHIP

C797
10K :CHIP

C798
10K :CHIP

C799
10K :CHIP

C800
10K :CHIP

C801
10K :CHIP

C802
10K :CHIP

C803
10K :CHIP

C804
10K :CHIP

C805
10K :CHIP

C806
10K :CHIP

C807
10K :CHIP

C808
10K :CHIP

C809
10K :CHIP

C810
10K :CHIP

C811
10K :CHIP

C812
10K :CHIP

C813
10K :CHIP

C814
10K :CHIP

C815
10K :CHIP

C816
10K :CHIP

C817
10K :CHIP

C818
10K :CHIP

C819
10K :CHIP

C820
10K :CHIP

C821
10K :CHIP

C822
10K :CHIP

C823
10K :CHIP

C824
10K :CHIP

C825
10K :CHIP

C826
10K :CHIP

C827
10K :CHIP

C828
10K :CHIP

C829
10K :CHIP

C830
10K :CHIP

C831
10K :CHIP

C832
10K :CHIP

C833
10K :CHIP

C834
10K :CHIP

C835
10K :CHIP

C836
10K :CHIP

C837
10K :CHIP

C838
10K :CHIP

C839
10K :CHIP

C840
10K :CHIP

C841
10K :CHIP

C842
10K :CHIP

C843
10K :CHIP

C844
10K :CHIP

C845
10K :CHIP

C846
10K :CHIP

C847
10K :CHIP

C848
10K :CHIP

C849
10K :CHIP

C850
10K :CHIP

C851
10K :CHIP

C852
10K :CHIP

C853
10K :CHIP

C854
10K :CHIP

C855
10K :CHIP

C856
10K :CHIP

C857
10K :CHIP

C858
10K :CHIP

C859
10K :CHIP

C860
10K :CHIP

C861
10K :CHIP

C862
10K :CHIP

C863
10K :CHIP

C864
10K :CHIP

C865
10K :CHIP

C866
10K :CHIP

C867
10K :CHIP

C868
10K :CHIP

C869
10K :CHIP

C870
10K :CHIP

C871
10K :CHIP

C872
10K :CHIP

C873
10K :CHIP

C874
10K :CHIP

C875
10K :CHIP

C876
10K :CHIP

C877
10K :CHIP

C878
10K :CHIP

C879
10K :CHIP

C880
10K :CHIP

C881
10K :CHIP

C882
10K :CHIP

C883
10K :CHIP

C884
10K :CHIP

C885
10K :CHIP

C886
10K :CHIP

C887
10K :CHIP

C888
10K :CHIP

C889
10K :CHIP

C890
10K :CHIP

C891
10K :CHIP

C892
10K :CHIP

C893
10K :CHIP

C894
10K :CHIP

C895
10K :CHIP

C896
10K :CHIP

C897
10K :CHIP

C898
10K :CHIP

C899
10K :CHIP

C900
10K :CHIP

C901
10K :CHIP

C902
10K :CHIP

C903
10K :CHIP

C904
10K :CHIP

C905
10K :CHIP

C906
10K :CHIP

C907
10K :CHIP

C908
10K :CHIP

C909
10K :CHIP

C910
10K :CHIP

C911
10K :CHIP

C912
10K :CHIP

C913
10K :CHIP

C914
10K :CHIP

C915
10K :CHIP

C916
10K :CHIP

C917
10K :CHIP

C918
10K :CHIP

C919
10K :CHIP

C920
10K :CHIP

C921
10K :CHIP

C922
10K :CHIP

C923
10K :CHIP

C924
10K :CHIP

C925
10K :CHIP

C926
10K :CHIP

C927
10K :CHIP

C928
10K :CHIP

C929
10K :CHIP

C930
10K :CHIP

C931
10K :CHIP

C932
10K :CHIP

C933
10K :CHIP

C934
1

[illegible]

Ref.	*
Q701-Q704, Q706	①
Q705	②
D701, D703, D705	—

3-30 KDE61XBR950 (UC)

(8) Schematic Diagram of R2 Board

1 2 3 4 5 6 7

A

B

C

D

E

CN751
4P-L

STBY5V 1
LOGO 2
NC 3
GND 4

TO DEM (3/8) BOARD
CN3303

CLP751
GND 1

+5V

100
R751
CHIP

100
R752
CHIP

100
R753
CHIP

100
R754
CHIP

Q751
DTA114EUA
LED DRIVE

Q752
DTA114EUA
LED DRIVE

Q753
DTA114EUA
LED DRIVE

Q754
DTA114EUA
LED DRIVE

D751
NSPW515BSA0

D752
NSPW515BSA0

D753
NSPW515BSA0

D754
NSPW515BSA0

D756
#

D757
#

D758
#

D759
#

R2 (LED)


B-SS11650<J. ->-R2


[illegible]


Ref.	*
Q751-Q754	①
D751-D754	—



*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)

(1) Schematic Diagrams of A Board





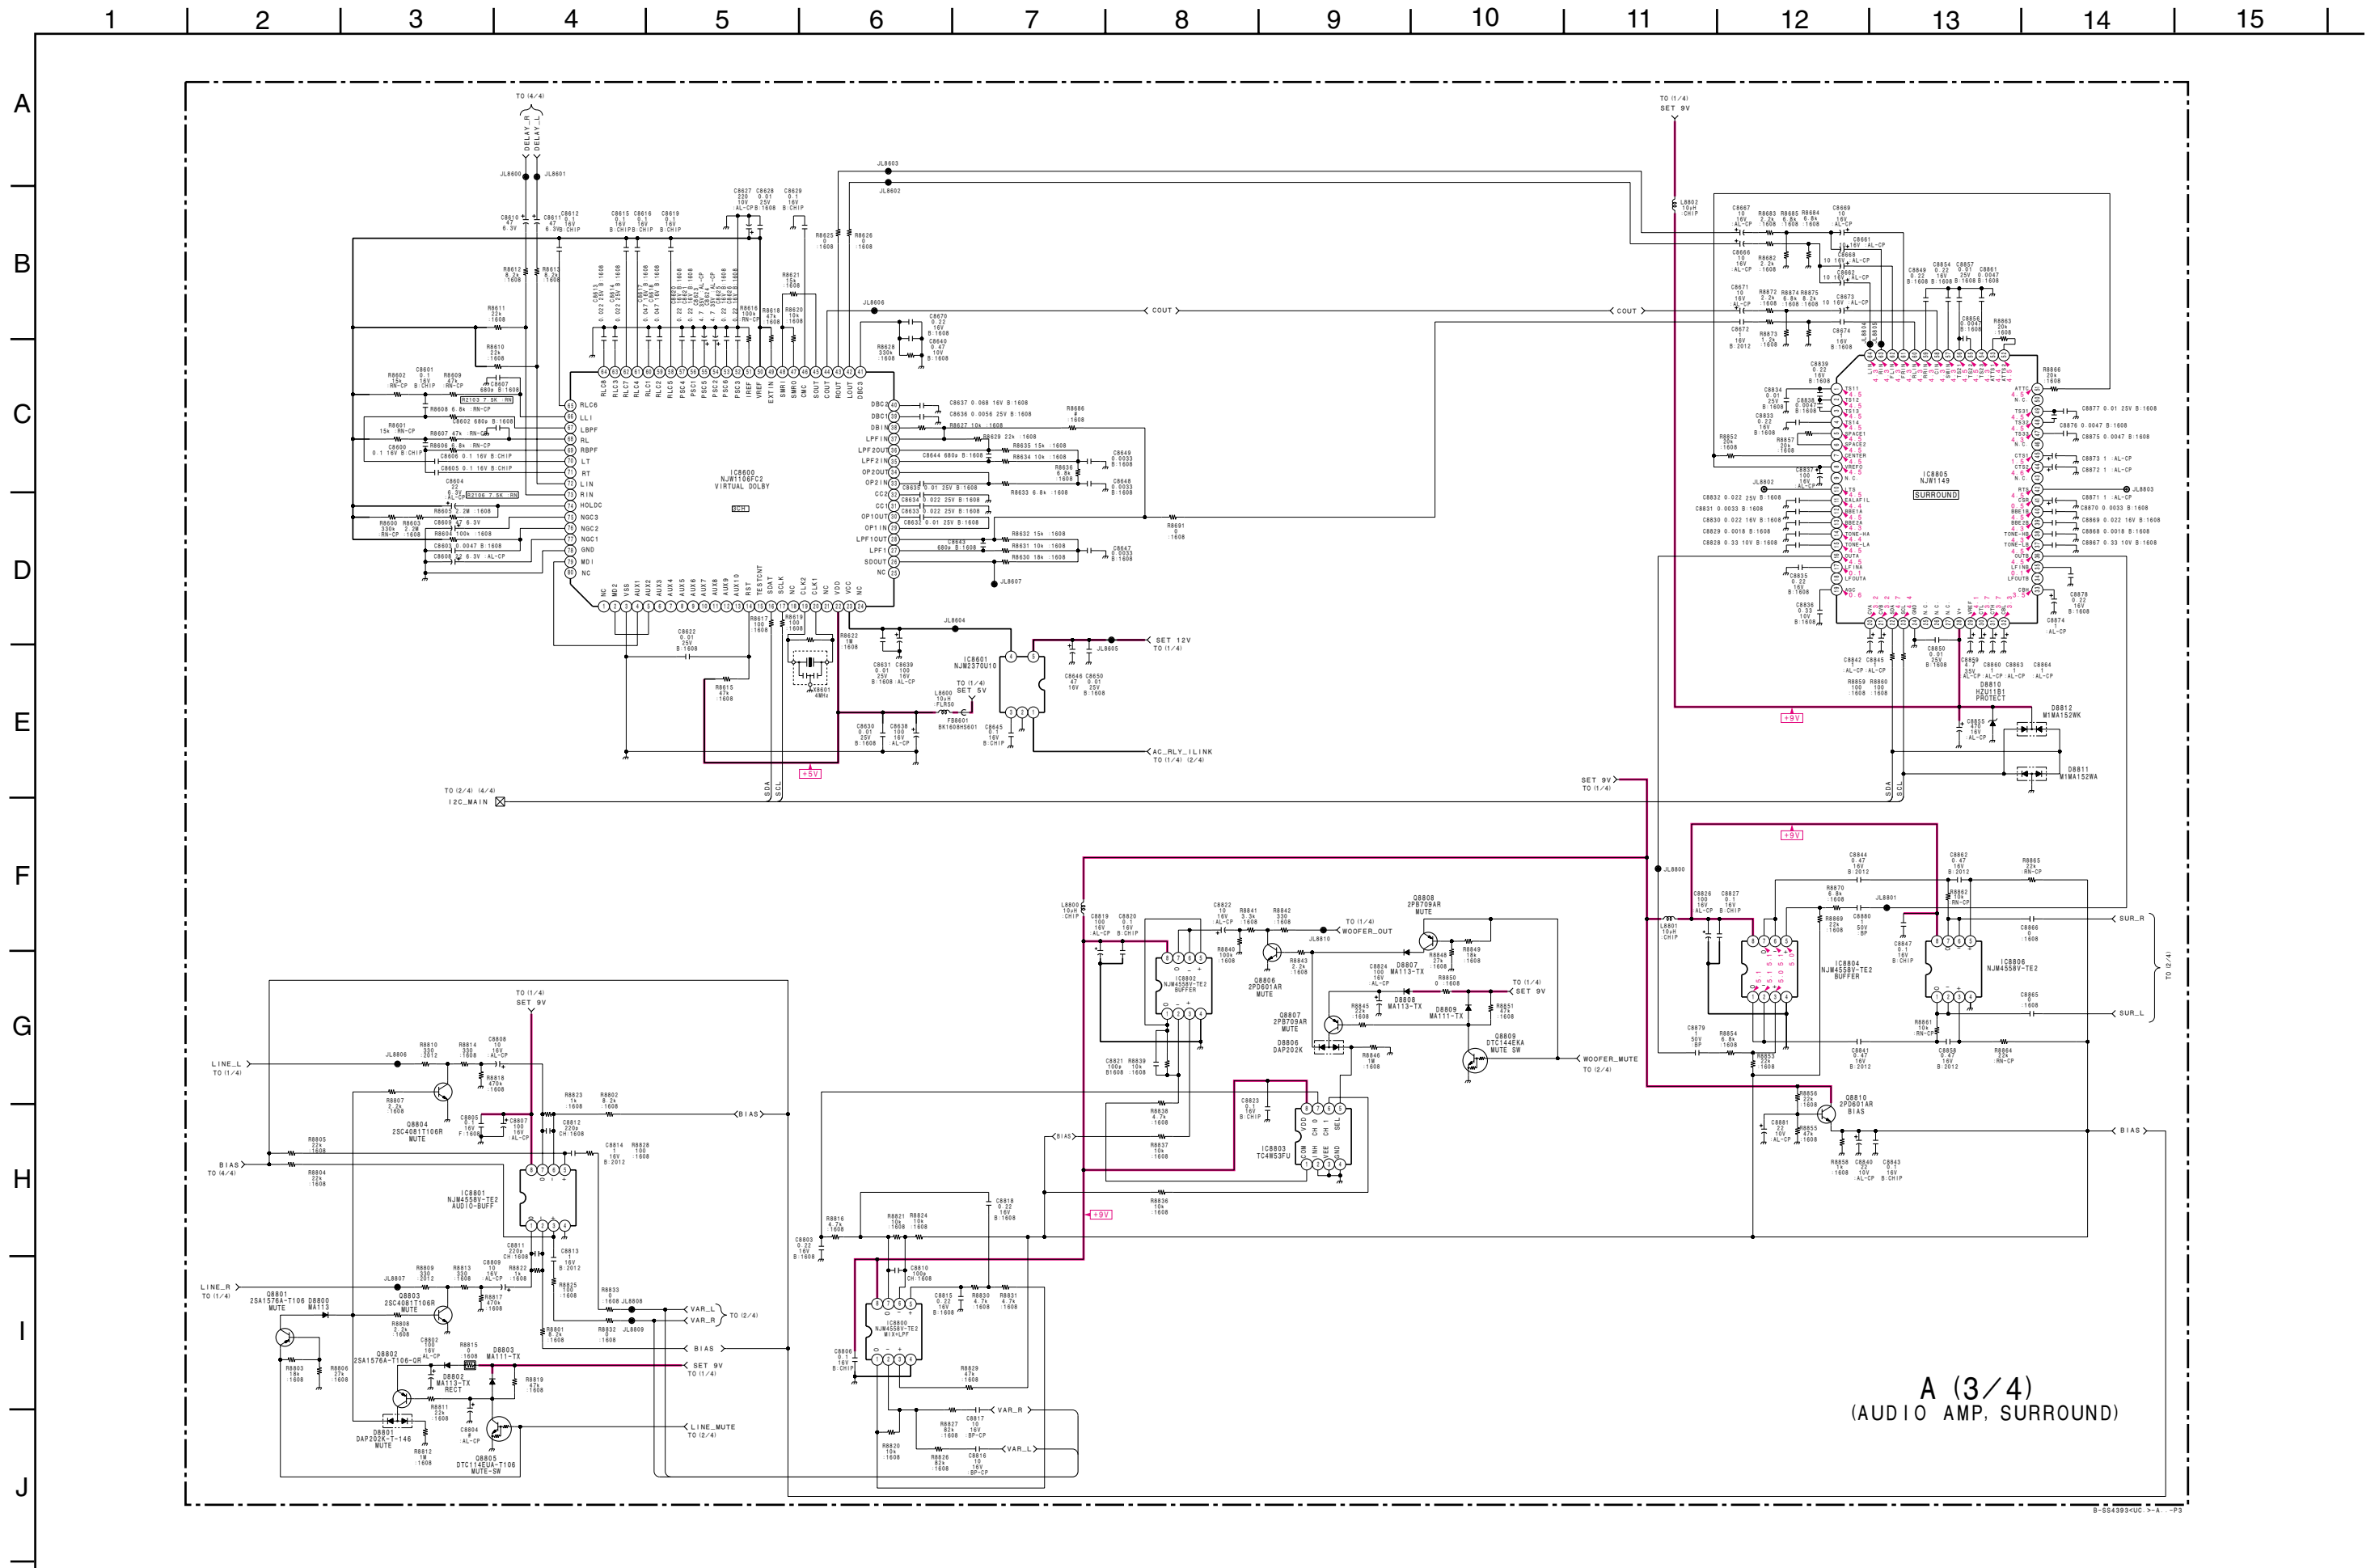

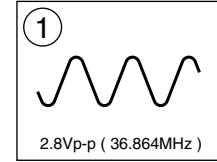


[INPUT TERMINAL, TUNER, AV SW, AUDIO SURROUND/AMP/PROCESSOR]

- **A BOARD SEMICONDUCTOR LOCATION**

*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)

(2) Schematic Diagram of G Board

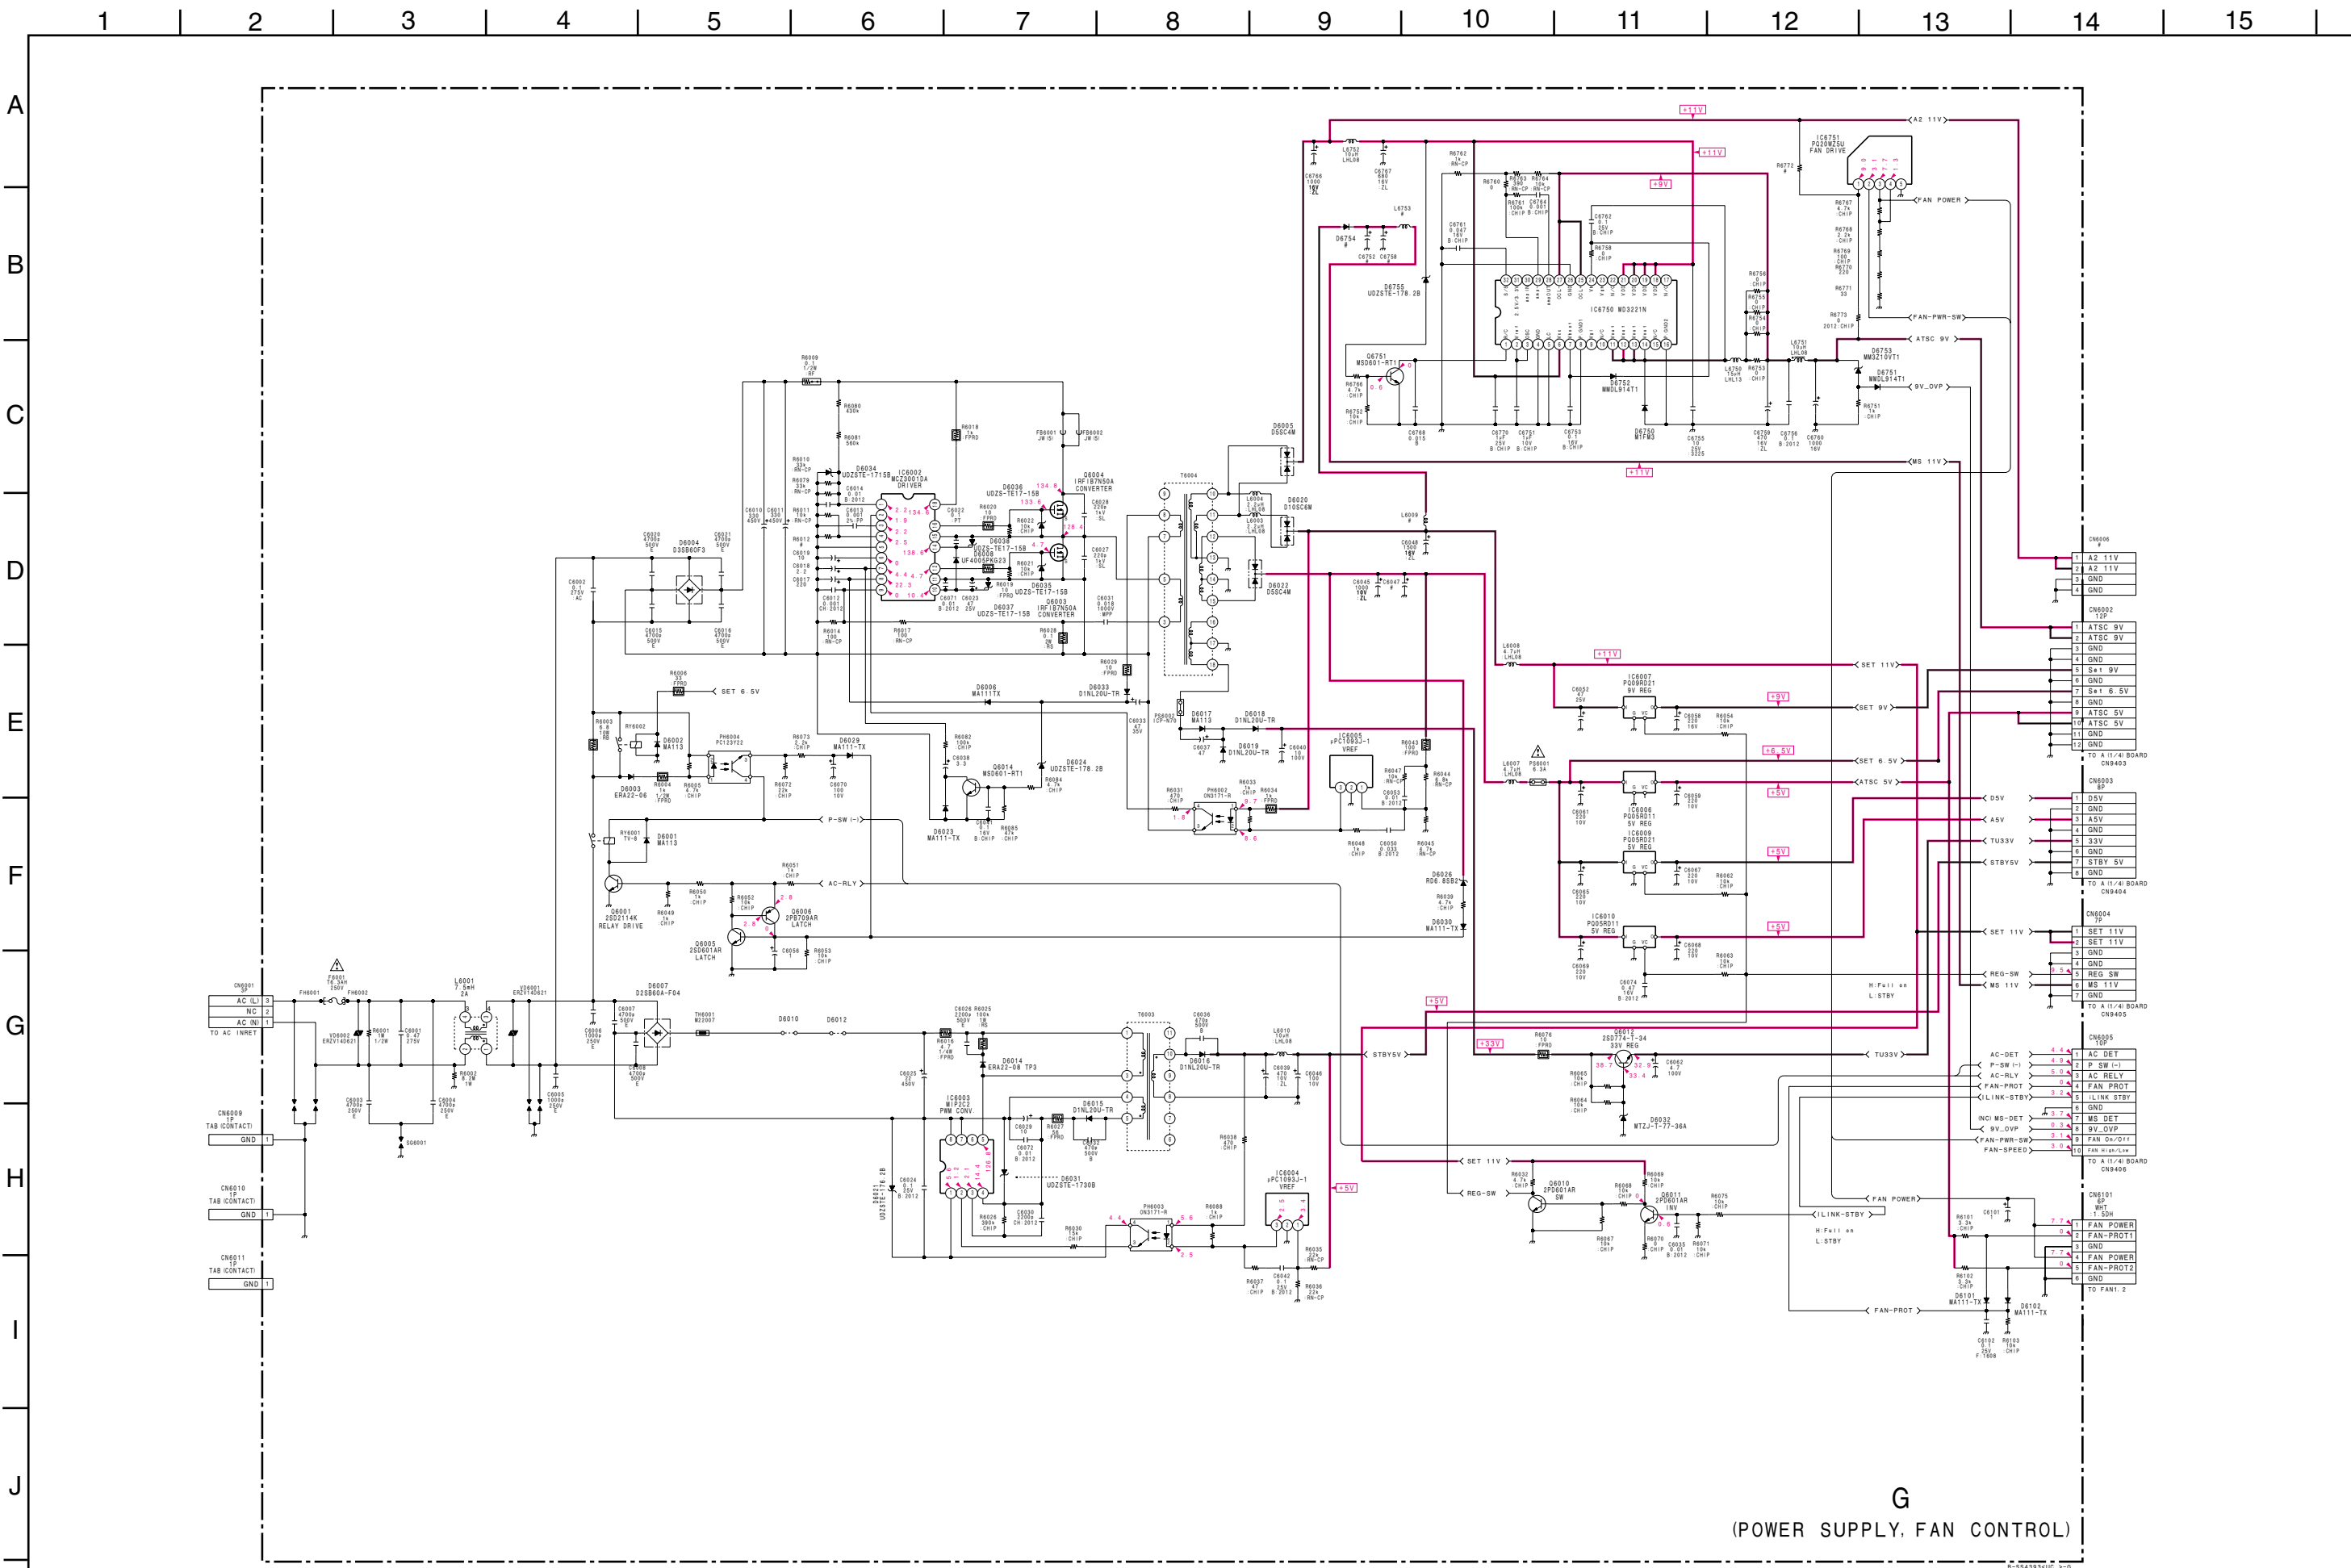


— G BOARD —



IC			Q6010		B-5	①	D6018	B-3	-
(Component Side)	(Conductor Side)		Q6011	B-3		②	D6019	B-3	-
IC6001	B-4		Q6012	B-3	-		D6020	A-2	-
IC6002	A-5		Q6013	B-4		②	D6021		A-2 ③
IC6003	A-6		Q6014		A-4	①	D6022	A-3	-
IC6004	B-4		Q6751	A-1		②	D6023		A-4 ③
IC6005	A-3		Q6752		A-7	①	D6024		A-4 ③
IC6006	A-1		DIODE				D6025	B-4	③
IC6007	A-3						D6026	B-3	③
IC6009	A-2		(Component Side)		(Conductor Side)	*	D6027		B-4 ③
IC6010	A-2		D6001		B-2	③	D6028		B-4 ③
IC6011		B-5	D6002		B-2	③	D6029		B-3 ③
IC6750		A-7	D6003	B-6	-		D6030	B-3	③
IC6751	A-1		D6004	A-7	-		D6031		A-2 ③
TRANSISTER			D6005	A-3	-		D6032	B-3	-
			D6006		A-4	③	D6033	A-4	-
(Component Side)		(Conductor Side)	*	D6007	A-6	-	D6034		A-3 ③
Q6001	B-2	①	D6008	A-4	-		D6035		A-4 ③
Q6002	B-4	①	D6009		B-2	③	D6036		B-4 ③
Q6003	B-4	-	D6010	B-6	-		D6037		A-4 ③
Q6004	B-4	-	D6011	B-6	-		D6038		A-4 ③
Q6005	B-5	②	D6012	B-6	-		D6101	A-1	③
Q6006	B-5	②	D6013	B-6	-		D6102		A-7 ③
Q6007	B-4	②	D6014	B-5	-		D6750		A-7 ③
Q6008		B-4	D6015	A-5	-		D6751		B-7 ③
Q6009	B-4	②	D6016	B-5	-		D6752	A-1	③
			D6017		B-5	③	D6753		A-7 ③
							D6754		A-6 ③
							D6755	A-1	③


KDE61XBR950 (UC) 3-37

(3) Schematic Diagram of H1 Board

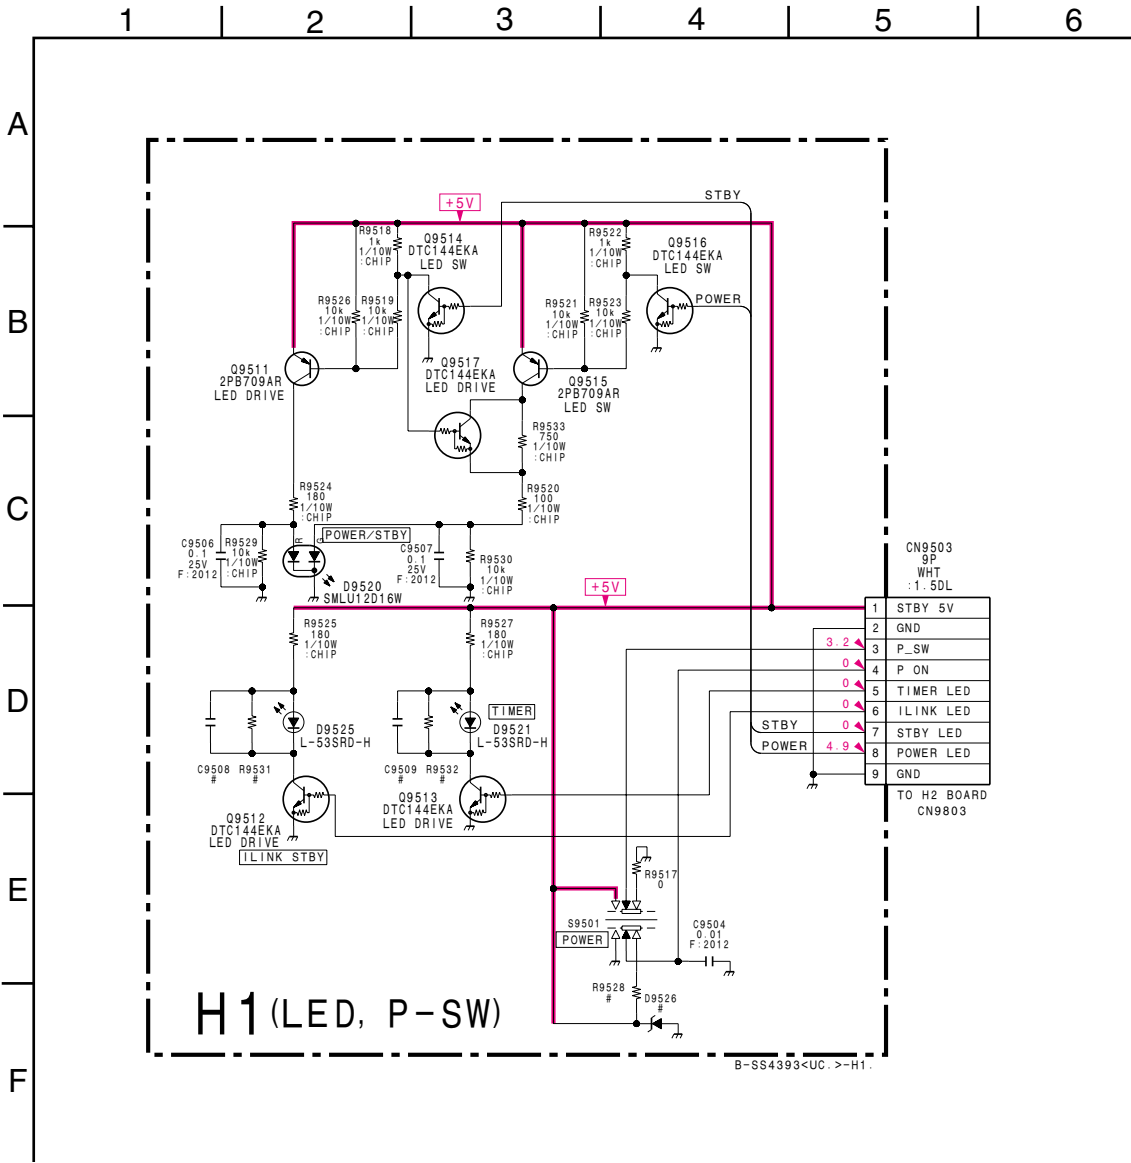


H1 [LED, P-SW]

— H1 BOARD —

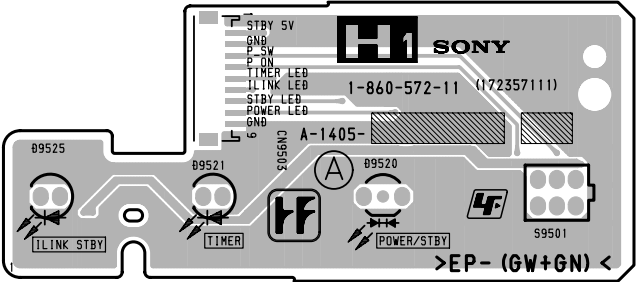

<COMPONENT SIDE>

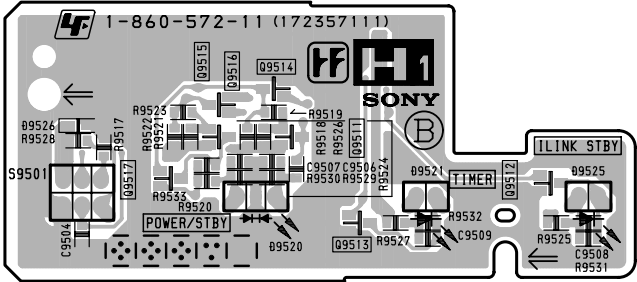


<CONDUCTOR SIDE>

• H1 BOARD SEMICONDUCTOR LOCATION

Ref.	*
Q9511-Q9517	①
D9520, D9521, D9525	-

※: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)


(4) Schematic Diagram of H2 Board

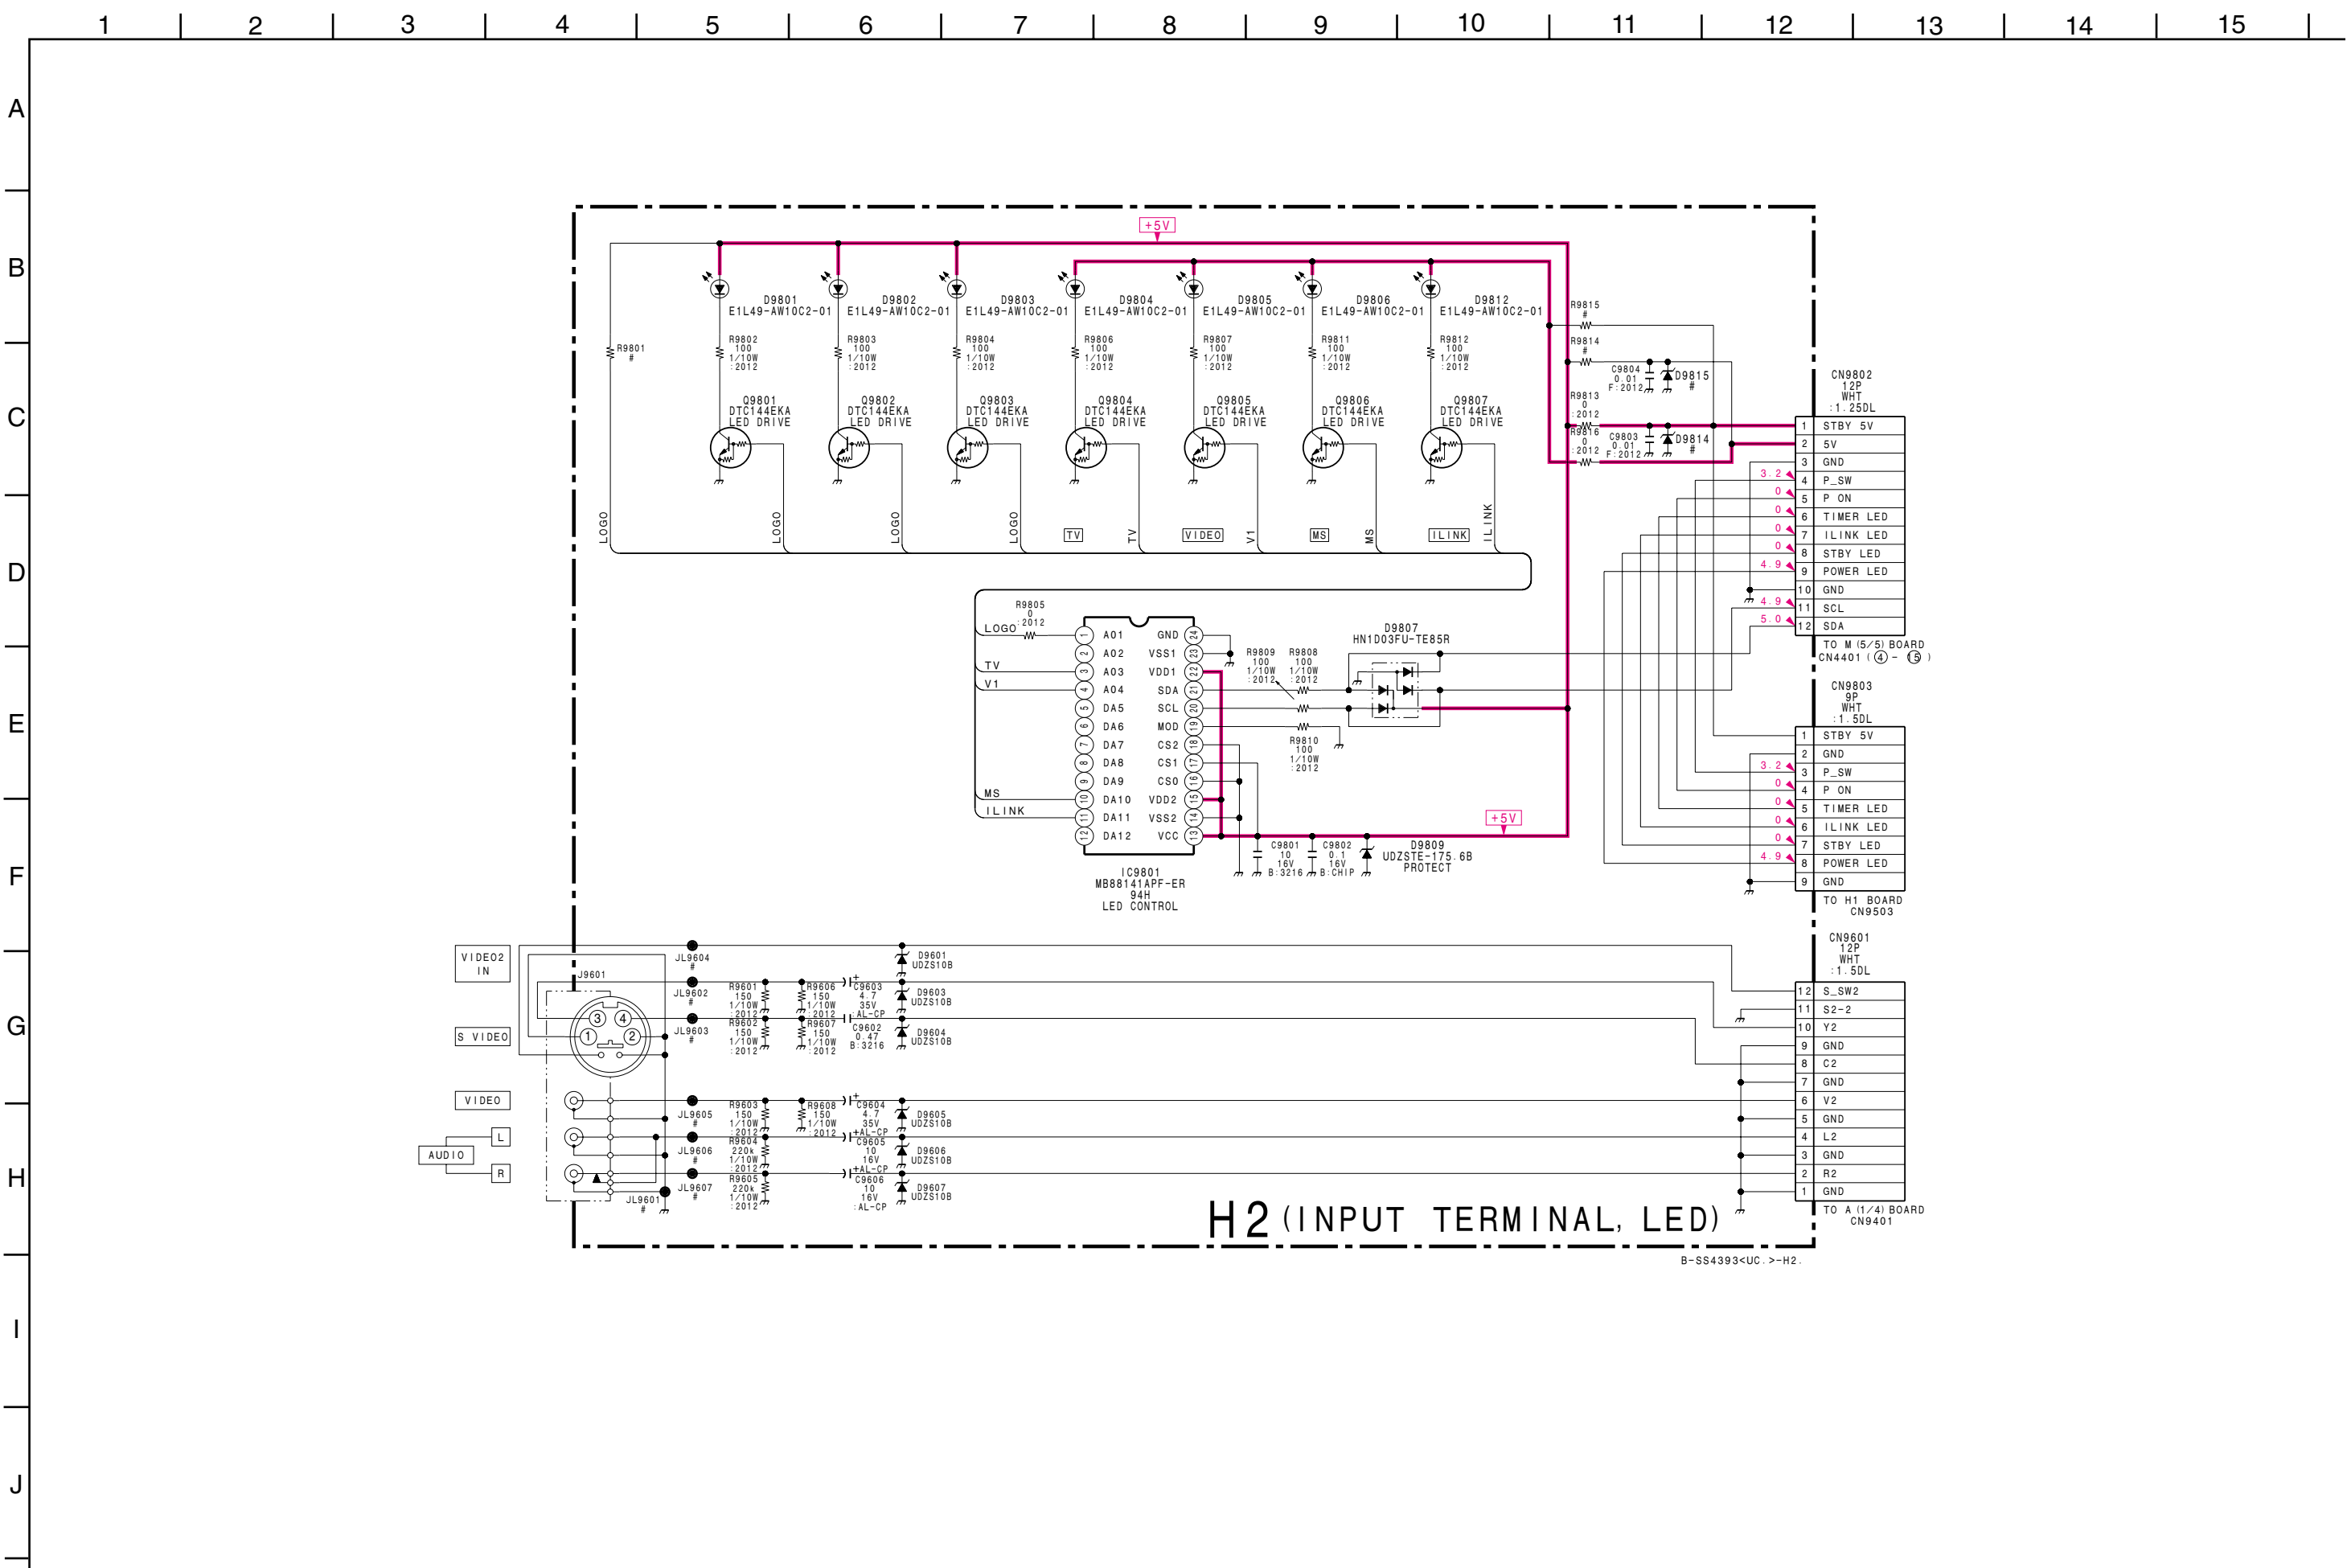


H2

[INPUT TERMINAL, LED]

— H2 BOARD —

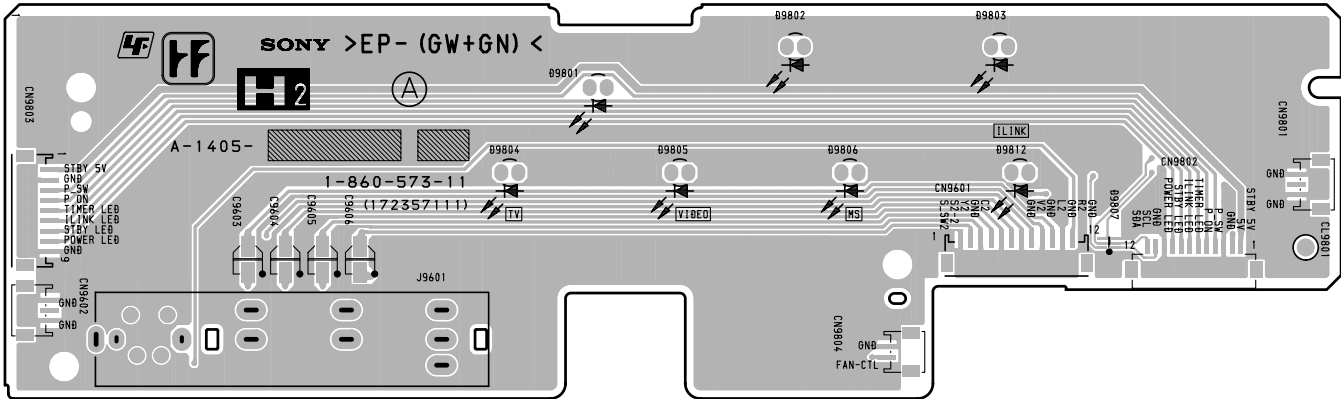

<COMPONENT SIDE>

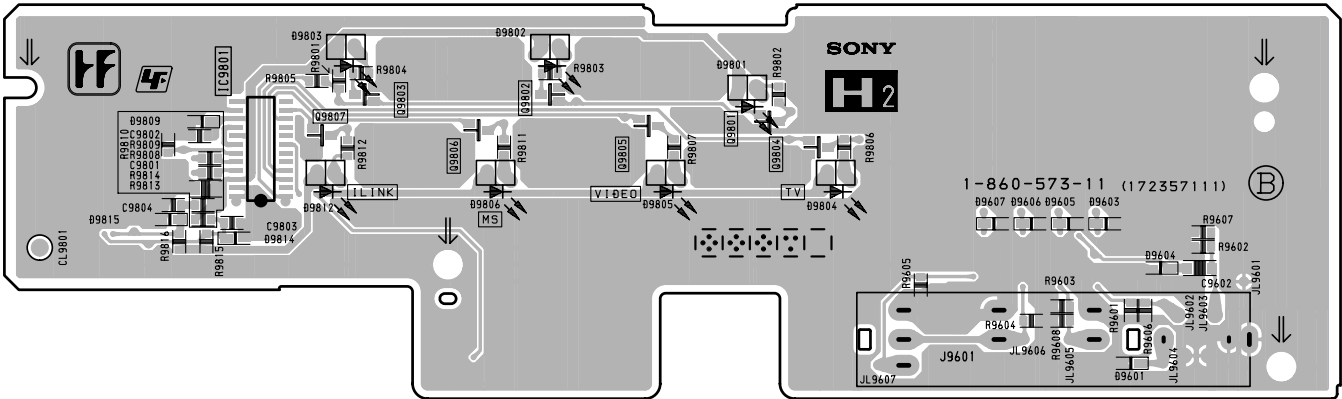


<CONDUCTOR SIDE>

• H2 BOARD SEMICONDUCTOR LOCATION

Ref.	*
Q9801-Q9807	①
D9601, D9603-D9607, D9809	③
D9801-D9807, D9812	-

※: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-12)


(5) Schematic Diagram of H3 and H4 Boards

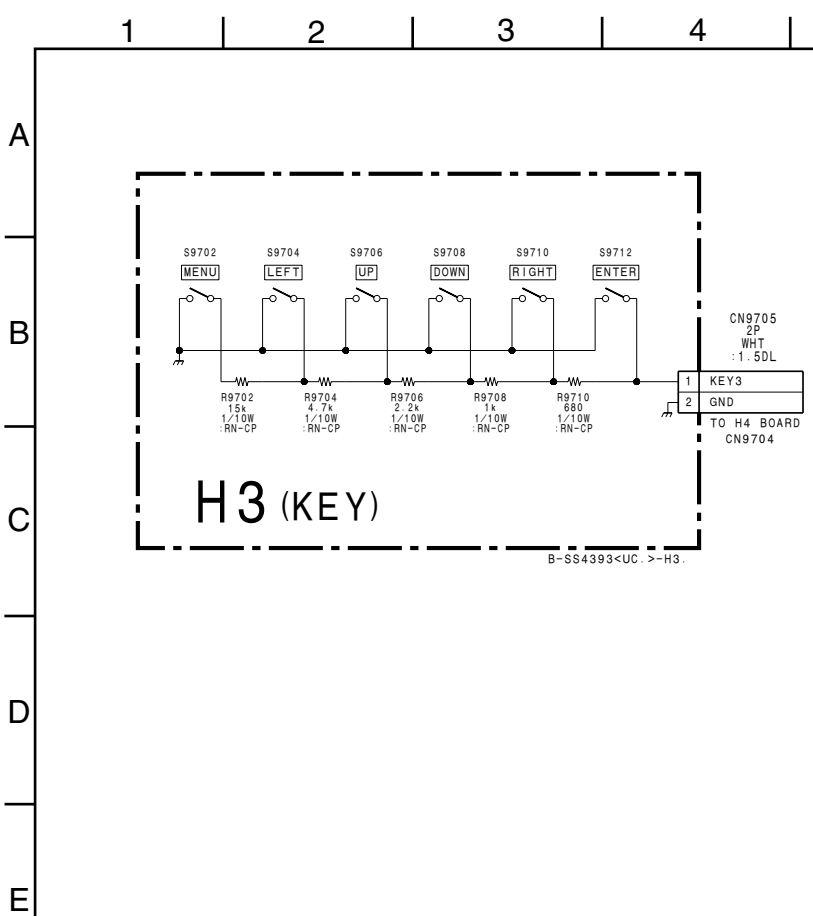


H3

[KEY]


— H3 BOARD —

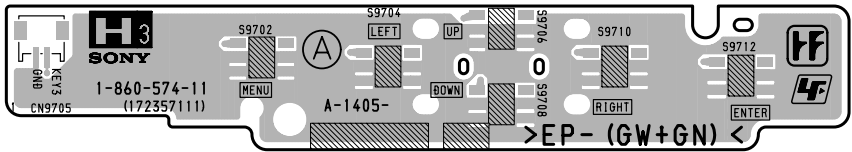

<COMPONENT SIDE>

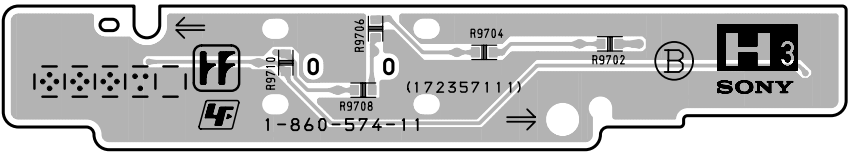


<CONDUCTOR SIDE>

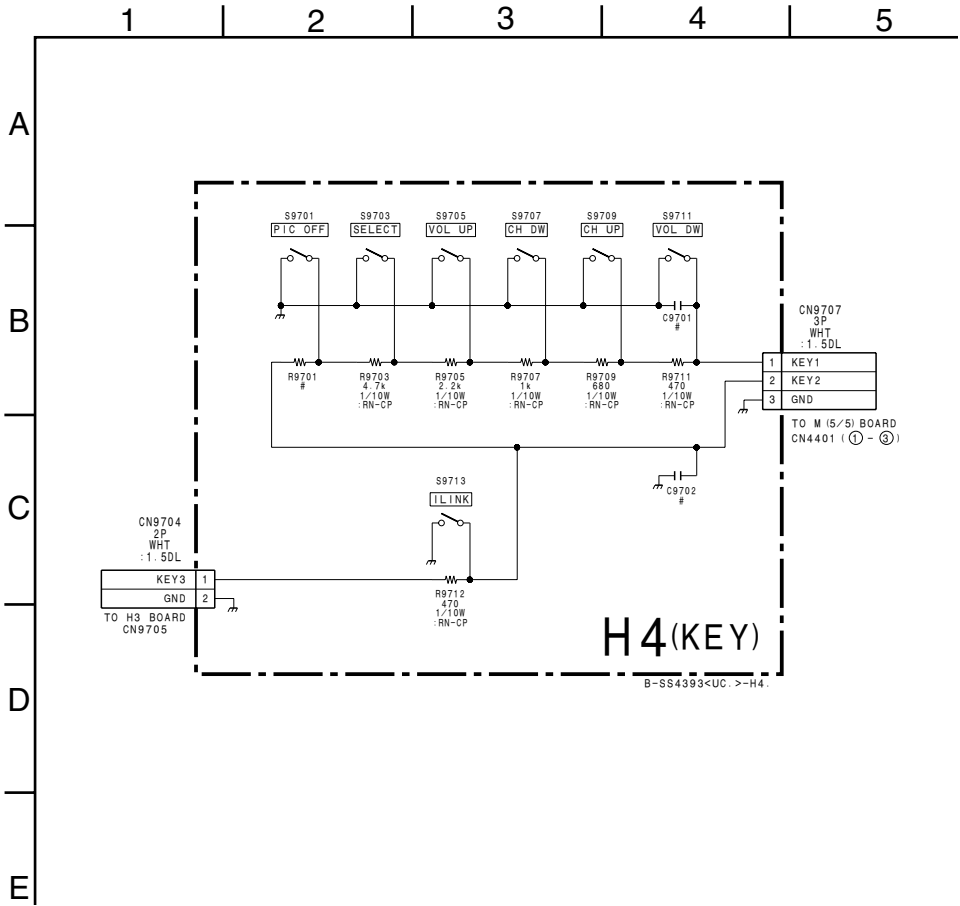


H4

[KEY]

— H4 BOARD —

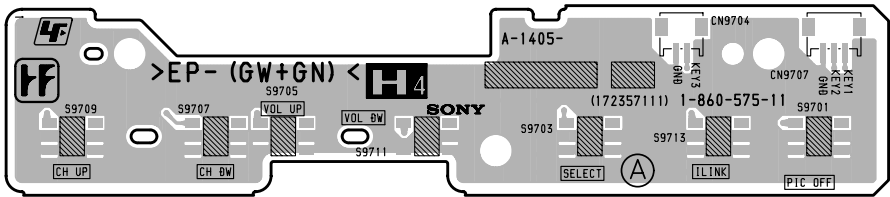


<COMPONENT SIDE>

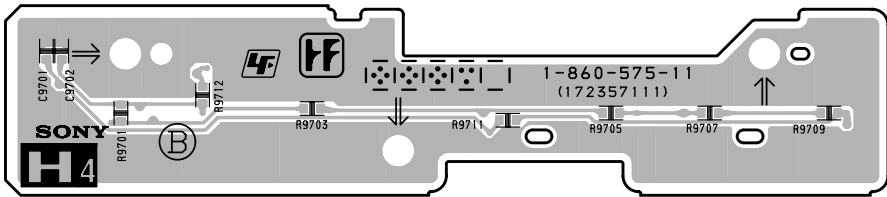


<CONDUCTOR SIDE>

(6) Schematic Diagram of IF Board

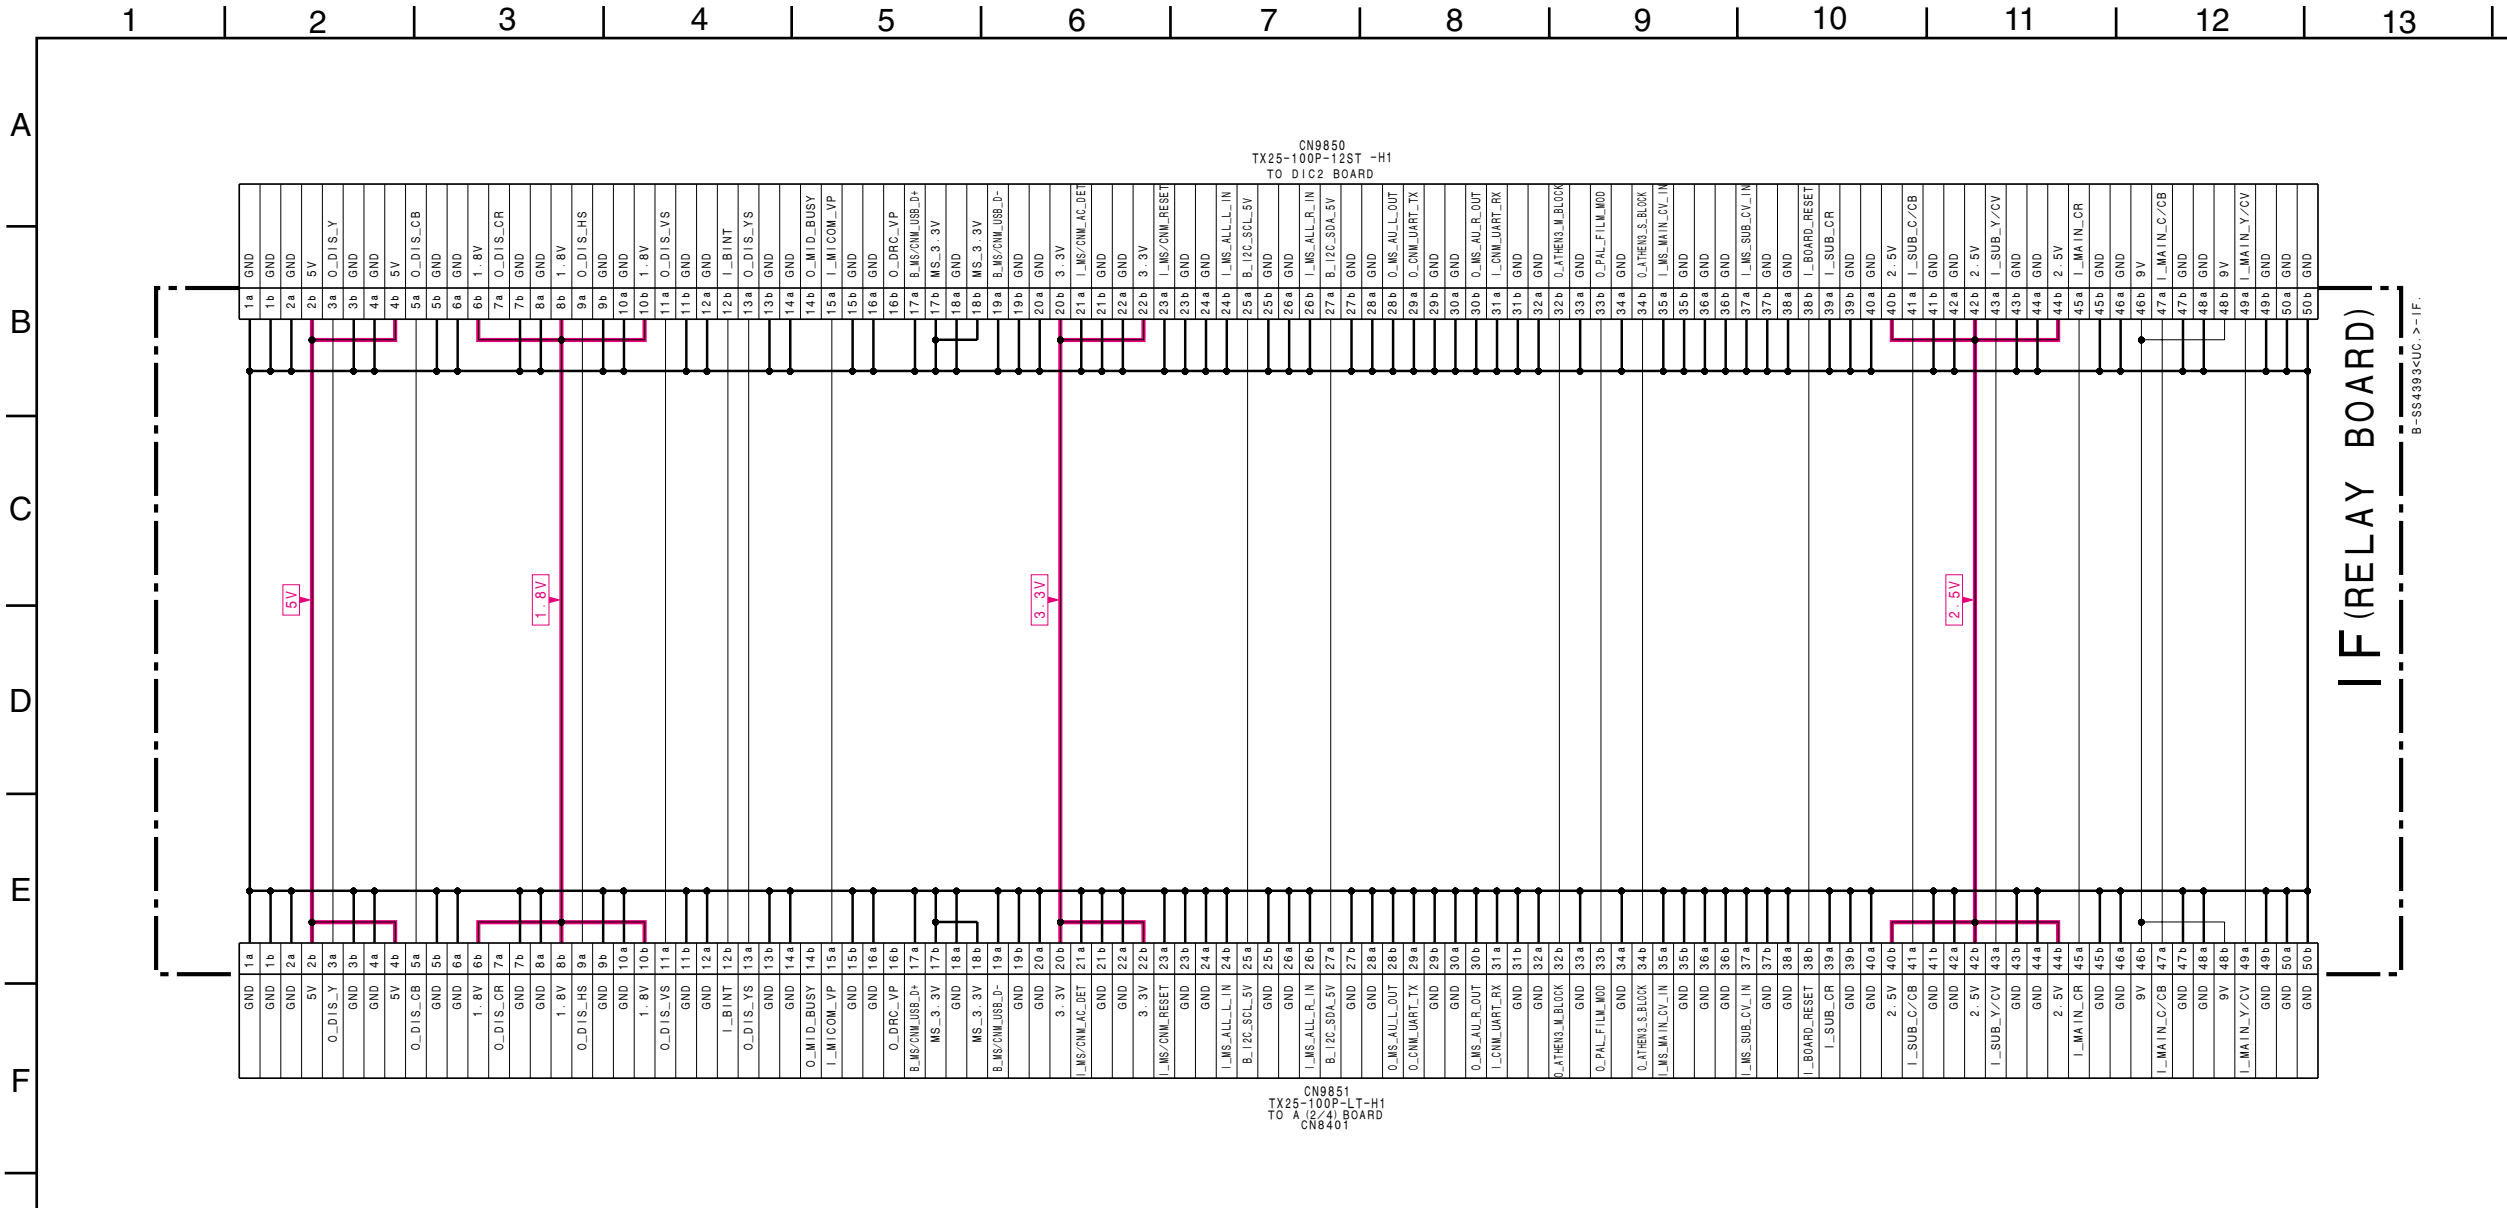


IF [RELAY BOARD]

— IF BOARD —

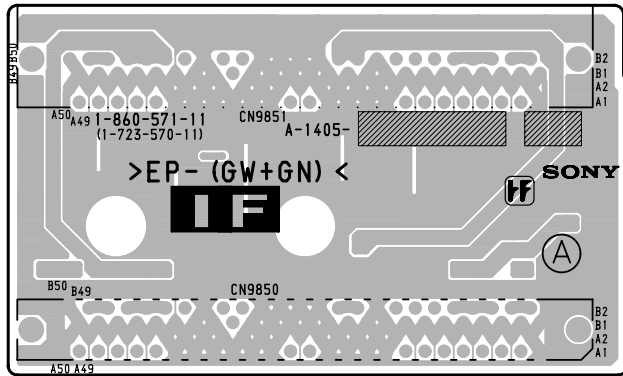



<COMPONENT SIDE>

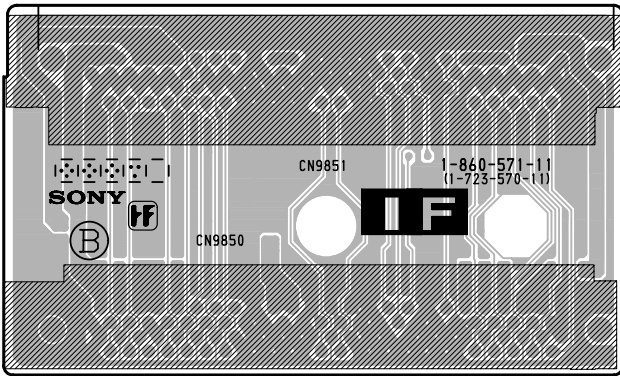

<CONDUCTOR SIDE>


(7) Schematic Diagrams of M Board

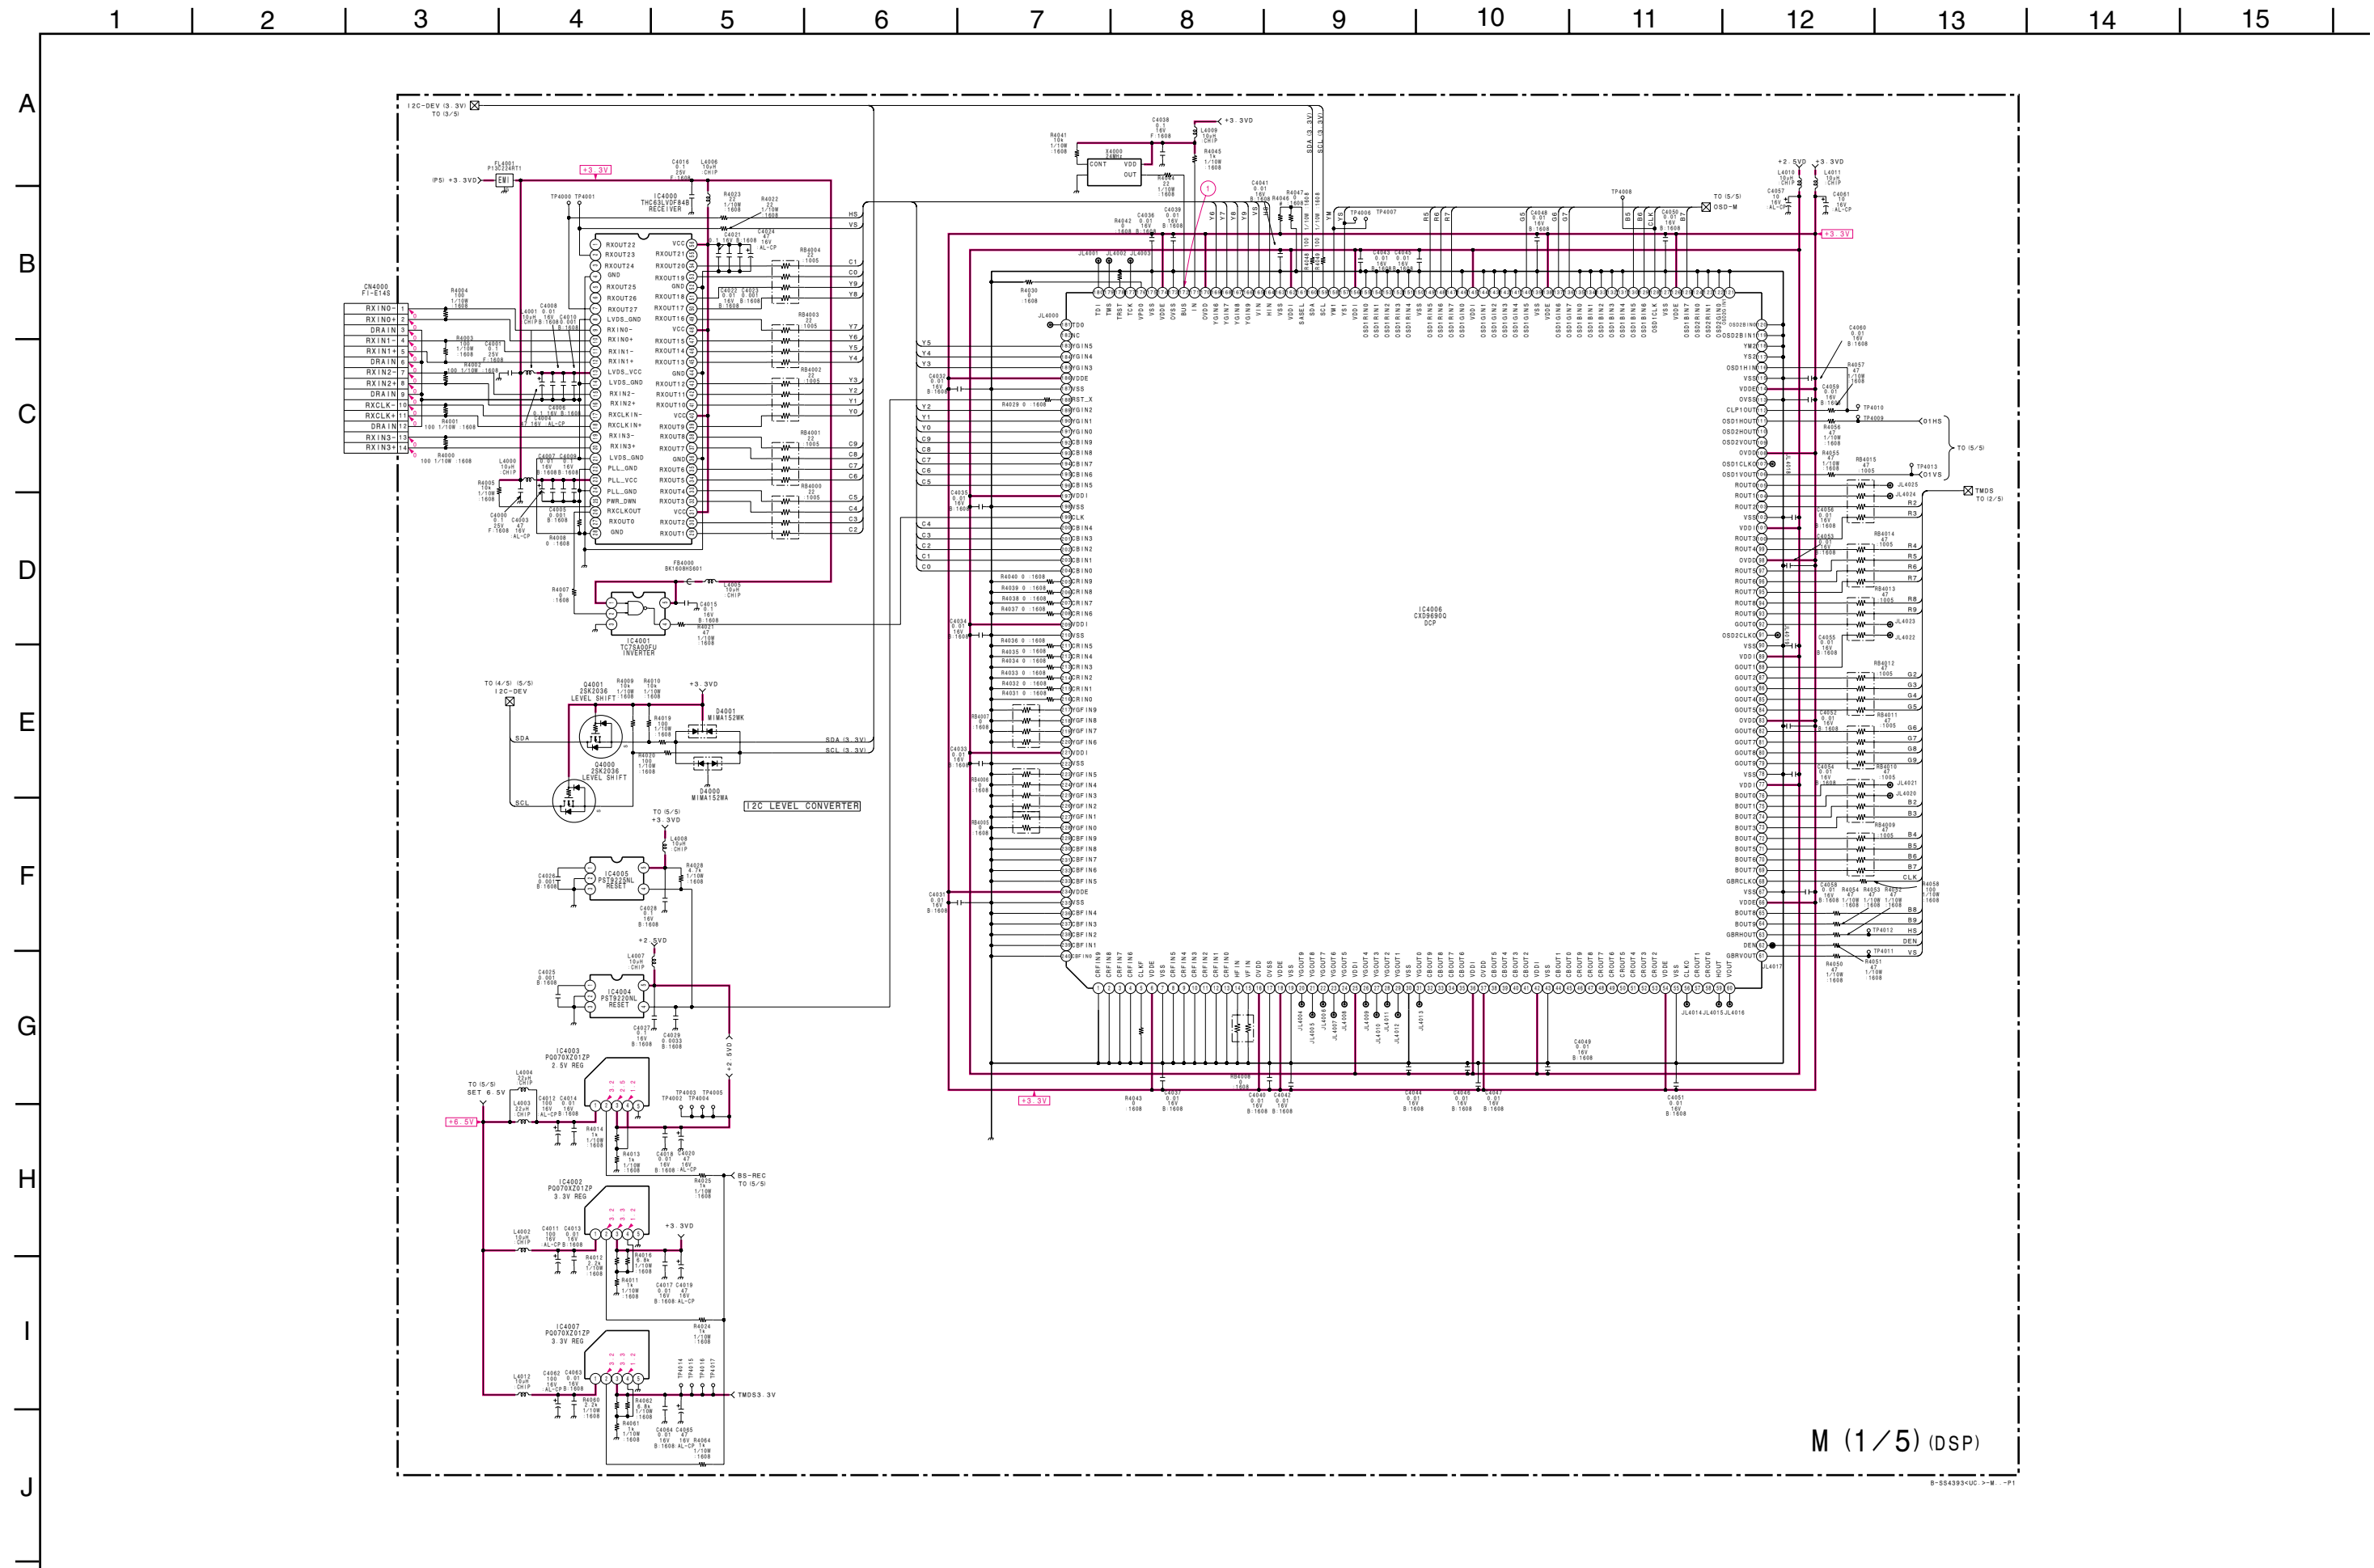

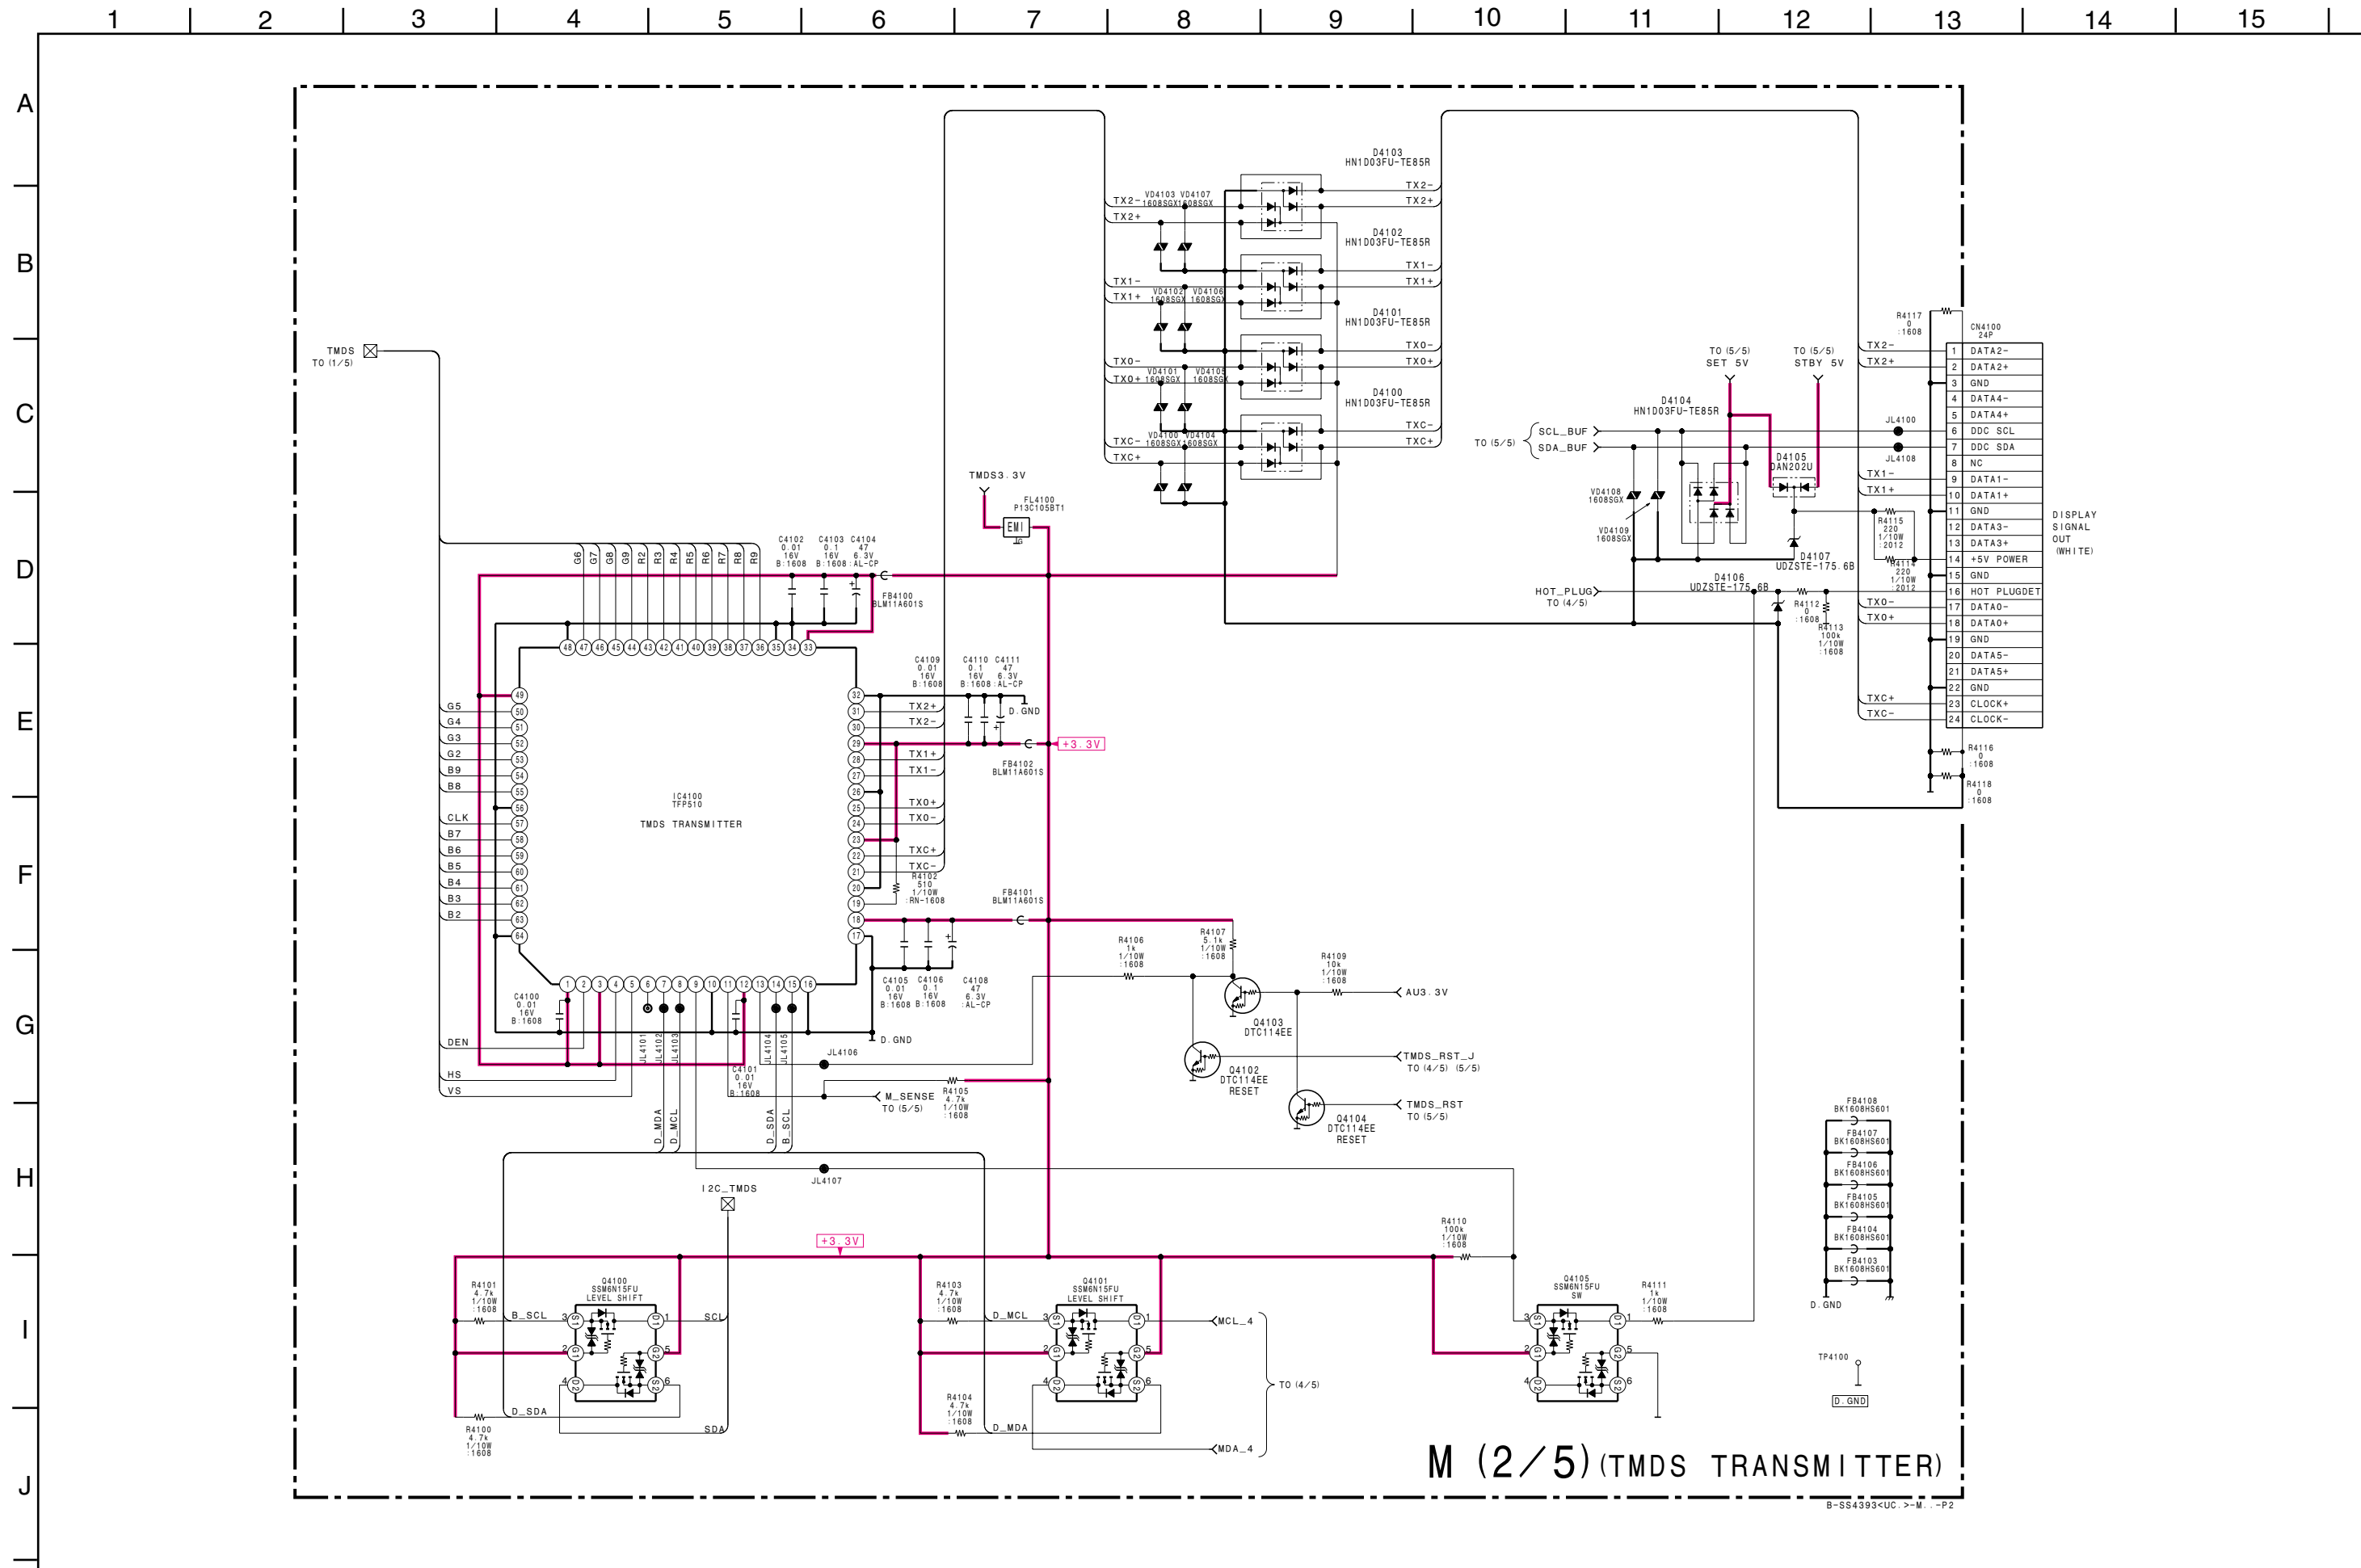


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15


A
B
C
D
E
F
G
H
I
J

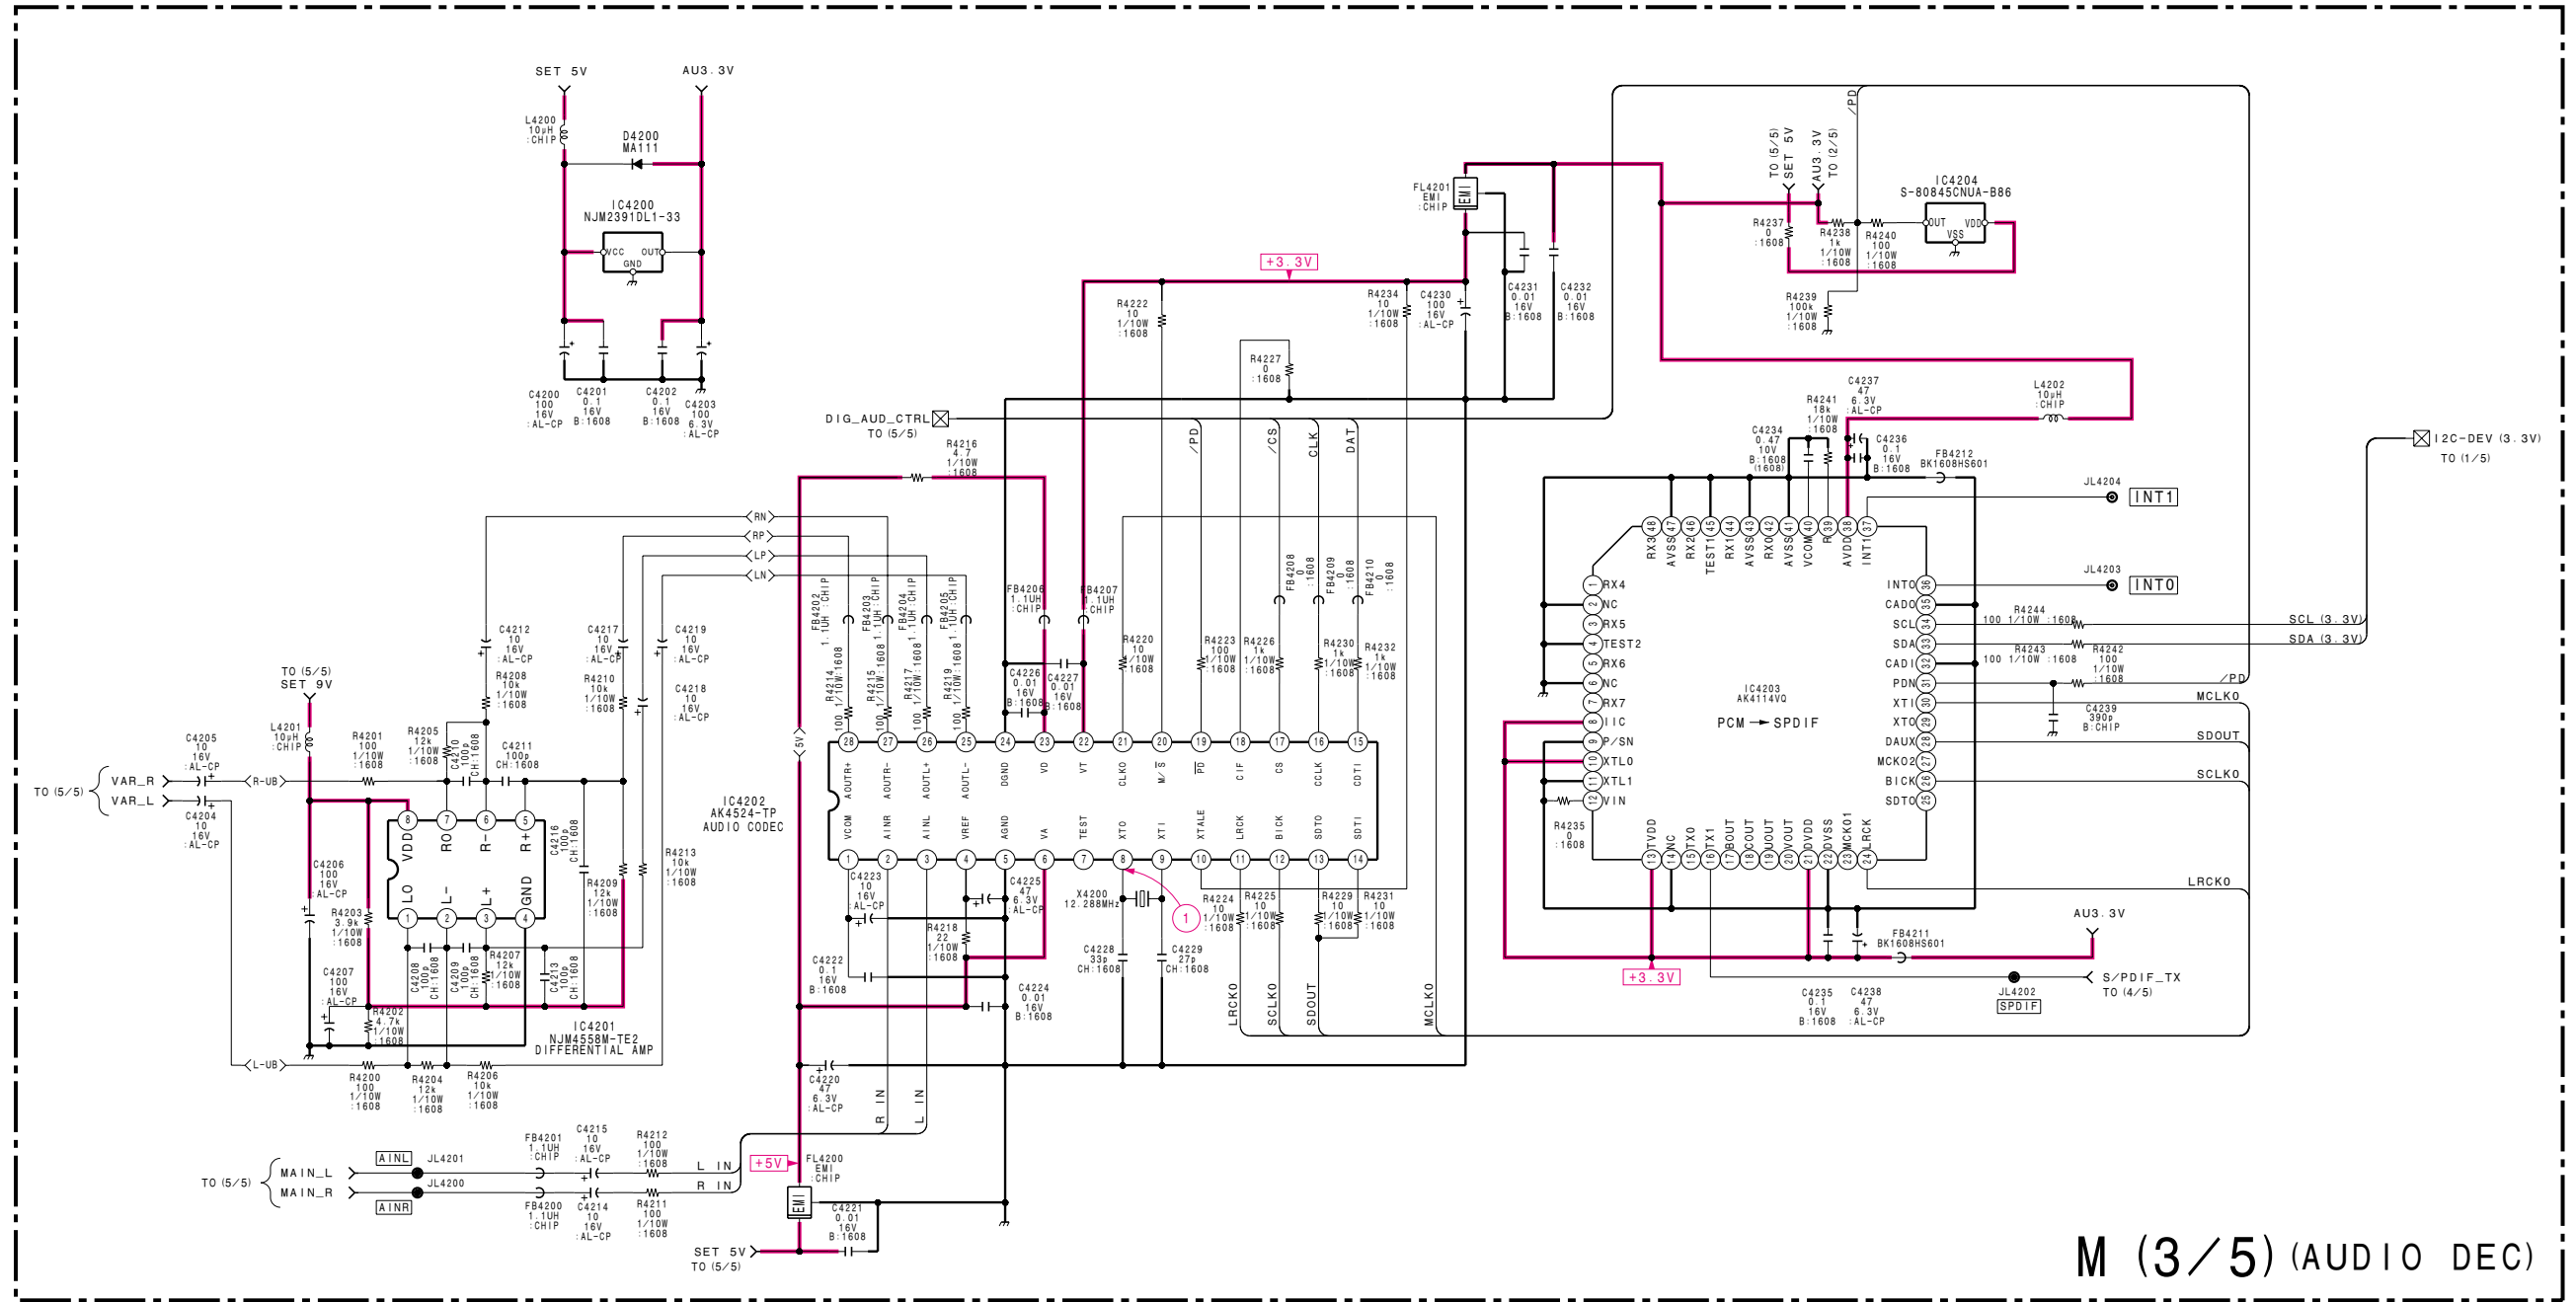


B-S54393<UC> >-M- -P3



— M BOARD —

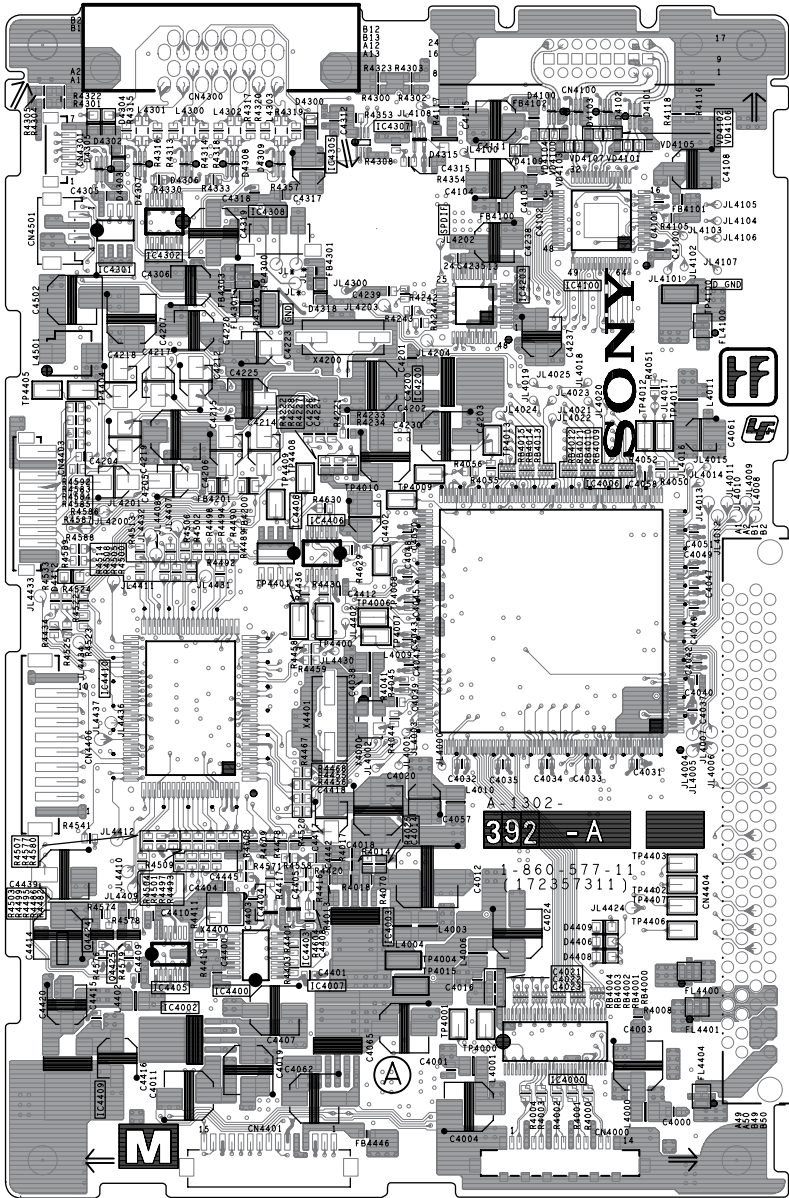


<COMPONENT SIDE>

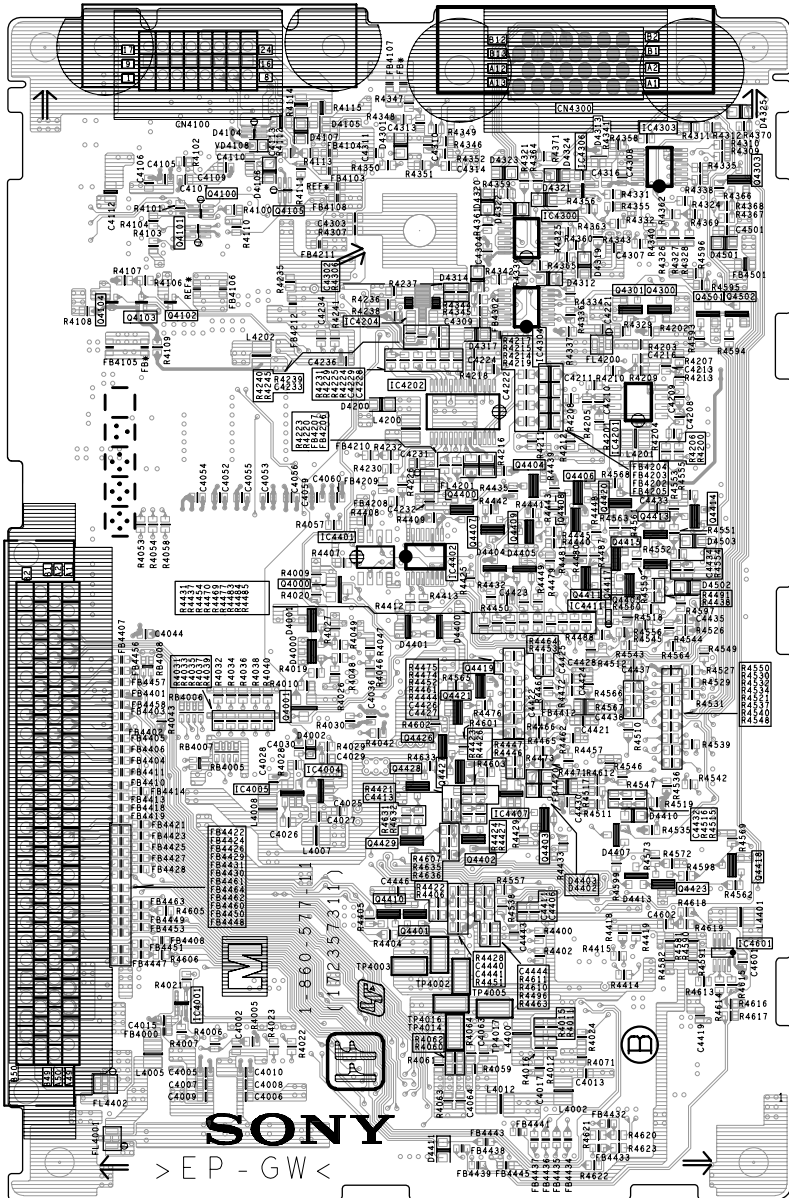

<CONDUCTOR SIDE>

(8) Schematic Diagram of UD Board

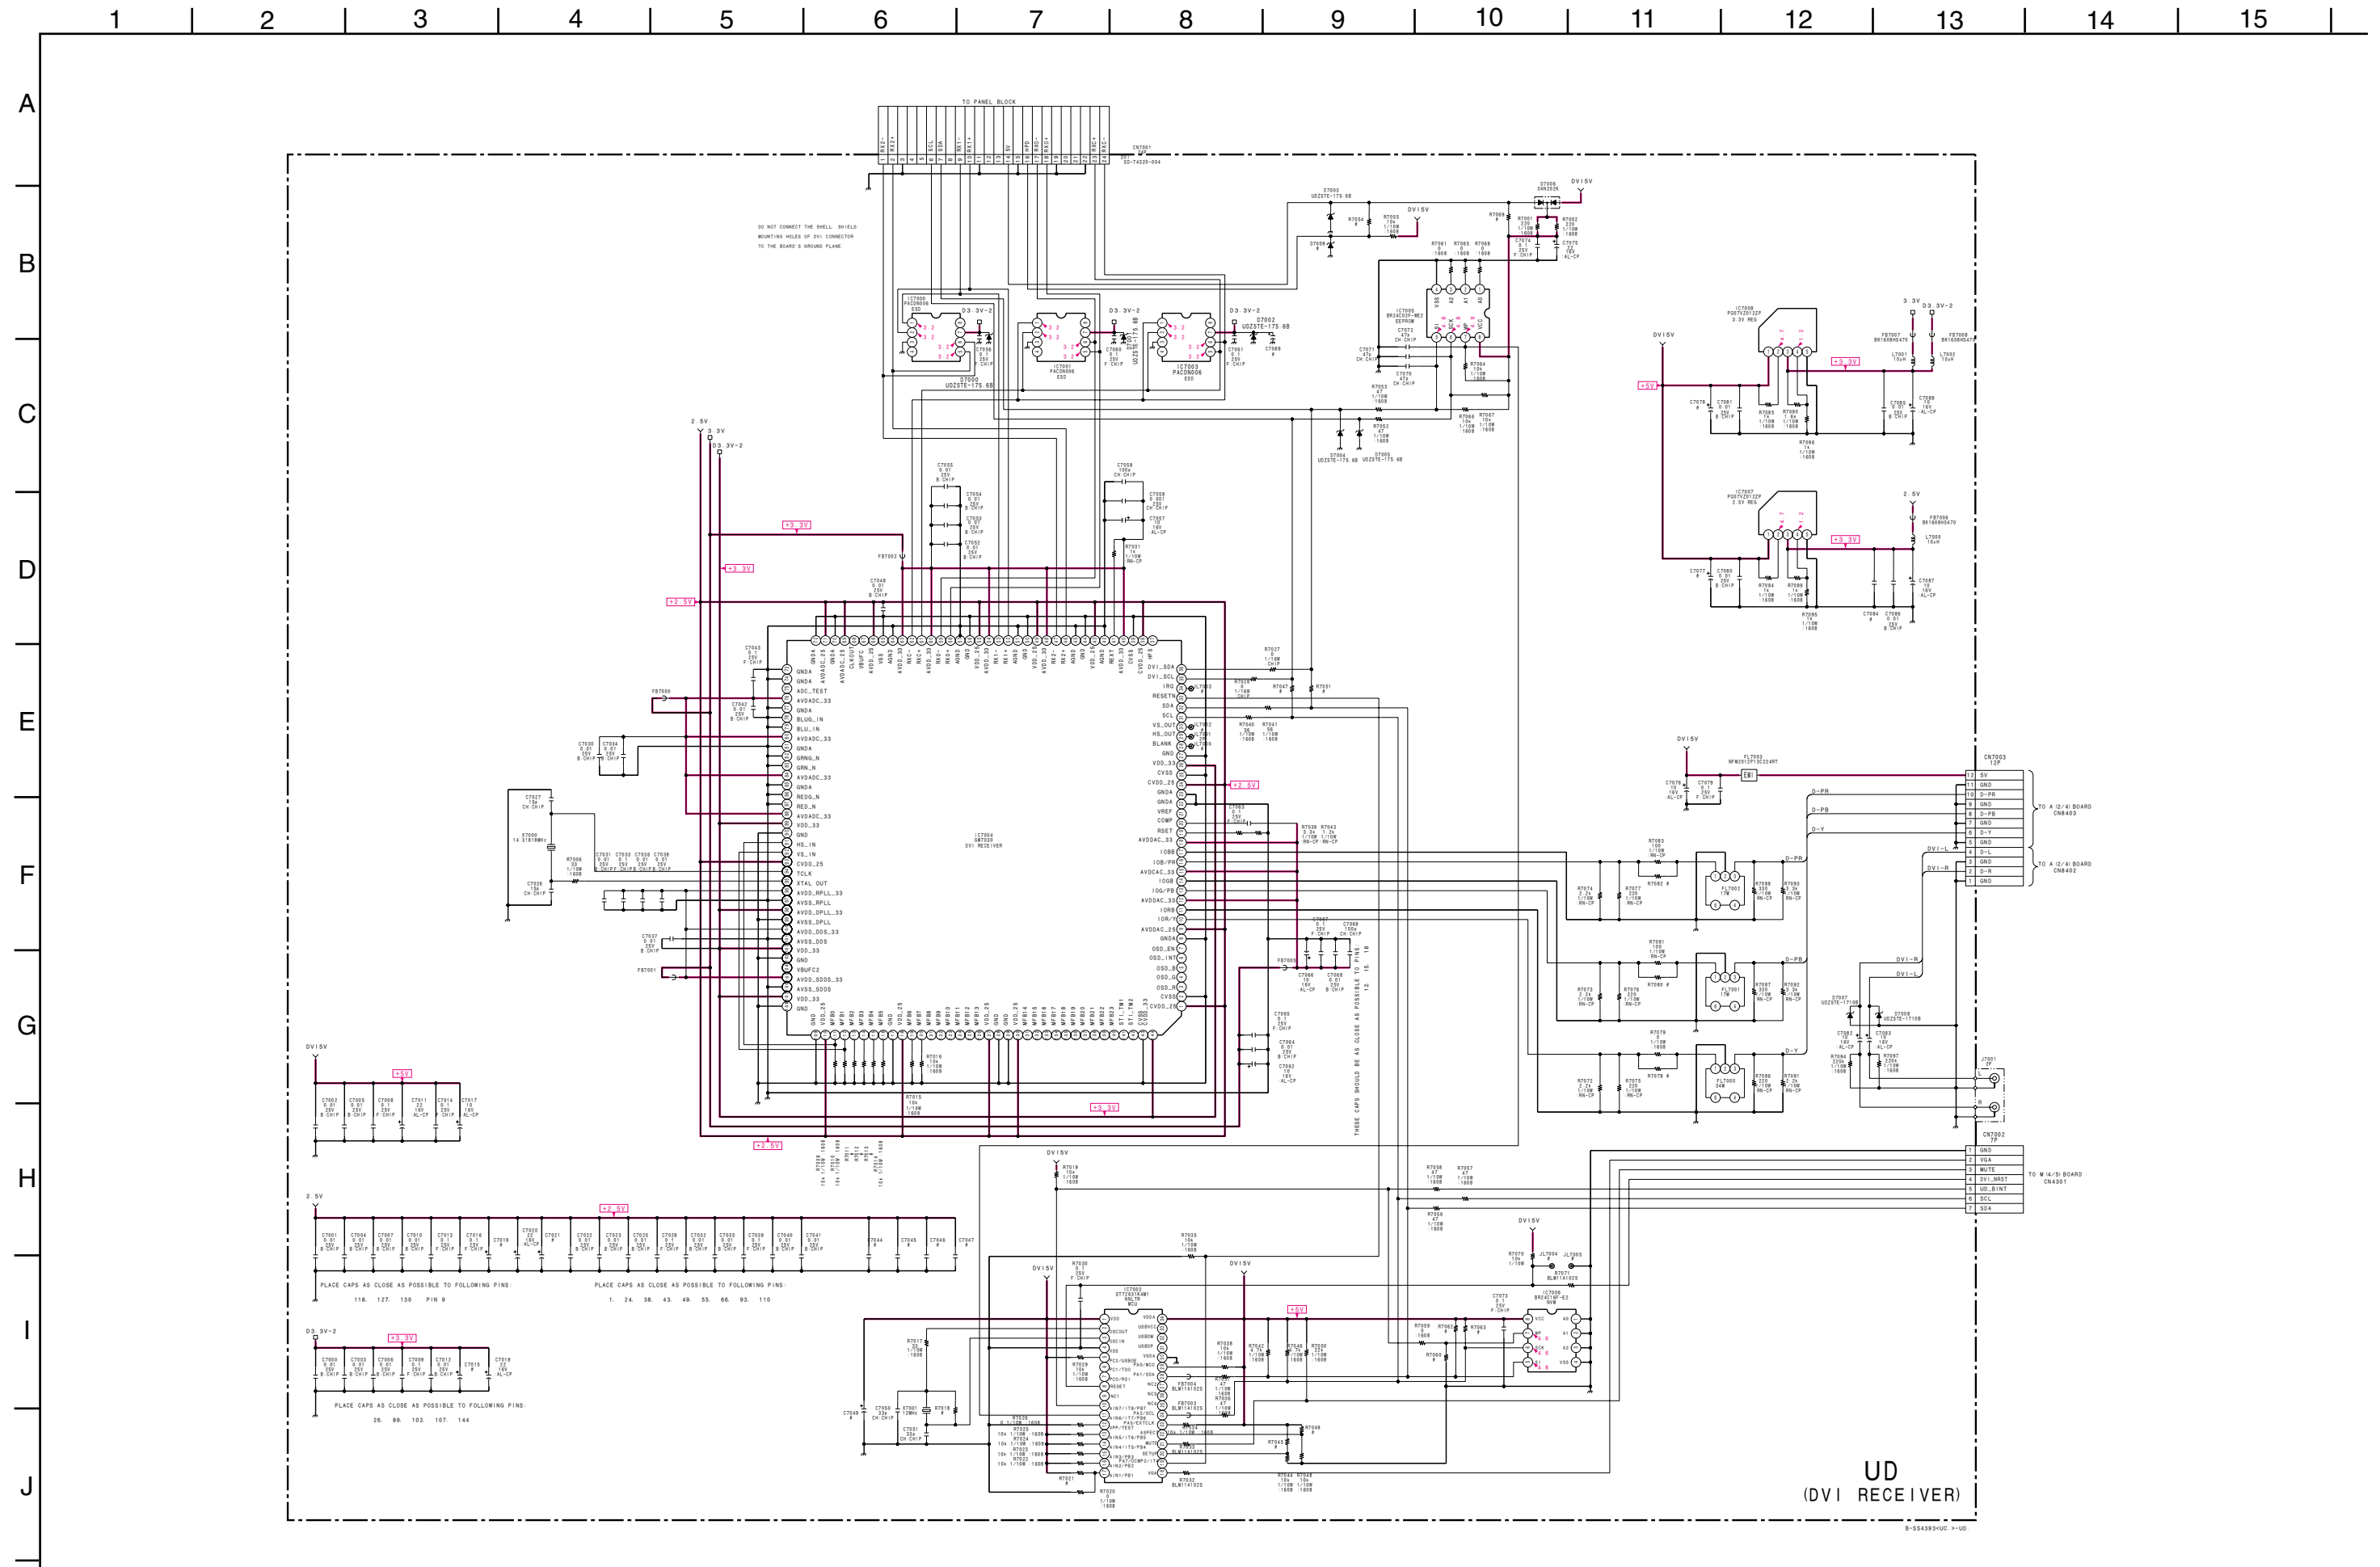




3-50 KDE61XBR950 (UC)

3-5. SEMICONDUCTORS


IC

AK4114VQ-L
CXA2171AQ-T6
TAS5001PFBR




48Pin QFP

AK4351VT
AK5380VT-E2
M52055FP
MAX1644EAE-TG074
MAX1809EEE+TG068
MC14538BF
MC14538BFEL
SN65LVDS1050PWR
SN74CBTLV3257PWR
SN74LV4052APWR
TC74LVX4053FT(EL)
UC3854BN




16Pin SOP

AK4524
AK4524-TP




28Pin SOP

BA10324AF-E2
HD74LV4066ATEL
LM339NS
SN74LV08APWR
SN74LV125APWR
SN74LV4066APWR
TC74LCX08F(EL)
TC74LCX125FT(EL)
TC74LCX74FT(EL)
TC74LVX08FT(EL)
TC74LVX125FT(EL)
TC74LVX74FT(EL)
TC74VHCT125AFT(EL)
TLC2933IPWR-12
XRA10324AF




14Pin SOP

BA18BC0FP-E2
BA25BC0FP-E2
NJM2391DL1-33(Te1)




BA8274F-E2
BR24L02F-WE2
BR24L16F-WE2
DS90LV018ATMX
IRU3037CS
LM3526MX-H
LMH6658MMX/J5000172
M24128-BWMN6T
M24128-BWMN6T(A)
M24C02-WMN6T(A)
M24C02-WMN6T(B)
M24C04-WMN6T(A)
M24C04-WMN6T(B)
M24C64-WMN6T(B)
M25P10-AVMN6T
NJM2903V(Te2)
NJM4558M-TE2
NJM4558V-TE2
PACDN006S
SN65LVDS179DGKR
SN74LVC2G08DCUR
TC4W53FU
TC4W53FU(Te12R)
TC75W58FK(Te85R)
UPC339G2-E2
UPC4558G2
UPC4558G2-T2




8Pin SOP

BD4729GTR
NJM2370U10-TE2
NJM2870F18(Te2)
PST3629NR
PST3629UL
PST9145NL
PST9220NL
PST9225NL
R3112N221A-TR-FA
SC7S04F
SN74AHC1G04DCKR
SN74CBTLV1G125DCKR
TC7S00FU(Te85R)
TC7S04F(Te85R)
TC7SA00FU(Te85R)
TC7SET32FU(Te85R)
TC7SZ02FU(Te85R)
TC7SZ08FU(Te85R)
TC7SZ126FU(Te85R)
TPS3823-33DBVR
XC6204B332MR
XC6209B182MR




5Pin CHIP

CXA2069Q
NJW1149

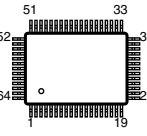


TOP VIEW

CXD2097BQ




208Pin QFP

CXD3802BQ
CXD9690Q




240Pin QFP

CXD9740GA




256Pin QFP

DS90C387VJDX
MB94P918PF-G-166A
TFP501PZP
TFP510PAP




100Pin QFP

CXP964032-003R
K4D263238F-UC50T
M306V7FHFP-PDPXBR1
MB94918RPF-G-166-BND

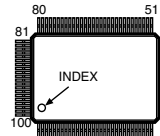


TOP VIEW

GM7030-H
XC2S50-5TQG144C




144Pin QFP

HY57V281620HCT-H-TR
MT48LC8M16AZTG-75-Y15WTR
MT48LC8M16A2TG-75-Y95WT




54Pin SOP

K4S643232F-TC60T
K4S643232F-UC60T
MT48LC2M32B2TG-6-Y94W




86Pin SOP

MBM29LV800TA-70PFTN-DE100
MBM29LV800TA-70PFTN-DE200
SN74CBTLV16210GR




48Pin SOP

MB88141APF-ER
PCA9555DB-118



24Pin SOP

MB91306RPFV-G-BND-E1
MB91307RPFV-G-BND-E1




120Pin QFP

MCZ3001D
MCZ3001DA



18Pin DIP

MD3221N
TAS5101DAPR



32Pin SOP

MIP2C20MP1SO




8Pin DIP


MM1431ATT



MM1563DFBE
MM1565AFBE
PQ20WZ5U




MSM56V16160F-10TS-K
MSM56V16160F-8T3FM1



50Pin SOP

NJU26103FR1



32Pin QFP

PQ05RD11
PQ05RD21
PQ09RD21



PQ070XZ01ZP
PQ07VZ012ZP
PQ20WZ1U




1: Vin
2: Vc
3: Vo
4: adj
5: GND

SI-8033S




ST72631K4M1/NNLTR




34Pin SOP

S-80828CNNB-B8NT2G




TC74LCX273FT(EL)




20Pin SOP

THC63LVDF84B-T



56Pin SOP

TK11819MTL




6Pin CHIP

UPC1093J-1-T



XC18V02VQG44C



44Pin QFP

TRANSISTOR


DTA114EKA-T146
DTA114EUAFT106
DTA114EUA-T106
DTA143EK
DTA143EKA-T146
DTC114EE-TL
DTC114EK
DTC114EUA-T106
DTC143XUA-T106
DTC144EKA
DTC144EKA-T146
DTC144EUA-T106
MSB1218A-RT1
MSD1819A-RT1
MSD601-RT1
MUN2213T1
PDTC144EK-115
UN2213
2PA1576R-115
2PB709AR-115
2PC4081R-115
2PD601AR-115
2SA1037AK-T146-QR
2SA1037AK-T146-R
2SA1162-G
2SA1226-E4
2SA1226-T1E3E4
2SA1576A-T106-QR
2SA1576A-T106-QR
2SB709A-QRS-TX
2SB709A-R-TX
2SC1623-L5L6
2SC2412K-T-146-QR
2SC2712-YG
2SC2712-YG-TE85L
2SC4081-R
2SC4081T106R
2SC4178-F13F14-T1
2SC4178-F14
2SD2114K
2SD2114KT146
2SD2216J-QR(TX).SO
2SD601A-QRS-TX
2SD601A-Q-TX
2SD601A-R-TX



DTC114EKA-T146
DTC114EU
DTC114EUAFT106
DTC114TUA-T106
DTC143XU



HAT2070R-EL



IRFIB7N50A-LF31



IRFR5305TR



SI2301DS-T1
2SK1590-T1B



SPA20N60C3E8152



SSM6N15FU(Te85R)



RN4902(Te85R)




2SB1121-ST
2SB1121-S-TD
2SD1615A-GP
2SD1621S-TD-E
2SD874A-R-TX
2SK2036(Te85L)




2SD774-34
2SD774-T-34



2SK1399-T1B




2SK2662(LBS2SONY)
2SK2842(LBS2SONY)




DIODE


BAS316-115
MM3Z10VT1
MM3Z13VT1
MM3Z4V3ST1
MM3Z4V7ST1
MM3Z5V6ST1
MTZJ-T-77-36A
02DZ22-TPH3
02DZ3.9-Z(TPH3)

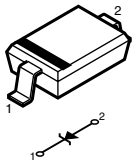


DAN202K-T-146
M1MA152WK-T1




DAN202UT106
DAP202UT106
1PS184-115




DAP202K
DAP202K-T-146
M1MA152WA-T1
MA132WA-TX




DF06M-6031




DTZ10B
HRU0103ATRF
HZU11B1TRF
MA111-TX
MA113-(TX)
MMDL914T1
RD3.9SB2
RD3.9SB2-T1
RD5.6SB-T1
RD6.8SB2-T1
UDZSTE-1710B
UDZSTE-1712B
UDZSTE-1715B
UDZSTE-1718B
UDZSTE-173.6B
UDZSTE-173.9B
UDZSTE-1730B
UDZSTE-175.6B
UDZSTE-176.2B
UDZSTE-177.5B
UDZSTE-178.2B
UDZ-TE-17-3.9B
UDZ-TE-17-7.5B
UDZ-TE-17-8.2B
1SS355TE-17

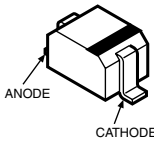


D1NL20U-TR
D1NL20U-TR2



D1NL40-TA2
D1NL40-TR2
ERA22-08
ERA22-08TP3
RM11A




D10SBS4
D25XB60
D2SB60A-F04
D3SB60F3




D10SC6M
D5SC4M
D8LC40




D8LC20U-4012

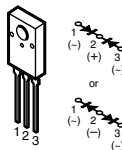


D8LD40-F1




EC31QS03L-TE12L
M1FM3
MA2S111
MA2S111-TX

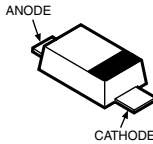

EG01CV1




ERA22-06AVRBT
RD4.7FB2
RD4.7F-T7B2
RD6.2FB2
RD6.2F-T7B2
UF4005PKG23
UZ-2.0BS-TP




FCQ20A04




HN1D03FU-TE85R

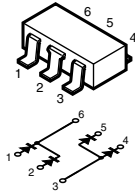


MA153-TX
1PS181-115
1SS226




MA3J142D0LSO




MBRS140T3

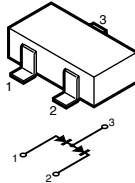


RM11C




02CZ6.8-TE85L




1SS383(T5RSONY1)

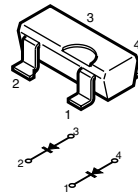


L1503CB/ID

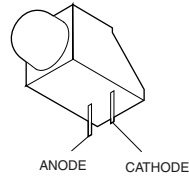


L-53SRD-H

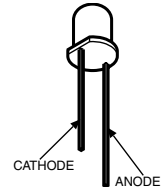


NSPW515BSA0

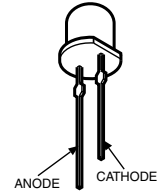


SELU1E50CM
E1L49-AW0C2-01

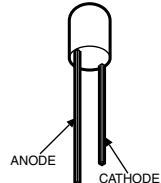

SMLU12D16W

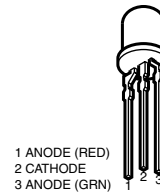

SML-210MT-T86
SML-210MT-T86
SML-210VTT86

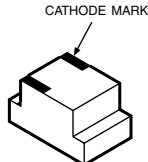

SECTION 4

EXPLODED VIEWS


NOTE:

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


4-1. DISPLAY UNIT-1 (PDM-6110)

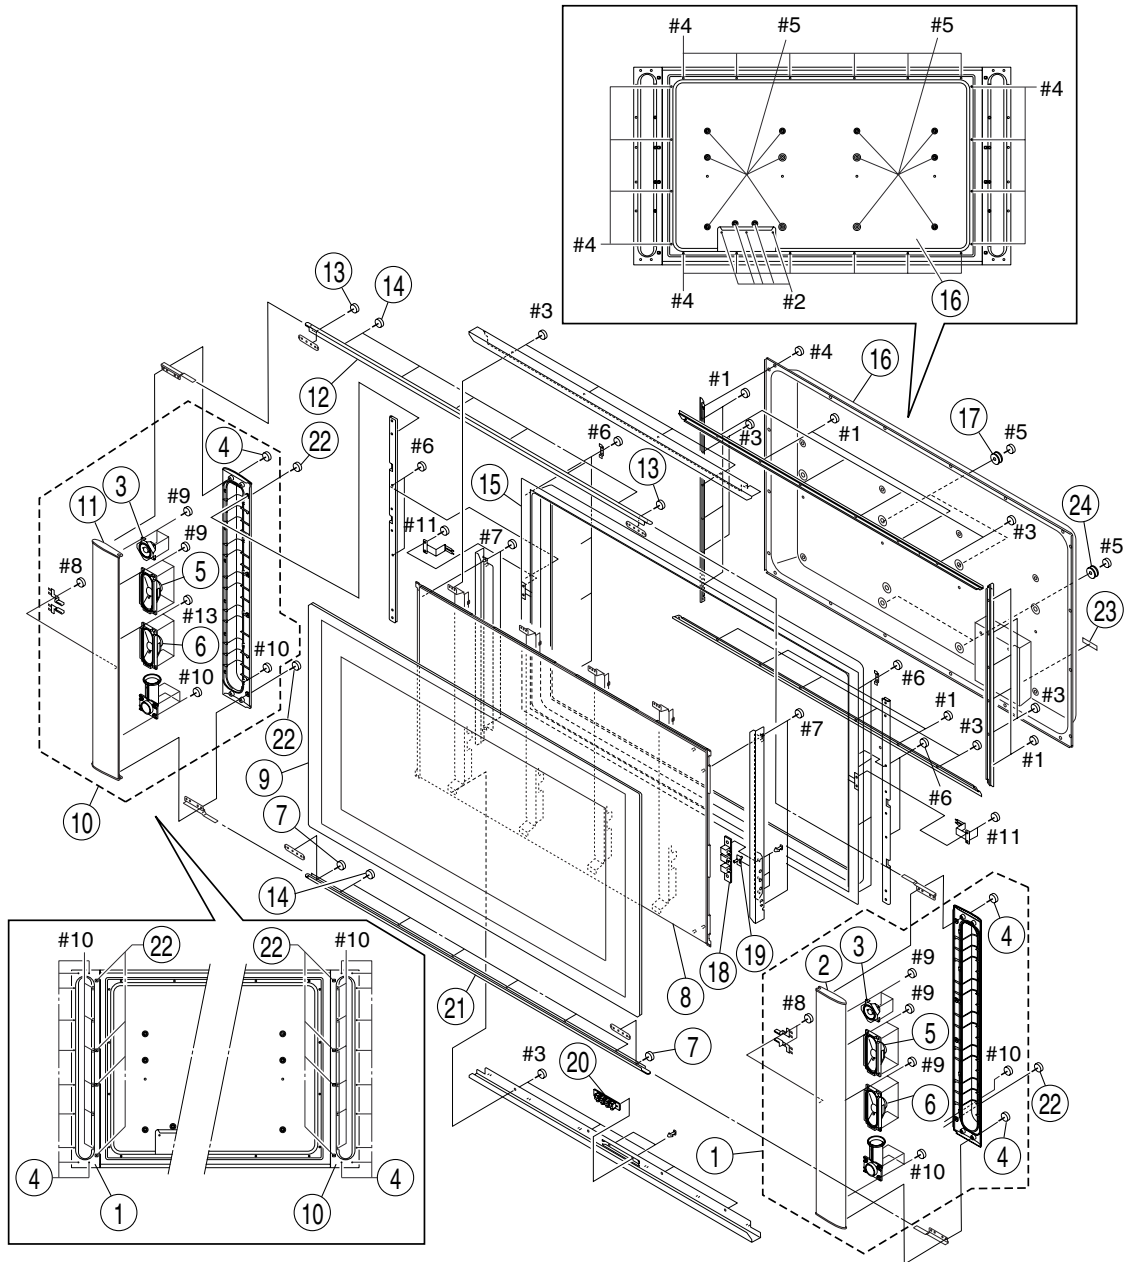

REF. No.	PART No.	DESCRIPTIONRE	MARK
1	A-1604-754-C	SP (R) ASSY	2-6
2	X-4042-431-1	BOX (R), SPEAKER ASSY	
3	1-825-567-11	LOUDSPEAKER (5CM)	
4	4-093-331-11	SCREW (+BTP 4X18)	
5	1-825-581-11	LOUDSPEAKER (13X6CM)	
6	1-825-582-11	LOUDSPEAKER (13X6CM)	3-6,11
7	4-099-612-01	SCREW (+K 2.6X3.5)	
8	1-805-394-11	61 INCH PLASMA DISPLAY PANEL	
9	A-1604-755-A	FILTER GLASS ASSY KIT	
10	A-1604-753-C	SP (L) ASSY	
11	X-4042-432-1	BOX (L), SPEAKER ASSY	
12	X-4042-697-2	ASSY, BAR (H)	
13	4-099-612-01	SCREW (+K 2.6X3.5)	
14	4-091-675-01	SCREW, FIXED	
15	* X-4042-881-1	BRACKET ASSY, FILTER GLASS	
16	4-067-854-01	COVER (61), REAR	
17	4-091-681-01	HOOK	
18	* A-1410-146-C	R1 BOARD, MOUNT	

REF. No.	PART No.	DESCRIPTIONRE	MARK
19	* 4-097-903-01	GUIDE, LIGHT	
20	* A-1405-549-C	R2 BOARD, MOUNT	
21	X-4042-149-2	ASSY, BAR (H)	
22	4-099-694-01	SCREW (+PSW 4X10)	
23	* 4-098-480-01	PLATE MODEL NAME	
24	4-100-784-01	HOOK B	
#1	7-685-661-79	SCREW +BVTP 4X12 TYPE2 IT-3	
#2	7-682-948-09	SCREW +PSW 3X8	
#3	7-682-663-09	+PS 4X12	
#4	7-682-963-09	SCREW +PSW 4X12	
#5	7-682-973-49	SCREW +PSW 5X16	
#6	7-685-246-19	SCREW +KTP 3X8 TYPE2 NON-SLIT	
#7	7-682-552-04	+B 3X16	
#8	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
#9	7-685-663-71	SCREW +BVTP 4X16 TYPE2 IT-3	
#10	7-685-663-79	SCREW +BVTP 4X16 TYPE2 IT-3	
#11	7-685-259-19	SCREW +KTP 4X8 TYPE2 NON-SLIT	
#13	7-682-961-09	SCREW +PSW 4X8	


4-2. DISPLAY UNIT-2 (PDM-6110)

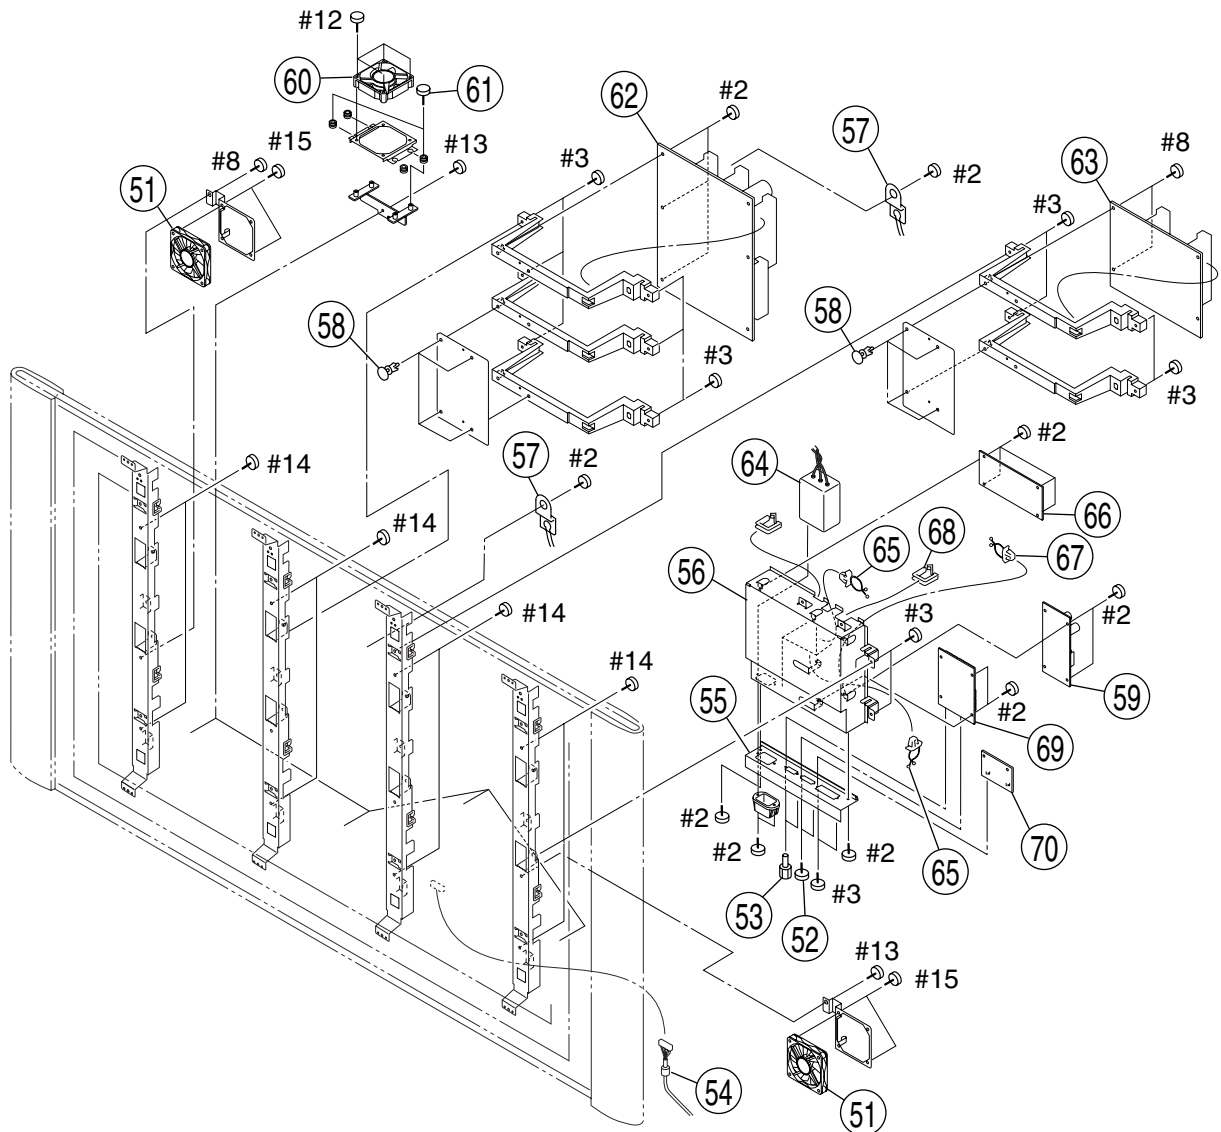

REF. No.	PART No.	DESCRIPTIONRE	MARK
51	1-763-963-21	FAN, DC	
52	4-662-693-03	GRIP, M2.6 S HEAD (EG)	
53	4-635-966-01	SCREW (HEX)	
54	1-900-277-06	CONNECTOR ASSY (FI31P)	
55	2-990-241-02	HOLDER (A), PLUG	
56	* X-4042-153-1	BRACKET (61) ASSY, U	
57	* 1-477-718-11	SENSOR, TEMPERATURE	
58	3-910-042-01	SPACER (A)	
59	* A-1405-547-C	K2 BOARD, MOUNT	
60	1-787-088-11	D.C, FAN	
61	4-029-432-01	SCREW (3X12), (+) BVWHTP	
62	* A-1302-308-B	G2 BOARD, COMPLETE	
63	* A-1302-307-A	G1 BOARD, COMPLETE	
64	1-817-952-11	AC INLET (WITH NOISE FILTER)	
65	4-035-160-01	PURSE LOCK (S) (DIA. 12)	

REF. No.	PART No.	DESCRIPTIONRE	MARK
66	* A-1405-548-C	F1 BOARD, MOUNT	
67	3-703-319-01	PURSE LOCK (S) (DIA. 15)	
68	2-433-598-01	HOLDER (LT-11U), WIRE	
69	A-1302-291-C	DEM BOARD, COMPLETE	
70	* A-1410-181-C	K3 BOARD, MOUNT	
#2	7-682-948-09	SCREW +PSW 3X8	
#3	7-682-663-09	+PS 4X12	
#8	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
#12	7-682-666-09	+PS 4X20	
#13	7-682-961-09	SCREW +PSW 4X8	
#14	7-682-974-49	SCREW +PSW 6X16	
#15	7-682-667-09	+PS 4X25	


4-3. MEDIA RECEIVER UNIT-1 (MBD-XBR950)

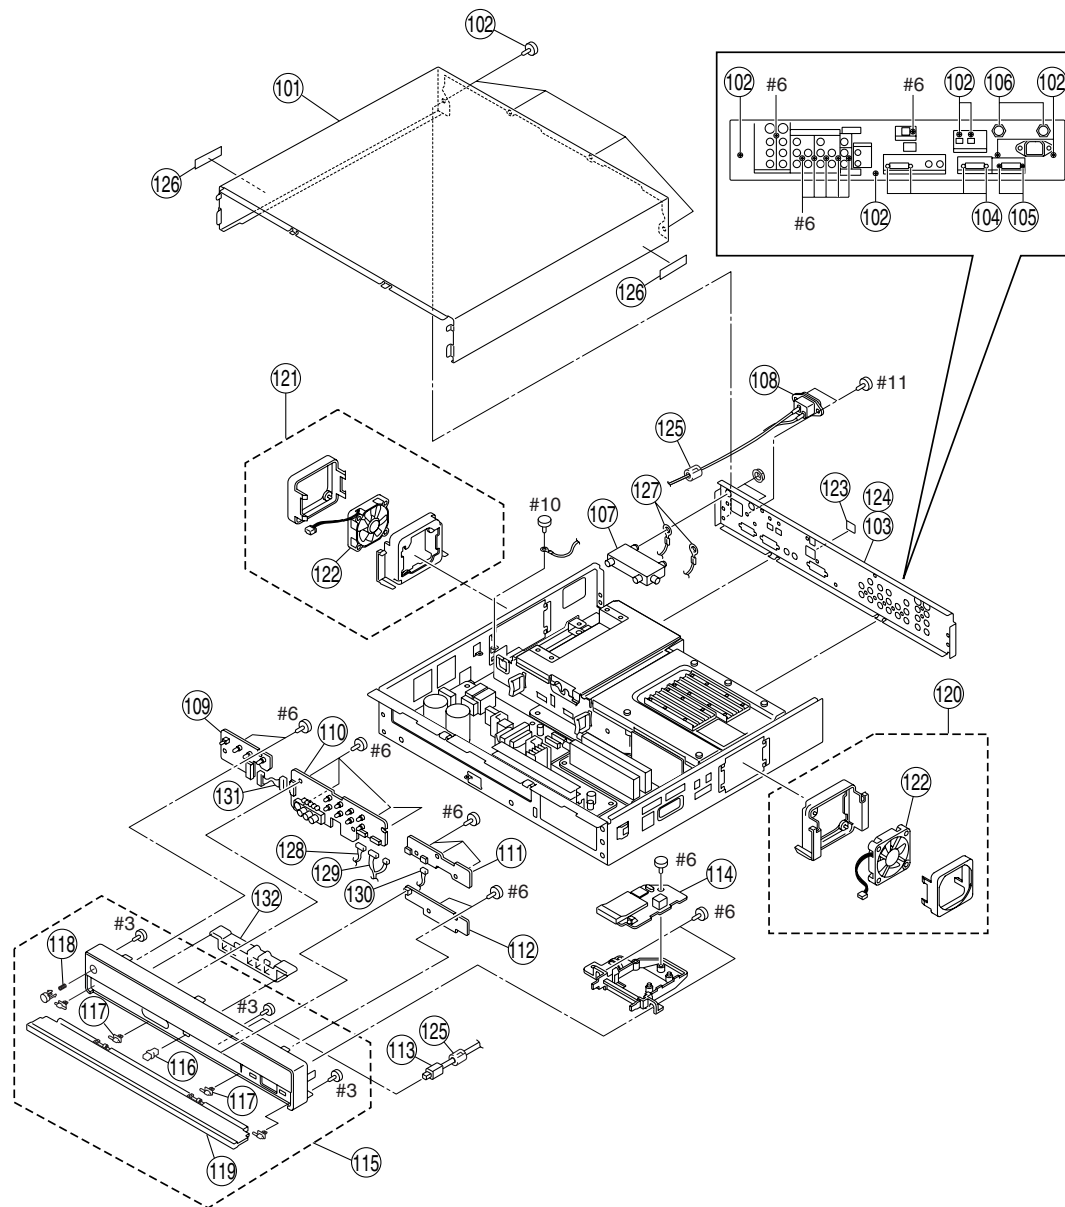

REF. No.	PART No.	DESCRIPTIONRE	MARK
101	4-097-980-01	COVER, TOP	
102	4-080-960-02	SCREW M3, SW	
103	4-098-721-01	PANEL (U), REAR	
104	4-635-966-01	SCREW (HEX)	
105	4-662-693-03	GRIP, M2.6 S HEAD (EG)	
106	3-682-691-00	NUT, WASHER HEXAGON	
107	1-786-183-13	SWITCH, ANTENNA	
108	△ 1-817-957-11	AC INLET	
109	* A-1405-754-A	H1 BOARD, MOUNT	
110	* A-1405-755-A	H2 BOARD, MOUNT	
111	* A-1405-757-A	H4 BOARD, MOUNT	
112	* A-1405-756-A	H3 BOARD, MOUNT	
113	1-823-515-31	CORD WITH CONNECTOR (I-LINK)	
114	* A-1302-555-A	QH BOARD, COMPLETE	
115	X-4042-287-3	FRONT ASSY, PANEL	116-119
116	4-042-192-01	CATCHER, PUSH	
117	4-045-250-51	DAMPER	
118	4-066-103-01	SPRING, COMPRESSION	
119	X-4042-288-1	DOOR ASSY (U)	
120	A-1605-928-A	BLOCK (R) ASSY, FAN	122


REF. No.	PART No.	DESCRIPTIONRE	MARK
121	A-1604-707-A	FAN BLOCK (L) ASSY	122
122	1-787-088-11	D.C. FAN	
123	* 4-097-978-01	COVER, CONNECTOR	
124	* X-4042-481-2	REAR PANEL ASSY	
125	1-469-241-11	CORE, FERRITE (RFC-8 BK)	
126	* 4-098-724-01	LABEL, MODEL NAME	
127	* 1-900-277-73	LUG CONNECTOR ASSY	
128	* 1-900-277-63	ZH CONNECTOR ASSY 12P	
129	* 1-900-282-66	XA CONNECTOR ASSY 20P	
130	* 1-900-277-69	ZH CONNECTOR ASSY 2P	
131	* 1-900-277-70	ZH CONNECTOR ASSY 9P	
132	* 4-099-174-01	SHADE (B) LED	
#3	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
#6	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
#10	7-682-961-01	SCREW +PSW 4X8	
#11	7-682-348-09	SCREW +RK 3X8	

4-4. MEDIA RECEIVER UNIT-2 (MBD-XBR950)

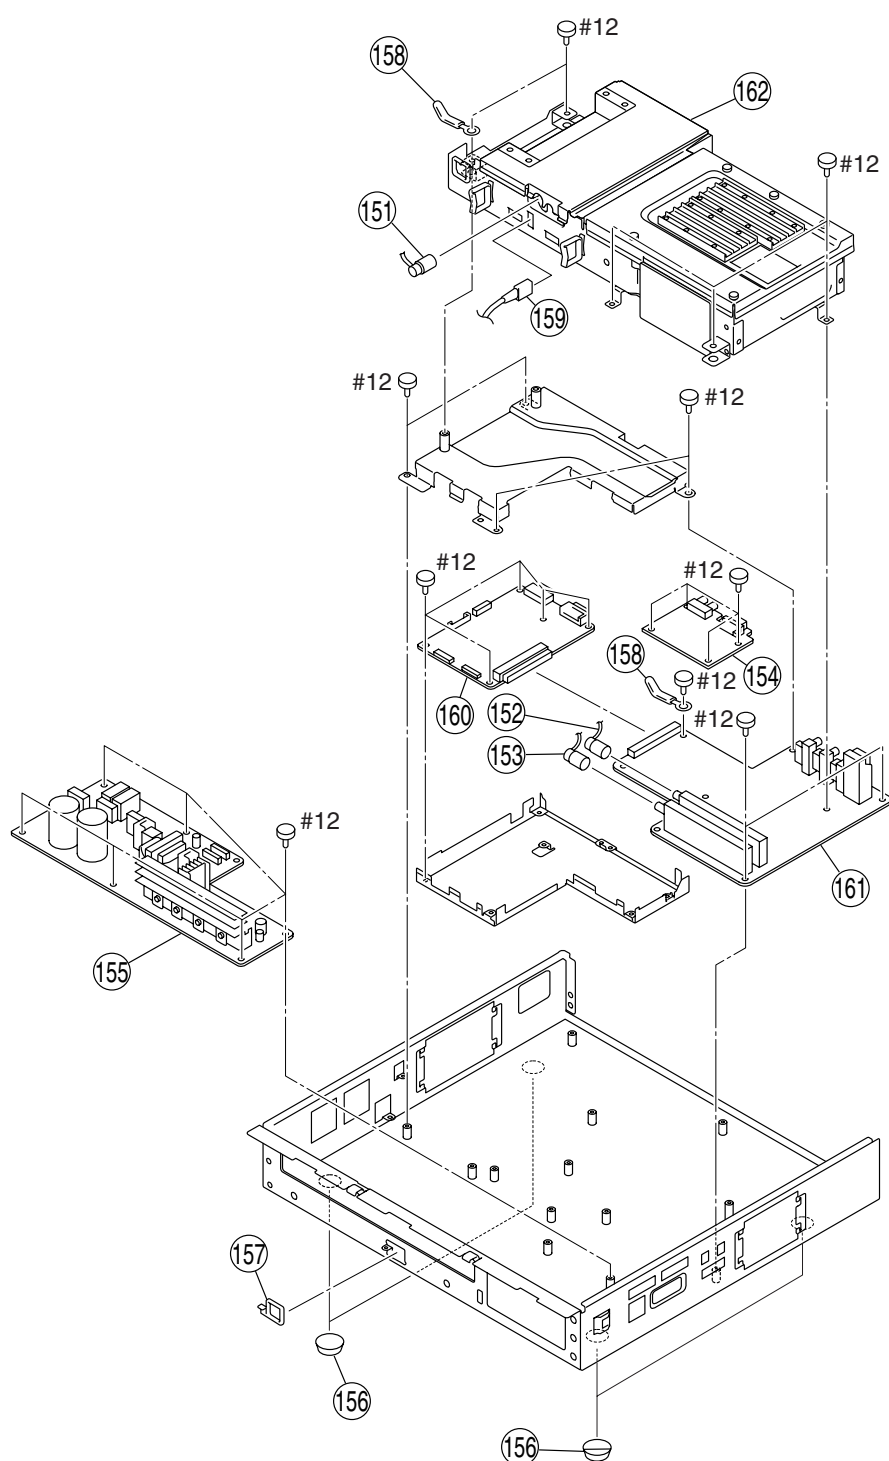

REF. No.	PART No.	DESCRIPTIONRE	MARK	REF. No.	PART No.	DESCRIPTIONRE	MARK
151	* 1-555-400-00	CABLE, PIN		158	* 4-662-796-01	CLIP, COACHING	
152	* 1-555-716-61	CABLE, PIN		159	* 1-827-984-11	CABLE, USB	
153	* 1-558-745-11	CABLE, P-P		160	A-1302-392-B	M BOARD, COMPLETE	
154	* A-1302-391-A	UD BOARD, COMPLETE		161	* A-1405-752-C	A BOARD, MOUNT	
155	* A-1302-393-A	G BOARD, COMPLETE		162	8-330-130-29	ATSC BLOCK ASSY	
156	* 4-097-982-01	FOOT (MR)		#12	7-682-948-01	SCREW +PSW 3X8	
157	* 4-097-984-01	COVER, I-LINK					


4-5. MEDIA RECEIVER UNIT-3 (MBD-XBR950)

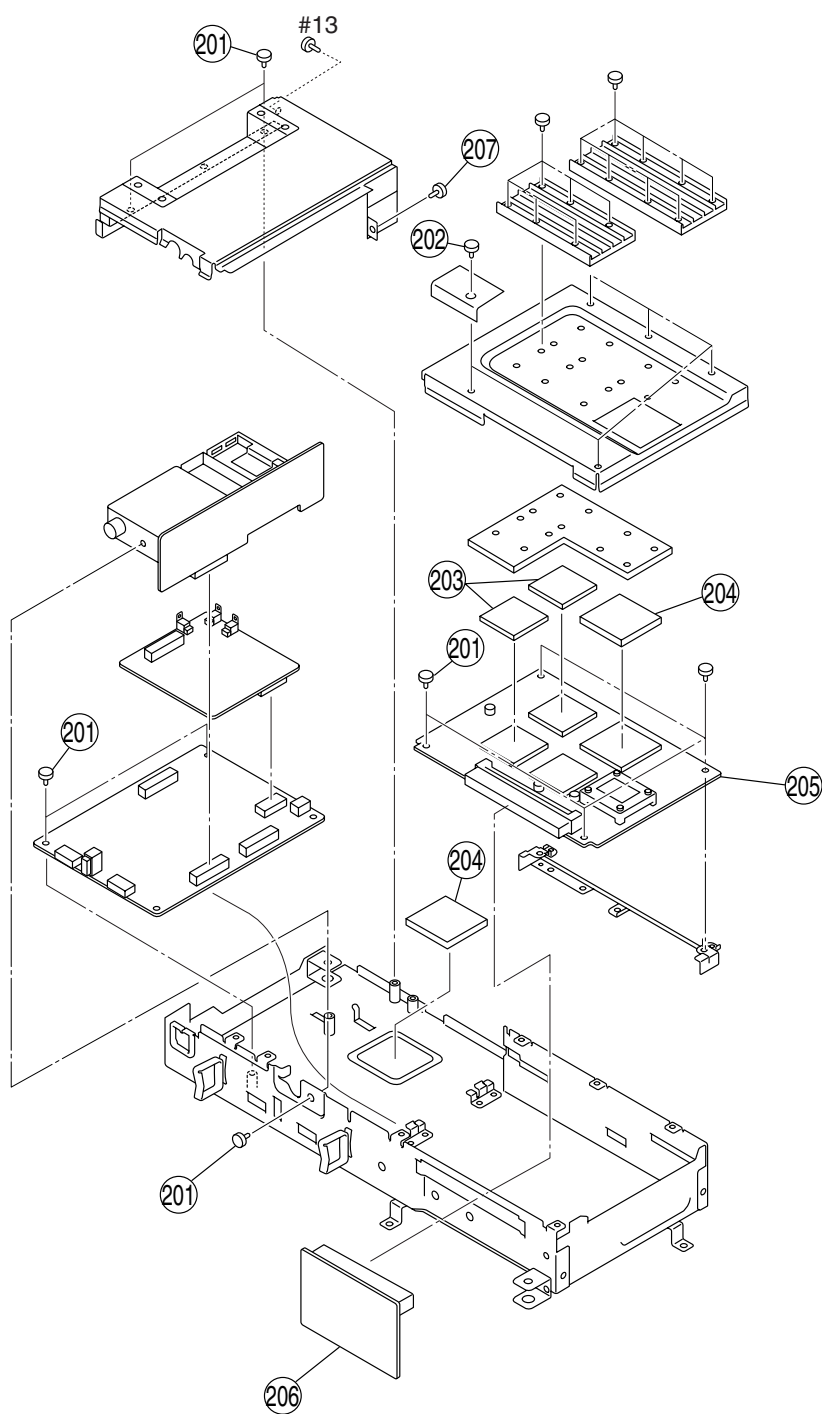

REF. No.	PART No.	DESCRIPTIONRE	MARK
201	4-382-854-51	SCREW (M3X6), P, SW (+)	
202	4-100-497-01	SCREW	
203	* 4-097-803-01	SHEET, RADIATION	
204	* 4-097-803-11	SHEET, RADIATION	
205	* A-1302-793-A	DIC2 BOARD, COMPLETE	


REF. No.	PART No.	DESCRIPTIONRE	MARK
206	* A-1405-753-B	IF BOARD, MOUNT	
207	4-101-122-01	SCREW M3.5 +PTP	
#13	7-685-645-79	SCREW +BVTP 3X6 TYPE2 TT(B)	

4-6. PACKING MATERIALS FOR DISPLAY UNIT (PDM-6110)

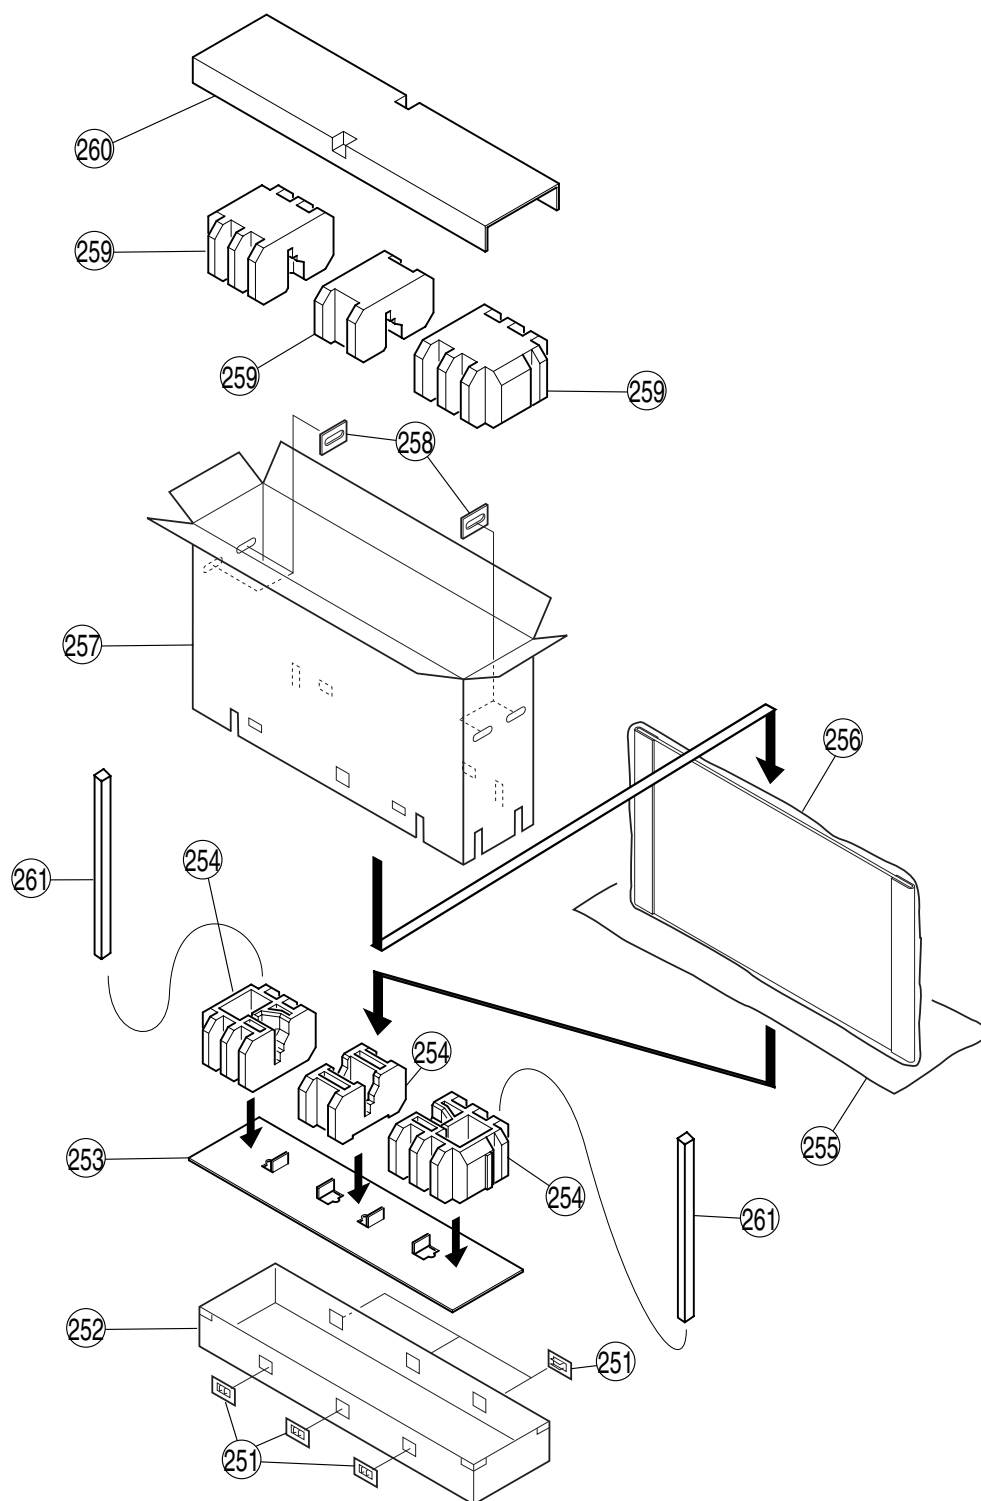

REF. No.	PART No.	DESCRIPTIONRE	MARK	REF. No.	PART No.	DESCRIPTIONRE	MARK
251	* 4-030-895-01	JOINT		256	* 4-096-770-01	BAG, PROTECTION	
252	* 4-096-766-01	TRAY		257	* 4-099-772-01	INDIVIDUAL CARTON	
253	* 4-096-765-01	BOARD, BOTTOM		258	* 4-067-995-01	HANDLE (B)	
254	* 4-096-769-01	CUSHION (LOWER)		259	* 4-096-768-01	CUSHION (UPPER)	
255	* 4-096-771-01	SHEET, PROTECTION		260	* 4-096-764-01	BOARD, TOP	
				261	4-097-856-01	BAR (V)	

4-7. PACKING MATERIALS FOR DISPLAY UNIT (MBD-XBR950)

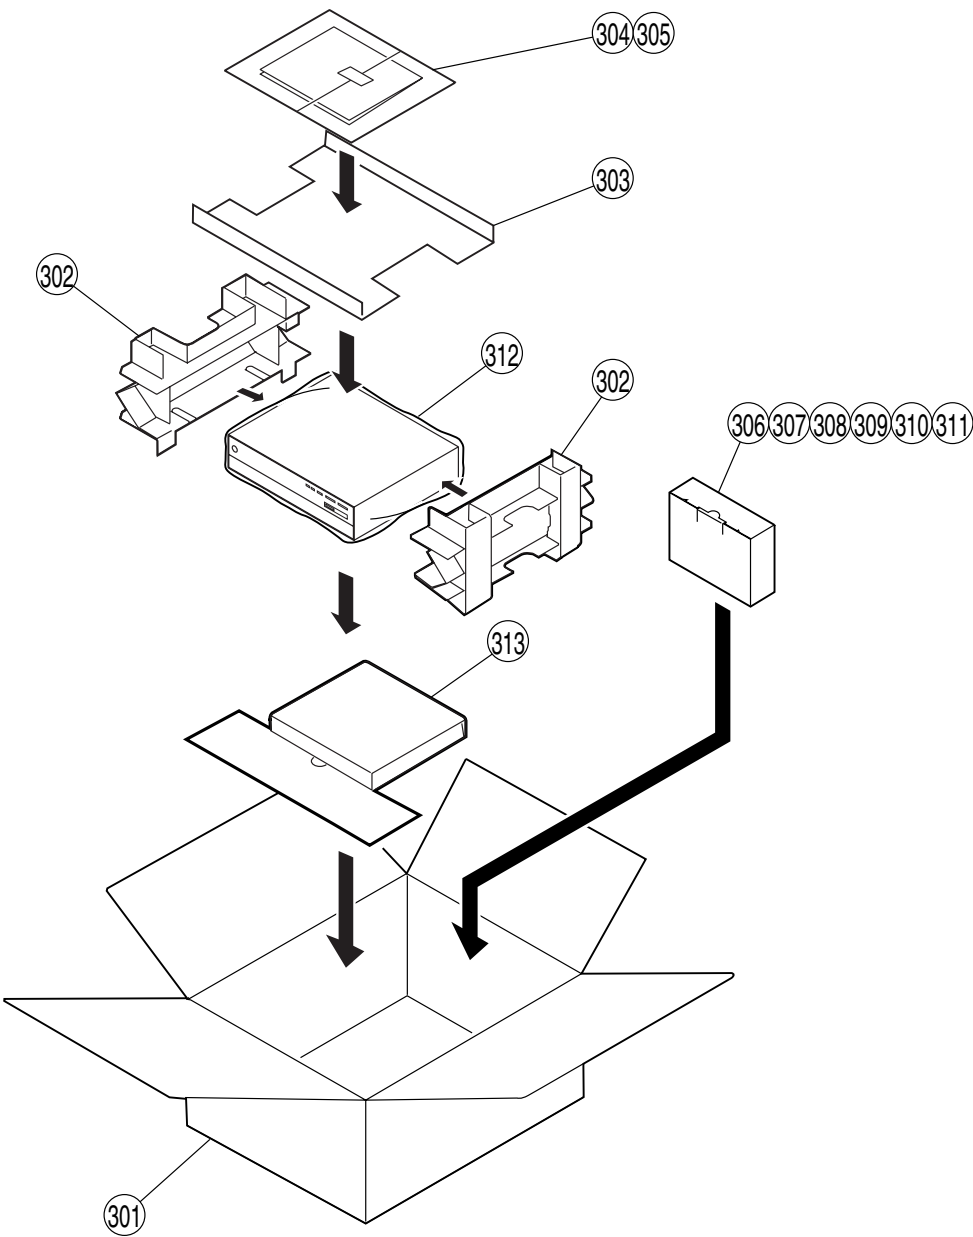

REF. No.	PART No.	DESCRIPTIONRE	MARK
301	* 4-098-727-02	INDIVIDUAL CARTON	
302	* 4-098-004-01	CUSHION	
303	* 4-098-005-01	SPACER, (A)	
304	4-098-430-12	MANUAL, INSTRUCTION (ENGLISH)	
	4-098-430-22	MANUAL, INSTRUCTION (FRENCH)	
	4-098-430-32	MANUAL, INSTRUCTION (SPANISH)	
305	X-4040-886-1	ASSY, CLEANING CLOTH	

REF. No.	PART No.	DESCRIPTIONRE	MARK
306	* 4-098-007-01	BOX, ACCESSORY	
307	1-478-305-11	REMOTE COMMANDER (RM-Y1000)	
308	1-765-167-71	CABLE, COAXIAL (WITH (F) PLUG)	
309	△ 1-823-863-22	CORD, POWER	
310	1-824-831-13	CORD WITH CONNECTOR	
311	2-990-242-01	HOLDER (B), PLUG	
312	* 3-704-297-01	BAG (STANDARD), PROTECTION	
313	* 4-098-006-01	SPACER, (B)	

SECTION 5

ELECTRICAL PARTS LIST

NOTE:

The components identified \triangle marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque \triangle sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

RESISTORS

- All resistors are in ohms
- F : nonflammable

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1		G1	CAPACITOR		C2001	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2		G1	CAPACITOR		C2002	1-164-344-11	CERAMIC CHIP 0.068UF 10.00% 25V		
3		G1	CAPACITOR		C2003	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
4		G1	CAPACITOR		C2004	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
5		G1	CAPACITOR		C2005	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
6		G1	CAPACITOR		C2006	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
7		G1	CAPACITOR		C2007	1-165-531-11	MYLAR 1UF 10 275V		
8		G1	CAPACITOR		C2008	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
9		G1	CAPACITOR		C2009	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
10		G1	CAPACITOR		C2010	1-163-005-91	CERAMIC CHIP 470PF 10.00% 50V		
11		G1	CAPACITOR		C2011	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
12		G1	CAPACITOR		C2012	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V		
13		G1	CAPACITOR		C2013	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
14		G1	CAPACITOR		C2014	1-117-227-11	MYLAR 1UF 10% 450V		
15		G1	CAPACITOR		C2015	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
16		G1	CAPACITOR		C2017	1-126-947-11	ELECT 47UF 20.00% 35V		
17		G1	CAPACITOR		C2018	1-117-227-11	MYLAR 1UF 10% 450V		
18		G1	CAPACITOR		C2019	1-117-227-11	MYLAR 1UF 10% 450V		
19		G1	CAPACITOR		C2020	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
20		G1	CAPACITOR		C2021	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
21		G1	CAPACITOR		C2022	1-104-666-11	ELECT 220UF 20.00% 25V		
22		G1	CAPACITOR		C2023	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
23		G1	CAPACITOR		C2024	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
24		G1	CAPACITOR		C2026	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
25		G1	CAPACITOR		C2028	1-163-275-11	CERAMIC CHIP 0.001UF 5.00% 50V		
26		G1	CAPACITOR		C2029	1-104-760-11	CERAMIC CHIP 0.047UF 10.00% 50V		
27		G1	CAPACITOR		C2030	1-100-613-81	CERAMIC 470PF 5% 1KV		
28		G1	CAPACITOR		C2032	1-163-145-00	CERAMIC CHIP 0.0015UF 5.00% 50V		
29		G1	CAPACITOR		C2033	1-100-613-81	CERAMIC 470PF 5% 1KV		
30		G1	CAPACITOR		C2034	1-100-738-11	ELECT 390UF 20% 450V		
31		G1	CAPACITOR		C2035	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
32		G1	CAPACITOR		C2036	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
33		G1	CAPACITOR		C2037	1-100-738-11	ELECT 390UF 20% 450V		
34		G1	CAPACITOR		C2038	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
35		G1	CAPACITOR		C2039	1-100-738-11	ELECT 390UF 20% 450V		
36		G1	CAPACITOR		C2040	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
37		G1	CAPACITOR		C2041	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
38		G1	CAPACITOR		C2042	1-126-947-11	ELECT 47UF 20.00% 35V		
39		G1	CAPACITOR		C2043	1-126-964-11	ELECT 10UF 20.00% 50V		
40		G1	CAPACITOR		C2044	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
41		G1	CAPACITOR		C2047	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
42		G1	CAPACITOR		C2048	1-126-960-11	ELECT 1UF 20.00% 50V		
43		G1	CAPACITOR		C2049	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
44		G1	CAPACITOR		C2050	1-126-948-11	ELECT 100UF 20.00% 35V		
45		G1	CAPACITOR		C2052	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
46		G1	CAPACITOR		C2053	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
47		G1	CAPACITOR		C2054	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
48		G1	CAPACITOR		C2055	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
49		G1	CAPACITOR		C2209	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
50		G1	CAPACITOR		C2325	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
51		G1	CONNECTOR	*	CN2001	1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P		
52		G1	CONNECTOR	*	CN2002	1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P		
53		G1	CONNECTOR	*	CN2003	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P		
54		G1	CONNECTOR	*	CN2004	1-564-704-11	PIN, CONNECTOR (SMALL TYPE) 2P		
55		G1	CONNECTOR	*	CN2005	1-580-843-11	PIN, CONNECTOR (POWER)		
56		G1	DIODE		D2001	8-719-083-83	DIODE UDZS-TE17-15B		
57		G1	DIODE		D2002	8-719-304-63	DIODE RM11C		
58		G1	DIODE		D2003	8-719-404-50	DIODE MA111-TX		
59		G1	DIODE		D2004	8-719-073-32	DIODE D25XB60		
60		G1	DIODE		D2005	8-719-071-94	DIODE HRU0103ATRF		
61		G1	DIODE		D2006	8-719-071-94	DIODE HRU0103ATRF		
62		G1	DIODE		D2008	8-719-404-50	DIODE MA111-TX		
63		G1	DIODE		D2009	8-719-304-63	DIODE RM11C		
64		G1	DIODE		D2010	8-719-056-84	DIODE UDZ-TE-17-7.5B		
65		G1	DIODE		D2011	8-719-071-94	DIODE HRU0103ATRF		
66		G1	DIODE		D2014	8-719-304-63	DIODE RM11C		
67		G1	DIODE		D2016	6-500-407-01	DIODE SF20L60U-4015		
68		G1	DIODE		D2019	8-719-404-50	DIODE MA111-TX		
69		G1	DIODE		D2020	8-719-404-50	DIODE MA111-TX		
70		G1	DIODE		D2021	8-719-083-83	DIODE UDZS-TE17-15B		
71		G1	DIODE		D2022	8-719-083-83	DIODE UDZS-TE17-15B		
72		G1	DIODE		D2023	8-719-083-83	DIODE UDZS-TE17-15B		
73		G1	DIODE		D2024	8-719-056-84	DIODE UDZ-TE-17-7.5B		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
74		G1	IC		IC2001	6-703-132-01	IC UC3854BN		
75		G1	IC		IC2002	8-759-058-50	IC XRA10324AF		
76		G1	IC		IC2003	6-704-924-01	IC PQ12DZ5UJ00H		
77		G1	IC		IC2004	8-759-682-42	IC MM1431ATT		
78		G1	COIL		L2001	1-456-563-12	INDUCTOR 100UH		
79		G1	COIL		L2002	1-456-531-11	INDUCTOR 58UH		
80		G1	COIL		L2003	1-456-531-11	INDUCTOR 58UH		
81		G1	PHOTO COUPLER		PH2202	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
82		G1	TRANSISTOR		Q2001	8-729-040-89	TRANSISTOR 2SK1590-T1B		
83		G1	TRANSISTOR		Q2003	8-729-820-86	TRANSISTOR 2SB1121-ST		
84		G1	TRANSISTOR		Q2004	6-550-549-01	TRANSISTOR DTC114EUAFT106		
85		G1	TRANSISTOR		Q2005	8-729-807-17	TRANSISTOR 2SD1621-S		
86		G1	TRANSISTOR		Q2006	8-729-905-35	TRANSISTOR 2SC4081-R		
87		G1	TRANSISTOR		Q2007	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
88		G1	TRANSISTOR		Q2008	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
89		G1	TRANSISTOR		Q2009	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
90		G1	TRANSISTOR		Q2011	6-550-549-01	TRANSISTOR DTC114EUAFT106		
91		G1	TRANSISTOR		Q2012	6-550-549-01	TRANSISTOR DTC114EUAFT106		
92		G1	TRANSISTOR		Q2013	8-729-905-35	TRANSISTOR 2SC4081-R		
93		G1	TRANSISTOR		Q2015	8-729-023-22	TRANSISTOR 2SD2114K		
94		G1	TRANSISTOR		Q2017	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
95		G1	TRANSISTOR		Q2018	6-550-549-01	TRANSISTOR DTC114EUAFT106		
96		G1	TRANSISTOR		Q2019	8-729-905-35	TRANSISTOR 2SC4081-R		
97		G1	TRANSISTOR		Q2020	6-550-548-01	TRANSISTOR DTA114EUAFT106		
98		G1	TRANSISTOR		Q2024	8-729-905-35	TRANSISTOR 2SC4081-R		
99		G1	TRANSISTOR		Q2202	8-729-905-35	TRANSISTOR 2SC4081-R		
100		G1	RESISTOR		R2001	1-216-105-91	RES-CHIP 220K 5% 1/10W		
101		G1	RESISTOR		R2002	1-245-473-21	METAL 300K 1% 1/4W		
102		G1	RESISTOR		R2003	1-245-473-21	METAL 300K 1% 1/4W		
103		G1	RESISTOR		R2004	1-245-472-21	METAL 270K 1% 1/4W		
104		G1	RESISTOR		R2005	1-216-061-91	RES-CHIP 3.3K 5% 1/10W		
105		G1	RESISTOR		R2006	1-245-473-21	METAL 300K 1% 1/4W		
106		G1	RESISTOR		R2007	1-245-473-21	METAL 300K 1% 1/4W		
107		G1	RESISTOR		R2008	1-245-472-21	METAL 270K 1% 1/4W		
108		G1	RESISTOR		R2009	1-216-061-91	RES-CHIP 3.3K 5% 1/10W		
109		G1	RESISTOR		R2010	1-216-699-91	METAL CHIP 100K 0.5% 1/10W		
110		G1	RESISTOR		R2011	1-216-079-00	RES-CHIP 18K 5% 1/10W		
111		G1	RESISTOR		R2012	1-245-473-21	METAL 300K 1% 1/4W		
112		G1	RESISTOR		R2013	1-245-473-21	METAL 300K 1% 1/4W		
113		G1	RESISTOR		R2014	1-245-472-21	METAL 270K 1% 1/4W		
114		G1	RESISTOR		R2016	1-216-057-00	RES-CHIP 2.2K 5% 1/10W		
115		G1	RESISTOR		R2017	1-216-650-11	METAL CHIP 910 0.5% 1/10W		
116		G1	RESISTOR		R2018	1-216-121-11	RES-CHIP 1M 5% 1/10W		
117		G1	RESISTOR		R2019	1-216-075-00	RES-CHIP 12K 5% 1/10W		
118		G1	RESISTOR		R2020	1-216-067-00	RES-CHIP 5.6K 5% 1/10W		
119		G1	RESISTOR		R2021	1-216-121-11	RES-CHIP 1M 5% 1/10W		
120		G1	RESISTOR		R2023	1-216-081-00	RES-CHIP 22K 5% 1/10W		
121		G1	RESISTOR		R2024	1-202-972-61	FUSIBLE 1 5% 1/4W		
122		G1	RESISTOR		R2025	1-243-669-31	CEMENTED 0.05 5% 5W		
123		G1	RESISTOR		R2026	1-243-669-31	CEMENTED 0.05 5% 5W		
124		G1	RESISTOR		R2027	1-216-073-91	RES-CHIP 10K 5% 1/10W		
125		G1	RESISTOR		R2029	1-249-393-11	CARBON 10 5% 1/4W		
126		G1	RESISTOR		R2031	1-216-057-00	RES-CHIP 2.2K 5% 1/10W		
127		G1	RESISTOR		R2032	1-249-393-11	CARBON 10 5% 1/4W		
128		G1	RESISTOR		R2033	1-249-393-11	CARBON 10 5% 1/4W		
129		G1	RESISTOR		R2034	1-216-073-91	RES-CHIP 10K 5% 1/10W		
130		G1	RESISTOR		R2035	1-249-405-11	CARBON 100 5% 1/4W		
131		G1	RESISTOR		R2036	1-249-393-11	CARBON 10 5% 1/4W		
132		G1	RESISTOR		R2037	1-216-081-00	RES-CHIP 22K 5% 1/10W		
133		G1	RESISTOR		R2038	1-216-073-91	RES-CHIP 10K 5% 1/10W		
134		G1	RESISTOR		R2039	1-216-105-91	RES-CHIP 220K 5% 1/10W		
135		G1	RESISTOR		R2041	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
136		G1	RESISTOR		R2042	1-216-081-00	RES-CHIP 22K 5% 1/10W		
137		G1	RESISTOR		R2044	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
138		G1	RESISTOR		R2045	1-216-081-00	RES-CHIP 22K 5% 1/10W		
139		G1	RESISTOR		R2046	1-249-393-11	CARBON 10 5% 1/4W		
140		G1	RESISTOR		R2047	1-216-073-91	RES-CHIP 10K 5% 1/10W		
141		G1	RESISTOR		R2048	1-245-473-21	METAL 300K 1% 1/4W		
142		G1	RESISTOR		R2049	1-245-473-21	METAL 300K 1% 1/4W		
143		G1	RESISTOR		R2050	1-245-473-21	METAL 300K 1% 1/4W		
144		G1	RESISTOR		R2054	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W		
145		G1	RESISTOR		R2055	1-208-801-11	METAL CHIP 6.2K 0.5% 1/10W		
146		G1	RESISTOR		R2056	1-215-882-00	METAL OXIDE 22 5% 2W		

No.	#	Board	Type	Δ/Δ^*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
147		G1	RESISTOR		R2058	1-216-077-91	RES-CHIP 15K 5% 1/10W		
148		G1	RESISTOR		R2061	1-216-049-11	RES-CHIP 1K 5% 1/10W		
149		G1	RESISTOR		R2065	1-245-473-21	METAL 300K 1% 1/4W		
150		G1	RESISTOR		R2066	1-245-473-21	METAL 300K 1% 1/4W		
151		G1	RESISTOR		R2067	1-245-473-21	METAL 300K 1% 1/4W		
152		G1	RESISTOR		R2070	1-216-685-11	METAL CHIP 27K 0.5% 1/10W		
153		G1	RESISTOR		R2071	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
154		G1	RESISTOR		R2074	1-216-089-91	RES-CHIP 47K 5% 1/10W		
155		G1	RESISTOR		R2076	1-216-049-11	RES-CHIP 1K 5% 1/10W		
156		G1	RESISTOR		R2077	1-216-049-11	RES-CHIP 1K 5% 1/10W		
157		G1	RESISTOR		R2078	1-216-049-11	RES-CHIP 1K 5% 1/10W		
158		G1	RESISTOR		R2079	1-216-073-91	RES-CHIP 10K 5% 1/10W		
159		G1	RESISTOR		R2080	1-260-312-11	CARBON 47 5% 1/2W		
160		G1	RESISTOR		R2081	1-260-308-11	CARBON 22 5% 1/2W		
161		G1	RESISTOR		R2082	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
162		G1	RESISTOR		R2083	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
163		G1	RESISTOR		R2084	1-216-049-11	RES-CHIP 1K 5% 1/10W		
164		G1	RESISTOR		R2085	1-260-316-51	CARBON 100 5% 1/2W		
165		G1	RESISTOR		R2087	1-216-089-91	RES-CHIP 47K 5% 1/10W		
166		G1	RESISTOR		R2088	1-216-105-91	RES-CHIP 220K 5% 1/10W		
167		G1	RESISTOR		R2089	1-216-001-00	RES-CHIP 10 5% 1/10W		
168		G1	RESISTOR		R2090	1-216-073-91	RES-CHIP 10K 5% 1/10W		
169		G1	RESISTOR		R2091	1-217-781-11	FUSIBLE 2.2 5% 5W		
170		G1	RESISTOR		R2092	1-216-073-91	RES-CHIP 10K 5% 1/10W		
171		G1	RESISTOR		R2093	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
172		G1	RESISTOR		R2094	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
173		G1	RESISTOR		R2095	1-202-962-11	CEMENTED 3.3 5% 10W		
174		G1	RESISTOR		R2096	1-202-962-11	CEMENTED 3.3 5% 10W		
175		G1	RESISTOR		R2097	1-216-635-11	METAL CHIP 220 0.5% 1/10W		
176		G1	RESISTOR		R2098	1-208-798-11	METAL CHIP 4.7K 0.5% 1/10W		
177		G1	RESISTOR		R2099	1-216-073-91	RES-CHIP 10K 5% 1/10W		
178		G1	RESISTOR		R2100	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W		
179		G1	RESISTOR		R2104	1-216-073-91	RES-CHIP 10K 5% 1/10W		
180		G1	RESISTOR		R2106	1-208-804-11	METAL CHIP 8.2K 0.5% 1/10W		
181		G1	RESISTOR		R2107	1-216-081-00	RES-CHIP 22K 5% 1/10W		
182		G1	RESISTOR		R2108	1-216-073-91	RES-CHIP 10K 5% 1/10W		
183		G1	RESISTOR		R2109	1-216-121-11	RES-CHIP 1M 5% 1/10W		
184		G1	RESISTOR		R2110	1-216-121-11	RES-CHIP 1M 5% 1/10W		
185		G1	RESISTOR		R2212	1-216-089-91	RES-CHIP 47K 5% 1/10W		
186		G1	RESISTOR		R2216	1-216-073-91	RES-CHIP 10K 5% 1/10W		
187		G1	RESISTOR		R2223	1-216-073-91	RES-CHIP 10K 5% 1/10W		
188		G1	VARIABLE RESISTOR		RV2001	1-241-762-11	RES, ADJ, CARBON 2.2K		
189		G1	RELAY		RY2001	1-755-357-11	RELAY, AC POWER		
190		G1	CHIP CHCKER		TP2001	1-695-915-11	TAB (CONTACT)		
191		G1	CHIP CHCKER		TP2002	1-695-915-11	TAB (CONTACT)		
192		G2	CAPACITOR		C1001	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
193		G2	CAPACITOR		C1002	1-164-344-11	CERAMIC CHIP 0.068UF 10.00% 25V		
194		G2	CAPACITOR		C1003	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
195		G2	CAPACITOR		C1004	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
196		G2	CAPACITOR		C1005	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
197		G2	CAPACITOR		C1006	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
198		G2	CAPACITOR		C1007	1-165-530-11	MYLAR 0.47UF 10 275V		
199		G2	CAPACITOR		C1008	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
200		G2	CAPACITOR		C1009	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
201		G2	CAPACITOR		C1010	1-163-005-91	CERAMIC CHIP 470PF 10.00% 50V		
202		G2	CAPACITOR		C1011	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
203		G2	CAPACITOR		C1012	1-163-251-11	CERAMIC CHIP 100PF 5.00% 50V		
204		G2	CAPACITOR		C1013	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
205		G2	CAPACITOR		C1014	1-117-227-11	MYLAR 1UF 10% 450V		
206		G2	CAPACITOR		C1015	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
207		G2	CAPACITOR		C1017	1-126-947-11	ELECT 47UF 20.00% 35V		
208		G2	CAPACITOR		C1018	1-117-227-11	MYLAR 1UF 10% 450V		
209		G2	CAPACITOR		C1019	1-117-227-11	MYLAR 1UF 10.00% 450V		
210		G2	CAPACITOR		C1020	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
211		G2	CAPACITOR		C1021	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
212		G2	CAPACITOR		C1022	1-104-666-11	ELECT 220UF 20.00% 25V		
213		G2	CAPACITOR		C1023	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
214		G2	CAPACITOR		C1024	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
215		G2	CAPACITOR		C1026	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
216		G2	CAPACITOR		C1028	1-163-275-11	CERAMIC CHIP 0.001UF 5.00% 50V		
217		G2	CAPACITOR		C1029	1-104-760-11	CERAMIC CHIP 0.047UF 10.00% 50V		
218		G2	CAPACITOR		C1030	1-100-613-81	CERAMIC 470PF 5% 1KV		
219		G2	CAPACITOR		C1032	1-163-145-00	CERAMIC CHIP 0.0015UF 5.00% 50V		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
220		G2	CAPACITOR		C1033	1-100-613-81	CERAMIC 470PF 5% 1KV		
221		G2	CAPACITOR		C1034	1-117-752-11	ELECT(BLOCK) 330UF 20.00% 450V		
222		G2	CAPACITOR		C1035	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
223		G2	CAPACITOR		C1036	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
224		G2	CAPACITOR		C1038	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
225		G2	CAPACITOR		C1040	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
226		G2	CAPACITOR		C1041	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
227		G2	CAPACITOR		C1042	1-126-947-11	ELECT 47UF 20.00% 35V		
228		G2	CAPACITOR		C1043	1-126-964-11	ELECT 10UF 20.00% 50V		
229		G2	CAPACITOR		C1045	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
230		G2	CAPACITOR		C1046	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
231		G2	CAPACITOR		C1047	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
232		G2	CAPACITOR		C1048	1-126-960-11	ELECT 1UF 20.00% 50V		
233		G2	CAPACITOR		C1049	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
234		G2	CAPACITOR		C1050	1-126-948-11	ELECT 100UF 20.00% 35V		
235		G2	CAPACITOR		C1052	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
236		G2	CAPACITOR		C1053	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
237		G2	CAPACITOR		C1054	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
238		G2	CAPACITOR		C1055	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
239		G2	CAPACITOR		C1201	1-137-639-21	MYLAR 0.47UF 10% 450V		
240		G2	CAPACITOR		C1202	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
241		G2	CAPACITOR		C1203	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
242		G2	CAPACITOR		C1204	1-126-962-11	ELECT 3.3UF 20.00% 50V		
243		G2	CAPACITOR		C1205	1-126-951-11	ELECT 470UF 20.00% 35V		
244		G2	CAPACITOR		C1206	1-126-962-11	ELECT 3.3UF 20.00% 50V		
245		G2	CAPACITOR		C1207	1-163-275-11	CERAMIC CHIP 0.001UF 5.00% 50V		
246		G2	CAPACITOR		C1208	1-126-964-11	ELECT 10UF 20.00% 50V		
247		G2	CAPACITOR		C1209	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
248		G2	CAPACITOR		C1210	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
249		G2	CAPACITOR		C1211	1-136-165-00	FILM 0.1UF 5.00% 50V		
250		G2	CAPACITOR		C1212	1-126-947-11	ELECT 47UF 20.00% 35V		
251		G2	CAPACITOR		C1213	1-137-807-31	ELECT 100UF 20% 50V		
252		G2	CAPACITOR		C1214	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
253		G2	CAPACITOR		C1215	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
254		G2	CAPACITOR		C1216	1-165-608-11	FILM 15000PF 3% 800V		
255		G2	CAPACITOR		C1219	1-119-886-51	CERAMIC 470PF 10.00% 250V		
256		G2	CAPACITOR		C1220	1-137-807-31	ELECT 100UF 20% 50V		
257		G2	CAPACITOR		C1221	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
258		G2	CAPACITOR		C1301	1-128-955-31	ELECT 2200UF 20% 25V		
259		G2	CAPACITOR		C1302	1-128-955-31	ELECT 2200UF 20% 25V		
260		G2	CAPACITOR		C1303	1-107-899-11	ELECT 3300UF 20.00% 35V		
261		G2	CAPACITOR		C1304	1-165-736-31	ELECT 680UF 20% 25V		
262		G2	CAPACITOR		C1305	1-165-736-31	ELECT 680UF 20% 25V		
263		G2	CAPACITOR		C1306	1-165-736-31	ELECT 680UF 20% 25V		
264		G2	CAPACITOR		C1307	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
265		G2	CAPACITOR		C1308	1-128-945-31	ELECT 1000UF 20% 10V		
266		G2	CAPACITOR		C1309	1-107-888-11	ELECT 47UF 20.00% 25V		
267		G2	CAPACITOR		C1310	1-137-807-31	ELECT 100UF 20% 50V		
268		G2	CAPACITOR		C1311	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
269		G2	CAPACITOR		C1312	1-163-037-11	CERAMIC CHIP 0.022UF 10.00% 50V		
270		G2	CAPACITOR		C1313	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
271		G2	CAPACITOR		C1314	1-164-346-11	CERAMIC CHIP 1UF 16V		
272		G2	CAPACITOR		C1315	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
273		G2	CAPACITOR		C1316	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
274		G2	CAPACITOR		C1317	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
275		G2	CAPACITOR		C1318	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
276		G2	CAPACITOR		C1319	1-100-398-21	ELECT 270UF 20% 10V		
277		G2	CAPACITOR		C1320	1-128-945-31	ELECT 1000UF 20% 10V		
278		G2	CAPACITOR		C1322	1-107-888-11	ELECT 47UF 20.00% 25V		
279		G2	CAPACITOR		C1325	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
280		G2	CAPACITOR		C1326	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
281		G2	CAPACITOR		C1327	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
282		G2	CAPACITOR		C1328	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
283		G2	CAPACITOR		C1329	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
284		G2	CAPACITOR		C1330	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
285		G2	CAPACITOR		C1331	1-107-888-11	ELECT 47UF 20.00% 25V		
286		G2	CAPACITOR		C1332	1-107-888-11	ELECT 47UF 20.00% 25V		
287		G2	CAPACITOR		C1335	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
288		G2	CAPACITOR		C1336	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
289		G2	CAPACITOR		C1337	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
290		G2	CAPACITOR		C1401	1-117-227-11	MYLAR 1UF 10% 450V		
291		G2	CAPACITOR		C1402	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
292		G2	CAPACITOR		C1403	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		

No.	#	Board	Type	$\Delta/\%$	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
293		G2	CAPACITOR		C1404	1-126-965-91	ELECT 22UF 20.00% 50V		
294		G2	CAPACITOR		C1405	1-126-967-11	ELECT 47UF 20.00% 50V		
295		G2	CAPACITOR		C1406	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
296		G2	CAPACITOR		C1407	1-163-275-11	CERAMIC CHIP 0.001UF 5.00% 50V		
297		G2	CAPACITOR		C1408	1-126-964-11	ELECT 10UF 20.00% 50V		
298		G2	CAPACITOR		C1409	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
299		G2	CAPACITOR		C1410	1-137-194-81	FILM 0.47UF 5.00% 50V		
300		G2	CAPACITOR		C1411	1-136-165-00	FILM 0.1UF 5.00% 50V		
301		G2	CAPACITOR		C1412	1-126-947-11	ELECT 47UF 20.00% 35V		
302		G2	CAPACITOR		C1413	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
303		G2	CAPACITOR		C1414	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
304		G2	CAPACITOR		C1415	1-100-400-11	FILM 39000PF 3% 1KV		
305		G2	CAPACITOR		C1417	1-119-886-51	CERAMIC 470PF 10.00% 250V		
306		G2	CAPACITOR		C1501	1-165-776-31	ELECT 680UF 20% 100V		
307		G2	CAPACITOR		C1502	1-102-244-00	CERAMIC 220PF 10.00% 500V		
308		G2	CAPACITOR		C1503	1-165-776-31	ELECT 680UF 20% 100V		
309		G2	CAPACITOR		C1504	1-100-727-21	ELECT(BLOCK) 3900UF 20% 100V		
310		G2	CAPACITOR		C1505	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V		
311		G2	CAPACITOR		C1506	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
312		G2	CAPACITOR		C1507	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
313		G2	CAPACITOR		C1508	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
314		G2	CAPACITOR		C1601	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
315		G2	CAPACITOR		C1602	1-117-228-71	MYLAR 2.2UF 10.00% 450V		
316		G2	CAPACITOR		C1603	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
317		G2	CAPACITOR		C1604	1-126-965-91	ELECT 22UF 20.00% 50V		
318		G2	CAPACITOR		C1606	1-126-967-11	ELECT 47UF 20.00% 50V		
319		G2	CAPACITOR		C1607	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
320		G2	CAPACITOR		C1608	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
321		G2	CAPACITOR		C1609	1-163-275-11	CERAMIC CHIP 0.001UF 5.00% 50V		
322		G2	CAPACITOR		C1610	1-126-964-11	ELECT 10UF 20.00% 50V		
323		G2	CAPACITOR		C1611	1-137-194-81	FILM 0.47UF 5.00% 50V		
324		G2	CAPACITOR		C1612	1-136-165-00	FILM 0.1UF 5.00% 50V		
325		G2	CAPACITOR		C1613	1-126-947-11	ELECT 47UF 20.00% 35V		
326		G2	CAPACITOR		C1614	1-100-613-81	CERAMIC 470PF 5% 1KV		
327		G2	CAPACITOR		C1615	1-100-613-81	CERAMIC 470PF 5% 1KV		
328		G2	CAPACITOR		C1616	1-100-401-11	FILM 47000PF 3% 1KV		
329		G2	CAPACITOR		C1617	1-100-401-11	FILM 47000PF 3% 1KV		
330		G2	CAPACITOR		C1619	1-119-886-51	CERAMIC 470PF 10.00% 250V		
331		G2	CAPACITOR		C1620	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
332		G2	CAPACITOR		C1621	1-164-005-11	CERAMIC CHIP 0.47UF 25V		
333		G2	CAPACITOR		C1701	1-100-728-11	CAP, ELECT 1500MF		
334		G2	CAPACITOR		C1702	1-102-244-00	CERAMIC 220PF 10.00% 500V		
335		G2	CAPACITOR		C1703	1-163-017-00	CERAMIC CHIP 0.0047UF 10.00% 50V		
336		G2	CAPACITOR		C1704	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
337		G2	CAPACITOR		C1705	1-100-728-11	CAP, ELECT 1500MF		
338		G2	CAPACITOR		C1706	1-100-728-11	CAP, ELECT 1500MF		
339		G2	CAPACITOR		C1707	1-100-728-11	CAP, ELECT 1500MF		
340		G2	CAPACITOR		C1708	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
341		G2	CAPACITOR		C1709	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
342		G2	CAPACITOR		C1710	1-100-728-11	CAP, ELECT 1500MF		
343		G2	CAPACITOR		C1711	1-126-965-91	ELECT 22UF 20.00% 50V		
344		G2	CAPACITOR		C1712	1-126-965-91	ELECT 22UF 20.00% 50V		
345		G2	CAPACITOR		C1713	1-163-235-11	CERAMIC CHIP 22PF 5.00% 50V		
346		G2	CAPACITOR		C1801	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
347		G2	CAPACITOR		C1802	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
348		G2	CAPACITOR		C1803	1-165-319-11	CERAMIC CHIP 0.1UF 50V		
349		G2	CAPACITOR		C1804	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
350		G2	CAPACITOR		C1805	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
351		G2	CAPACITOR		C1806	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
352		G2	CAPACITOR		C1807	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
353		G2	CAPACITOR		C1808	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
354		G2	CAPACITOR		C1809	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
355		G2	CAPACITOR		C1810	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
356		G2	CAPACITOR		C1812	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
357		G2	CAPACITOR		C1813	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
358		G2	CONNECTOR	*	CN1001	1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P		
359		G2	CONNECTOR	*	CN1002	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P		
360		G2	CONNECTOR	*	CN1004	1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P		
361		G2	CONNECTOR	*	CN1005	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P		
362		G2	CONNECTOR	*	CN1006	1-766-175-11	PIN, CONNECTOR (PC BOARD) 5P		
363		G2	CONNECTOR	*	CN1007	1-564-715-11	PIN, CONNECTOR (SMALL TYPE) 13P		
364		G2	CONNECTOR	*	CN1008	1-580-837-11	PIN, CONNECTOR (PC BOARD) 3P		
365		G2	CONNECTOR	*	CN1009	1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
366		G2	CONNECTOR	*	CN1010	1-766-176-11	PIN, CONNECTOR (PC BOARD) 6P		
367		G2	CONNECTOR	*	CN1011	1-770-291-11	PIN, CONNECTOR (PC BOARD) 7P		
368		G2	DIODE		D1001	8-719-083-83	DIODE UDZS-TE17-15B		
369		G2	DIODE		D1002	8-719-304-63	DIODE RM11C		
370		G2	DIODE		D1003	8-719-404-50	DIODE MA111-TX		
371		G2	DIODE		D1004	8-719-054-89	DIODE D15XB60		
372		G2	DIODE		D1005	8-719-071-94	DIODE HRU0103ATRF		
373		G2	DIODE		D1006	8-719-071-94	DIODE HRU0103ATRF		
374		G2	DIODE		D1008	8-719-404-50	DIODE MA111-TX		
375		G2	DIODE		D1009	8-719-304-63	DIODE RM11C		
376		G2	DIODE		D1010	8-719-056-84	DIODE UDZ-TE-17-7.5B		
377		G2	DIODE		D1011	8-719-071-94	DIODE HRU0103ATRF		
378		G2	DIODE		D1013	8-719-041-97	DIODE MA113-(TX)		
379		G2	DIODE		D1014	8-719-304-63	DIODE RM11C		
380		G2	DIODE		D1016	6-500-407-01	DIODE SF20L60U-4015		
381		G2	DIODE		D1020	8-719-404-50	DIODE MA111-TX		
382		G2	DIODE		D1021	8-719-083-83	DIODE UDZS-TE17-15B		
383		G2	DIODE		D1024	8-719-056-84	DIODE UDZ-TE-17-7.5B		
384		G2	DIODE		D1201	8-719-056-85	DIODE UDZ-TE-17-8.2B		
385		G2	DIODE		D1204	8-719-404-50	DIODE MA111-TX		
386		G2	DIODE		D1205	8-719-979-64	DIODE UF4005PKG23		
387		G2	DIODE		D1206	8-719-083-83	DIODE UDZS-TE17-15B		
388		G2	DIODE		D1207	8-719-083-83	DIODE UDZS-TE17-15B		
389		G2	DIODE		D1208	8-719-063-73	DIODE D1NL20U-TR		
390		G2	DIODE		D1209	8-719-404-50	DIODE MA111-TX		
391		G2	DIODE		D1211	8-719-063-73	DIODE D1NL20U-TR		
392		G2	DIODE		D1301	8-719-050-21	DIODE FCQ20A04		
393		G2	DIODE		D1302	8-719-052-92	DIODE D10SBS4F		
394		G2	DIODE		D1303	8-719-078-04	DIODE EC31QS03L-TE12L		
395		G2	DIODE		D1304	8-719-063-73	DIODE D1NL20U-TR		
396		G2	DIODE		D1306	8-719-404-50	DIODE MA111-TX		
397		G2	DIODE		D1307	8-719-041-97	DIODE MA113-(TX)		
398		G2	DIODE		D1308	8-719-041-97	DIODE MA113-(TX)		
399		G2	DIODE		D1309	8-719-041-97	DIODE MA113-(TX)		
400		G2	DIODE		D1310	8-719-404-50	DIODE MA111-TX		
401		G2	DIODE		D1311	8-719-078-04	DIODE EC31QS03L-TE12L		
402		G2	DIODE		D1313	8-719-404-50	DIODE MA111-TX		
403		G2	DIODE		D1314	8-719-404-50	DIODE MA111-TX		
404		G2	DIODE		D1315	8-719-160-29	DIODE RD6.2FB2		
405		G2	DIODE		D1316	8-719-404-50	DIODE MA111-TX		
406		G2	DIODE		D1318	8-719-083-83	DIODE UDZS-TE17-15B		
407		G2	DIODE		D1319	8-719-083-83	DIODE UDZS-TE17-15B		
408		G2	DIODE		D1320	8-719-160-20	DIODE RD4.7FB2		
409		G2	DIODE		D1321	8-719-056-85	DIODE UDZ-TE-17-8.2B		
410		G2	DIODE		D1401	8-719-404-50	DIODE MA111-TX		
411		G2	DIODE		D1404	8-719-979-64	DIODE UF4005PKG23		
412		G2	DIODE		D1407	8-719-083-83	DIODE UDZS-TE17-15B		
413		G2	DIODE		D1408	8-719-083-83	DIODE UDZS-TE17-15B		
414		G2	DIODE		D1501	8-719-054-51	DIODE D8LC20U-4012		
415		G2	DIODE		D1502	8-719-056-84	DIODE UDZ-TE-17-7.5B		
416		G2	DIODE		D1503	8-719-059-50	DIODE MA3J142D0LSO		
417		G2	DIODE		D1505	8-719-404-50	DIODE MA111-TX		
418		G2	DIODE		D1602	8-719-083-82	DIODE UDZS-TE17-12B		
419		G2	DIODE		D1605	8-719-979-64	DIODE UF4005PKG23		
420		G2	DIODE		D1606	8-719-041-97	DIODE MA113-(TX)		
421		G2	DIODE		D1607	8-719-041-97	DIODE MA113-(TX)		
422		G2	DIODE		D1608	8-719-083-83	DIODE UDZS-TE17-15B		
423		G2	DIODE		D1609	8-719-083-83	DIODE UDZS-TE17-15B		
424		G2	DIODE		D1620	8-719-056-84	DIODE UDZ-TE-17-7.5B		
425		G2	DIODE		D1701	6-500-439-01	DIODE D8LD40-F1		
426		G2	DIODE		D1702	6-500-439-01	DIODE D8LD40-F1		
427		G2	DIODE		D1703	8-719-059-50	DIODE MA3J142D0LSO		
428		G2	DIODE		D1704	8-719-083-83	DIODE UDZS-TE17-15B		
429		G2	DIODE		D1705	8-719-500-71	DIODE D8LC40		
430		G2	DIODE		D1706	8-719-404-50	DIODE MA111-TX		
431		G2	DIODE		D1801	8-719-404-50	DIODE MA111-TX		
432		G2	DIODE		D1803	8-719-059-50	DIODE MA3J142D0LSO		
433		G2	IC		IC1001	6-703-132-01	IC UC3854BN		
434		G2	IC		IC1002	8-759-058-50	IC XRA10324AF		
435		G2	IC		IC1003	6-704-924-01	IC PQ12DZ5UJ00H		
436		G2	IC		IC1004	8-759-682-42	IC MM1431ATT		
437		G2	IC		IC1201	8-759-670-30	IC MCZ3001D		
438		G2	IC		IC1301	8-759-682-42	IC MM1431ATT		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
439		G2	IC		IC1302	8-759-659-28	IC SI-8033S		
440		G2	IC		IC1303	8-759-521-90	IC PQ05DZ5U		
441		G2	IC		IC1304	8-759-682-42	IC MM1431ATT		
442		G2	IC		IC1305	8-759-085-67	IC LM339NS		
443		G2	IC		IC1306	6-703-182-01	IC IRU3037CS		
444		G2	IC		IC1307	8-759-058-50	IC XRA10324AF		
445		G2	IC		IC1401	6-703-355-01	IC MCZ3001DA		
446		G2	IC		IC1501	8-759-682-42	IC MM1431ATT		
447		G2	IC		IC1601	6-703-355-01	IC MCZ3001DA		
448		G2	IC		IC1602	8-759-682-42	IC MM1431ATT		
449		G2	IC		IC1701	8-759-682-42	IC MM1431ATT		
450		G2	IC		IC1702	6-704-924-01	IC PQ12DZ5UJ00H		
451		G2	IC		IC1801	8-759-682-42	IC MM1431ATT		
452		G2	IC		IC1802	8-759-085-67	IC LM339NS		
453		G2	COIL		L1001	1-416-489-11	INDUCTOR 143UH		
454		G2	COIL		L1002	1-456-530-11	INDUCTOR 170UH		
455		G2	COIL		L1201	1-406-667-11	INDUCTOR 220UH		
456		G2	COIL		L1303	1-406-659-11	INDUCTOR 10UH		
457		G2	COIL		L1304	1-412-525-31	INDUCTOR 10UH		
458		G2	COIL		L1305	1-406-978-11	INDUCTOR 150UH		
459		G2	COIL		L1306	1-456-561-11	INDUCTOR 22UH		
460		G2	COIL		L1401	1-406-665-11	INDUCTOR 100UH		
461		G2	COIL		L1601	1-406-977-61	INDUCTOR 100UH		
462		G2	COIL		L1701	1-456-566-11	INDUCTOR 3.7MH		
463		G2	PHOTO COUPLER		PH1201	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
464		G2	PHOTO COUPLER		PH1202	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
465		G2	PHOTO COUPLER		PH1401	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
466		G2	PHOTO COUPLER		PH1402	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
467		G2	PHOTO COUPLER		PH1601	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
468		G2	PHOTO COUPLER		PH1602	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
469		G2	PHOTO COUPLER		PH1603	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
470		G2	TRANSISTOR		Q1001	8-729-040-89	TRANSISTOR 2SK1590-T1B		
471		G2	TRANSISTOR		Q1003	8-729-820-86	TRANSISTOR 2SB1121-ST		
472		G2	TRANSISTOR		Q1004	6-550-549-01	TRANSISTOR DTC114EUAFT106		
473		G2	TRANSISTOR		Q1005	8-729-807-17	TRANSISTOR 2SD1621-S		
474		G2	TRANSISTOR		Q1006	8-729-905-35	TRANSISTOR 2SC4081-R		
475		G2	TRANSISTOR		Q1007	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
476		G2	TRANSISTOR		Q1011	6-550-549-01	TRANSISTOR DTC114EUAFT106		
477		G2	TRANSISTOR		Q1012	6-550-549-01	TRANSISTOR DTC114EUAFT106		
478		G2	TRANSISTOR		Q1013	8-729-905-35	TRANSISTOR 2SC4081-R		
479		G2	TRANSISTOR		Q1014	8-729-905-35	TRANSISTOR 2SC4081-R		
480		G2	TRANSISTOR		Q1016	6-550-548-01	TRANSISTOR DTA114EUAFT106		
481		G2	TRANSISTOR		Q1017	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
482		G2	TRANSISTOR		Q1018	6-550-549-01	TRANSISTOR DTC114EUAFT106		
483		G2	TRANSISTOR		Q1019	8-729-905-35	TRANSISTOR 2SC4081-R		
484		G2	TRANSISTOR		Q1020	6-550-548-01	TRANSISTOR DTA114EUAFT106		
485		G2	TRANSISTOR		Q1024	8-729-905-35	TRANSISTOR 2SC4081-R		
486		G2	TRANSISTOR		Q1201	8-729-905-35	TRANSISTOR 2SC4081-R		
487		G2	TRANSISTOR		Q1202	8-729-905-35	TRANSISTOR 2SC4081-R		
488		G2	TRANSISTOR		Q1203	8-729-053-10	TRANSISTOR 2SK2662(LBS2SONY)		
489		G2	TRANSISTOR		Q1204	8-729-053-10	TRANSISTOR 2SK2662(LBS2SONY)		
490		G2	TRANSISTOR		Q1303	6-550-548-01	TRANSISTOR DTA114EUAFT106		
491		G2	TRANSISTOR		Q1304	6-550-709-01	TRANSISTOR IRFR3707TR		
492		G2	TRANSISTOR		Q1305	8-729-054-35	TRANSISTOR HAT2070R-EL		
493		G2	TRANSISTOR		Q1306	6-550-548-01	TRANSISTOR DTA114EUAFT106		
494		G2	TRANSISTOR		Q1307	6-550-548-01	TRANSISTOR DTA114EUAFT106		
495		G2	TRANSISTOR		Q1308	6-550-380-01	TRANSISTOR IRFR5305TR		
496		G2	TRANSISTOR		Q1309	8-729-905-35	TRANSISTOR 2SC4081-R		
497		G2	TRANSISTOR		Q1401	6-550-549-01	TRANSISTOR DTC114EUAFT106		
498		G2	TRANSISTOR		Q1402	8-729-040-89	TRANSISTOR 2SK1590-T1B		
499		G2	TRANSISTOR		Q1405	6-550-526-11	TRANSISTOR 2SK2842(LBS2SONY)		
500		G2	TRANSISTOR		Q1406	6-550-526-11	TRANSISTOR 2SK2842(LBS2SONY)		
501		G2	TRANSISTOR		Q1501	6-550-118-01	TRANSISTOR IRLI3215-LF33		
502		G2	TRANSISTOR		Q1502	6-550-548-01	TRANSISTOR DTA114EUAFT106		
503		G2	TRANSISTOR		Q1503	8-729-905-35	TRANSISTOR 2SC4081-R		
504		G2	TRANSISTOR		Q1504	6-550-549-01	TRANSISTOR DTC114EUAFT106		
505		G2	TRANSISTOR		Q1601	6-550-549-01	TRANSISTOR DTC114EUAFT106		
506		G2	TRANSISTOR		Q1602	8-729-040-89	TRANSISTOR 2SK1590-T1B		
507		G2	TRANSISTOR		Q1603	8-729-905-35	TRANSISTOR 2SC4081-R		
508		G2	TRANSISTOR		Q1604	8-729-820-86	TRANSISTOR 2SB1121-ST		
509		G2	TRANSISTOR		Q1605	8-729-820-86	TRANSISTOR 2SB1121-ST		
510		G2	TRANSISTOR		Q1606	6-550-372-01	TRANSISTOR SPA20N60C3E8152		
511		G2	TRANSISTOR		Q1607	6-550-372-01	TRANSISTOR SPA20N60C3E8152		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
512		G2	TRANSISTOR		Q1701	6-550-548-01	TRANSISTOR DTA114EUAFT106		
513		G2	TRANSISTOR		Q1702	8-729-905-35	TRANSISTOR 2SC4081-R		
514		G2	TRANSISTOR		Q1704	6-550-715-01	TRANSISTOR IRFS644BYDTU		
515		G2	TRANSISTOR		Q1705	6-550-549-01	TRANSISTOR DTC114EUAFT106		
516		G2	TRANSISTOR		Q1801	6-550-548-01	TRANSISTOR DTA114EUAFT106		
517		G2	TRANSISTOR		Q1802	6-550-549-01	TRANSISTOR DTC114EUAFT106		
518		G2	TRANSISTOR		Q1804	6-550-548-01	TRANSISTOR DTA114EUAFT106		
519		G2	TRANSISTOR		Q1809	6-550-549-01	TRANSISTOR DTC114EUAFT106		
520		G2	TRANSISTOR		Q1811	6-550-548-01	TRANSISTOR DTA114EUAFT106		
521		G2	RESISTOR		R1001	1-216-105-91	RES-CHIP 220K 5% 1/10W		
522		G2	RESISTOR		R1002	1-245-473-21	METAL 300K 1% 1/4W		
523		G2	RESISTOR		R1003	1-245-473-21	METAL 300K 1% 1/4W		
524		G2	RESISTOR		R1004	1-245-472-21	METAL 270K 1% 1/4W		
525		G2	RESISTOR		R1005	1-245-486-21	METAL 1M 1% 1/4W		
526		G2	RESISTOR		R1006	1-245-473-21	METAL 300K 1% 1/4W		
527		G2	RESISTOR		R1007	1-245-473-21	METAL 300K 1% 1/4W		
528		G2	RESISTOR		R1008	1-245-472-21	METAL 270K 1% 1/4W		
529		G2	RESISTOR		R1010	1-216-699-91	METAL CHIP 100K 0.5% 1/10W		
530		G2	RESISTOR		R1011	1-216-079-00	RES-CHIP 18K 5% 1/10W		
531		G2	RESISTOR		R1012	1-245-473-21	METAL 300K 1% 1/4W		
532		G2	RESISTOR		R1013	1-245-473-21	METAL 300K 1% 1/4W		
533		G2	RESISTOR		R1014	1-245-472-21	METAL 270K 1% 1/4W		
534		G2	RESISTOR		R1016	1-216-057-00	RES-CHIP 2.2K 5% 1/10W		
535		G2	RESISTOR		R1017	1-216-650-11	METAL CHIP 910 0.5% 1/10W		
536		G2	RESISTOR		R1018	1-216-121-11	RES-CHIP 1M 5% 1/10W		
537		G2	RESISTOR		R1019	1-216-075-00	RES-CHIP 12K 5% 1/10W		
538		G2	RESISTOR		R1020	1-216-067-00	RES-CHIP 5.6K 5% 1/10W		
539		G2	RESISTOR		R1021	1-216-121-11	RES-CHIP 1M 5% 1/10W		
540		G2	RESISTOR		R1023	1-216-081-00	RES-CHIP 22K 5% 1/10W		
541		G2	RESISTOR		R1024	1-202-972-61	FUSIBLE 1 5% 1/4W		
542		G2	RESISTOR		R1025	1-243-665-11	METAL 0.05 5% 5W		
543		G2	RESISTOR		R1026	1-243-665-11	METAL 0.05 5% 5W		
544		G2	RESISTOR		R1027	1-216-073-91	RES-CHIP 10K 5% 1/10W		
545		G2	RESISTOR		R1030	1-216-308-00	RES-CHIP 4.7 5% 1/10W		
546		G2	RESISTOR		R1031	1-216-057-00	RES-CHIP 2.2K 5% 1/10W		
547		G2	RESISTOR		R1032	1-249-393-11	CARBON 10 5% 1/4W		
548		G2	RESISTOR		R1033	1-249-393-11	CARBON 10 5% 1/4W		
549		G2	RESISTOR		R1034	1-216-073-91	RES-CHIP 10K 5% 1/10W		
550		G2	RESISTOR		R1035	1-249-405-11	CARBON 100 5% 1/4W		
551		G2	RESISTOR		R1036	1-249-393-11	CARBON 10 5% 1/4W		
552		G2	RESISTOR		R1037	1-216-081-00	RES-CHIP 22K 5% 1/10W		
553		G2	RESISTOR		R1039	1-216-105-91	RES-CHIP 220K 5% 1/10W		
554		G2	RESISTOR		R1041	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
555		G2	RESISTOR		R1042	1-216-081-00	RES-CHIP 22K 5% 1/10W		
556		G2	RESISTOR		R1044	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
557		G2	RESISTOR		R1045	1-216-081-00	RES-CHIP 22K 5% 1/10W		
558		G2	RESISTOR		R1048	1-245-473-21	METAL 300K 1% 1/4W		
559		G2	RESISTOR		R1049	1-245-473-21	METAL 300K 1% 1/4W		
560		G2	RESISTOR		R1050	1-245-473-21	METAL 300K 1% 1/4W		
561		G2	RESISTOR		R1054	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W		
562		G2	RESISTOR		R1055	1-208-801-11	METAL CHIP 6.2K 0.5% 1/10W		
563		G2	RESISTOR		R1056	1-215-882-00	METAL OXIDE 22 5% 2W		
564		G2	RESISTOR		R1058	1-216-077-91	RES-CHIP 15K 5% 1/10W		
565		G2	RESISTOR		R1061	1-216-049-11	RES-CHIP 1K 5% 1/10W		
566		G2	RESISTOR		R1065	1-245-473-21	METAL 300K 1% 1/4W		
567		G2	RESISTOR		R1066	1-245-473-21	METAL 300K 1% 1/4W		
568		G2	RESISTOR		R1067	1-245-473-21	METAL 300K 1% 1/4W		
569		G2	RESISTOR		R1070	1-216-685-11	METAL CHIP 27K 0.5% 1/10W		
570		G2	RESISTOR		R1071	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
571		G2	RESISTOR		R1074	1-216-089-91	RES-CHIP 47K 5% 1/10W		
572		G2	RESISTOR		R1076	1-216-049-11	RES-CHIP 1K 5% 1/10W		
573		G2	RESISTOR		R1077	1-216-049-11	RES-CHIP 1K 5% 1/10W		
574		G2	RESISTOR		R1078	1-216-049-11	RES-CHIP 1K 5% 1/10W		
575		G2	RESISTOR		R1082	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
576		G2	RESISTOR		R1083	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
577		G2	RESISTOR		R1084	1-216-049-11	RES-CHIP 1K 5% 1/10W		
578		G2	RESISTOR		R1085	1-260-319-71	CARBON 180 5% 1/2W		
579		G2	RESISTOR		R1087	1-216-089-91	RES-CHIP 47K 5% 1/10W		
580		G2	RESISTOR		R1088	1-216-105-91	RES-CHIP 220K 5% 1/10W		
581		G2	RESISTOR		R1089	1-216-001-00	RES-CHIP 10 5% 1/10W		
582		G2	RESISTOR		R1091	1-216-073-91	RES-CHIP 10K 5% 1/10W		
583		G2	RESISTOR		R1092	1-216-073-91	RES-CHIP 10K 5% 1/10W		
584		G2	RESISTOR		R1093	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		

No.	#	Board	Type	Δ/μ^*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
585		G2	RESISTOR		R1094	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
586		G2	RESISTOR		R1097	1-216-635-11	METAL CHIP 220 0.5% 1/10W		
587		G2	RESISTOR		R1098	1-208-798-11	METAL CHIP 4.7K 0.5% 1/10W		
588		G2	RESISTOR		R1099	1-216-073-91	RES-CHIP 10K 5% 1/10W		
589		G2	RESISTOR		R1100	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W		
590		G2	RESISTOR		R1101	1-216-049-11	RES-CHIP 1K 5% 1/10W		
591		G2	RESISTOR		R1104	1-216-073-91	RES-CHIP 10K 5% 1/10W		
592		G2	RESISTOR		R1106	1-208-804-11	METAL CHIP 8.2K 0.5% 1/10W		
593		G2	RESISTOR		R1107	1-216-081-00	RES-CHIP 22K 5% 1/10W		
594		G2	RESISTOR		R1108	1-216-073-91	RES-CHIP 10K 5% 1/10W		
595		G2	RESISTOR		R1110	1-216-121-11	RES-CHIP 1M 5% 1/10W		
596		G2	RESISTOR		R1111	1-216-121-11	RES-CHIP 1M 5% 1/10W		
597		G2	RESISTOR		R1112	1-216-121-11	RES-CHIP 1M 5% 1/10W		
598		G2	RESISTOR		R1201	1-202-933-61	FUSIBLE 0.1 10% 1/2W		
599		G2	RESISTOR		R1202	1-208-812-11	METAL CHIP 18K 0.5% 1/10W		
600		G2	RESISTOR		R1203	1-216-089-91	RES-CHIP 47K 5% 1/10W		
601		G2	RESISTOR		R1204	1-216-089-91	RES-CHIP 47K 5% 1/10W		
602		G2	RESISTOR		R1205	1-245-478-21	METAL 470K 1% 1/4W		
603		G2	RESISTOR		R1206	1-245-479-21	METAL 510K 1% 1/4W		
604		G2	RESISTOR		R1207	1-260-304-51	CARBON 10 5% 1/2W		
605		G2	RESISTOR		R1208	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
606		G2	RESISTOR		R1209	1-216-041-00	RES-CHIP 470 5% 1/10W		
607		G2	RESISTOR		R1210	1-216-676-11	METAL CHIP 11K 0.5% 1/10W		
608		G2	RESISTOR		R1212	1-216-089-91	RES-CHIP 47K 5% 1/10W		
609		G2	RESISTOR		R1214	1-216-097-11	RES-CHIP 100K 5% 1/10W		
610		G2	RESISTOR		R1216	1-216-073-91	RES-CHIP 10K 5% 1/10W		
611		G2	RESISTOR		R1217	1-216-049-11	RES-CHIP 1K 5% 1/10W		
612		G2	RESISTOR		R1218	1-216-025-11	RES-CHIP 100 5% 1/10W		
613		G2	RESISTOR		R1219	1-216-017-91	RES-CHIP 47 5% 1/10W		
614		G2	RESISTOR		R1220	1-249-417-11	CARBON 1K 5% 1/4W		
615		G2	RESISTOR		R1221	1-216-061-91	RES-CHIP 3.3K 5% 1/10W		
616		G2	RESISTOR		R1222	1-216-061-91	RES-CHIP 3.3K 5% 1/10W		
617		G2	RESISTOR		R1223	1-216-073-91	RES-CHIP 10K 5% 1/10W		
618		G2	RESISTOR		R1224	1-249-393-11	CARBON 10 5% 1/4W		
619		G2	RESISTOR		R1225	1-249-393-11	CARBON 10 5% 1/4W		
620		G2	RESISTOR		R1226	1-216-073-91	RES-CHIP 10K 5% 1/10W		
621		G2	RESISTOR		R1227	1-216-073-91	RES-CHIP 10K 5% 1/10W		
622		G2	RESISTOR		R1228	1-215-857-71	METAL OXIDE 10 5% 1W		
623		G2	RESISTOR		R1229	1-243-668-31	CEMENTED 0.1 5% 2W		
624		G2	RESISTOR		R1297	1-245-478-21	METAL 470K 1% 1/4W		
625		G2	RESISTOR		R1298	1-245-478-21	METAL 470K 1% 1/4W		
626		G2	RESISTOR		R1301	1-216-308-00	RES-CHIP 4.7 5% 1/10W		
627		G2	RESISTOR		R1302	1-216-049-11	RES-CHIP 1K 5% 1/10W		
628		G2	RESISTOR		R1303	1-216-073-91	RES-CHIP 10K 5% 1/10W		
629		G2	RESISTOR		R1304	1-216-611-11	METAL CHIP 22 0.5% 1/10W		
630		G2	RESISTOR		R1305	1-249-393-11	CARBON 10 5% 1/4W		
631		G2	RESISTOR		R1306	1-216-689-11	METAL CHIP 39K 0.5% 1/10W		
632		G2	RESISTOR		R1307	1-216-673-11	METAL CHIP 8.2K 0.5% 1/10W		
633		G2	RESISTOR		R1311	1-216-682-11	METAL CHIP 20K 0.5% 1/10W		
634		G2	RESISTOR		R1312	1-216-665-11	METAL CHIP 3.9K 0.5% 1/10W		
635		G2	RESISTOR		R1314	1-216-073-91	RES-CHIP 10K 5% 1/10W		
636		G2	RESISTOR		R1320	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
637		G2	RESISTOR		R1321	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
638		G2	RESISTOR		R1326	1-216-073-91	RES-CHIP 10K 5% 1/10W		
639		G2	RESISTOR		R1327	1-216-073-91	RES-CHIP 10K 5% 1/10W		
640		G2	RESISTOR		R1328	1-216-049-11	RES-CHIP 1K 5% 1/10W		
641		G2	RESISTOR		R1329	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W		
642		G2	RESISTOR		R1330	1-216-651-11	METAL CHIP 1K 0.5% 1/10W		
643		G2	RESISTOR		R1331	1-216-085-91	RES-CHIP 33K 5% 1/10W		
644		G2	RESISTOR		R1332	1-216-295-91	SHORT CHIP 0		
645		G2	RESISTOR		R1333	1-216-295-91	SHORT CHIP 0		
646		G2	RESISTOR		R1335	1-216-073-91	RES-CHIP 10K 5% 1/10W		
647		G2	RESISTOR		R1336	1-216-073-91	RES-CHIP 10K 5% 1/10W		
648		G2	RESISTOR		R1338	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
649		G2	RESISTOR		R1339	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		
650		G2	RESISTOR		R1340	1-216-665-11	METAL CHIP 3.9K 0.5% 1/10W		
651		G2	RESISTOR		R1341	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
652		G2	RESISTOR		R1342	1-216-663-11	METAL CHIP 3.3K 0.5% 1/10W		
653		G2	RESISTOR		R1343	1-216-677-11	METAL CHIP 12K 0.5% 1/10W		
654		G2	RESISTOR		R1345	1-260-319-71	CARBON 180 5% 1/2W		
655		G2	RESISTOR		R1346	1-216-073-91	RES-CHIP 10K 5% 1/10W		
656		G2	RESISTOR		R1347	1-207-923-00	WIREWOUND 27 10% 3W		
657		G2	RESISTOR		R1348	1-216-097-11	RES-CHIP 100K 5% 1/10W		


No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
658		G2	RESISTOR		R1349	1-216-103-00	RES-CHIP 180K 5% 1/10W		
659		G2	RESISTOR		R1350	1-216-089-91	RES-CHIP 47K 5% 1/10W		
660		G2	RESISTOR		R1351	1-216-089-91	RES-CHIP 47K 5% 1/10W		
661		G2	RESISTOR		R1353	1-216-089-91	RES-CHIP 47K 5% 1/10W		
662		G2	RESISTOR		R1354	1-216-685-11	METAL CHIP 27K 0.5% 1/10W		
663		G2	RESISTOR		R1355	1-216-073-91	RES-CHIP 10K 5% 1/10W		
664		G2	RESISTOR		R1356	1-216-025-11	RES-CHIP 100 5% 1/10W		
665		G2	RESISTOR		R1357	1-216-073-91	RES-CHIP 10K 5% 1/10W		
666		G2	RESISTOR		R1358	1-216-025-11	RES-CHIP 100 5% 1/10W		
667		G2	RESISTOR		R1359	1-216-073-91	RES-CHIP 10K 5% 1/10W		
668		G2	RESISTOR		R1401	1-216-081-00	RES-CHIP 22K 5% 1/10W		
669		G2	RESISTOR		R1402	1-249-405-11	CARBON 100 5% 1/4W		
670		G2	RESISTOR		R1403	1-202-933-61	FUSIBLE 0.1 10% 1/2W		
671		G2	RESISTOR		R1404	1-208-798-11	METAL CHIP 4.7K 0.5% 1/10W		
672		G2	RESISTOR		R1405	1-245-478-21	METAL 470K 1% 1/4W		
673		G2	RESISTOR		R1406	1-245-479-21	METAL 510K 1% 1/4W		
674		G2	RESISTOR		R1407	1-216-073-91	RES-CHIP 10K 5% 1/10W		
675		G2	RESISTOR		R1408	1-216-017-91	RES-CHIP 47 5% 1/10W		
676		G2	RESISTOR		R1410	1-216-678-11	METAL CHIP 13K 0.5% 1/10W		
677		G2	RESISTOR		R1411	1-216-623-11	METAL CHIP 68 0.5% 1/10W		
678		G2	RESISTOR		R1412	1-216-621-11	METAL CHIP 56 0.5% 1/10W		
679		G2	RESISTOR		R1413	1-249-393-11	CARBON 10 5% 1/4W		
680		G2	RESISTOR		R1414	1-249-393-11	CARBON 10 5% 1/4W		
681		G2	RESISTOR		R1415	1-216-073-91	RES-CHIP 10K 5% 1/10W		
682		G2	RESISTOR		R1416	1-216-073-91	RES-CHIP 10K 5% 1/10W		
683		G2	RESISTOR		R1417	1-243-667-31	CEMENTED 0.05 5% 2W		
684		G2	RESISTOR		R1418	1-216-041-00	RES-CHIP 470 5% 1/10W		
685		G2	RESISTOR		R1423	1-245-478-21	METAL 470K 1% 1/4W		
686		G2	RESISTOR		R1424	1-245-478-21	METAL 470K 1% 1/4W		
687		G2	RESISTOR		R1501	1-216-049-11	RES-CHIP 1K 5% 1/10W		
688		G2	RESISTOR		R1502	1-216-049-11	RES-CHIP 1K 5% 1/10W		
689		G2	RESISTOR		R1503	1-216-045-00	RES-CHIP 680 5% 1/10W		
690		G2	RESISTOR		R1504	1-216-049-11	RES-CHIP 1K 5% 1/10W		
691		G2	RESISTOR		R1505	1-216-073-91	RES-CHIP 10K 5% 1/10W		
692		G2	RESISTOR		R1506	1-218-760-11	METAL CHIP 220K 0.5% 1/10W		
693		G2	RESISTOR		R1507	1-208-833-11	METAL CHIP 130K 0.5% 1/10W		
694		G2	RESISTOR		R1508	1-208-806-11	METAL CHIP 10K 0.5% 1/10W		
695		G2	RESISTOR		R1509	1-202-962-11	CEMENTED 3.3 5% 10W		
696		G2	RESISTOR		R1510	1-216-089-91	RES-CHIP 47K 5% 1/10W		
697		G2	RESISTOR		R1513	1-216-073-91	RES-CHIP 10K 5% 1/10W		
698		G2	RESISTOR		R1514	1-215-900-11	METAL OXIDE 22K 5% 2W		
699		G2	RESISTOR		R1515	1-216-073-91	RES-CHIP 10K 5% 1/10W		
700		G2	RESISTOR		R1516	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
701		G2	RESISTOR		R1517	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
702		G2	RESISTOR		R1518	1-208-832-11	METAL CHIP 120K 0.5% 1/10W		
703		G2	RESISTOR		R1519	1-216-001-00	RES-CHIP 10 5% 1/10W		
704		G2	RESISTOR		R1530	1-217-156-00	METAL 0.22 10% 5W		
705		G2	RESISTOR		R1601	1-216-081-00	RES-CHIP 22K 5% 1/10W		
706		G2	RESISTOR		R1602	1-249-405-11	CARBON 100 5% 1/4W		
707		G2	RESISTOR		R1603	1-242-949-11	FUSIBLE 0.1 10% 1W		
708		G2	RESISTOR		R1604	1-208-800-11	METAL CHIP 5.6K 0.5% 1/10W		
709		G2	RESISTOR		R1605	1-216-623-11	METAL CHIP 68 0.5% 1/10W		
710		G2	RESISTOR		R1606	1-245-478-21	METAL 470K 1% 1/4W		
711		G2	RESISTOR		R1607	1-245-479-21	METAL 510K 1% 1/4W		
712		G2	RESISTOR		R1608	1-216-073-91	RES-CHIP 10K 5% 1/10W		
713		G2	RESISTOR		R1609	1-216-017-91	RES-CHIP 47 5% 1/10W		
714		G2	RESISTOR		R1611	1-216-678-11	METAL CHIP 13K 0.5% 1/10W		
715		G2	RESISTOR		R1612	1-216-057-00	RES-CHIP 2.2K 5% 1/10W		
716		G2	RESISTOR		R1613	1-216-621-11	METAL CHIP 56 0.5% 1/10W		
717		G2	RESISTOR		R1614	1-216-057-00	RES-CHIP 2.2K 5% 1/10W		
718		G2	RESISTOR		R1615	1-249-393-11	CARBON 10 5% 1/4W		
719		G2	RESISTOR		R1616	1-249-393-11	CARBON 10 5% 1/4W		
720		G2	RESISTOR		R1617	1-216-073-91	RES-CHIP 10K 5% 1/10W		
721		G2	RESISTOR		R1618	1-216-073-91	RES-CHIP 10K 5% 1/10W		
722		G2	RESISTOR		R1619	1-243-667-31	CEMENTED 0.05 5% 2W		
723		G2	RESISTOR		R1620	1-216-041-00	RES-CHIP 470 5% 1/10W		
724		G2	RESISTOR		R1625	1-245-478-21	METAL 470K 1% 1/4W		
725		G2	RESISTOR		R1626	1-245-479-21	METAL 510K 1% 1/4W		
726		G2	RESISTOR		R1627	1-208-803-11	METAL CHIP 7.5K 0.5% 1/10W		
727		G2	RESISTOR		R1628	1-216-061-91	RES-CHIP 3.3K 5% 1/10W		
728		G2	RESISTOR		R1629	1-216-061-91	RES-CHIP 3.3K 5% 1/10W		
729		G2	RESISTOR		R1630	1-216-049-11	RES-CHIP 1K 5% 1/10W		
730		G2	RESISTOR		R1632	1-245-478-21	METAL 470K 1% 1/4W		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
731		G2	RESISTOR		R1633	1-245-478-21	METAL 470K 1% 1/4W		
732		G2	RESISTOR		R1701	1-216-049-11	RES-CHIP 1K 5% 1/10W		
733		G2	RESISTOR		R1702	1-216-049-11	RES-CHIP 1K 5% 1/10W		
734		G2	RESISTOR		R1703	1-216-045-00	RES-CHIP 680 5% 1/10W		
735		G2	RESISTOR		R1704	1-216-049-11	RES-CHIP 1K 5% 1/10W		
736		G2	RESISTOR		R1705	1-216-105-91	RES-CHIP 220K 5% 1/10W		
737		G2	RESISTOR		R1709	1-208-842-11	METAL CHIP 330K 0.5% 1/10W		
738		G2	RESISTOR		R1710	1-208-842-11	METAL CHIP 330K 0.5% 1/10W		
739		G2	RESISTOR		R1711	1-208-846-11	METAL CHIP 470K 0.5% 1/10W		
740		G2	RESISTOR		R1712	1-208-807-11	METAL CHIP 11K 0.5% 1/10W		
741		G2	RESISTOR		R1714	1-216-089-91	RES-CHIP 47K 5% 1/10W		
742		G2	RESISTOR		R1716	1-216-073-91	RES-CHIP 10K 5% 1/10W		
743		G2	RESISTOR		R1719	1-216-073-91	RES-CHIP 10K 5% 1/10W		
744		G2	RESISTOR		R1720	1-245-447-11	CEMENTED 22 5% 20W		
745		G2	RESISTOR		R1721	1-216-001-00	RES-CHIP 10 5% 1/10W		
746		G2	RESISTOR		R1722	1-218-642-11	METAL OXIDE 100K 5% 1W		
747		G2	RESISTOR		R1723	1-218-642-11	METAL OXIDE 100K 5% 1W		
748		G2	RESISTOR		R1725	1-216-073-91	RES-CHIP 10K 5% 1/10W		
749		G2	RESISTOR		R1803	1-208-829-11	METAL CHIP 91K 0.5% 1/10W		
750		G2	RESISTOR		R1804	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
751		G2	RESISTOR		R1805	1-208-830-11	METAL CHIP 100K 0.5% 1/10W		
752		G2	RESISTOR		R1806	1-208-806-11	METAL CHIP 10K 0.5% 1/10W		
753		G2	RESISTOR		R1807	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
754		G2	RESISTOR		R1808	1-216-073-91	RES-CHIP 10K 5% 1/10W		
755		G2	RESISTOR		R1809	1-216-073-91	RES-CHIP 10K 5% 1/10W		
756		G2	RESISTOR		R1810	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
757		G2	RESISTOR		R1811	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
758		G2	RESISTOR		R1818	1-208-832-11	METAL CHIP 120K 0.5% 1/10W		
759		G2	RESISTOR		R1819	1-208-832-11	METAL CHIP 120K 0.5% 1/10W		
760		G2	RESISTOR		R1820	1-208-834-11	METAL CHIP 150K 0.5% 1/10W		
761		G2	RESISTOR		R1821	1-208-806-11	METAL CHIP 10K 0.5% 1/10W		
762		G2	RESISTOR		R1823	1-216-073-91	RES-CHIP 10K 5% 1/10W		
763		G2	RESISTOR		R1824	1-216-073-91	RES-CHIP 10K 5% 1/10W		
764		G2	RESISTOR		R1827	1-208-827-11	METAL CHIP 75K 0.5% 1/10W		
765		G2	RESISTOR		R1828	1-208-827-11	METAL CHIP 75K 0.5% 1/10W		
766		G2	RESISTOR		R1829	1-208-806-11	METAL CHIP 10K 0.5% 1/10W		
767		G2	RESISTOR		R1836	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
768		G2	RESISTOR		R1856	1-216-097-11	RES-CHIP 100K 5% 1/10W		
769		G2	RESISTOR		R1857	1-216-097-11	RES-CHIP 100K 5% 1/10W		
770		G2	RESISTOR		R1858	1-216-682-11	METAL CHIP 20K 0.5% 1/10W		
771		G2	VARIABLE RESISTOR		RV1001	1-241-762-11	RES, ADJ, CARBON 2.2K		
772		G2	VARIABLE RESISTOR		RV1501	1-241-768-11	RES, ADJ, CARBON 220K		
773		G2	VARIABLE RESISTOR		RV1701	1-223-387-21	RES, ADJ, CARBON 330K		
774		G2	TRANSFORMER		T1201	1-437-972-11	DC-DC CONVERTER TRANSFORMER		
775		G2	TRANSFORMER		T1202	1-443-117-11	DRIVER TRANSFORMER		
776		G2	TRANSFORMER		T1401	1-437-973-21	TRANSFORMER, DC-DC CONVERTER		
777		G2	TRANSFORMER		T1601	1-443-119-11	DC-DC CONVERTER TRANSFORMER		
778		G2	TRANSFORMER		T1602	1-443-119-11	DC-DC CONVERTER TRANSFORMER		
779		G2	THERMISTOR		TH1701	1-809-789-71	THERMISTOR, POSITIVE		
780		G2	CHIP CHCKER		TP1001	1-695-915-11	TAB (CONTACT)		
781		G2	CHIP CHCKER		TP1002	1-695-915-11	TAB (CONTACT)		
782		G2	CHIP CHCKER		TP1003	1-695-915-11	TAB (CONTACT)		
783		G2	CHIP CHCKER		TP1004	1-695-915-11	TAB (CONTACT)		
784		G2	CHIP CHCKER		TP1005	1-695-915-11	TAB (CONTACT)		
785		G2	CHIP CHCKER		TP1006	1-695-915-11	TAB (CONTACT)		
786		G2	CHIP CHCKER		TP1007	1-695-915-11	TAB (CONTACT)		
787		G2	CHIP CHCKER		TP1501	1-695-915-11	TAB (CONTACT)		
788		G2	CHIP CHCKER		TP1502	1-695-915-11	TAB (CONTACT)		
789		G2	CHIP CHCKER		TP1701	1-695-915-11	TAB (CONTACT)		
790		DEM	CAPACITOR		C3105	1-117-863-11	CERAMIC CHIP 0.47UF 10.00% 6.3V		
791		DEM	CAPACITOR		C3106	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
792		DEM	CAPACITOR		C3107	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
793		DEM	CAPACITOR		C3108	1-117-863-11	CERAMIC CHIP 0.47UF 10.00% 6.3V		
794		DEM	CAPACITOR		C3109	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
795		DEM	CAPACITOR		C3110	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
796		DEM	CAPACITOR		C3111	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
797		DEM	CAPACITOR		C3112	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
798		DEM	CAPACITOR		C3113	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
799		DEM	CAPACITOR		C3114	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
800		DEM	CAPACITOR		C3115	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
801		DEM	CAPACITOR		C3116	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
802		DEM	CAPACITOR		C3117	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
803		DEM	CAPACITOR		C3118	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		

No.	#	Board	Type	Δ / [*]	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
804		DEM	CAPACITOR		C3120	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
805		DEM	CAPACITOR		C3121	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
806		DEM	CAPACITOR		C3122	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
807		DEM	CAPACITOR		C3123	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
808		DEM	CAPACITOR		C3124	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
809		DEM	CAPACITOR		C3125	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
810		DEM	CAPACITOR		C3126	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
811		DEM	CAPACITOR		C3127	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
812		DEM	CAPACITOR		C3128	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
813		DEM	CAPACITOR		C3129	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
814		DEM	CAPACITOR		C3130	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
815		DEM	CAPACITOR		C3131	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
816		DEM	CAPACITOR		C3132	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
817		DEM	CAPACITOR		C3133	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
818		DEM	CAPACITOR		C3251	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
819		DEM	CAPACITOR		C3252	1-117-863-11	CERAMIC CHIP 0.47UF 10.00% 6.3V		
820		DEM	CAPACITOR		C3253	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
821		DEM	CAPACITOR		C3254	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
822		DEM	CAPACITOR		C3255	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
823		DEM	CAPACITOR		C3256	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
824		DEM	CAPACITOR		C3257	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
825		DEM	CAPACITOR		C3258	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
826		DEM	CAPACITOR		C3259	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
827		DEM	CAPACITOR		C3260	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
828		DEM	CAPACITOR		C3261	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
829		DEM	CAPACITOR		C3262	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
830		DEM	CAPACITOR		C3263	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
831		DEM	CAPACITOR		C3264	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
832		DEM	CAPACITOR		C3265	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
833		DEM	CAPACITOR		C3266	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
834		DEM	CAPACITOR		C3267	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
835		DEM	CAPACITOR		C3268	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
836		DEM	CAPACITOR		C3269	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
837		DEM	CAPACITOR		C3270	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
838		DEM	CAPACITOR		C3271	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
839		DEM	CAPACITOR		C3272	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
840		DEM	CAPACITOR		C3273	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
841		DEM	CAPACITOR		C3274	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
842		DEM	CAPACITOR		C3275	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
843		DEM	CAPACITOR		C3276	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
844		DEM	CAPACITOR		C3277	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
845		DEM	CAPACITOR		C3278	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
846		DEM	CAPACITOR		C3279	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
847		DEM	CAPACITOR		C3301	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
848		DEM	CAPACITOR		C3302	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
849		DEM	CAPACITOR		C3303	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
850		DEM	CAPACITOR		C3304	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
851		DEM	CAPACITOR		C3305	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
852		DEM	CAPACITOR		C3306	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
853		DEM	CAPACITOR		C3307	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
854		DEM	CAPACITOR		C3309	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
855		DEM	CAPACITOR		C3310	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
856		DEM	CAPACITOR		C3311	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
857		DEM	CAPACITOR		C3312	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
858		DEM	CAPACITOR		C3313	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
859		DEM	CAPACITOR		C3314	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
860		DEM	CAPACITOR		C3315	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
861		DEM	CAPACITOR		C3318	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
862		DEM	CAPACITOR		C3320	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
863		DEM	CAPACITOR		C3321	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
864		DEM	CAPACITOR		C3322	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
865		DEM	CAPACITOR		C3323	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
866		DEM	CAPACITOR		C3351	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
867		DEM	CAPACITOR		C3353	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
868		DEM	CAPACITOR		C3354	1-117-863-11	CERAMIC CHIP 0.47UF 10.00% 6.3V		
869		DEM	CAPACITOR		C3355	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
870		DEM	CAPACITOR		C3356	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
871		DEM	CAPACITOR		C3357	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
872		DEM	CAPACITOR		C3358	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
873		DEM	CAPACITOR		C3401	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
874		DEM	CAPACITOR		C3402	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
875		DEM	CAPACITOR		C3404	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
876		DEM	CAPACITOR		C3405	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		

5-14 KDE61XBR950 (UC)

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
950		DEM	CAPACITOR		C3563	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
951		DEM	CAPACITOR		C3564	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
952		DEM	CAPACITOR		C3565	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
953		DEM	CAPACITOR		C3566	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
954		DEM	CAPACITOR		C3567	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
955		DEM	CAPACITOR		C3568	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
956		DEM	CAPACITOR		C3569	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
957		DEM	CAPACITOR		C3570	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
958		DEM	CAPACITOR		C3571	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
959		DEM	CAPACITOR		C3572	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
960		DEM	CAPACITOR		C3573	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
961		DEM	CAPACITOR		C3574	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
962		DEM	CAPACITOR		C3575	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
963		DEM	CAPACITOR		C3576	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
964		DEM	CAPACITOR		C3577	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
965		DEM	CAPACITOR		C3578	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
966		DEM	CAPACITOR		C3579	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
967		DEM	CAPACITOR		C3580	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
968		DEM	CAPACITOR		C3581	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
969		DEM	CAPACITOR		C3582	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
970		DEM	CAPACITOR		C3583	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
971		DEM	CAPACITOR		C3584	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
972		DEM	CAPACITOR		C3585	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
973		DEM	CAPACITOR		C3586	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
974		DEM	CAPACITOR		C3587	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
975		DEM	CAPACITOR		C3588	1-164-935-11	CERAMIC CHIP 470PF 10.00% 50V		
976		DEM	CAPACITOR		C3589	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
977		DEM	CAPACITOR		C3590	1-165-880-21	ELECT CHIP 220UF 20% 2.5V		
978		DEM	CAPACITOR		C3601	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
979		DEM	CAPACITOR		C3602	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
980		DEM	CAPACITOR		C3603	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
981		DEM	CAPACITOR		C3604	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
982		DEM	CAPACITOR		C3605	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
983		DEM	CAPACITOR		C3606	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
984		DEM	CAPACITOR		C3607	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
985		DEM	CAPACITOR		C3608	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
986		DEM	CAPACITOR		C3609	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
987		DEM	CAPACITOR		C3610	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
988		DEM	CAPACITOR		C3611	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
989		DEM	CAPACITOR		C3612	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
990		DEM	CAPACITOR		C3613	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
991		DEM	CAPACITOR		C3614	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
992		DEM	CAPACITOR		C3615	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
993		DEM	CAPACITOR		C3616	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
994		DEM	CAPACITOR		C3617	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
995		DEM	CAPACITOR		C3618	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
996		DEM	CAPACITOR		C3619	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
997		DEM	CAPACITOR		C3620	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
998		DEM	CAPACITOR		C3621	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
999		DEM	CAPACITOR		C3622	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1000		DEM	CAPACITOR		C3623	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1001		DEM	CAPACITOR		C3624	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1002		DEM	CAPACITOR		C3625	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1003		DEM	CAPACITOR		C3626	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1004		DEM	CAPACITOR		C3627	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1005		DEM	CAPACITOR		C3628	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1006		DEM	CAPACITOR		C3629	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1007		DEM	CAPACITOR		C3630	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1008		DEM	CAPACITOR		C3631	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1009		DEM	CAPACITOR		C3632	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1010		DEM	CAPACITOR		C3633	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1011		DEM	CAPACITOR		C3634	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
1012		DEM	CAPACITOR		C3635	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1013		DEM	CAPACITOR		C3636	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1014		DEM	CAPACITOR		C3637	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
1015		DEM	CAPACITOR		C3638	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
1016		DEM	CAPACITOR		C3639	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
1017		DEM	CAPACITOR		C3642	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1018		DEM	CAPACITOR		C3701	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
1019		DEM	CAPACITOR		C3703	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
1020		DEM	CAPACITOR		C3705	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
1021		DEM	CAPACITOR		C3707	1-164-852-11	CERAMIC CHIP 12PF 5.00% 50V		
1022		DEM	CAPACITOR		C3708	1-164-852-11	CERAMIC CHIP 12PF 5.00% 50V		

No.	#	Board	Type		Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1023		DEM	CAPACITOR		C3709	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1024		DEM	CAPACITOR		C3710	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1025		DEM	CAPACITOR		C3711	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
1026		DEM	CAPACITOR		C3712	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1027		DEM	CAPACITOR		C3713	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1028		DEM	CAPACITOR		C3714	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1029		DEM	CAPACITOR		C3715	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1030		DEM	CAPACITOR		C3716	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1031		DEM	CAPACITOR		C3801	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
1032		DEM	CAPACITOR		C3802	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1033		DEM	CAPACITOR		C3803	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1034		DEM	CAPACITOR		C3804	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1035		DEM	CAPACITOR		C3805	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1036		DEM	CAPACITOR		C3806	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1037		DEM	CAPACITOR		C3807	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1038		DEM	CAPACITOR		C3808	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1039		DEM	CAPACITOR		C3809	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
1040		DEM	CAPACITOR		C3810	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1041		DEM	CAPACITOR		C3811	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1042		DEM	CAPACITOR		C3812	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1043		DEM	CAPACITOR		C3813	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1044		DEM	CAPACITOR		C3814	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
1045		DEM	CAPACITOR		C3815	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1046		DEM	CAPACITOR		C3816	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1047		DEM	CONNECTOR		CN3101	1-817-112-11	HALF PITCH CONNECTOR (26PIN)		
1048		DEM	CONNECTOR		CN3102	1-817-120-11	CONNECTOR, DVI-D		
1049		DEM	CONNECTOR		CN3251	1-764-080-21	PIN, CONNECTOR (PC BOARD) 8P		
1050		DEM	CONNECTOR	*	CN3301	1-779-268-21	PIN, CONNECTOR (1.5MM)(SMD)11P		
1051		DEM	CONNECTOR		CN3302	1-766-382-21	PIN, CONNECTOR (1.5MM)(SMD)10P		
1052		DEM	CONNECTOR		CN3303	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD)4P		
1053		DEM	CONNECTOR		CN3304	1-815-954-21	PIN, CONNECTOR (PC BOARD) 13P		
1054		DEM	CONNECTOR		CN3306	1-573-806-21	PIN, CONNECTOR (1.5MM) (SMD)6P		
1055		DEM	DIODE		D3101	8-719-069-55	DIODE UDZSTE-175.6B		
1056		DEM	DIODE		D3103	8-719-069-55	DIODE UDZSTE-175.6B		
1057		DEM	DIODE		D3104	6-500-758-01	DIODE RCLAMP0504M.TBT		
1058		DEM	DIODE		D3105	8-719-941-86	DIODE DAN202U		
1059		DEM	DIODE		D3106	6-500-758-01	DIODE RCLAMP0504M.TBT		
1060		DEM	DIODE		D3107	8-719-941-86	DIODE DAN202U		
1061		DEM	DIODE		D3108	8-719-024-77	DIODE HN1D03FU-TE85L		
1062		DEM	DIODE		D3109	8-719-024-77	DIODE HN1D03FU-TE85L		
1063		DEM	DIODE		D3110	8-719-024-77	DIODE HN1D03FU-TE85L		
1064		DEM	DIODE		D3111	8-719-024-77	DIODE HN1D03FU-TE85L		
1065		DEM	DIODE		D3112	8-719-069-55	DIODE UDZSTE-175.6B		
1066		DEM	DIODE		D3113	8-719-404-50	DIODE MA111-TX		
1067		DEM	DIODE		D3114	8-719-404-50	DIODE MA111-TX		
1068		DEM	DIODE		D3302	8-719-404-50	DIODE MA111-TX		
1069		DEM	DIODE		D3303	8-719-404-50	DIODE MA111-TX		
1070		DEM	DIODE		D3305	8-719-941-09	DIODE DAP202U		
1071		DEM	DIODE		D3307	8-719-404-50	DIODE MA111-TX		
1072		DEM	DIODE		D3401	8-719-083-58	DIODE UDZSTE-173.9B		
1073		DEM	DIODE		D3402	8-719-081-19	DIODE 1SS383(T5RSONY1)		
1074		DEM	FERRITE BEAD		FB3102	1-414-445-11	FERRITE 0UH		
1075		DEM	FERRITE BEAD		FB3103	1-414-445-11	FERRITE 0UH		
1076		DEM	FERRITE BEAD		FB3104	1-414-445-11	FERRITE 0UH		
1077		DEM	FERRITE BEAD		FB3105	1-414-445-11	FERRITE 0UH		
1078		DEM	FERRITE BEAD		FB3106	1-414-445-11	FERRITE 0UH		
1079		DEM	FERRITE BEAD		FB3107	1-414-445-11	FERRITE 0UH		
1080		DEM	FERRITE BEAD		FB3251	1-414-864-11	FERRITE 0UH		
1081		DEM	FERRITE BEAD		FB3252	1-414-864-11	FERRITE 0UH		
1082		DEM	FERRITE BEAD		FB3253	1-414-864-11	FERRITE 0UH		
1083		DEM	FERRITE BEAD		FB3301	1-414-864-11	FERRITE 0UH		
1084		DEM	FERRITE BEAD		FB3302	1-414-864-11	FERRITE 0UH		
1085		DEM	FERRITE BEAD		FB3304	1-414-445-11	FERRITE 0UH		
1086		DEM	FERRITE BEAD		FB3305	1-414-864-11	FERRITE 0UH		
1087		DEM	FERRITE BEAD		FB3306	1-414-445-11	FERRITE 0UH		
1088		DEM	FERRITE BEAD		FB3308	1-414-445-11	FERRITE 0UH		
1089		DEM	FERRITE BEAD		FB3352	1-414-864-11	FERRITE 0UH		
1090		DEM	FERRITE BEAD		FB3402	1-414-445-11	FERRITE 0UH		
1091		DEM	FERRITE BEAD		FB3403	1-414-445-11	FERRITE 0UH		
1092		DEM	FERRITE BEAD		FB3404	1-414-445-11	FERRITE 0UH		
1093		DEM	FERRITE BEAD		FB3501	1-414-864-11	FERRITE 0UH		
1094		DEM	FERRITE BEAD		FB3502	1-414-864-11	FERRITE 0UH		
1095		DEM	FERRITE BEAD		FB3503	1-414-864-11	FERRITE 0UH		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1096		DEM	FERRITE BEAD		FB3504	1-414-864-11	FERRITE 0UH		
1097		DEM	FERRITE BEAD		FB3601	1-414-864-11	FERRITE 0UH		
1098		DEM	FERRITE BEAD		FB3602	1-414-864-11	FERRITE 0UH		
1099		DEM	FERRITE BEAD		FB3603	1-414-864-11	FERRITE 0UH		
1100		DEM	FERRITE BEAD		FB3701	1-414-864-11	FERRITE 0UH		
1101		DEM	FERRITE BEAD		FB3702	1-414-864-11	FERRITE 0UH		
1102		DEM	FERRITE BEAD		FB3801	1-414-445-11	FERRITE 0UH		
1103		DEM	FERRITE BEAD		FB3802	1-414-445-11	FERRITE 0UH		
1104		DEM	FERRITE BEAD		FB3803	1-414-445-11	FERRITE 0UH		
1105		DEM	IC		IC3101	8-759-338-95	IC NJM2903V(TE2)		
1106		DEM	IC		IC3102	8-759-549-01	IC SN74LV125APWR		
1107		DEM	IC		IC3103	6-705-382-01	IC SN65LVDS179DGKR		
1108		DEM	IC		IC3104	8-759-683-99	IC BA8274F-E2		
1109		DEM	IC		IC3105	8-759-596-39	IC SN74LV4052APWR		
1110		DEM	IC		IC3106	8-759-672-79	IC M24C02-WMN6T(A)		
1111		DEM	IC		IC3107	8-759-596-39	IC SN74LV4052APWR		
1112		DEM	IC		IC3108	6-700-150-01	IC M24C04-WMN6T(A)		
1113		DEM	IC		IC3109	6-703-097-01	IC TFP501PZP		
1114		DEM	IC		IC3110	6-702-982-01	IC TC7SA00FU(TE85R)		
1115		DEM	IC		IC3111	6-705-382-01	IC SN65LVDS179DGKR		
1116		DEM	IC		IC3112	6-704-351-01	IC SN74LVC2G08DCUR		
1117		DEM	IC		IC3251	6-700-394-01	IC BA25BC0FP-E2		
1118		DEM	IC		IC3252	6-704-713-01	IC XC2S50-5TQG144C		
1119		DEM	IC		IC3253	6-704-718-01	IC XC18V02VQG44C		
1120		DEM	IC		IC3301	6-704-351-01	IC SN74LVC2G08DCUR		
1121		DEM	IC		IC3303	8-759-579-31	IC PQ20WZ1U		
1122		DEM	IC		IC3304	6-701-977-01	IC MM1565AFBE		
1123		DEM	IC		IC3305	6-702-362-01	IC MM1563DFBE		
1124		DEM	IC		IC3306	6-702-481-01	IC PCA9555DB-118		
1125		DEM	IC		IC3308	8-759-567-08	IC MB88141APF-ER		
1126		DEM	IC		IC3351	6-702-688-01	IC M24C64-WMN6T(B)		
1127		DEM	IC		IC3352	6-700-394-01	IC BA25BC0FP-E2		
1128		DEM	IC	*	IC3353	8-759-649-45	IC SN74AHC1G04DCKR		
1129		DEM	IC	*	IC3354	8-759-649-45	IC SN74AHC1G04DCKR		
1130		DEM	IC		IC3401	6-704-654-01	IC MB91306RPFV-G-BND-E1		
1131		DEM	IC		IC3402	6-703-175-01	IC PST3629UL		
1132		DEM	IC		IC3403	6-803-887-01	IC MBM29LV800TA-70PFTN-DE200		
1133		DEM	IC		IC3405	6-703-006-01	IC SN74CBTLV16210GR		
1134		DEM	IC		IC3406	6-703-006-01	IC SN74CBTLV16210GR		
1135		DEM	IC		IC3451	6-700-263-01	IC NJM2870F18(TE2)		
1136		DEM	IC		IC3501	6-704-515-01	IC CXD9762GF		
1137		DEM	IC		IC3502	8-759-694-55	IC MAX1644EAE-TG074		
1138		DEM	IC		IC3602	6-705-089-01	IC K4D263238F-UC50T		
1139		DEM	IC		IC3603	6-704-520-01	IC MAX1809EEE+TG068		
1140		DEM	IC		IC3801	6-700-592-01	IC DS90C387VJDX		
1141		DEM	IC		IC3802	6-701-762-11	IC DS90LV018ATMX		
1142		DEM	COIL		L3301	1-469-553-21	INDUCTOR 4.7UH		
1143		DEM	COIL		L3303	1-419-630-21	INDUCTOR 4.7UH		
1144		DEM	COIL		L3304	1-469-553-21	INDUCTOR 4.7UH		
1145		DEM	COIL		L3501	1-419-630-21	INDUCTOR 4.7UH		
1146		DEM	COIL		L3601	1-419-630-21	INDUCTOR 4.7UH		
1147		DEM	TRANSISTOR		Q3101	8-729-029-14	TRANSISTOR DTC144EUA-T106		
1148		DEM	TRANSISTOR		Q3102	8-729-907-00	TRANSISTOR DTC114EU		
1149		DEM	TRANSISTOR		Q3105	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
1150		DEM	TRANSISTOR		Q3106	8-729-907-00	TRANSISTOR DTC114EU		
1151		DEM	TRANSISTOR		Q3107	8-729-046-75	TRANSISTOR SI2301DS-T1		
1152		DEM	TRANSISTOR		Q3108	8-729-907-00	TRANSISTOR DTC114EU		
1153		DEM	TRANSISTOR		Q3110	8-729-907-00	TRANSISTOR DTC114EU		
1154		DEM	TRANSISTOR		Q3111	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
1155		DEM	TRANSISTOR		Q3116	8-729-924-39	TRANSISTOR DTC143XU		
1156		DEM	TRANSISTOR		Q3117	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
1157		DEM	TRANSISTOR		Q3118	8-729-021-23	TRANSISTOR RN4902(TE85R)		
1158		DEM	TRANSISTOR		Q3119	8-729-021-23	TRANSISTOR RN4902(TE85R)		
1159		DEM	TRANSISTOR		Q3120	8-729-021-23	TRANSISTOR RN4902(TE85R)		
1160		DEM	TRANSISTOR		Q3251	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
1161		DEM	TRANSISTOR		Q3303	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
1162		DEM	TRANSISTOR		Q3304	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
1163		DEM	TRANSISTOR		Q3305	8-729-046-75	TRANSISTOR SI2301DS-T1		
1164		DEM	TRANSISTOR		Q3306	8-729-907-00	TRANSISTOR DTC114EU		
1165		DEM	TRANSISTOR		Q3351	8-729-021-23	TRANSISTOR RN4902(TE85R)		
1166		DEM	RESISTOR		R3101	1-216-864-11	SHORT CHIP 0		
1167		DEM	RESISTOR		R3102	1-216-864-11	SHORT CHIP 0		
1168		DEM	RESISTOR		R3103	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1169		DEM	RESISTOR		R3104	1-216-864-11	SHORT CHIP 0		
1170		DEM	RESISTOR		R3105	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1171		DEM	RESISTOR		R3106	1-216-864-11	SHORT CHIP 0		
1172		DEM	RESISTOR		R3107	1-218-941-81	RES-CHIP 100 5% 1/16W		
1173		DEM	RESISTOR		R3108	1-218-941-81	RES-CHIP 100 5% 1/16W		
1174		DEM	RESISTOR		R3109	1-218-933-11	RES-CHIP 22 5% 1/16W		
1175		DEM	RESISTOR		R3110	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1176		DEM	RESISTOR		R3111	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1177		DEM	RESISTOR		R3112	1-218-953-11	RES-CHIP 1K 5% 1/16W		
1178		DEM	RESISTOR		R3113	1-218-941-81	RES-CHIP 100 5% 1/16W		
1179		DEM	RESISTOR		R3114	1-218-941-81	RES-CHIP 100 5% 1/16W		
1180		DEM	RESISTOR		R3115	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1181		DEM	RESISTOR		R3116	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1182		DEM	RESISTOR		R3117	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1183		DEM	RESISTOR		R3118	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1184		DEM	RESISTOR		R3119	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1185		DEM	RESISTOR		R3120	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1186		DEM	RESISTOR		R3121	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1187		DEM	RESISTOR		R3126	1-218-941-11	RES-CHIP 100 5% 1/16W		
1188		DEM	RESISTOR		R3127	1-218-941-11	RES-CHIP 100 5% 1/16W		
1189		DEM	RESISTOR		R3132	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1190		DEM	RESISTOR		R3133	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1191		DEM	RESISTOR		R3135	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1192		DEM	RESISTOR		R3136	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1193		DEM	RESISTOR		R3137	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1194		DEM	RESISTOR		R3138	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1195		DEM	RESISTOR		R3139	1-218-953-11	RES-CHIP 1K 5% 1/16W		
1196		DEM	RESISTOR		R3141	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1197		DEM	RESISTOR		R3142	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1198		DEM	RESISTOR		R3144	1-218-990-11	SHORT CHIP 0		
1199		DEM	RESISTOR		R3146	1-218-990-11	SHORT CHIP 0		
1200		DEM	RESISTOR		R3147	1-218-990-11	SHORT CHIP 0		
1201		DEM	RESISTOR		R3150	1-218-933-11	RES-CHIP 22 5% 1/16W		
1202		DEM	RESISTOR		R3152	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1203		DEM	RESISTOR		R3153	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1204		DEM	RESISTOR		R3155	1-218-933-11	RES-CHIP 22 5% 1/16W		
1205		DEM	RESISTOR		R3156	1-218-933-11	RES-CHIP 22 5% 1/16W		
1206		DEM	RESISTOR		R3157	1-218-933-11	RES-CHIP 22 5% 1/16W		
1207		DEM	RESISTOR		R3158	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1208		DEM	RESISTOR		R3159	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1209		DEM	RESISTOR		R3160	1-218-953-11	RES-CHIP 1K 5% 1/16W		
1210		DEM	RESISTOR		R3162	1-218-941-81	RES-CHIP 100 5% 1/16W		
1211		DEM	RESISTOR		R3163	1-218-941-81	RES-CHIP 100 5% 1/16W		
1212		DEM	RESISTOR		R3164	1-218-941-81	RES-CHIP 100 5% 1/16W		
1213		DEM	RESISTOR		R3165	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1214		DEM	RESISTOR		R3166	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1215		DEM	RESISTOR		R3167	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1216		DEM	RESISTOR		R3168	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1217		DEM	RESISTOR		R3170	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1218		DEM	RESISTOR		R3171	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1219		DEM	RESISTOR		R3172	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1220		DEM	RESISTOR		R3251	1-218-990-11	SHORT CHIP 0		
1221		DEM	RESISTOR		R3252	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1222		DEM	RESISTOR		R3253	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1223		DEM	RESISTOR		R3254	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1224		DEM	RESISTOR		R3255	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1225		DEM	RESISTOR		R3256	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1226		DEM	RESISTOR		R3257	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1227		DEM	RESISTOR		R3259	1-218-933-11	RES-CHIP 22 5% 1/16W		
1228		DEM	RESISTOR		R3260	1-218-933-11	RES-CHIP 22 5% 1/16W		
1229		DEM	RESISTOR		R3261	1-218-933-11	RES-CHIP 22 5% 1/16W		
1230		DEM	RESISTOR		R3262	1-218-947-11	RES-CHIP 330 5% 1/16W		
1231		DEM	RESISTOR		R3263	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1232		DEM	RESISTOR		R3264	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1233		DEM	RESISTOR		R3265	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1234		DEM	RESISTOR		R3266	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1235		DEM	RESISTOR		R3267	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1236		DEM	RESISTOR		R3268	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1237		DEM	RESISTOR		R3269	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1238		DEM	RESISTOR		R3303	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1239		DEM	RESISTOR		R3304	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1240		DEM	RESISTOR		R3305	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1241		DEM	RESISTOR		R3307	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1242		DEM	RESISTOR		R3308	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1243		DEM	RESISTOR		R3309	1-208-687-11	METAL CHIP 1.5K 0.5% 1/16W		
1244		DEM	RESISTOR		R3310	1-208-702-11	METAL CHIP 6.2K 0.5% 1/16W		
1245		DEM	RESISTOR		R3311	1-208-689-11	METAL CHIP 1.8K 0.5% 1/16W		
1246		DEM	RESISTOR		R3314	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1247		DEM	RESISTOR		R3317	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1248		DEM	RESISTOR		R3318	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1249		DEM	RESISTOR		R3320	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
1250		DEM	RESISTOR		R3321	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1251		DEM	RESISTOR		R3323	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1252		DEM	RESISTOR		R3325	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1253		DEM	RESISTOR		R3326	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1254		DEM	RESISTOR		R3327	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1255		DEM	RESISTOR		R3328	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1256		DEM	RESISTOR		R3329	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1257		DEM	RESISTOR		R3330	1-218-990-11	SHORT CHIP 0		
1258		DEM	RESISTOR		R3331	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1259		DEM	RESISTOR		R3332	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1260		DEM	RESISTOR		R3333	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1261		DEM	RESISTOR		R3334	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1262		DEM	RESISTOR		R3335	1-218-990-11	SHORT CHIP 0		
1263		DEM	RESISTOR		R3337	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1264		DEM	RESISTOR		R3338	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1265		DEM	RESISTOR		R3341	1-216-864-11	SHORT CHIP 0		
1266		DEM	RESISTOR		R3342	1-216-864-11	SHORT CHIP 0		
1267		DEM	RESISTOR		R3351	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1268		DEM	RESISTOR		R3352	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1269		DEM	RESISTOR		R3357	1-218-990-11	SHORT CHIP 0		
1270		DEM	RESISTOR		R3403	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1271		DEM	RESISTOR		R3404	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1272		DEM	RESISTOR		R3405	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1273		DEM	RESISTOR		R3406	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1274		DEM	RESISTOR		R3408	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
1275		DEM	RESISTOR		R3409	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
1276		DEM	RESISTOR		R3410	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
1277		DEM	RESISTOR		R3411	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1278		DEM	RESISTOR		R3412	1-218-953-11	RES-CHIP 1K 5% 1/16W		
1279		DEM	RESISTOR		R3413	1-218-941-81	RES-CHIP 100 5% 1/16W		
1280		DEM	RESISTOR		R3414	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1281		DEM	RESISTOR		R3415	1-218-941-81	RES-CHIP 100 5% 1/16W		
1282		DEM	RESISTOR		R3416	1-218-941-81	RES-CHIP 100 5% 1/16W		
1283		DEM	RESISTOR		R3419	1-218-973-11	RES-CHIP 47K 5% 1/16W		
1284		DEM	RESISTOR		R3422	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1285		DEM	RESISTOR		R3423	1-218-990-11	SHORT CHIP 0		
1286		DEM	RESISTOR		R3425	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1287		DEM	RESISTOR		R3427	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1288		DEM	RESISTOR		R3428	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1289		DEM	RESISTOR		R3429	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1290		DEM	RESISTOR		R3436	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1291		DEM	RESISTOR		R3437	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1292		DEM	RESISTOR		R3440	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1293		DEM	RESISTOR		R3441	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1294		DEM	RESISTOR		R3442	1-218-990-11	SHORT CHIP 0		
1295		DEM	RESISTOR		R3445	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
1296		DEM	RESISTOR		R3446	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1297		DEM	RESISTOR		R3447	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
1298		DEM	RESISTOR		R3448	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
1299		DEM	RESISTOR		R3455	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1300		DEM	RESISTOR		R3456	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1301		DEM	RESISTOR		R3457	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1302		DEM	RESISTOR		R3458	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1303		DEM	RESISTOR		R3459	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1304		DEM	RESISTOR		R3460	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1305		DEM	RESISTOR		R3461	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1306		DEM	RESISTOR		R3464	1-218-941-81	RES-CHIP 100 5% 1/16W		
1307		DEM	RESISTOR		R3465	1-218-941-81	RES-CHIP 100 5% 1/16W		
1308		DEM	RESISTOR		R3468	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1309		DEM	RESISTOR		R3469	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1310		DEM	RESISTOR		R3470	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1311		DEM	RESISTOR		R3471	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1312		DEM	RESISTOR		R3505	1-218-933-11	RES-CHIP 22 5% 1/16W		
1313		DEM	RESISTOR		R3506	1-218-990-11	SHORT CHIP 0		
1314		DEM	RESISTOR		R3507	1-218-990-11	SHORT CHIP 0		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1315		DEM	RESISTOR		R3509	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
1316		DEM	RESISTOR		R3510	1-218-981-11	RES-CHIP 220K 5% 1/16W		
1317		DEM	RESISTOR		R3511	1-208-920-81	METAL CHIP 24K 0.5% 1/16W		
1318		DEM	RESISTOR		R3512	1-208-927-11	METAL CHIP 47K 0.5% 1/16W		
1319		DEM	RESISTOR		R3513	1-240-247-91	RES, SQUARE TYPE CHIP 0.1		
1320		DEM	RESISTOR		R3514	1-240-247-91	RES, SQUARE TYPE CHIP 0.1		
1321		DEM	RESISTOR		R3601	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1322		DEM	RESISTOR		R3602	1-218-937-11	RES-CHIP 47 5% 1/16W		
1323		DEM	RESISTOR		R3603	1-218-933-11	RES-CHIP 22 5% 1/16W		
1324		DEM	RESISTOR		R3604	1-218-933-11	RES-CHIP 22 5% 1/16W		
1325		DEM	RESISTOR		R3605	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
1326		DEM	RESISTOR		R3606	1-208-707-11	METAL CHIP 10K 0.5% 1/16W		
1327		DEM	RESISTOR		R3607	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
1328		DEM	RESISTOR		R3608	1-220-205-11	RES-CHIP 75K 5% 1/16W		
1329		DEM	RESISTOR		R3609	1-216-864-11	SHORT CHIP 0		
1330		DEM	RESISTOR		R3701	1-218-990-11	SHORT CHIP 0		
1331		DEM	RESISTOR		R3702	1-218-990-11	SHORT CHIP 0		
1332		DEM	RESISTOR		R3705	1-218-933-11	RES-CHIP 22 5% 1/16W		
1333		DEM	RESISTOR		R3706	1-218-990-11	SHORT CHIP 0		
1334		DEM	RESISTOR		R3707	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1335		DEM	RESISTOR		R3708	1-218-990-11	SHORT CHIP 0		
1336		DEM	RESISTOR		R3709	1-218-990-11	SHORT CHIP 0		
1337		DEM	RESISTOR		R3710	1-218-990-11	SHORT CHIP 0		
1338		DEM	RESISTOR		R3711	1-218-989-11	RES-CHIP 1M 5% 1/16W		
1339		DEM	RESISTOR		R3712	1-218-941-81	RES-CHIP 100 5% 1/16W		
1340		DEM	RESISTOR		R3713	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1341		DEM	RESISTOR		R3801	1-218-990-11	SHORT CHIP 0		
1342		DEM	RESISTOR		R3802	1-218-990-11	SHORT CHIP 0		
1343		DEM	RESISTOR		R3803	1-218-990-11	SHORT CHIP 0		
1344		DEM	RESISTOR		R3804	1-218-990-11	SHORT CHIP 0		
1345		DEM	RESISTOR		R3805	1-218-933-11	RES-CHIP 22 5% 1/16W		
1346		DEM	RESISTOR		R3807	1-218-990-11	SHORT CHIP 0		
1347		DEM	RESISTOR		R3808	1-218-990-11	SHORT CHIP 0		
1348		DEM	RESISTOR		R3811	1-218-990-11	SHORT CHIP 0		
1349		DEM	RESISTOR		R3812	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1350		DEM	RESISTOR		R3813	1-218-990-11	SHORT CHIP 0		
1351		DEM	RESISTOR		R3814	1-218-990-11	SHORT CHIP 0		
1352		DEM	RESISTOR		R3815	1-218-941-11	RES-CHIP 100 5% 1/16W		
1353		DEM	RESISTOR		R3818	1-218-990-11	SHORT CHIP 0		
1354		DEM	RESISTOR		R3819	1-218-933-11	RES-CHIP 22 5% 1/16W		
1355		DEM	RESISTOR		R3820	1-218-965-11	RES-CHIP 10K 5% 1/16W		
1356		DEM	NETWORK		RB3101	1-233-785-91	RES, NETWORK 100 (1608)		
1357		DEM	NETWORK		RB3102	1-233-785-91	RES, NETWORK 100 (1608)		
1358		DEM	NETWORK		RB3103	1-234-370-21	RES, NETWORK 22X4 (1005)		
1359		DEM	NETWORK		RB3104	1-234-370-21	RES, NETWORK 22X4 (1005)		
1360		DEM	NETWORK		RB3105	1-234-370-21	RES, NETWORK 22X4 (1005)		
1361		DEM	NETWORK		RB3106	1-234-370-21	RES, NETWORK 22X4 (1005)		
1362		DEM	NETWORK		RB3108	1-234-370-21	RES, NETWORK 22X4 (1005)		
1363		DEM	NETWORK		RB3109	1-234-370-21	RES, NETWORK 22X4 (1005)		
1364		DEM	NETWORK		RB3258	1-234-370-21	RES, NETWORK 22X4 (1005)		
1365		DEM	NETWORK		RB3259	1-234-370-21	RES, NETWORK 22X4 (1005)		
1366		DEM	NETWORK		RB3260	1-234-370-21	RES, NETWORK 22X4 (1005)		
1367		DEM	NETWORK		RB3261	1-234-370-21	RES, NETWORK 22X4 (1005)		
1368		DEM	NETWORK		RB3262	1-234-370-21	RES, NETWORK 22X4 (1005)		
1369		DEM	NETWORK		RB3263	1-234-370-21	RES, NETWORK 22X4 (1005)		
1370		DEM	NETWORK		RB3264	1-234-372-21	RES, NETWORK 100X4 (1005)		
1371		DEM	NETWORK		RB3302	1-234-372-21	RES, NETWORK 100X4 (1005)		
1372		DEM	NETWORK		RB3303	1-234-372-21	RES, NETWORK 100X4 (1005)		
1373		DEM	NETWORK		RB3306	1-234-372-21	RES, NETWORK 100X4 (1005)		
1374		DEM	NETWORK		RB3308	1-234-372-21	RES, NETWORK 100X4 (1005)		
1375		DEM	NETWORK		RB3309	1-234-372-21	RES, NETWORK 100X4 (1005)		
1376		DEM	NETWORK		RB3312	1-234-372-21	RES, NETWORK 100X4 (1005)		
1377		DEM	NETWORK		RB3313	1-234-372-21	RES, NETWORK 100X4 (1005)		
1378		DEM	NETWORK		RB3314	1-233-785-91	RES, NETWORK 100 (1608)		
1379		DEM	NETWORK		RB3352	1-233-785-91	RES, NETWORK 100 (1608)		
1380		DEM	NETWORK		RB3402	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1381		DEM	NETWORK		RB3503	1-234-378-21	RES, NETWORK 10KX4 (1005)		
1382		DEM	NETWORK		RB3601	1-234-370-21	RES, NETWORK 22X4 (1005)		
1383		DEM	NETWORK		RB3602	1-234-370-21	RES, NETWORK 22X4 (1005)		
1384		DEM	NETWORK		RB3603	1-234-370-21	RES, NETWORK 22X4 (1005)		
1385		DEM	NETWORK		RB3604	1-234-370-21	RES, NETWORK 22X4 (1005)		
1386		DEM	NETWORK		RB3605	1-234-370-21	RES, NETWORK 22X4 (1005)		
1387		DEM	NETWORK		RB3606	1-234-370-21	RES, NETWORK 22X4 (1005)		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1388		DEM	NETWORK		RB3607	1-234-370-21	RES, NETWORK 22X4 (1005)		
1389		DEM	NETWORK		RB3608	1-234-370-21	RES, NETWORK 22X4 (1005)		
1390		DEM	NETWORK		RB3609	1-234-370-21	RES, NETWORK 22X4 (1005)		
1391		DEM	NETWORK		RB3610	1-234-370-21	RES, NETWORK 22X4 (1005)		
1392		DEM	NETWORK		RB3611	1-234-370-21	RES, NETWORK 22X4 (1005)		
1393		DEM	NETWORK		RB3612	1-234-370-21	RES, NETWORK 22X4 (1005)		
1394		DEM	NETWORK		RB3613	1-234-370-21	RES, NETWORK 22X4 (1005)		
1395		DEM	NETWORK		RB3614	1-234-370-21	RES, NETWORK 22X4 (1005)		
1396		DEM	NETWORK		RB3615	1-234-370-21	RES, NETWORK 22X4 (1005)		
1397		DEM	NETWORK		RB3616	1-234-371-21	RES, NETWORK 47X4 (1005)		
1398		DEM	NETWORK		RB3617	1-234-371-21	RES, NETWORK 47X4 (1005)		
1399		DEM	NETWORK		RB3618	1-234-371-21	RES, NETWORK 47X4 (1005)		
1400		DEM	NETWORK		RB3619	1-234-371-21	RES, NETWORK 47X4 (1005)		
1401		DEM	NETWORK		RB3620	1-234-371-21	RES, NETWORK 47X4 (1005)		
1402		DEM	NETWORK		RB3621	1-234-371-21	RES, NETWORK 47X4 (1005)		
1403		DEM	NETWORK		RB3622	1-234-371-21	RES, NETWORK 47X4 (1005)		
1404		DEM	NETWORK		RB3623	1-234-371-21	RES, NETWORK 47X4 (1005)		
1405		DEM	NETWORK		RB3624	1-234-371-21	RES, NETWORK 47X4 (1005)		
1406		DEM	NETWORK		RB3625	1-234-371-21	RES, NETWORK 47X4 (1005)		
1407		DEM	NETWORK		RB3626	1-234-371-21	RES, NETWORK 47X4 (1005)		
1408		DEM	NETWORK		RB3627	1-234-371-21	RES, NETWORK 47X4 (1005)		
1409		DEM	NETWORK		RB3628	1-234-371-21	RES, NETWORK 47X4 (1005)		
1410		DEM	NETWORK		RB3629	1-234-371-21	RES, NETWORK 47X4 (1005)		
1411		DEM	NETWORK		RB3630	1-234-371-21	RES, NETWORK 47X4 (1005)		
1412		DEM	NETWORK		RB3705	1-234-370-21	RES, NETWORK 22X4 (1005)		
1413		DEM	NETWORK		RB3706	1-234-370-21	RES, NETWORK 22X4 (1005)		
1414		DEM	NETWORK		RB3707	1-234-370-21	RES, NETWORK 22X4 (1005)		
1415		DEM	NETWORK		RB3708	1-234-370-21	RES, NETWORK 22X4 (1005)		
1416		DEM	NETWORK		RB3709	1-234-370-21	RES, NETWORK 22X4 (1005)		
1417		DEM	NETWORK		RB3710	1-234-370-21	RES, NETWORK 22X4 (1005)		
1418		DEM	NETWORK		RB3711	1-234-370-21	RES, NETWORK 22X4 (1005)		
1419		DEM	NETWORK		RB3712	1-234-370-21	RES, NETWORK 22X4 (1005)		
1420		DEM	NETWORK		RB3714	1-234-370-21	RES, NETWORK 22X4 (1005)		
1421		DEM	NETWORK		RB3801	1-234-370-21	RES, NETWORK 22X4 (1005)		
1422		DEM	SWITCH		S3351	1-692-271-21	SWITCH, SLIDE		
1423		DEM	CHIP CHCKER		TP3101	1-535-757-11	CHIP, CHECKER		
1424		DEM	CHIP CHCKER		TP3102	1-535-757-11	CHIP, CHECKER		
1425		DEM	CHIP CHCKER		TP3103	1-535-757-11	CHIP, CHECKER		
1426		DEM	CHIP CHCKER		TP3301	1-535-757-11	CHIP, CHECKER		
1427		DEM	CHIP CHCKER		TP3302	1-535-757-11	CHIP, CHECKER		
1428		DEM	CHIP CHCKER		TP3303	1-535-757-11	CHIP, CHECKER		
1429		DEM	CHIP CHCKER		TP3305	1-535-757-11	CHIP, CHECKER		
1430		DEM	CHIP CHCKER		TP3306	1-535-757-11	CHIP, CHECKER		
1431		DEM	CHIP CHCKER		TP3307	1-535-757-11	CHIP, CHECKER		
1432		DEM	CHIP CHCKER		TP3801	1-535-757-11	CHIP, CHECKER		
1433		DEM	CHIP CHCKER		TP3802	1-535-757-11	CHIP, CHECKER		
1434		DEM	CHIP CHCKER		TP3803	1-535-757-11	CHIP, CHECKER		
1435		DEM	CHIP CHCKER		TP3804	1-535-757-11	CHIP, CHECKER		
1436		DEM	CHIP CHCKER		TP3805	1-535-757-11	CHIP, CHECKER		
1437		DEM	VARISTOR		VD3101	1-805-043-11	ABSORBER, CHIP SURGE		
1438		DEM	VARISTOR		VD3102	1-805-043-11	ABSORBER, CHIP SURGE		
1439		DEM	VARISTOR		VD3103	1-805-043-11	ABSORBER, CHIP SURGE		
1440		DEM	VARISTOR		VD3104	1-805-043-11	ABSORBER, CHIP SURGE		
1441		DEM	VARISTOR		VD3105	1-805-043-11	ABSORBER, CHIP SURGE		
1442		DEM	VARISTOR		VD3106	1-805-043-11	ABSORBER, CHIP SURGE		
1443		DEM	VARISTOR		VD3107	1-805-043-11	ABSORBER, CHIP SURGE		
1444		DEM	VARISTOR		VD3108	1-805-043-11	ABSORBER, CHIP SURGE		
1445		DEM	CRYSTAL		X3401	1-813-070-21	PIEZOELECTRIC OSCILLATOR		
1446		DEM	CRYSTAL		X3701	1-813-071-21	VIBRATOR, CRYSTAL		
1447		K2	CAPACITOR		C3001	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1448		K2	CAPACITOR		C3002	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1449		K2	CAPACITOR		C3003	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1450		K2	CAPACITOR		C3004	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1451		K2	CAPACITOR		C3005	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1452		K2	CAPACITOR		C3006	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1453		K2	CAPACITOR		C3007	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1454		K2	CAPACITOR		C3008	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1455		K2	CAPACITOR		C3009	1-162-918-11	CERAMIC CHIP 18PF 5.00% 50V		
1456		K2	CAPACITOR		C3010	1-162-918-11	CERAMIC CHIP 18PF 5.00% 50V		
1457		K2	CAPACITOR		C3011	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1458		K2	CAPACITOR		C3012	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1459		K2	CAPACITOR		C3013	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
1460		K2	CAPACITOR		C3014	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1461		K2	CAPACITOR		C3015	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1462		K2	CAPACITOR		C3016	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1463		K2	CAPACITOR		C3017	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1464		K2	CAPACITOR		C3018	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1465		K2	CAPACITOR		C3019	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1466		K2	CAPACITOR		C3020	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1467		K2	CAPACITOR		C3021	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1468		K2	CAPACITOR		C3022	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1469		K2	CAPACITOR		C3023	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1470		K2	CAPACITOR		C3024	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1471		K2	CAPACITOR		C3025	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1472		K2	CAPACITOR		C3026	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1473		K2	CAPACITOR		C3027	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1474		K2	CAPACITOR		C3028	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1475		K2	CAPACITOR		C3029	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1476		K2	CAPACITOR		C3030	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1477		K2	CAPACITOR		C3031	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1478		K2	CAPACITOR		C3032	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1479		K2	CAPACITOR		C3033	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1480		K2	CAPACITOR		C3034	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1481		K2	CAPACITOR		C3035	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1482		K2	CAPACITOR		C3036	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1483		K2	CAPACITOR		C3037	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1484		K2	CAPACITOR		C3038	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1485		K2	CAPACITOR		C3039	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1486		K2	CAPACITOR		C3040	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1487		K2	CAPACITOR		C3043	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1488		K2	CAPACITOR		C3044	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1489		K2	CAPACITOR		C3045	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V		
1490		K2	CAPACITOR		C3046	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V		
1491		K2	CAPACITOR		C3047	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V		
1492		K2	CAPACITOR		C3048	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V		
1493		K2	CAPACITOR		C3049	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1494		K2	CAPACITOR		C3050	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1495		K2	CAPACITOR		C3051	1-117-319-51	ELECT 4700UF 20.00% 25V		
1496		K2	CAPACITOR		C3052	1-117-319-51	ELECT 4700UF 20.00% 25V		
1497		K2	CAPACITOR		C3053	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1498		K2	CAPACITOR		C3054	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
1499		K2	CAPACITOR		C3055	1-136-177-00	FILM 1UF 5.00% 50V		
1500		K2	CAPACITOR		C3056	1-136-177-00	FILM 1UF 5.00% 50V		
1501		K2	CAPACITOR		C3057	1-136-169-00	FILM 0.22UF 5.00% 50V		
1502		K2	CAPACITOR		C3058	1-136-169-00	FILM 0.22UF 5.00% 50V		
1503		K2	CAPACITOR		C3059	1-136-169-00	FILM 0.22UF 5.00% 50V		
1504		K2	CAPACITOR		C3060	1-136-169-00	FILM 0.22UF 5.00% 50V		
1505		K2	CAPACITOR		C3061	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1506		K2	CAPACITOR		C3062	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1507		K2	CAPACITOR		C3063	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1508		K2	CAPACITOR		C3064	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
1509		K2	CAPACITOR		C3065	1-126-949-11	ELECT 220UF 20.00% 35V		
1510		K2	CAPACITOR		C3067	1-117-319-51	ELECT 4700UF 20.00% 25V		
1511		K2	CAPACITOR		C3068	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
1512		K2	CAPACITOR		C3069	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
1513		K2	CAPACITOR		C3070	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
1514		K2	CAPACITOR		C3071	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
1515		K2	CAPACITOR		C3073	1-126-948-11	ELECT 100UF 20.00% 35V		
1516		K2	CAPACITOR		C3074	1-126-200-11	ELECT CHIP 10UF 20.00% 35V		
1517		K2	CAPACITOR		C3079	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
1518		K2	CAPACITOR		C3080	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
1519		K2	CAPACITOR		C3081	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
1520		K2	CAPACITOR		C3082	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
1521		K2	CAPACITOR		C3083	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
1522		K2	CAPACITOR		C3084	1-126-949-11	ELECT 220UF 20.00% 35V		
1523		K2	CAPACITOR		C3085	1-126-949-11	ELECT 220UF 20.00% 35V		
1524		K2	CAPACITOR		C3086	1-126-949-11	ELECT 220UF 20.00% 35V		
1525		K2	CAPACITOR		C3087	1-126-949-11	ELECT 220UF 20.00% 35V		
1526		K2	CAPACITOR		C3088	1-126-947-11	ELECT 47UF 20.00% 35V		
1527		K2	CAPACITOR		C3089	1-126-947-11	ELECT 47UF 20.00% 35V		
1528		K2	CONNECTOR	*	CN3001	1-779-268-21	PIN, CONNECTOR (1.5MM)(SMD)11P		
1529		K2	CONNECTOR	*	CN3002	1-766-175-11	PIN, CONNECTOR (PC BOARD) 5P		
1530		K2	CONNECTOR	*	CN3003	1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P		
1531		K2	DIODE		D3001	8-719-404-50	DIODE MA111-TX		
1532		K2	DIODE		D3002	8-719-404-50	DIODE MA111-TX		
1533		K2	DIODE		D3004	8-719-404-50	DIODE MA111-TX		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1534		K2	DIODE		D3005	8-719-404-50	DIODE MA111-TX		
1535		K2	DIODE		D3010	8-719-083-71	DIODE UDZSTE-1730B		
1536		K2	DIODE		D3011	8-719-083-71	DIODE UDZSTE-1730B		
1537		K2	DIODE		D3012	8-719-083-71	DIODE UDZSTE-1730B		
1538		K2	DIODE		D3013	8-719-083-71	DIODE UDZSTE-1730B		
1539		K2	DIODE		D3014	8-719-404-50	DIODE MA111-TX		
1540		K2	DIODE		D3015	8-719-017-35	DIODE 02DZ22-TPH3		
1541		K2	FUSE	△	F3002	1-576-458-21	FUSE 6.3A 63V		
1542		K2	FUSE	△	F3003	1-576-458-21	FUSE 6.3A 63V		
1543		K2	FUSE	△	F3005	1-576-458-21	FUSE 6.3A 63V		
1544		K2	FUSE	△	F3006	1-576-458-21	FUSE 6.3A 63V		
1545		K2	FERRITE BEAD		FB3001	1-414-864-11	FERRITE 0UH		
1546		K2	FERRITE BEAD		FB3002	1-414-229-11	FERRITE 0UH		
1547		K2	FERRITE BEAD		FB3003	1-414-229-11	FERRITE 0UH		
1548		K2	FERRITE BEAD		FB3004	1-414-229-11	FERRITE 0UH		
1549		K2	FERRITE BEAD		FB3005	1-414-229-11	FERRITE 0UH		
1550		K2	FERRITE BEAD		FB3006	1-414-229-11	FERRITE 0UH		
1551		K2	FERRITE BEAD		FB3007	1-414-229-11	FERRITE 0UH		
1552		K2	IC		IC3001	6-702-979-01	IC AK4114VQ-L		
1553		K2	IC		IC3002	8-759-548-99	IC SN74LV08APWR		
1554		K2	IC		IC3003	6-702-986-01	IC TAS5001PFBR		
1555		K2	IC		IC3004	6-704-828-01	IC TAS5100ADAPR		
1556		K2	IC		IC3005	6-704-828-01	IC TAS5100ADAPR		
1557		K2	COIL		L3001	1-412-537-31	INDUCTOR 100UH		
1558		K2	COIL		L3002	1-469-555-21	INDUCTOR 10UH		
1559		K2	COIL		L3003	1-469-555-21	INDUCTOR 10UH		
1560		K2	COIL		L3004	1-456-506-11	INDUCTOR 10UH		
1561		K2	COIL		L3005	1-456-506-11	INDUCTOR 10UH		
1562		K2	COIL		L3006	1-456-506-11	INDUCTOR 10UH		
1563		K2	COIL		L3007	1-456-506-11	INDUCTOR 10UH		
1564		K2	COIL		L3008	1-406-659-11	INDUCTOR 10UH		
1565		K2	TRANSISTOR		Q3001	8-729-928-90	TRANSISTOR DTC114EE		
1566		K2	TRANSISTOR		Q3002	8-729-230-49	TRANSISTOR 2SC2712-YG		
1567		K2	TRANSISTOR		Q3003	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
1568		K2	TRANSISTOR		Q3004	8-729-230-49	TRANSISTOR 2SC2712-YG		
1569		K2	TRANSISTOR		Q3005	8-729-230-49	TRANSISTOR 2SC2712-YG		
1570		K2	TRANSISTOR		Q3017	8-729-106-68	TRANSISTOR 2SD1615A-GP		
1571		K2	RESISTOR		R3001	1-216-864-11	SHORT CHIP 0		
1572		K2	RESISTOR		R3002	1-216-817-11	METAL CHIP 470 5% 1/10W		
1573		K2	RESISTOR		R3003	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1574		K2	RESISTOR		R3004	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1575		K2	RESISTOR		R3005	1-216-836-11	METAL CHIP 18K 5% 1/10W		
1576		K2	RESISTOR		R3007	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1577		K2	RESISTOR		R3008	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
1578		K2	RESISTOR		R3009	1-216-809-11	METAL CHIP 100 5% 1/10W		
1579		K2	RESISTOR		R3010	1-216-809-11	METAL CHIP 100 5% 1/10W		
1580		K2	RESISTOR		R3011	1-216-809-11	METAL CHIP 100 5% 1/10W		
1581		K2	RESISTOR		R3012	1-216-809-11	METAL CHIP 100 5% 1/10W		
1582		K2	RESISTOR		R3013	1-216-809-11	METAL CHIP 100 5% 1/10W		
1583		K2	RESISTOR		R3014	1-216-809-11	METAL CHIP 100 5% 1/10W		
1584		K2	RESISTOR		R3015	1-216-809-11	METAL CHIP 100 5% 1/10W		
1585		K2	RESISTOR		R3016	1-216-809-11	METAL CHIP 100 5% 1/10W		
1586		K2	RESISTOR		R3017	1-216-809-11	METAL CHIP 100 5% 1/10W		
1587		K2	RESISTOR		R3018	1-216-797-11	METAL CHIP 10 5% 1/10W		
1588		K2	RESISTOR		R3019	1-216-864-11	SHORT CHIP 0		
1589		K2	RESISTOR		R3020	1-216-809-11	METAL CHIP 100 5% 1/10W		
1590		K2	RESISTOR		R3021	1-216-797-11	METAL CHIP 10 5% 1/10W		
1591		K2	RESISTOR		R3022	1-216-797-11	METAL CHIP 10 5% 1/10W		
1592		K2	RESISTOR		R3023	1-216-797-11	METAL CHIP 10 5% 1/10W		
1593		K2	RESISTOR		R3024	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1594		K2	RESISTOR		R3025	1-216-797-11	METAL CHIP 10 5% 1/10W		
1595		K2	RESISTOR		R3026	1-216-797-11	METAL CHIP 10 5% 1/10W		
1596		K2	RESISTOR		R3027	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1597		K2	RESISTOR		R3028	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1598		K2	RESISTOR		R3029	1-216-864-11	SHORT CHIP 0		
1599		K2	RESISTOR		R3030	1-216-813-11	METAL CHIP 220 5% 1/10W		
1600		K2	RESISTOR		R3031	1-216-797-11	METAL CHIP 10 5% 1/10W		
1601		K2	RESISTOR		R3034	1-216-864-11	SHORT CHIP 0		
1602		K2	RESISTOR		R3035	1-216-797-11	METAL CHIP 10 5% 1/10W		
1603		K2	RESISTOR		R3037	1-216-797-11	METAL CHIP 10 5% 1/10W		
1604		K2	RESISTOR		R3038	1-216-994-11	METAL CHIP 13K 5% 1/10W		
1605		K2	RESISTOR		R3039	1-216-994-11	METAL CHIP 13K 5% 1/10W		
1606		K2	RESISTOR		R3040	1-216-994-11	METAL CHIP 13K 5% 1/10W		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1607		K2	RESISTOR		R3041	1-216-994-11	METAL CHIP 13K 5% 1/10W		
1608		K2	RESISTOR		R3046	1-216-864-11	SHORT CHIP 0		
1609		K2	RESISTOR		R3047	1-219-107-91	RES-CHIP 1.5 5% 1/8W		
1610		K2	RESISTOR		R3050	1-219-107-91	RES-CHIP 1.5 5% 1/8W		
1611		K2	RESISTOR		R3051	1-219-107-91	RES-CHIP 1.5 5% 1/8W		
1612		K2	RESISTOR		R3054	1-219-107-91	RES-CHIP 1.5 5% 1/8W		
1613		K2	RESISTOR		R3055	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1614		K2	RESISTOR		R3056	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1615		K2	RESISTOR		R3057	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1616		K2	RESISTOR		R3058	1-217-671-11	RES-CHIP 1 5% 1/10W		
1617		K2	RESISTOR		R3059	1-216-821-11	METAL CHIP 1K 5% 1/10W		
1618		K2	RESISTOR		R3060	1-216-809-11	METAL CHIP 100 5% 1/10W		
1619		K2	RESISTOR		R3061	1-216-841-11	METAL CHIP 47K 5% 1/10W		
1620		K2	RESISTOR		R3062	1-217-806-11	RES-CHIP 1 5% 1/8W		
1621		K2	RESISTOR		R3063	1-217-806-11	RES-CHIP 1 5% 1/8W		
1622		K2	RESISTOR		R3064	1-217-806-11	RES-CHIP 1 5% 1/8W		
1623		K2	RESISTOR		R3065	1-217-806-11	RES-CHIP 1 5% 1/8W		
1624		K2	RESISTOR		R3066	1-216-847-11	METAL CHIP 150K 5% 1/10W		
1625		K2	RESISTOR		R3068	1-216-847-11	METAL CHIP 150K 5% 1/10W		
1626		K2	RESISTOR		R3069	1-216-847-11	METAL CHIP 150K 5% 1/10W		
1627		K2	RESISTOR		R3070	1-216-847-11	METAL CHIP 150K 5% 1/10W		
1628		K2	RESISTOR		R3071	1-216-847-11	METAL CHIP 150K 5% 1/10W		
1629		K2	RESISTOR		R3072	1-215-872-11	METAL OXIDE 3.3K 5% 1W		
1630		K2	RESISTOR		R3075	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1631		K2	RESISTOR		R3077	1-249-377-11	CARBON 0.47 5% 1/4W		
1632		K2	RESISTOR		R3078	1-249-377-11	CARBON 0.47 5% 1/4W		
1633		K2	RESISTOR		R3083	1-216-797-11	METAL CHIP 10 5% 1/10W		
1634		K2	RESISTOR		R3084	1-216-797-11	METAL CHIP 10 5% 1/10W		
1635		K2	CHIP CHCKER		TP3001	1-535-877-22	CHIP, CHECKER		
1636		K2	CHIP CHCKER		TP3002	1-535-877-22	CHIP, CHECKER		
1637		K2	CHIP CHCKER		TP3003	1-535-877-22	CHIP, CHECKER		
1638		K2	CHIP CHCKER		TP3004	1-535-757-11	CHIP, CHECKER		
1639		K2	CHIP CHCKER		TP3005	1-535-757-11	CHIP, CHECKER		
1640		K2	CHIP CHCKER		TP3006	1-535-757-11	CHIP, CHECKER		
1641		K2	CHIP CHCKER		TP3007	1-535-757-11	CHIP, CHECKER		
1642		K2	CRYSTAL		X3001	1-795-420-21	VIBRATOR, CRYSTAL		
1643		F1	CAPACITOR		C601	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
1644		F1	CAPACITOR		C602	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
1645		F1	CAPACITOR		C603	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
1646		F1	CAPACITOR		C604	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
1647		F1	CAPACITOR		C605	1-107-680-91	ELECT 22UF 20.00% 450V		
1648		F1	CAPACITOR		C607	1-101-821-00	CERAMIC 0.0022UF 500V		
1649		F1	CAPACITOR		C608	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
1650		F1	CAPACITOR		C609	1-165-531-11	MYLAR 1UF 10 275V		
1651		F1	CAPACITOR		C610	1-164-161-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1652		F1	CAPACITOR		C611	1-165-531-11	MYLAR 1UF 10 275V		
1653		F1	CAPACITOR		C612	1-126-964-11	ELECT 10UF 20.00% 50V		
1654		F1	CAPACITOR	*	C613	1-165-909-21	CERAMIC CHIP 470PF 10% 630V		
1655		F1	CAPACITOR		C617	1-119-886-51	CERAMIC 470PF 10.00% 250V		
1656		F1	CAPACITOR		C618	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
1657		F1	CAPACITOR		C619	1-128-949-31	ELECT 470UF 20% 16V		
1658		F1	CAPACITOR		C620	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
1659		F1	CAPACITOR		C621	1-104-665-11	ELECT 100UF 20.00% 25V		
1660		F1	CAPACITOR		C622	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
1661		F1	CAPACITOR		C623	1-163-009-91	CERAMIC CHIP 0.001UF 10.00% 50V		
1662		F1	CONNECTOR	*	CN601	1-580-843-11	PIN, CONNECTOR (POWER)		
1663		F1	CONNECTOR	*	CN603	1-580-843-11	PIN, CONNECTOR (POWER)		
1664		F1	CONNECTOR	*	CN604	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P		
1665		F1	DIODE		D601	8-719-051-93	DIODE DF06M-6031		
1666		F1	DIODE		D602	8-719-030-33	DIODE EG01CV1		
1667		F1	DIODE		D603	8-719-063-74	DIODE D1NL20U-TR2		
1668		F1	DIODE		D604	8-719-063-74	DIODE D1NL20U-TR2		
1669		F1	DIODE		D605	8-719-041-97	DIODE MA113-(TX)		
1670		F1	FUSE	Δ	F601	1-576-697-11	FUSE 15A 125V		
1671		F1	IC		IC601	6-703-136-01	IC MIP2C20MP1SO		
1672		F1	IC		IC602	8-759-682-42	IC MM1431ATT		
1673		F1	COIL		L602	1-412-525-31	INDUCTOR 10UH		
1674		F1	PHOTO COUPLER		PH601	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
1675		F1	TRANSISTOR		Q601	8-729-023-22	TRANSISTOR 2SD2114K		
1676		F1	RESISTOR		R601	1-218-642-11	METAL OXIDE 100K 5% 1W		
1677		F1	RESISTOR		R603	1-216-111-00	RES-CHIP 390K 5% 1/10W		
1678		F1	RESISTOR		R604	1-249-402-11	CARBON 56 5% 1/4W		
1679		F1	RESISTOR		R605	1-216-077-91	RES-CHIP 15K 5% 1/10W		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1680		F1	RESISTOR		R606	1-216-017-91	RES-CHIP 47 5% 1/10W		
1681		F1	RESISTOR		R607	1-216-041-00	RES-CHIP 470 5% 1/10W		
1682		F1	RESISTOR		R608	1-216-081-00	RES-CHIP 22K 5% 1/10W		
1683		F1	RESISTOR		R609	1-216-077-91	RES-CHIP 15K 5% 1/10W		
1684		F1	RESISTOR		R610	1-216-065-91	RES-CHIP 4.7K 5% 1/10W		
1685		F1	RESISTOR		R611	1-216-077-91	RES-CHIP 15K 5% 1/10W		
1686		F1	RESISTOR		R614	1-216-360-11	METAL OXIDE 8.2 5% 1W		
1687		F1	RESISTOR		R615	1-249-377-11	CARBON 0.47 5% 1/4W		
1688		F1	RESISTOR		R616	1-216-049-11	RES-CHIP 1K 5% 1/10W		
1689		F1	RELAY		RY601	1-755-261-11	RELAY, AC POWER		
1690		F1	TRANSFORMER		T601	1-456-565-11	LINE FILTER COIL		
1691		F1	TRANSFORMER		T602	1-456-565-11	LINE FILTER COIL		
1692		F1	TRANSFORMER		T603	1-443-116-11	DC-DC CONVERTER TRANSFORMER		
1693		F1	TRANSFORMER		T604	1-409-586-11	COIL, LINE FILTER		
1694		F1	THERMISTOR		TH601	1-803-586-11	THERMISTOR, NTC		
1695		F1	VARISTOR		VDR601	1-803-830-31	VARISTOR (ERZV14D621)		
1696		F1	VARISTOR		VDR602	1-803-830-31	VARISTOR (ERZV14D621)		
1697		F1	VARISTOR		VDR603	1-810-977-21	VARISTOR		
1698		F1	VARISTOR		VDR604	1-805-043-11	ABSORBER, CHIP SURGE		
1699		K3	CAPACITOR		C7002	1-136-177-00	FILM 1UF 5.00% 50V		
1700		K3	CAPACITOR		C7003	1-136-177-00	FILM 1UF 5.00% 50V		
1701		K3	CONNECTOR	*	CN7001	1-564-704-11	PIN, CONNECTOR (SMALL TYPE) 2P		
1702		K3	CONNECTOR	*	CN7002	1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P		
1703		K3	CONNECTOR		CN7003	1-695-915-11	TAB (CONTACT)		
1704		K3	CONNECTOR	*	CN7004	1-766-175-11	PIN, CONNECTOR (PC BOARD) 5P		
1705		K3	CONNECTOR		CN7005	1-537-238-11	TERMINAL BOARD		
1706		K3	DIODE		D7001	8-719-404-50	DIODE MA111-TX		
1707		K3	DIODE		D7002	8-719-404-50	DIODE MA111-TX		
1708		K3	DIODE		D7003	8-719-041-97	DIODE MA113-(TX)		
1709		K3	DIODE		D7004	8-719-041-97	DIODE MA113-(TX)		
1710		K3	DIODE		D7005	8-719-083-66	DIODE UDZSTE-1718B		
1711		K3	DIODE		D7006	8-719-083-66	DIODE UDZSTE-1718B		
1712		K3	DIODE		D7007	8-719-083-66	DIODE UDZSTE-1718B		
1713		K3	DIODE		D7008	8-719-083-66	DIODE UDZSTE-1718B		
1714		K3	RESISTOR		R7001	1-260-304-51	CARBON 10 5% 1/2W		
1715		K3	RESISTOR		R7002	1-260-304-51	CARBON 10 5% 1/2W		
1716		K3	RELAY		RY7001	1-755-509-11	RELAY (FOR SIGNAL)		
1717		K3	RELAY		RY7002	1-755-509-11	RELAY (FOR SIGNAL)		
1718		K3	SWITCH		S7001	1-786-028-11	SWITCH, SLIDE		
1719		R1	CAPACITOR		C701	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
1720		R1	CAPACITOR		C702	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1721		R1	CAPACITOR		C712	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1722		R1	CAPACITOR		C714	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1723		R1	CAPACITOR		C715	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1724		R1	CONNECTOR	*	CN701	1-565-882-11	PIN, CONNECTOR (PC BOARD) 10P		
1725		R1	DIODE		D701	6-500-487-01	DIODE SMLU12D16W		
1726		R1	DIODE		D703	6-500-487-01	DIODE SMLU12D16W		
1727		R1	DIODE		D705	6-500-425-01	DIODE SELU1E50CM		
1728		R1	IC		IC701	6-600-117-01	IC GP1UM27SRK		
1729		R1	TRANSISTOR		Q701	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1730		R1	TRANSISTOR		Q702	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1731		R1	TRANSISTOR		Q703	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1732		R1	TRANSISTOR		Q704	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1733		R1	TRANSISTOR		Q705	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1734		R1	TRANSISTOR		Q706	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1735		R1	RESISTOR		R701	1-216-812-11	METAL CHIP 180 5% 1/10W		
1736		R1	RESISTOR		R702	1-216-809-11	METAL CHIP 100 5% 1/10W		
1737		R1	RESISTOR		R703	1-216-812-11	METAL CHIP 180 5% 1/10W		
1738		R1	RESISTOR		R704	1-216-820-11	METAL CHIP 820 5% 1/10W		
1739		R1	RESISTOR		R705	1-216-814-11	METAL CHIP 270 5% 1/10W		
1740		R1	RESISTOR		R706	1-216-820-11	METAL CHIP 820 5% 1/10W		
1741		R1	RESISTOR		R710	1-216-805-11	METAL CHIP 47 5% 1/10W		
1742		R1	RESISTOR		R712	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1743		R1	RESISTOR		R714	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1744		R1	RESISTOR		R715	1-216-833-11	METAL CHIP 10K 5% 1/10W		
1745		R2	CONNECTOR	*	CN751	1-565-876-11	PIN, CONNECTOR (PC BOARD) 4P		
1746		R2	DIODE		D751	6-500-870-01	DIODE NSPW500BS-A0		
1747		R2	DIODE		D752	6-500-870-01	DIODE NSPW500BS-A0		
1748		R2	DIODE		D753	6-500-870-01	DIODE NSPW500BS-A0		
1749		R2	DIODE		D754	6-500-870-01	DIODE NSPW500BS-A0		
1750		R2	DIODE		D761	6-500-870-01	DIODE NSPW500BS-A0		
1751		R2	DIODE		D762	6-500-870-01	DIODE NSPW500BS-A0		
1752		R2	DIODE		D763	6-500-870-01	DIODE NSPW500BS-A0		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1753		R2	TRANSISTOR		Q751	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1754		R2	TRANSISTOR		Q752	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1755		R2	TRANSISTOR		Q753	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1756		R2	TRANSISTOR		Q754	8-729-028-73	TRANSISTOR DTA114EUA-T106		
1757		R2	RESISTOR		R751	1-216-809-11	METAL CHIP 100 5% 1/10W		
1758		R2	RESISTOR		R752	1-216-809-11	METAL CHIP 100 5% 1/10W		
1759		R2	RESISTOR		R753	1-216-809-11	METAL CHIP 100 5% 1/10W		
1760		R2	RESISTOR		R754	1-216-809-11	METAL CHIP 100 5% 1/10W		
1761		R2	RESISTOR		R761	1-216-809-11	METAL CHIP 100 5% 1/10W		
1762		R2	RESISTOR		R762	1-216-809-11	METAL CHIP 100 5% 1/10W		
1763		R2	RESISTOR		R763	1-216-809-11	METAL CHIP 100 5% 1/10W		
1764		A	CAPACITOR		C8000	1-128-407-11	ELECT CHIP 47UF 20% 50V		
1765		A	CAPACITOR		C8001	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1766		A	CAPACITOR		C8002	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1767		A	CAPACITOR		C8003	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1768		A	CAPACITOR		C8004	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1769		A	CAPACITOR		C8005	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1770		A	CAPACITOR		C8007	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1771		A	CAPACITOR		C8008	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1772		A	CAPACITOR		C8010	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1773		A	CAPACITOR		C8011	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1774		A	CAPACITOR		C8012	1-115-156-11	CERAMIC CHIP 1UF 10V		
1775		A	CAPACITOR		C8013	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
1776		A	CAPACITOR		C8014	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1777		A	CAPACITOR		C8015	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1778		A	CAPACITOR		C8016	1-128-407-11	ELECT CHIP 47UF 20% 50V		
1779		A	CAPACITOR		C8017	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1780		A	CAPACITOR		C8018	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1781		A	CAPACITOR		C8019	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1782		A	CAPACITOR		C8020	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1783		A	CAPACITOR		C8021	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1784		A	CAPACITOR		C8022	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1785		A	CAPACITOR		C8024	1-107-778-11	ELECT CHIP 470UF 20% 16V		
1786		A	CAPACITOR		C8025	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1787		A	CAPACITOR		C8026	1-115-156-11	CERAMIC CHIP 1UF 10V		
1788		A	CAPACITOR		C8027	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1789		A	CAPACITOR		C8028	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1790		A	CAPACITOR		C8029	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
1791		A	CAPACITOR		C8031	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1792		A	CAPACITOR		C8032	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1793		A	CAPACITOR		C8033	1-104-607-11	ELECT CHIP 47UF 20.00% 16V		
1794		A	CAPACITOR		C8034	1-128-594-11	ELECT CHIP 1UF 20.00% 50V		
1795		A	CAPACITOR		C8035	1-128-594-11	ELECT CHIP 1UF 20.00% 50V		
1796		A	CAPACITOR		C8036	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1797		A	CAPACITOR		C8037	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1798		A	CAPACITOR		C8041	1-128-594-11	ELECT CHIP 1UF 20.00% 50V		
1799		A	CAPACITOR		C8200	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1800		A	CAPACITOR		C8201	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1801		A	CAPACITOR		C8202	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1802		A	CAPACITOR		C8203	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1803		A	CAPACITOR		C8204	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1804		A	CAPACITOR		C8205	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
1805		A	CAPACITOR		C8206	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
1806		A	CAPACITOR		C8207	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
1807		A	CAPACITOR		C8208	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
1808		A	CAPACITOR		C8210	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1809		A	CAPACITOR		C8211	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1810		A	CAPACITOR		C8212	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1811		A	CAPACITOR		C8214	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1812		A	CAPACITOR		C8215	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1813		A	CAPACITOR		C8216	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1814		A	CAPACITOR		C8217	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1815		A	CAPACITOR		C8218	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1816		A	CAPACITOR		C8219	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1817		A	CAPACITOR		C8221	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1818		A	CAPACITOR		C8222	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1819		A	CAPACITOR		C8223	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V		
1820		A	CAPACITOR		C8227	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1821		A	CAPACITOR		C8228	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1822		A	CAPACITOR		C8229	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1823		A	CAPACITOR		C8230	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1824		A	CAPACITOR		C8231	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1825		A	CAPACITOR		C8232	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		


No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1826		A	CAPACITOR		C8233	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1827		A	CAPACITOR		C8234	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1828		A	CAPACITOR		C8235	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1829		A	CAPACITOR		C8400	1-164-360-11	CERAMIC CHIP 0.1UF 16V		
1830		A	CAPACITOR		C8401	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1831		A	CAPACITOR		C8402	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1832		A	CAPACITOR		C8403	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1833		A	CAPACITOR		C8404	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1834		A	CAPACITOR		C8405	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1835		A	CAPACITOR		C8406	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1836		A	CAPACITOR		C8407	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1837		A	CAPACITOR		C8408	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1838		A	CAPACITOR		C8409	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1839		A	CAPACITOR		C8410	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1840		A	CAPACITOR		C8411	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1841		A	CAPACITOR		C8412	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1842		A	CAPACITOR		C8413	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1843		A	CAPACITOR		C8414	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1844		A	CAPACITOR		C8415	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1845		A	CAPACITOR		C8416	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V		
1846		A	CAPACITOR		C8417	1-126-394-11	ELECT CHIP 10UF 20.00% 16V		
1847		A	CAPACITOR		C8418	1-128-590-11	ELECT CHIP 100UF 20.00% 6.3V		
1848		A	CAPACITOR		C8420	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1849		A	CAPACITOR		C8421	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1850		A	CAPACITOR		C8422	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1851		A	CAPACITOR		C8424	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
1852		A	CAPACITOR		C8425	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1853		A	CAPACITOR		C8426	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
1854		A	CAPACITOR		C8427	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1855		A	CAPACITOR		C8429	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1856		A	CAPACITOR		C8430	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1857		A	CAPACITOR		C8431	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1858		A	CAPACITOR		C8432	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1859		A	CAPACITOR		C8433	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1860		A	CAPACITOR		C8434	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1861		A	CAPACITOR		C8435	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1862		A	CAPACITOR		C8436	1-164-360-11	CERAMIC CHIP 0.1UF 16V		
1863		A	CAPACITOR		C8437	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1864		A	CAPACITOR		C8438	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1865		A	CAPACITOR		C8439	1-128-394-11	ELECT CHIP 220UF 20% 10V		
1866		A	CAPACITOR		C8501	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1867		A	CAPACITOR		C8502	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1868		A	CAPACITOR		C8503	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1869		A	CAPACITOR		C8504	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
1870		A	CAPACITOR		C8507	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
1871		A	CAPACITOR		C8508	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1872		A	CAPACITOR		C8509	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1873		A	CAPACITOR		C8510	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1874		A	CAPACITOR		C8512	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1875		A	CAPACITOR		C8514	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1876		A	CAPACITOR		C8515	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
1877		A	CAPACITOR		C8516	1-162-916-11	CERAMIC CHIP 12PF 5.00% 50V		
1878		A	CAPACITOR		C8520	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1879		A	CAPACITOR		C8521	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1880		A	CAPACITOR		C8522	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1881		A	CAPACITOR		C8523	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
1882		A	CAPACITOR		C8524	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
1883		A	CAPACITOR		C8525	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1884		A	CAPACITOR		C8526	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1885		A	CAPACITOR		C8527	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1886		A	CAPACITOR		C8528	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
1887		A	CAPACITOR		C8529	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1888		A	CAPACITOR		C8530	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1889		A	CAPACITOR		C8531	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1890		A	CAPACITOR		C8532	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
1891		A	CAPACITOR		C8533	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1892		A	CAPACITOR		C8534	1-165-871-21	ELECT CHIP 22UF 20% 6.3V		
1893		A	CAPACITOR		C8535	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1894		A	CAPACITOR		C8536	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1895		A	CAPACITOR		C8537	1-216-864-11	SHORT CHIP 0		
1896		A	CAPACITOR		C8540	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1897		A	CAPACITOR		C8541	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1898		A	CAPACITOR		C8542	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1899		A	CAPACITOR		C8544	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1900		A	CAPACITOR		C8545	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1901		A	CAPACITOR		C8546	1-216-864-11	SHORT CHIP 0		
1902		A	CAPACITOR		C8547	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1903		A	CAPACITOR		C8548	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1904		A	CAPACITOR		C8549	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1905		A	CAPACITOR		C8550	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1906		A	CAPACITOR		C8551	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1907		A	CAPACITOR		C8552	1-128-993-21	ELECT CHIP 22UF 20% 10V		
1908		A	CAPACITOR		C8553	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1909		A	CAPACITOR		C8600	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1910		A	CAPACITOR		C8601	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1911		A	CAPACITOR		C8602	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V		
1912		A	CAPACITOR		C8603	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
1913		A	CAPACITOR		C8604	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
1914		A	CAPACITOR		C8605	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1915		A	CAPACITOR		C8606	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1916		A	CAPACITOR		C8607	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V		
1917		A	CAPACITOR		C8608	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V		
1918		A	CAPACITOR		C8609	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
1919		A	CAPACITOR		C8610	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
1920		A	CAPACITOR		C8611	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
1921		A	CAPACITOR		C8612	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1922		A	CAPACITOR		C8613	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1923		A	CAPACITOR		C8614	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1924		A	CAPACITOR		C8615	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1925		A	CAPACITOR		C8616	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1926		A	CAPACITOR		C8617	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
1927		A	CAPACITOR		C8618	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
1928		A	CAPACITOR		C8619	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1929		A	CAPACITOR		C8620	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1930		A	CAPACITOR		C8621	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1931		A	CAPACITOR		C8622	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1932		A	CAPACITOR		C8623	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1933		A	CAPACITOR		C8624	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
1934		A	CAPACITOR		C8625	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1935		A	CAPACITOR		C8626	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1936		A	CAPACITOR		C8627	1-128-394-11	ELECT CHIP 220UF 20% 10V		
1937		A	CAPACITOR		C8628	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1938		A	CAPACITOR		C8629	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1939		A	CAPACITOR		C8630	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1940		A	CAPACITOR		C8631	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1941		A	CAPACITOR		C8632	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1942		A	CAPACITOR		C8633	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1943		A	CAPACITOR		C8634	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1944		A	CAPACITOR		C8635	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1945		A	CAPACITOR		C8636	1-164-172-11	CERAMIC CHIP 0.0056UF 10.00% 25V		
1946		A	CAPACITOR		C8637	1-110-563-11	CERAMIC CHIP 0.068UF 10.00% 16V		
1947		A	CAPACITOR		C8638	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1948		A	CAPACITOR		C8639	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1949		A	CAPACITOR		C8640	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
1950		A	CAPACITOR		C8643	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
1951		A	CAPACITOR		C8644	1-162-963-11	CERAMIC CHIP 680PF 10.00% 50V		
1952		A	CAPACITOR		C8645	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1953		A	CAPACITOR		C8646	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
1954		A	CAPACITOR		C8648	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
1955		A	CAPACITOR		C8649	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
1956		A	CAPACITOR		C8650	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1957		A	CAPACITOR		C8661	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1958		A	CAPACITOR		C8662	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1959		A	CAPACITOR		C8666	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1960		A	CAPACITOR		C8667	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1961		A	CAPACITOR		C8668	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1962		A	CAPACITOR		C8669	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1963		A	CAPACITOR		C8670	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1964		A	CAPACITOR		C8671	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1965		A	CAPACITOR		C8672	1-216-295-91	SHORT CHIP 0		
1966		A	CAPACITOR		C8673	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
1967		A	CAPACITOR		C8674	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1968		A	CAPACITOR		C8802	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1969		A	CAPACITOR		C8803	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1970		A	CAPACITOR		C8805	1-164-360-11	CERAMIC CHIP 0.1UF 16V		
1971		A	CAPACITOR		C8806	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
1972		A	CAPACITOR		C8807	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1973		A	CAPACITOR		C8808	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1974		A	CAPACITOR		C8809	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1975		A	CAPACITOR		C8810	1-127-804-91	CERAMIC CHIP 100PF 1% 50V		
1976		A	CAPACITOR		C8811	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1977		A	CAPACITOR		C8812	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
1978		A	CAPACITOR		C8813	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1979		A	CAPACITOR		C8814	1-127-573-11	CERAMIC CHIP 1UF 10% 16V		
1980		A	CAPACITOR		C8815	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1981		A	CAPACITOR		C8816	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
1982		A	CAPACITOR		C8817	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
1983		A	CAPACITOR		C8818	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1984		A	CAPACITOR		C8819	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1985		A	CAPACITOR		C8820	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1986		A	CAPACITOR		C8821	1-127-804-91	CERAMIC CHIP 100PF 1% 50V		
1987		A	CAPACITOR		C8822	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
1988		A	CAPACITOR		C8823	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1989		A	CAPACITOR		C8824	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1990		A	CAPACITOR		C8826	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
1991		A	CAPACITOR		C8827	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
1992		A	CAPACITOR		C8828	1-128-934-91	CERAMIC CHIP 0.33UF 20% 10V		
1993		A	CAPACITOR		C8829	1-162-977-11	CERAMIC CHIP 0.0018UF 10.00% 50V		
1994		A	CAPACITOR		C8830	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1995		A	CAPACITOR		C8831	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
1996		A	CAPACITOR		C8832	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
1997		A	CAPACITOR		C8833	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
1998		A	CAPACITOR		C8834	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
1999		A	CAPACITOR		C8835	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2000		A	CAPACITOR		C8836	1-128-934-91	CERAMIC CHIP 0.33UF 20% 10V		
2001		A	CAPACITOR		C8837	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
2002		A	CAPACITOR		C8838	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
2003		A	CAPACITOR		C8839	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2004		A	CAPACITOR		C8840	1-128-993-21	ELECT CHIP 22UF 20% 10V		
2005		A	CAPACITOR		C8841	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
2006		A	CAPACITOR		C8842	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
2007		A	CAPACITOR		C8843	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2008		A	CAPACITOR		C8844	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
2009		A	CAPACITOR		C8845	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
2010		A	CAPACITOR		C8847	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2011		A	CAPACITOR		C8849	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2012		A	CAPACITOR		C8850	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2013		A	CAPACITOR		C8854	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2014		A	CAPACITOR		C8855	1-107-778-11	ELECT CHIP 470UF 20% 16V		
2015		A	CAPACITOR		C8856	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
2016		A	CAPACITOR		C8857	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
2017		A	CAPACITOR		C8858	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
2018		A	CAPACITOR		C8859	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
2019		A	CAPACITOR		C8860	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
2020		A	CAPACITOR		C8861	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
2021		A	CAPACITOR		C8862	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
2022		A	CAPACITOR		C8863	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
2023		A	CAPACITOR		C8864	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
2024		A	CAPACITOR		C8865	1-216-864-11	SHORT CHIP 0		
2025		A	CAPACITOR		C8866	1-216-864-11	SHORT CHIP 0		
2026		A	CAPACITOR		C8867	1-128-934-91	CERAMIC CHIP 0.33UF 20% 10V		
2027		A	CAPACITOR		C8868	1-162-977-11	CERAMIC CHIP 0.0018UF 10.00% 50V		
2028		A	CAPACITOR		C8869	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V		
2029		A	CAPACITOR		C8870	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
2030		A	CAPACITOR		C8871	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
2031		A	CAPACITOR		C8872	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
2032		A	CAPACITOR		C8873	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
2033		A	CAPACITOR		C8874	1-126-193-11	ELECT CHIP 1UF 20.00% 50V		
2034		A	CAPACITOR		C8875	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
2035		A	CAPACITOR		C8876	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V		
2036		A	CAPACITOR		C8877	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
2037		A	CAPACITOR		C8878	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2038		A	CAPACITOR		C8879	1-128-594-11	ELECT CHIP 1UF 20.00% 50V		
2039		A	CAPACITOR		C8880	1-128-594-11	ELECT CHIP 1UF 20.00% 50V		
2040		A	CAPACITOR		C8881	1-128-993-21	ELECT CHIP 22UF 20% 10V		
2041		A	CAPACITOR		C9301	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
2042		A	CAPACITOR		C9302	1-100-165-21	ELECT CHIP 47UF 20% 20V		
2043		A	CAPACITOR		C9303	1-100-390-21	ELECT CHIP 180UF 20% 6.3V		
2044		A	CAPACITOR		C9304	1-110-530-11	ELECT CHIP 1000UF 20% 6.3V		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2045		A	CAPACITOR		C9305	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
2046		A	CAPACITOR		C9306	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
2047		A	CAPACITOR		C9307	1-100-165-21	ELECT CHIP 47UF 20% 20V		
2048		A	CAPACITOR		C9308	1-100-390-21	ELECT CHIP 180UF 20% 6.3V		
2049		A	CAPACITOR		C9309	1-110-530-11	ELECT CHIP 1000UF 20% 6.3V		
2050		A	CAPACITOR		C9310	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
2051		A	CAPACITOR		C9311	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
2052		A	CAPACITOR		C9312	1-100-165-21	ELECT CHIP 47UF 20% 20V		
2053		A	CAPACITOR		C9313	1-100-390-21	ELECT CHIP 180UF 20% 6.3V		
2054		A	CAPACITOR		C9314	1-110-530-11	ELECT CHIP 1000UF 20% 6.3V		
2055		A	CAPACITOR		C9315	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
2056		A	CAPACITOR		C9316	1-125-988-21	ELECT CHIP 330UF 20% 25V		
2057		A	CAPACITOR		C9317	1-125-988-21	ELECT CHIP 330UF 20% 25V		
2058		A	CAPACITOR		C9318	1-125-988-21	ELECT CHIP 330UF 20% 25V		
2059		A	CAPACITOR		C9319	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
2060		A	CAPACITOR		C9320	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
2061		A	CAPACITOR		C9321	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
2062		A	CAPACITOR		C9322	1-127-861-11	CERAMIC CHIP 2.2UF 10% 16V		
2063		A	CAPACITOR		C9323	1-127-861-11	CERAMIC CHIP 2.2UF 10% 16V		
2064		A	CAPACITOR		C9324	1-127-861-11	CERAMIC CHIP 2.2UF 10% 16V		
2065		A	CAPACITOR		C9402	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
2066		A	CAPACITOR		C9403	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
2067		A	CAPACITOR		C9404	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
2068		A	CAPACITOR		C9405	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
2069		A	CAPACITOR		C9406	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
2070		A	CAPACITOR		C9407	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
2071		A	CAPACITOR		C9408	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
2072		A	CAPACITOR		C9409	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
2073		A	CAPACITOR		C9410	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
2074		A	CAPACITOR		C9411	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
2075		A	CAPACITOR		C9412	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
2076		A	CAPACITOR		C9413	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
2077		A	CAPACITOR		C9414	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
2078		A	CAPACITOR		C9415	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
2079		A	CAPACITOR		C9416	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
2080		A	CAPACITOR		C9417	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2081		A	CAPACITOR		C9418	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2082		A	CAPACITOR		C9419	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2083		A	CAPACITOR		C9420	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
2084		A	CAPACITOR		C9421	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
2085		A	CAPACITOR		C9422	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
2086		A	CAPACITOR		C9423	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
2087		A	CAPACITOR		C9424	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
2088		A	CAPACITOR		C9425	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2089		A	CAPACITOR		C9426	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V		
2090		A	CAPACITOR		C9427	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
2091		A	CAPACITOR		C9428	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2092		A	CONNECTOR		CN8001	1-817-900-11	CONNECTOR, BOARD TO BOARD 100P		
2093		A	CONNECTOR	*	CN8400	1-785-530-11	PIN, CONNECTOR (PC BOARD) 10P		
2094		A	CONNECTOR		CN8401	1-817-904-11	CONNECTOR, BOARD TO BOARD 100P		
2095		A	CONNECTOR		CN8402	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD)4P		
2096		A	CONNECTOR	*	CN8403	1-691-591-11	PIN, CONNECTOR (1.5MM) (SMD)8P		
2097		A	CONNECTOR		CN9401	1-766-383-91	PIN, CONNECTOR 12P		
2098		A	CONNECTOR	*	CN9403	1-564-515-11	PLUG, CONNECTOR 12P		
2099		A	CONNECTOR	*	CN9404	1-564-511-11	PLUG, CONNECTOR 8P		
2100		A	CONNECTOR	*	CN9405	1-564-510-11	PLUG, CONNECTOR 7P		
2101		A	CONNECTOR		CN9406	1-766-382-21	PIN, CONNECTOR (1.5MM)(SMD)10P		
2102		A	CONNECTOR	*	CN9407	1-785-531-11	PIN, CONNECTOR (PC BOARD) 12P		
2103		A	LEAD PIN	*	CP8601	4-042-408-02	PIN, COATING LEAD		
2104		A	LEAD PIN	*	CP9401	4-042-408-02	PIN, COATING LEAD		
2105		A	LEAD PIN	*	CP9402	4-042-408-02	PIN, COATING LEAD		
2106		A	DIODE		D8006	8-719-158-02	DIODE RD3.9SB2		
2107		A	DIODE		D8800	8-719-041-97	DIODE MA113-(TX)		
2108		A	DIODE		D8801	8-719-914-44	DIODE DAP202K		
2109		A	DIODE		D8802	8-719-041-97	DIODE MA113-(TX)		
2110		A	DIODE		D8803	8-719-404-50	DIODE MA111-TX		
2111		A	DIODE		D8806	8-719-914-44	DIODE DAP202K		
2112		A	DIODE		D8807	8-719-041-97	DIODE MA113-(TX)		
2113		A	DIODE		D8808	8-719-041-97	DIODE MA113-(TX)		
2114		A	DIODE		D8809	8-719-404-50	DIODE MA111-TX		
2115		A	DIODE		D8810	8-719-071-74	DIODE HZU11B1TRF		
2116		A	DIODE		D8811	8-719-050-37	DIODE M1MA152WA-T1		
2117		A	DIODE		D8812	8-719-050-38	DIODE M1MA152WK-T1		


No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2118		A	DIODE		D9301	8-719-036-94	DIODE RD5.6SB-T1		
2119		A	DIODE		D9302	8-719-081-97	DIODE MMDL914T1		
2120		A	DIODE		D9303	8-719-081-67	DIODE M1FM3		
2121		A	DIODE		D9304	6-500-021-01	DIODE MM3Z4V7ST1		
2122		A	DIODE		D9305	8-719-081-97	DIODE MMDL914T1		
2123		A	DIODE		D9306	8-719-081-67	DIODE M1FM3		
2124		A	DIODE		D9307	6-500-020-01	DIODE MM3Z4V3ST1		
2125		A	DIODE		D9308	8-719-081-97	DIODE MMDL914T1		
2126		A	DIODE		D9309	8-719-081-67	DIODE M1FM3		
2127		A	DIODE		D9310	8-719-081-97	DIODE MMDL914T1		
2128		A	DIODE		D9311	8-719-081-99	DIODE MM3Z13VT1		
2129		A	DIODE		D9400	8-719-977-28	DIODE DTZ10B		
2130		A	DIODE		D9401	8-719-977-28	DIODE DTZ10B		
2131		A	DIODE		D9402	8-719-977-28	DIODE DTZ10B		
2132		A	DIODE		D9403	8-719-977-28	DIODE DTZ10B		
2133		A	DIODE		D9407	8-719-977-28	DIODE DTZ10B		
2134		A	DIODE		D9408	8-719-977-28	DIODE DTZ10B		
2135		A	DIODE		D9409	8-719-977-28	DIODE DTZ10B		
2136		A	DIODE		D9410	8-719-977-28	DIODE DTZ10B		
2137		A	DIODE		D9411	8-719-977-28	DIODE DTZ10B		
2138		A	DIODE		D9412	8-719-977-28	DIODE DTZ10B		
2139		A	DIODE		D9413	8-719-977-28	DIODE DTZ10B		
2140		A	DIODE		D9414	8-719-977-28	DIODE DTZ10B		
2141		A	DIODE		D9415	8-719-977-28	DIODE DTZ10B		
2142		A	DIODE		D9416	8-719-977-28	DIODE DTZ10B		
2143		A	DIODE		D9417	8-719-977-28	DIODE DTZ10B		
2144		A	DIODE		D9418	8-719-977-28	DIODE DTZ10B		
2145		A	DIODE		D9419	8-719-977-28	DIODE DTZ10B		
2146		A	DIODE		D9420	8-719-977-28	DIODE DTZ10B		
2147		A	DIODE		D9421	8-719-081-97	DIODE MMDL914T1		
2148		A	DIODE		D9422	8-719-941-86	DIODE DAN202U		
2149		A	FERRITE BEAD		FB8000	1-216-295-91	SHORT CHIP 0		
2150		A	FERRITE BEAD		FB8001	1-216-295-91	SHORT CHIP 0		
2151		A	FERRITE BEAD		FB8002	1-216-295-91	SHORT CHIP 0		
2152		A	FERRITE BEAD		FB8003	1-414-233-22	FERRITE 0UH		
2153		A	FERRITE BEAD		FB8004	1-414-233-22	FERRITE 0UH		
2154		A	FERRITE BEAD		FB8005	1-216-295-91	SHORT CHIP 0		
2155		A	FERRITE BEAD		FB8006	1-216-295-91	SHORT CHIP 0		
2156		A	FERRITE BEAD		FB8007	1-216-295-91	SHORT CHIP 0		
2157		A	FERRITE BEAD		FB8008	1-216-295-91	SHORT CHIP 0		
2158		A	FERRITE BEAD		FB8009	1-414-233-22	FERRITE 0UH		
2159		A	FERRITE BEAD		FB8010	1-414-233-22	FERRITE 0UH		
2160		A	FERRITE BEAD		FB8011	1-216-295-91	SHORT CHIP 0		
2161		A	FERRITE BEAD		FB8200	1-216-295-91	SHORT CHIP 0		
2162		A	FERRITE BEAD		FB8400	1-216-295-91	SHORT CHIP 0		
2163		A	FERRITE BEAD		FB8501	1-414-233-22	FERRITE 0UH		
2164		A	FERRITE BEAD		FB8502	1-414-228-11	FERRITE 0UH		
2165		A	FERRITE BEAD		FB8503	1-414-233-22	FERRITE 0UH		
2166		A	FERRITE BEAD		FB8504	1-414-228-11	FERRITE 0UH		
2167		A	FERRITE BEAD		FB8601	1-414-228-11	FERRITE 0UH		
2168		A	FERRITE BEAD		FB9301	1-469-650-22	FERRITE 0UH		
2169		A	FERRITE BEAD		FB9302	1-469-650-22	FERRITE 0UH		
2170		A	FERRITE BEAD		FB9303	1-469-650-22	FERRITE 0UH		
2171		A	FERRITE BEAD		FB9401	1-216-295-91	SHORT CHIP 0		
2172		A	FILTER		FL8001	1-234-177-21	FERRITE 0UH		
2173		A	FILTER		FL8002	1-234-128-21	FERRITE 0UH		
2174		A	FILTER		FL8003	1-234-124-21	FERRITE 0UH		
2175		A	FILTER		FL8004	1-234-124-21	FERRITE 0UH		
2176		A	FILTER		FL8005	1-234-177-21	FERRITE 0UH		
2177		A	FILTER		FL8006	1-234-128-21	FERRITE 0UH		
2178		A	IC		IC8200	8-752-080-04	IC CXA2069Q		
2179		A	IC		IC8201	8-759-278-58	IC NJM4558V-TE2		
2180		A	IC		IC8400	8-752-108-36	IC CXA2171AQ-T6		
2181		A	IC		IC8402	8-759-548-56	IC M52055FP		
2182		A	IC		IC8501	6-704-643-01	IC R3112N221A-TR-FA		
2183		A	IC		IC8502	8-759-475-43	IC TC74LCX125FT(EL)		
2184		A	IC		IC8503	8-759-475-43	IC TC74LCX125FT(EL)		
2185		A	IC		IC8504	6-704-777-01	IC NJU26103FR1		
2186		A	IC		IC8506	6-702-527-01	IC AK5380VT-E2		
2187		A	IC		IC8507	8-759-643-25	IC AK4351VT		
2188		A	IC		IC8508	8-759-278-58	IC NJM4558V-TE2		
2189		A	IC		IC8510	8-759-278-58	IC NJM4558V-TE2		
2190		A	IC		IC8600	6-700-393-01	IC NJW1106FC2		

No.	#	Board	Type		Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2191		A	IC		IC8601	8-759-578-49	IC NJM2370U10-TE2		
2192		A	IC		IC8800	8-759-278-58	IC NJM4558V-TE2		
2193		A	IC		IC8801	8-759-278-58	IC NJM4558V-TE2		
2194		A	IC		IC8802	8-759-278-58	IC NJM4558V-TE2		
2195		A	IC		IC8803	8-759-082-61	IC TC4W53FU		
2196		A	IC		IC8804	8-759-278-58	IC NJM4558V-TE2		
2197		A	IC		IC8805	6-702-716-01	IC NJW1149		
2198		A	IC		IC8806	8-759-278-58	IC NJM4558V-TE2		
2199		A	IC		IC9301	6-702-142-01	IC PQ1CY1032ZP		
2200		A	IC		IC9302	6-702-142-01	IC PQ1CY1032ZP		
2201		A	IC		IC9303	6-702-142-01	IC PQ1CY1032ZP		
2202		A	IC		IC9400	8-752-080-04	IC CXA2069Q		
2203		A	JACK		J9401	1-565-790-21	JACK, SMALL TYPE 2P		
2204		A	JACK		J9402	1-780-062-11	S TERMINAL BLOCK		
2205		A	JACK		J9403	1-817-903-11	PIN JACK 3P		
2206		A	JACK		J9404	1-817-902-11	PIN JACK		
2207		A	JACK		J9406	1-817-902-11	PIN JACK		
2208		A	COIL		L8000	1-416-510-21	INDUCTOR 100UH		
2209		A	COIL		L8001	1-416-510-21	INDUCTOR 100UH		
2210		A	COIL		L8002	1-416-344-11	INDUCTOR 10UH		
2211		A	COIL		L8003	1-416-510-21	INDUCTOR 100UH		
2212		A	COIL		L8004	1-416-510-21	INDUCTOR 100UH		
2213		A	COIL		L8005	1-416-344-11	INDUCTOR 10UH		
2214		A	COIL		L8200	1-469-856-21	INDUCTOR 10UH		
2215		A	COIL		L8201	1-412-058-11	INDUCTOR 10UH		
2216		A	COIL		L8400	1-412-058-11	INDUCTOR 10UH		
2217		A	COIL		L8401	1-469-856-21	INDUCTOR 10UH		
2218		A	COIL		L8501	1-412-058-11	INDUCTOR 10UH		
2219		A	COIL		L8502	1-412-054-21	INDUCTOR 2.2UH		
2220		A	COIL		L8504	1-412-058-11	INDUCTOR 10UH		
2221		A	COIL		L8505	1-412-058-11	INDUCTOR 10UH		
2222		A	COIL		L8506	1-412-058-11	INDUCTOR 10UH		
2223		A	COIL		L8507	1-412-058-11	INDUCTOR 10UH		
2224		A	COIL		L8508	1-412-058-11	INDUCTOR 10UH		
2225		A	COIL		L8509	1-412-058-11	INDUCTOR 10UH		
2226		A	COIL		L8510	1-412-058-11	INDUCTOR 10UH		
2227		A	COIL		L8600	1-469-555-21	INDUCTOR 10UH		
2228		A	COIL		L8800	1-412-058-11	INDUCTOR 10UH		
2229		A	COIL		L8801	1-412-058-11	INDUCTOR 10UH		
2230		A	COIL		L8802	1-412-058-11	INDUCTOR 10UH		
2231		A	COIL		L9301	1-412-525-31	INDUCTOR 10UH		
2232		A	COIL		L9302	1-400-175-21	INDUCTOR 47UH		
2233		A	COIL		L9303	1-412-525-31	INDUCTOR 10UH		
2234		A	COIL		L9304	1-412-525-31	INDUCTOR 10UH		
2235		A	COIL		L9305	1-419-823-21	INDUCTOR 33UH		
2236		A	COIL		L9306	1-412-525-31	INDUCTOR 10UH		
2237		A	COIL		L9307	1-412-525-31	INDUCTOR 10UH		
2238		A	COIL		L9308	1-419-823-21	INDUCTOR 33UH		
2239		A	COIL		L9309	1-412-525-31	INDUCTOR 10UH		
2240		A	COIL		L9401	1-469-856-21	INDUCTOR 10UH		
2241		A	COIL		L9402	1-412-026-11	INDUCTOR 1UH		
2242		A	COIL		L9403	1-412-026-11	INDUCTOR 1UH		
2243		A	IC LINK		PS8501	1-533-940-21	IC LINK 1.2A 50V		
2244		A	TRANSISTOR		Q8000	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2245		A	TRANSISTOR		Q8001	8-729-216-22	TRANSISTOR 2SA1162-G		
2246		A	TRANSISTOR		Q8002	8-729-422-29	TRANSISTOR 2SD601A-S		
2247		A	TRANSISTOR		Q8003	8-729-216-22	TRANSISTOR 2SA1162-G		
2248		A	TRANSISTOR		Q8004	8-729-422-29	TRANSISTOR 2SD601A-S		
2249		A	TRANSISTOR		Q8005	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2250		A	TRANSISTOR		Q8006	8-729-422-29	TRANSISTOR 2SD601A-S		
2251		A	TRANSISTOR		Q8200	8-729-905-35	TRANSISTOR 2SC4081-R		
2252		A	TRANSISTOR		Q8201	8-729-905-35	TRANSISTOR 2SC4081-R		
2253		A	TRANSISTOR		Q8202	8-729-905-35	TRANSISTOR 2SC4081-R		
2254		A	TRANSISTOR		Q8204	8-729-905-35	TRANSISTOR 2SC4081-R		
2255		A	TRANSISTOR		Q8205	8-729-905-35	TRANSISTOR 2SC4081-R		
2256		A	TRANSISTOR		Q8206	8-729-905-35	TRANSISTOR 2SC4081-R		
2257		A	TRANSISTOR		Q8209	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2258		A	TRANSISTOR		Q8210	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2259		A	TRANSISTOR		Q8406	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2260		A	TRANSISTOR		Q8407	8-729-905-35	TRANSISTOR 2SC4081-R		
2261		A	TRANSISTOR		Q8410	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2262		A	TRANSISTOR		Q8411	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2263		A	TRANSISTOR		Q8412	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2264		A	TRANSISTOR		Q8501	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
2265		A	TRANSISTOR		Q8502	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2266		A	TRANSISTOR		Q8801	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2267		A	TRANSISTOR		Q8802	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2268		A	TRANSISTOR		Q8803	8-729-905-35	TRANSISTOR 2SC4081-R		
2269		A	TRANSISTOR		Q8804	8-729-905-35	TRANSISTOR 2SC4081-R		
2270		A	TRANSISTOR		Q8805	8-729-907-00	TRANSISTOR DTC114EU		
2271		A	TRANSISTOR		Q8806	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2272		A	TRANSISTOR		Q8807	8-729-216-22	TRANSISTOR 2SA1162-G		
2273		A	TRANSISTOR		Q8808	8-729-216-22	TRANSISTOR 2SA1162-G		
2274		A	TRANSISTOR		Q8809	1-801-806-11	TR DTC144EKA		
2275		A	TRANSISTOR		Q8810	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2276		A	TRANSISTOR		Q9301	8-729-905-35	TRANSISTOR 2SC4081-R		
2277		A	TRANSISTOR		Q9401	8-729-216-22	TRANSISTOR 2SA1162-G		
2278		A	TRANSISTOR		Q9402	8-729-905-35	TRANSISTOR 2SC4081-R		
2279		A	TRANSISTOR		Q9403	8-729-905-35	TRANSISTOR 2SC4081-R		
2280		A	TRANSISTOR		Q9404	8-729-905-35	TRANSISTOR 2SC4081-R		
2281		A	TRANSISTOR		Q9405	8-729-905-35	TRANSISTOR 2SC4081-R		
2282		A	TRANSISTOR		Q9406	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2283		A	TRANSISTOR		Q9407	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2284		A	TRANSISTOR		Q9408	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
2285		A	TRANSISTOR		Q9409	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
2286		A	TRANSISTOR		Q9410	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
2287		A	TRANSISTOR		Q9411	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
2288		A	TRANSISTOR		Q9412	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
2289		A	TRANSISTOR		Q9413	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		
2290		A	TRANSISTOR		Q9414	8-729-120-28	TRANSISTOR 2SC1623-L5L6		
2291		A	TRANSISTOR		Q9415	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2292		A	TRANSISTOR		Q9416	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2293		A	TRANSISTOR		Q9417	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
2294		A	RESISTOR		R8000	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2295		A	RESISTOR		R8001	1-216-805-11	METAL CHIP 47 5% 1/10W		
2296		A	RESISTOR		R8002	1-216-805-11	METAL CHIP 47 5% 1/10W		
2297		A	RESISTOR		R8004	1-216-864-11	SHORT CHIP 0		
2298		A	RESISTOR		R8005	1-216-839-11	METAL CHIP 33K 5% 1/10W		
2299		A	RESISTOR		R8006	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2300		A	RESISTOR		R8007	1-216-847-11	METAL CHIP 150K 5% 1/10W		
2301		A	RESISTOR		R8008	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2302		A	RESISTOR		R8009	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2303		A	RESISTOR		R8010	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2304		A	RESISTOR		R8014	1-216-864-11	SHORT CHIP 0		
2305		A	RESISTOR		R8016	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2306		A	RESISTOR		R8017	1-216-864-11	SHORT CHIP 0		
2307		A	RESISTOR		R8018	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2308		A	RESISTOR		R8019	1-216-847-11	METAL CHIP 150K 5% 1/10W		
2309		A	RESISTOR		R8020	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2310		A	RESISTOR		R8022	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2311		A	RESISTOR		R8024	1-216-805-11	METAL CHIP 47 5% 1/10W		
2312		A	RESISTOR		R8025	1-216-805-11	METAL CHIP 47 5% 1/10W		
2313		A	RESISTOR		R8026	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2314		A	RESISTOR		R8028	1-216-864-11	SHORT CHIP 0		
2315		A	RESISTOR		R8029	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2316		A	RESISTOR		R8030	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2317		A	RESISTOR		R8031	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2318		A	RESISTOR		R8032	1-216-847-11	METAL CHIP 150K 5% 1/10W		
2319		A	RESISTOR		R8033	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2320		A	RESISTOR		R8034	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2321		A	RESISTOR		R8035	1-216-839-11	METAL CHIP 33K 5% 1/10W		
2322		A	RESISTOR		R8036	1-216-813-11	METAL CHIP 220 5% 1/10W		
2323		A	RESISTOR		R8037	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2324		A	RESISTOR		R8038	1-216-847-11	METAL CHIP 150K 5% 1/10W		
2325		A	RESISTOR		R8039	1-216-864-11	SHORT CHIP 0		
2326		A	RESISTOR		R8040	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2327		A	RESISTOR		R8041	1-216-864-11	SHORT CHIP 0		
2328		A	RESISTOR		R8042	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2329		A	RESISTOR		R8043	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2330		A	RESISTOR		R8044	1-216-809-11	METAL CHIP 100 5% 1/10W		
2331		A	RESISTOR		R8045	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2332		A	RESISTOR		R8046	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2333		A	RESISTOR		R8047	1-216-864-11	SHORT CHIP 0		
2334		A	RESISTOR		R8048	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2335		A	RESISTOR		R8049	1-216-809-11	METAL CHIP 100 5% 1/10W		
2336		A	RESISTOR		R8050	1-216-809-11	METAL CHIP 100 5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2337		A	RESISTOR		R8067	1-216-864-11	SHORT CHIP 0		
2338		A	RESISTOR		R8068	1-216-864-11	SHORT CHIP 0		
2339		A	RESISTOR		R8069	1-216-864-11	SHORT CHIP 0		
2340		A	RESISTOR		R8070	1-216-864-11	SHORT CHIP 0		
2341		A	RESISTOR		R8075	1-216-809-11	METAL CHIP 100 5% 1/10W		
2342		A	RESISTOR		R8082	1-216-864-11	SHORT CHIP 0		
2343		A	RESISTOR		R8200	1-216-805-11	METAL CHIP 47 5% 1/10W		
2344		A	RESISTOR		R8201	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2345		A	RESISTOR		R8202	1-216-805-11	METAL CHIP 47 5% 1/10W		
2346		A	RESISTOR		R8203	1-216-809-11	METAL CHIP 100 5% 1/10W		
2347		A	RESISTOR		R8204	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2348		A	RESISTOR		R8205	1-216-809-11	METAL CHIP 100 5% 1/10W		
2349		A	RESISTOR		R8206	1-216-809-11	METAL CHIP 100 5% 1/10W		
2350		A	RESISTOR		R8207	1-216-809-11	METAL CHIP 100 5% 1/10W		
2351		A	RESISTOR		R8208	1-216-809-11	METAL CHIP 100 5% 1/10W		
2352		A	RESISTOR		R8209	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2353		A	RESISTOR		R8210	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2354		A	RESISTOR		R8211	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2355		A	RESISTOR		R8212	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2356		A	RESISTOR		R8214	1-216-805-11	METAL CHIP 47 5% 1/10W		
2357		A	RESISTOR		R8215	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2358		A	RESISTOR		R8216	1-216-809-11	METAL CHIP 100 5% 1/10W		
2359		A	RESISTOR		R8217	1-216-809-11	METAL CHIP 100 5% 1/10W		
2360		A	RESISTOR		R8220	1-216-805-11	METAL CHIP 47 5% 1/10W		
2361		A	RESISTOR		R8221	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2362		A	RESISTOR		R8223	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2363		A	RESISTOR		R8224	1-216-809-11	METAL CHIP 100 5% 1/10W		
2364		A	RESISTOR		R8225	1-216-809-11	METAL CHIP 100 5% 1/10W		
2365		A	RESISTOR		R8228	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2366		A	RESISTOR		R8230	1-216-809-11	METAL CHIP 100 5% 1/10W		
2367		A	RESISTOR		R8231	1-216-809-11	METAL CHIP 100 5% 1/10W		
2368		A	RESISTOR		R8232	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2369		A	RESISTOR		R8233	1-216-809-11	METAL CHIP 100 5% 1/10W		
2370		A	RESISTOR		R8236	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2371		A	RESISTOR		R8238	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2372		A	RESISTOR		R8239	1-216-809-11	METAL CHIP 100 5% 1/10W		
2373		A	RESISTOR		R8240	1-216-809-11	METAL CHIP 100 5% 1/10W		
2374		A	RESISTOR		R8241	1-216-809-11	METAL CHIP 100 5% 1/10W		
2375		A	RESISTOR		R8242	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2376		A	RESISTOR		R8243	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2377		A	RESISTOR		R8244	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2378		A	RESISTOR		R8245	1-216-809-11	METAL CHIP 100 5% 1/10W		
2379		A	RESISTOR		R8246	1-216-049-11	RES-CHIP 1K 5% 1/10W		
2380		A	RESISTOR		R8247	1-216-049-11	RES-CHIP 1K 5% 1/10W		
2381		A	RESISTOR		R8248	1-218-693-11	METAL CHIP 1.1K 0.5% 1/10W		
2382		A	RESISTOR		R8249	1-218-693-11	METAL CHIP 1.1K 0.5% 1/10W		
2383		A	RESISTOR		R8250	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2384		A	RESISTOR		R8251	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2385		A	RESISTOR		R8252	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
2386		A	RESISTOR		R8253	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
2387		A	RESISTOR		R8256	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2388		A	RESISTOR		R8257	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2389		A	RESISTOR		R8258	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2390		A	RESISTOR		R8259	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2391		A	RESISTOR		R8260	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2392		A	RESISTOR		R8261	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2393		A	RESISTOR		R8400	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
2394		A	RESISTOR		R8401	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
2395		A	RESISTOR		R8402	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
2396		A	RESISTOR		R8410	1-216-809-11	METAL CHIP 100 5% 1/10W		
2397		A	RESISTOR		R8411	1-216-809-11	METAL CHIP 100 5% 1/10W		
2398		A	RESISTOR		R8412	1-216-809-11	METAL CHIP 100 5% 1/10W		
2399		A	RESISTOR		R8422	1-216-809-11	METAL CHIP 100 5% 1/10W		
2400		A	RESISTOR		R8423	1-216-809-11	METAL CHIP 100 5% 1/10W		
2401		A	RESISTOR		R8424	1-216-809-11	METAL CHIP 100 5% 1/10W		
2402		A	RESISTOR		R8425	1-216-809-11	METAL CHIP 100 5% 1/10W		
2403		A	RESISTOR		R8426	1-216-809-11	METAL CHIP 100 5% 1/10W		
2404		A	RESISTOR		R8427	1-216-809-11	METAL CHIP 100 5% 1/10W		
2405		A	RESISTOR		R8428	1-216-809-11	METAL CHIP 100 5% 1/10W		
2406		A	RESISTOR		R8429	1-218-285-11	METAL CHIP 75 5% 1/10W		
2407		A	RESISTOR		R8430	1-216-805-11	METAL CHIP 47 5% 1/10W		
2408		A	RESISTOR		R8431	1-216-809-11	METAL CHIP 100 5% 1/10W		
2409		A	RESISTOR		R8432	1-216-805-11	METAL CHIP 47 5% 1/10W		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2410		A	RESISTOR		R8433	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2411		A	RESISTOR		R8434	1-216-809-11	METAL CHIP 100 5% 1/10W		
2412		A	RESISTOR		R8435	1-216-851-11	METAL CHIP 330K 5% 1/10W		
2413		A	RESISTOR		R8436	1-216-809-11	METAL CHIP 100 5% 1/10W		
2414		A	RESISTOR		R8437	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2415		A	RESISTOR		R8439	1-218-285-11	METAL CHIP 75 5% 1/10W		
2416		A	RESISTOR		R8440	1-218-285-11	METAL CHIP 75 5% 1/10W		
2417		A	RESISTOR		R8441	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2418		A	RESISTOR		R8442	1-218-716-11	METAL CHIP 10K 0.5% 1/10W		
2419		A	RESISTOR		R8443	1-216-797-11	METAL CHIP 10 5% 1/10W		
2420		A	RESISTOR		R8445	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2421		A	RESISTOR		R8446	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2422		A	RESISTOR		R8447	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2423		A	RESISTOR		R8448	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2424		A	RESISTOR		R8450	1-216-809-11	METAL CHIP 100 5% 1/10W		
2425		A	RESISTOR		R8451	1-216-809-11	METAL CHIP 100 5% 1/10W		
2426		A	RESISTOR		R8452	1-216-809-11	METAL CHIP 100 5% 1/10W		
2427		A	RESISTOR		R8454	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
2428		A	RESISTOR		R8455	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
2429		A	RESISTOR		R8456	1-216-041-00	RES-CHIP 470 5% 1/10W		
2430		A	RESISTOR		R8457	1-216-806-11	METAL CHIP 56 5% 1/10W		
2431		A	RESISTOR		R8458	1-216-806-11	METAL CHIP 56 5% 1/10W		
2432		A	RESISTOR		R8459	1-216-806-11	METAL CHIP 56 5% 1/10W		
2433		A	RESISTOR		R8460	1-216-864-11	SHORT CHIP 0		
2434		A	RESISTOR		R8461	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
2435		A	RESISTOR		R8462	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
2436		A	RESISTOR		R8463	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
2437		A	RESISTOR		R8502	1-216-789-11	METAL CHIP 2.2 5% 1/10W		
2438		A	RESISTOR		R8504	1-216-803-11	METAL CHIP 33 5% 1/10W		
2439		A	RESISTOR		R8505	1-216-803-11	METAL CHIP 33 5% 1/10W		
2440		A	RESISTOR		R8506	1-216-803-11	METAL CHIP 33 5% 1/10W		
2441		A	RESISTOR		R8507	1-216-803-11	METAL CHIP 33 5% 1/10W		
2442		A	RESISTOR		R8512	1-216-809-11	METAL CHIP 100 5% 1/10W		
2443		A	RESISTOR		R8515	1-216-803-11	METAL CHIP 33 5% 1/10W		
2444		A	RESISTOR		R8517	1-216-803-11	METAL CHIP 33 5% 1/10W		
2445		A	RESISTOR		R8519	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2446		A	RESISTOR		R8520	1-216-813-11	METAL CHIP 220 5% 1/10W		
2447		A	RESISTOR		R8523	1-216-803-11	METAL CHIP 33 5% 1/10W		
2448		A	RESISTOR		R8524	1-216-803-11	METAL CHIP 33 5% 1/10W		
2449		A	RESISTOR		R8527	1-216-809-11	METAL CHIP 100 5% 1/10W		
2450		A	RESISTOR		R8528	1-216-809-11	METAL CHIP 100 5% 1/10W		
2451		A	RESISTOR		R8535	1-216-864-11	SHORT CHIP 0		
2452		A	RESISTOR		R8536	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2453		A	RESISTOR		R8537	1-216-864-11	SHORT CHIP 0		
2454		A	RESISTOR		R8538	1-216-041-00	RES-CHIP 470 5% 1/10W		
2455		A	RESISTOR		R8539	1-216-041-00	RES-CHIP 470 5% 1/10W		
2456		A	RESISTOR		R8540	1-216-041-00	RES-CHIP 470 5% 1/10W		
2457		A	RESISTOR		R8541	1-216-041-00	RES-CHIP 470 5% 1/10W		
2458		A	RESISTOR		R8543	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2459		A	RESISTOR		R8544	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2460		A	RESISTOR		R8545	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2461		A	RESISTOR		R8546	1-216-809-11	METAL CHIP 100 5% 1/10W		
2462		A	RESISTOR		R8547	1-216-817-11	METAL CHIP 470 5% 1/10W		
2463		A	RESISTOR		R8548	1-216-803-11	METAL CHIP 33 5% 1/10W		
2464		A	RESISTOR		R8549	1-216-817-11	METAL CHIP 470 5% 1/10W		
2465		A	RESISTOR		R8550	1-216-817-11	METAL CHIP 470 5% 1/10W		
2466		A	RESISTOR		R8552	1-216-809-11	METAL CHIP 100 5% 1/10W		
2467		A	RESISTOR		R8553	1-216-803-11	METAL CHIP 33 5% 1/10W		
2468		A	RESISTOR		R8554	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2469		A	RESISTOR		R8555	1-216-803-11	METAL CHIP 33 5% 1/10W		
2470		A	RESISTOR		R8556	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2471		A	RESISTOR		R8557	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2472		A	RESISTOR		R8558	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2473		A	RESISTOR		R8559	1-216-803-11	METAL CHIP 33 5% 1/10W		
2474		A	RESISTOR		R8560	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2475		A	RESISTOR		R8561	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2476		A	RESISTOR		R8562	1-216-803-11	METAL CHIP 33 5% 1/10W		
2477		A	RESISTOR		R8563	1-216-803-11	METAL CHIP 33 5% 1/10W		
2478		A	RESISTOR		R8564	1-216-864-11	SHORT CHIP 0		
2479		A	RESISTOR		R8565	1-216-803-11	METAL CHIP 33 5% 1/10W		
2480		A	RESISTOR		R8567	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2481		A	RESISTOR		R8569	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2482		A	RESISTOR		R8570	1-216-833-11	METAL CHIP 10K 5% 1/10W		

No.	#	Board	Type		Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2483		A	RESISTOR		R8571	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2484		A	RESISTOR		R8572	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2485		A	RESISTOR		R8573	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2486		A	RESISTOR		R8574	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2487		A	RESISTOR		R8575	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2488		A	RESISTOR		R8578	1-216-864-11	SHORT CHIP 0		
2489		A	RESISTOR		R8579	1-216-864-11	SHORT CHIP 0		
2490		A	RESISTOR		R8580	1-216-864-11	SHORT CHIP 0		
2491		A	RESISTOR		R8581	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2492		A	RESISTOR		R8582	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2493		A	RESISTOR		R8583	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
2494		A	RESISTOR		R8584	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2495		A	RESISTOR		R8585	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2496		A	RESISTOR		R8600	1-218-752-11	METAL CHIP 330K 0.5% 1/10W		
2497		A	RESISTOR		R8601	1-218-720-11	METAL CHIP 15K 0.5% 1/10W		
2498		A	RESISTOR		R8602	1-218-720-11	METAL CHIP 15K 0.5% 1/10W		
2499		A	RESISTOR		R8603	1-216-861-11	METAL CHIP 2.2M 5% 1/10W		
2500		A	RESISTOR		R8604	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2501		A	RESISTOR		R8605	1-216-861-11	METAL CHIP 2.2M 5% 1/10W		
2502		A	RESISTOR		R8606	1-218-712-11	METAL CHIP 6.8K 0.5% 1/10W		
2503		A	RESISTOR		R8607	1-218-732-11	METAL CHIP 47K 0.5% 1/10W		
2504		A	RESISTOR		R8608	1-218-712-11	METAL CHIP 6.8K 0.5% 1/10W		
2505		A	RESISTOR		R8609	1-218-732-11	METAL CHIP 47K 0.5% 1/10W		
2506		A	RESISTOR		R8610	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2507		A	RESISTOR		R8611	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2508		A	RESISTOR		R8612	1-216-809-11	METAL CHIP 100 5% 1/10W		
2509		A	RESISTOR		R8613	1-216-809-11	METAL CHIP 100 5% 1/10W		
2510		A	RESISTOR		R8615	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2511		A	RESISTOR		R8616	1-218-740-11	METAL CHIP 100K 0.5% 1/10W		
2512		A	RESISTOR		R8617	1-216-809-11	METAL CHIP 100 5% 1/10W		
2513		A	RESISTOR		R8618	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2514		A	RESISTOR		R8619	1-216-809-11	METAL CHIP 100 5% 1/10W		
2515		A	RESISTOR		R8620	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2516		A	RESISTOR		R8621	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2517		A	RESISTOR		R8622	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2518		A	RESISTOR		R8625	1-216-864-11	SHORT CHIP 0		
2519		A	RESISTOR		R8626	1-216-864-11	SHORT CHIP 0		
2520		A	RESISTOR		R8627	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2521		A	RESISTOR		R8628	1-216-851-11	METAL CHIP 330K 5% 1/10W		
2522		A	RESISTOR		R8629	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2523		A	RESISTOR		R8630	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2524		A	RESISTOR		R8631	1-216-864-11	SHORT CHIP 0		
2525		A	RESISTOR		R8632	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2526		A	RESISTOR		R8633	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2527		A	RESISTOR		R8634	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2528		A	RESISTOR		R8635	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2529		A	RESISTOR		R8636	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2530		A	RESISTOR		R8682	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2531		A	RESISTOR		R8683	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2532		A	RESISTOR		R8684	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2533		A	RESISTOR		R8685	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2534		A	RESISTOR		R8691	1-216-864-11	SHORT CHIP 0		
2535		A	RESISTOR		R8801	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2536		A	RESISTOR		R8802	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2537		A	RESISTOR		R8803	1-216-836-11	METAL CHIP 18K 5% 1/10W		
2538		A	RESISTOR		R8804	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2539		A	RESISTOR		R8805	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2540		A	RESISTOR		R8806	1-216-838-11	METAL CHIP 27K 5% 1/10W		
2541		A	RESISTOR		R8807	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2542		A	RESISTOR		R8808	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2543		A	RESISTOR		R8809	1-216-037-00	RES-CHIP 330 5% 1/10W		
2544		A	RESISTOR		R8810	1-216-037-00	RES-CHIP 330 5% 1/10W		
2545		A	RESISTOR		R8811	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2546		A	RESISTOR		R8812	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2547		A	RESISTOR		R8813	1-216-815-11	METAL CHIP 330 5% 1/10W		
2548		A	RESISTOR		R8814	1-216-815-11	METAL CHIP 330 5% 1/10W		
2549		A	RESISTOR		R8815	1-216-864-11	SHORT CHIP 0		
2550		A	RESISTOR		R8816	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2551		A	RESISTOR		R8817	1-216-853-11	METAL CHIP 470K 5% 1/10W		
2552		A	RESISTOR		R8818	1-216-853-11	METAL CHIP 470K 5% 1/10W		
2553		A	RESISTOR		R8819	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2554		A	RESISTOR		R8820	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2555		A	RESISTOR		R8821	1-216-833-11	METAL CHIP 10K 5% 1/10W		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2556		A	RESISTOR		R8822	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2557		A	RESISTOR		R8823	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2558		A	RESISTOR		R8824	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2559		A	RESISTOR		R8825	1-216-809-11	METAL CHIP 100 5% 1/10W		
2560		A	RESISTOR		R8826	1-216-844-11	METAL CHIP 82K 5% 1/10W		
2561		A	RESISTOR		R8827	1-216-844-11	METAL CHIP 82K 5% 1/10W		
2562		A	RESISTOR		R8828	1-216-809-11	METAL CHIP 100 5% 1/10W		
2563		A	RESISTOR		R8829	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2564		A	RESISTOR		R8830	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2565		A	RESISTOR		R8831	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2566		A	RESISTOR		R8832	1-216-864-11	SHORT CHIP 0		
2567		A	RESISTOR		R8833	1-216-864-11	SHORT CHIP 0		
2568		A	RESISTOR		R8836	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2569		A	RESISTOR		R8837	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2570		A	RESISTOR		R8838	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2571		A	RESISTOR		R8839	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2572		A	RESISTOR		R8840	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2573		A	RESISTOR		R8841	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2574		A	RESISTOR		R8842	1-216-815-11	METAL CHIP 330 5% 1/10W		
2575		A	RESISTOR		R8843	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2576		A	RESISTOR		R8845	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2577		A	RESISTOR		R8846	1-216-857-11	METAL CHIP 1M 5% 1/10W		
2578		A	RESISTOR		R8848	1-216-838-11	METAL CHIP 27K 5% 1/10W		
2579		A	RESISTOR		R8849	1-216-836-11	METAL CHIP 18K 5% 1/10W		
2580		A	RESISTOR		R8850	1-216-864-11	SHORT CHIP 0		
2581		A	RESISTOR		R8851	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2582		A	RESISTOR		R8852	1-218-292-11	METAL CHIP 20K 5% 1/10W		
2583		A	RESISTOR		R8853	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2584		A	RESISTOR		R8854	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2585		A	RESISTOR		R8855	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2586		A	RESISTOR		R8856	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
2587		A	RESISTOR		R8857	1-218-292-11	METAL CHIP 20K 5% 1/10W		
2588		A	RESISTOR		R8858	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2589		A	RESISTOR		R8859	1-216-809-11	METAL CHIP 100 5% 1/10W		
2590		A	RESISTOR		R8860	1-216-809-11	METAL CHIP 100 5% 1/10W		
2591		A	RESISTOR		R8861	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
2592		A	RESISTOR		R8862	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
2593		A	RESISTOR		R8863	1-218-292-11	METAL CHIP 20K 5% 1/10W		
2594		A	RESISTOR		R8864	1-216-683-11	METAL CHIP 22K 0.5% 1/10W		
2595		A	RESISTOR		R8865	1-216-683-11	METAL CHIP 22K 0.5% 1/10W		
2596		A	RESISTOR		R8866	1-218-292-11	METAL CHIP 20K 5% 1/10W		
2597		A	RESISTOR		R8869	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
2598		A	RESISTOR		R8870	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
2599		A	RESISTOR		R8872	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2600		A	RESISTOR		R8873	1-216-822-11	METAL CHIP 1.2K 5% 1/10W		
2601		A	RESISTOR		R8874	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2602		A	RESISTOR		R9301	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2603		A	RESISTOR		R9302	1-218-696-11	METAL CHIP 1.5K 0.5% 1/10W		
2604		A	RESISTOR		R9303	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
2605		A	RESISTOR		R9304	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
2606		A	RESISTOR		R9305	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2607		A	RESISTOR		R9306	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2608		A	RESISTOR		R9307	1-218-690-11	METAL CHIP 820 0.5% 1/10W		
2609		A	RESISTOR		R9308	1-249-377-11	CARBON 0.47 5% 1/4W		
2610		A	RESISTOR		R9309	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
2611		A	RESISTOR		R9310	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
2612		A	RESISTOR		R9311	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2613		A	RESISTOR		R9312	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2614		A	RESISTOR		R9313	1-218-684-11	METAL CHIP 470 0.5% 1/10W		
2615		A	RESISTOR		R9314	1-218-658-11	METAL CHIP 39 0.5% 1/10W		
2616		A	RESISTOR		R9315	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
2617		A	RESISTOR		R9316	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2618		A	RESISTOR		R9317	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2619		A	RESISTOR		R9318	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2620		A	RESISTOR		R9319	1-218-696-11	METAL CHIP 1.5K 0.5% 1/10W		
2621		A	RESISTOR		R9320	1-218-696-11	METAL CHIP 1.5K 0.5% 1/10W		
2622		A	RESISTOR		R9321	1-218-696-11	METAL CHIP 1.5K 0.5% 1/10W		
2623		A	RESISTOR		R9322	1-218-696-11	METAL CHIP 1.5K 0.5% 1/10W		
2624		A	RESISTOR		R9401	1-216-864-11	SHORT CHIP 0		
2625		A	RESISTOR		R9402	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2626		A	RESISTOR		R9403	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2627		A	RESISTOR		R9404	1-216-811-11	METAL CHIP 150 5% 1/10W		
2628		A	RESISTOR		R9405	1-216-811-11	METAL CHIP 150 5% 1/10W		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2629		A	RESISTOR		R9406	1-216-811-11	METAL CHIP 150 5% 1/10W		
2630		A	RESISTOR		R9407	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2631		A	RESISTOR		R9408	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2632		A	RESISTOR		R9409	1-216-811-11	METAL CHIP 150 5% 1/10W		
2633		A	RESISTOR		R9410	1-216-811-11	METAL CHIP 150 5% 1/10W		
2634		A	RESISTOR		R9411	1-216-811-11	METAL CHIP 150 5% 1/10W		
2635		A	RESISTOR		R9412	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2636		A	RESISTOR		R9413	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2637		A	RESISTOR		R9414	1-216-811-11	METAL CHIP 150 5% 1/10W		
2638		A	RESISTOR		R9415	1-216-811-11	METAL CHIP 150 5% 1/10W		
2639		A	RESISTOR		R9416	1-216-811-11	METAL CHIP 150 5% 1/10W		
2640		A	RESISTOR		R9417	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2641		A	RESISTOR		R9418	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2642		A	RESISTOR		R9419	1-216-811-11	METAL CHIP 150 5% 1/10W		
2643		A	RESISTOR		R9420	1-216-811-11	METAL CHIP 150 5% 1/10W		
2644		A	RESISTOR		R9421	1-216-811-11	METAL CHIP 150 5% 1/10W		
2645		A	RESISTOR		R9422	1-216-811-11	METAL CHIP 150 5% 1/10W		
2646		A	RESISTOR		R9423	1-216-811-11	METAL CHIP 150 5% 1/10W		
2647		A	RESISTOR		R9424	1-216-811-11	METAL CHIP 150 5% 1/10W		
2648		A	RESISTOR		R9425	1-216-811-11	METAL CHIP 150 5% 1/10W		
2649		A	RESISTOR		R9426	1-216-811-11	METAL CHIP 150 5% 1/10W		
2650		A	RESISTOR		R9427	1-216-811-11	METAL CHIP 150 5% 1/10W		
2651		A	RESISTOR		R9428	1-216-811-11	METAL CHIP 150 5% 1/10W		
2652		A	RESISTOR		R9429	1-216-811-11	METAL CHIP 150 5% 1/10W		
2653		A	RESISTOR		R9430	1-216-811-11	METAL CHIP 150 5% 1/10W		
2654		A	RESISTOR		R9431	1-216-811-11	METAL CHIP 150 5% 1/10W		
2655		A	RESISTOR		R9432	1-216-811-11	METAL CHIP 150 5% 1/10W		
2656		A	RESISTOR		R9433	1-216-811-11	METAL CHIP 150 5% 1/10W		
2657		A	RESISTOR		R9434	1-216-864-11	SHORT CHIP 0		
2658		A	RESISTOR		R9435	1-216-864-11	SHORT CHIP 0		
2659		A	RESISTOR		R9436	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2660		A	RESISTOR		R9438	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2661		A	RESISTOR		R9439	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2662		A	RESISTOR		R9440	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2663		A	RESISTOR		R9441	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2664		A	RESISTOR		R9442	1-216-864-11	SHORT CHIP 0		
2665		A	RESISTOR		R9443	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2666		A	RESISTOR		R9445	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2667		A	RESISTOR		R9446	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2668		A	RESISTOR		R9447	1-216-813-11	METAL CHIP 220 5% 1/10W		
2669		A	RESISTOR		R9448	1-216-813-11	METAL CHIP 220 5% 1/10W		
2670		A	RESISTOR		R9449	1-216-813-11	METAL CHIP 220 5% 1/10W		
2671		A	RESISTOR		R9450	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2672		A	RESISTOR		R9451	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2673		A	RESISTOR		R9452	1-216-813-11	METAL CHIP 220 5% 1/10W		
2674		A	RESISTOR		R9453	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2675		A	RESISTOR		R9454	1-216-813-11	METAL CHIP 220 5% 1/10W		
2676		A	RESISTOR		R9455	1-216-813-11	METAL CHIP 220 5% 1/10W		
2677		A	RESISTOR		R9456	1-216-809-11	METAL CHIP 100 5% 1/10W		
2678		A	RESISTOR		R9457	1-216-809-11	METAL CHIP 100 5% 1/10W		
2679		A	RESISTOR		R9458	1-216-809-11	METAL CHIP 100 5% 1/10W		
2680		A	RESISTOR		R9459	1-216-809-11	METAL CHIP 100 5% 1/10W		
2681		A	RESISTOR		R9460	1-216-809-11	METAL CHIP 100 5% 1/10W		
2682		A	RESISTOR		R9461	1-216-809-11	METAL CHIP 100 5% 1/10W		
2683		A	RESISTOR		R9462	1-216-809-11	METAL CHIP 100 5% 1/10W		
2684		A	RESISTOR		R9463	1-216-809-11	METAL CHIP 100 5% 1/10W		
2685		A	RESISTOR		R9464	1-216-809-11	METAL CHIP 100 5% 1/10W		
2686		A	RESISTOR		R9465	1-216-809-11	METAL CHIP 100 5% 1/10W		
2687		A	RESISTOR		R9466	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2688		A	RESISTOR		R9467	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2689		A	RESISTOR		R9468	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2690		A	RESISTOR		R9471	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2691		A	RESISTOR		R9472	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2692		A	RESISTOR		R9475	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2693		A	RESISTOR		R9476	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2694		A	RESISTOR		R9477	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2695		A	RESISTOR		R9478	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2696		A	RESISTOR		R9479	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
2697		A	RESISTOR		R9480	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
2698		A	RESISTOR		R9481	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
2699		A	RESISTOR		R9482	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
2700		A	RESISTOR		R9483	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		
2701		A	RESISTOR		R9484	1-216-830-11	METAL CHIP 5.6K 5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2702		A	RESISTOR		R9485	1-216-813-11	METAL CHIP 220 5% 1/10W		
2703		A	RESISTOR		R9486	1-216-813-11	METAL CHIP 220 5% 1/10W		
2704		A	RESISTOR		R9487	1-216-813-11	METAL CHIP 220 5% 1/10W		
2705		A	RESISTOR		R9489	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2706		A	RESISTOR		R9490	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2707		A	RESISTOR		R9491	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2708		A	RESISTOR		R9492	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2709		A	RESISTOR		R9493	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2710		A	RESISTOR		R9494	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2711		A	RESISTOR		R9495	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2712		A	RESISTOR		R9496	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2713		A	RESISTOR		R9497	1-216-849-11	METAL CHIP 220K 5% 1/10W		
2714		A	RESISTOR		R9498	1-216-809-11	METAL CHIP 100 5% 1/10W		
2715		A	RESISTOR		R9499	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2716		A	TUNER		TU8000	8-598-594-30	TUNER, FSS BTF-FA421		
2717		A	TUNER		TU8001	8-598-593-50	TUNER, FSS BTF-WA421		
2718		A	VARISTOR		VD9400	1-803-974-21	VARISTOR, CHIP (1608)		
2719		A	VARISTOR		VD9401	1-803-974-21	VARISTOR, CHIP (1608)		
2720		A	VARISTOR		VD9402	1-803-974-21	VARISTOR, CHIP (1608)		
2721		A	VARISTOR		VD9403	1-803-974-21	VARISTOR, CHIP (1608)		
2722		A	VARISTOR		VD9404	1-803-974-21	VARISTOR, CHIP (1608)		
2723		A	VARISTOR		VD9405	1-803-974-21	VARISTOR, CHIP (1608)		
2724		A	VARISTOR		VD9406	1-803-974-21	VARISTOR, CHIP (1608)		
2725		A	VARISTOR		VD9407	1-803-974-21	VARISTOR, CHIP (1608)		
2726		A	VARISTOR		VD9408	1-803-974-21	VARISTOR, CHIP (1608)		
2727		A	VARISTOR		VD9409	1-803-974-21	VARISTOR, CHIP (1608)		
2728		A	VARISTOR		VD9410	1-803-974-21	VARISTOR, CHIP (1608)		
2729		A	VARISTOR		VD9411	1-803-974-21	VARISTOR, CHIP (1608)		
2730		A	VARISTOR		VD9412	1-803-974-21	VARISTOR, CHIP (1608)		
2731		A	VARISTOR		VD9413	1-803-974-21	VARISTOR, CHIP (1608)		
2732		A	VARISTOR		VD9414	1-803-974-21	VARISTOR, CHIP (1608)		
2733		A	CRYSTAL		X8400	1-795-214-21	VIBRATOR, CERAMIC (4MHZ)		
2734		A	CRYSTAL		X8501	1-813-094-11	VIBRATOR, CRYSTAL		
2735		A	CRYSTAL		X8601	1-781-646-21	VIBRATOR, CERAMIC		
2736		G	CAPACITOR		C6001	1-165-530-11	MYLAR 0.47UF 10 275V		
2737		G	CAPACITOR		C6002	1-165-528-11	MYLAR 0.1UF 10 275V		
2738		G	CAPACITOR		C6003	1-119-895-51	CERAMIC 4700PF 20.00% 250V		
2739		G	CAPACITOR		C6004	1-119-895-51	CERAMIC 4700PF 20.00% 250V		
2740		G	CAPACITOR		C6005	1-119-887-51	CERAMIC 1000PF 20.00% 250V		
2741		G	CAPACITOR		C6006	1-119-887-51	CERAMIC 1000PF 20.00% 250V		
2742		G	CAPACITOR		C6007	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2743		G	CAPACITOR		C6008	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2744		G	CAPACITOR		C6010	1-117-752-11	ELECT(BLOCK) 330UF 20.00% 450V		
2745		G	CAPACITOR		C6011	1-117-752-11	ELECT(BLOCK) 330UF 20.00% 450V		
2746		G	CAPACITOR		C6012	1-163-275-11	CERAMIC CHIP 0.001UF 5.00% 50V		
2747		G	CAPACITOR		C6013	1-136-479-11	FILM 0.001UF 5.00% 100V		
2748		G	CAPACITOR		C6014	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
2749		G	CAPACITOR		C6015	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2750		G	CAPACITOR		C6016	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2751		G	CAPACITOR		C6017	1-107-894-11	ELECT 220UF 20.00% 35V		
2752		G	CAPACITOR		C6018	1-107-903-11	ELECT 2.2UF 20.00% 50V		
2753		G	CAPACITOR		C6019	1-107-906-11	ELECT 10UF 20.00% 50V		
2754		G	CAPACITOR		C6020	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2755		G	CAPACITOR		C6021	1-161-830-00	CERAMIC 0.0047UF 99% 500V		
2756		G	CAPACITOR		C6022	1-130-495-00	MYLAR 0.1UF 5.00% 50V		
2757		G	CAPACITOR		C6023	1-126-947-11	ELECT 47UF 20.00% 35V		
2758		G	CAPACITOR		C6024	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
2759		G	CAPACITOR		C6025	1-107-680-91	ELECT 22UF 20.00% 450V		
2760		G	CAPACITOR		C6026	1-101-821-00	CERAMIC 0.0022UF 500V		
2761		G	CAPACITOR		C6027	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
2762		G	CAPACITOR		C6028	1-107-824-11	CERAMIC 220PF 5.00% 1KV		
2763		G	CAPACITOR		C6029	1-126-964-11	ELECT 10UF 20.00% 50V		
2764		G	CAPACITOR		C6030	1-164-690-91	CERAMIC CHIP 0.0022UF 5.00% 50V		
2765		G	CAPACITOR		C6031	1-100-732-11	FILM 18000PF 3% 1KV		
2766		G	CAPACITOR		C6032	1-102-228-00	CERAMIC 470PF 10.00% 500V		
2767		G	CAPACITOR		C6033	1-107-909-11	ELECT 47UF 20.00% 50V		
2768		G	CAPACITOR		C6035	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
2769		G	CAPACITOR		C6036	1-102-228-00	CERAMIC 470PF 10.00% 500V		
2770		G	CAPACITOR		C6037	1-126-967-11	ELECT 47UF 20.00% 50V		
2771		G	CAPACITOR		C6038	1-107-904-11	ELECT 3.3UF 20.00% 50V		
2772		G	CAPACITOR		C6039	1-135-372-31	ELECT 470UF 20% 10V		
2773		G	CAPACITOR		C6040	1-128-582-11	ELECT 10UF 20.00% 100V		
2774		G	CAPACITOR		C6041	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2775		G	CAPACITOR		C6042	1-164-004-11	CERAMIC CHIP 0.1UF 10.00% 25V		
2776		G	CAPACITOR		C6045	1-128-945-31	ELECT 1000UF 20% 10V		
2777		G	CAPACITOR		C6046	1-104-665-11	ELECT 100UF 20.00% 25V		
2778		G	CAPACITOR		C6048	1-135-362-31	ELECT 1500UF 20% 16V		
2779		G	CAPACITOR		C6050	1-115-185-11	CERAMIC CHIP 0.033UF 10.00% 50V		
2780		G	CAPACITOR		C6052	1-126-947-11	ELECT 47UF 20.00% 35V		
2781		G	CAPACITOR		C6053	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
2782		G	CAPACITOR		C6056	1-126-960-11	ELECT 1UF 20.00% 50V		
2783		G	CAPACITOR		C6058	1-126-934-11	ELECT 220UF 20.00% 16V		
2784		G	CAPACITOR		C6059	1-126-934-11	ELECT 220UF 20.00% 16V		
2785		G	CAPACITOR		C6061	1-126-934-11	ELECT 220UF 20.00% 16V		
2786		G	CAPACITOR		C6062	1-107-928-11	ELECT 4.7UF 20.00% 100V		
2787		G	CAPACITOR		C6065	1-126-934-11	ELECT 220UF 20.00% 16V		
2788		G	CAPACITOR		C6067	1-126-934-11	ELECT 220UF 20.00% 16V		
2789		G	CAPACITOR		C6068	1-126-934-11	ELECT 220UF 20.00% 16V		
2790		G	CAPACITOR		C6069	1-126-934-11	ELECT 220UF 20.00% 16V		
2791		G	CAPACITOR		C6070	1-104-665-11	ELECT 100UF 20.00% 25V		
2792		G	CAPACITOR		C6071	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
2793		G	CAPACITOR		C6072	1-163-021-91	CERAMIC CHIP 0.01UF 10.00% 50V		
2794		G	CAPACITOR		C6074	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V		
2795		G	CAPACITOR		C6079	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2796		G	CAPACITOR		C6082	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2797		G	CAPACITOR		C6101	1-126-960-11	ELECT 1UF 20.00% 50V		
2798		G	CAPACITOR		C6102	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
2799		G	CAPACITOR		C6751	1-165-908-11	CERAMIC CHIP 1UF 10% 10V		
2800		G	CAPACITOR		C6753	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2801		G	CAPACITOR		C6755	1-135-960-91	CERAMIC CHIP 10UF 10% 25V		
2802		G	CAPACITOR		C6756	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
2803		G	CAPACITOR		C6759	1-128-949-31	ELECT 470UF 20% 16V		
2804		G	CAPACITOR		C6760	1-126-767-11	ELECT 1000UF 20.00% 16V		
2805		G	CAPACITOR		C6761	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V		
2806		G	CAPACITOR		C6762	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
2807		G	CAPACITOR		C6764	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
2808		G	CAPACITOR		C6766	1-128-950-31	ELECT 1000UF 20% 16V		
2809		G	CAPACITOR		C6767	1-165-730-31	ELECT 680UF 20% 16V		
2810		G	CAPACITOR		C6768	1-164-245-11	CERAMIC CHIP 0.015UF 10.00% 25V		
2811		G	CAPACITOR		C6770	1-100-591-91	CERAMIC CHIP 1UF 10% 25V		
2812		G	LEAD PIN	*	CLP601	4-042-408-02	PIN, COATING LEAD		
2813		G	LEAD PIN	*	CLP602	4-042-408-02	PIN, COATING LEAD		
2814		G	CONNECTOR		CN6001	1-785-294-11	PIN, CONNECTOR (PC BOARD) 3P		
2815		G	CONNECTOR	*	CN6002	1-564-515-11	PLUG, CONNECTOR 12P		
2816		G	CONNECTOR	*	CN6003	1-564-511-11	PLUG, CONNECTOR 8P		
2817		G	CONNECTOR	*	CN6004	1-564-510-11	PLUG, CONNECTOR 7P		
2818		G	CONNECTOR	*	CN6005	1-566-765-11	PIN, CONNECTOR (PC BOARD) 10P		
2819		G	CONNECTOR		CN6009	1-695-915-11	TAB (CONTACT)		
2820		G	CONNECTOR		CN6010	1-695-915-11	TAB (CONTACT)		
2821		G	CONNECTOR		CN6011	1-695-915-11	TAB (CONTACT)		
2822		G	CONNECTOR	*	CN6101	1-566-761-11	PIN, CONNECTOR (PC BOARD) 6P		
2823		G	DIODE		D6001	8-719-041-97	DIODE MA113-(TX)		
2824		G	DIODE		D6002	8-719-041-97	DIODE MA113-(TX)		
2825		G	DIODE		D6003	8-719-948-45	DIODE ERA22-08		
2826		G	DIODE		D6004	8-719-077-77	DIODE D3SB60F3		
2827		G	DIODE		D6005	8-719-031-79	DIODE D5SC4M		
2828		G	DIODE		D6006	8-719-404-50	DIODE MA111-TX		
2829		G	DIODE		D6007	8-719-077-76	DIODE D2SB60A-F04		
2830		G	DIODE		D6008	8-719-979-64	DIODE UF4005PKG23		
2831		G	DIODE		D6014	8-719-948-45	DIODE ERA22-08		
2832		G	DIODE		D6015	8-719-063-73	DIODE D1NL20U-TR		
2833		G	DIODE		D6016	8-719-063-73	DIODE D1NL20U-TR		
2834		G	DIODE		D6017	8-719-041-97	DIODE MA113-(TX)		
2835		G	DIODE		D6018	8-719-063-73	DIODE D1NL20U-TR		
2836		G	DIODE		D6019	8-719-063-73	DIODE D1NL20U-TR		
2837		G	DIODE		D6020	8-719-510-09	DIODE D10SC6M		
2838		G	DIODE		D6021	8-719-069-56	DIODE UDZSTE-176.2B		
2839		G	DIODE		D6022	8-719-031-79	DIODE D5SC4M		
2840		G	DIODE		D6023	8-719-404-50	DIODE MA111-TX		
2841		G	DIODE		D6024	8-719-056-85	DIODE UDZ-TE-17-8.2B		
2842		G	DIODE		D6026	8-719-033-53	DIODE RD6.8SB2-T1		
2843		G	DIODE		D6029	8-719-404-50	DIODE MA111-TX		
2844		G	DIODE		D6030	8-719-404-50	DIODE MA111-TX		
2845		G	DIODE		D6031	8-719-083-71	DIODE UDZSTE-1730B		
2846		G	DIODE		D6032	8-719-983-37	DIODE MTZJ-T-77-36A		
2847		G	DIODE		D6033	8-719-063-73	DIODE D1NL20U-TR		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2848		G	DIODE		D6034	8-719-083-83	DIODE UDZS-TE17-15B		
2849		G	DIODE		D6035	8-719-083-83	DIODE UDZS-TE17-15B		
2850		G	DIODE		D6036	8-719-083-83	DIODE UDZS-TE17-15B		
2851		G	DIODE		D6037	8-719-083-83	DIODE UDZS-TE17-15B		
2852		G	DIODE		D6038	8-719-083-83	DIODE UDZS-TE17-15B		
2853		G	DIODE		D6101	8-719-404-50	DIODE MA111-TX		
2854		G	DIODE		D6102	8-719-404-50	DIODE MA111-TX		
2855		G	DIODE		D6750	8-719-081-67	DIODE M1FM3		
2856		G	DIODE		D6751	8-719-081-97	DIODE MMDL914T1		
2857		G	DIODE		D6752	8-719-081-97	DIODE MMDL914T1		
2858		G	DIODE		D6753	8-719-977-28	DIODE DTZ10B		
2859		G	DIODE		D6755	8-719-056-85	DIODE UDZ-TE-17-8.2B		
2860		G	FUSE	△	F6001	1-576-233-12	FUSE 6.3A 250V		
2861		G	FUSE HOLDER		FH6001	1-533-223-11	FUSE HOLDER 0A 0V		
2862		G	FUSE HOLDER		FH6002	1-533-223-11	FUSE HOLDER 0A 0V		
2863		G	IC		IC6002	8-759-670-30	IC MCZ3001D		
2864		G	IC		IC6003	6-703-136-01	IC MIP2C20MP1SO		
2865		G	IC		IC6004	8-759-198-31	IC UPC1093J-1-T		
2866		G	IC		IC6005	8-759-198-31	IC UPC1093J-1-T		
2867		G	IC		IC6006	8-759-471-81	IC PQ05RD11		
2868		G	IC		IC6007	8-759-653-07	IC PQ09RD21		
2869		G	IC		IC6009	6-700-898-01	IC PQ05RD21		
2870		G	IC		IC6010	8-759-471-81	IC PQ05RD11		
2871		G	IC		IC6750	6-704-120-01	IC MD3221N		
2872		G	IC		IC6751	8-759-521-89	IC PQ20WZ5U		
2873		G	COIL		L6001	1-424-677-11	TRANSFORMER, LINE FILTER		
2874		G	COIL		L6003	1-414-158-11	INDUCTOR 2.2UH		
2875		G	COIL		L6004	1-414-158-11	INDUCTOR 2.2UH		
2876		G	COIL		L6007	1-412-521-31	INDUCTOR 4.7UH		
2877		G	COIL		L6008	1-412-521-31	INDUCTOR 4.7UH		
2878		G	COIL		L6010	1-412-525-31	INDUCTOR 10UH		
2879		G	COIL		L6750	1-419-740-12	INDUCTOR 15UH		
2880		G	COIL		L6751	1-412-525-31	INDUCTOR 10UH		
2881		G	COIL		L6752	1-412-525-31	INDUCTOR 10UH		
2882		G	PHOTO COUPLER		PH6002	8-749-924-35	PHOTO COUPLER ON3171-R		
2883		G	PHOTO COUPLER		PH6003	8-749-924-35	PHOTO COUPLER ON3171-R		
2884		G	PHOTO COUPLER		PH6004	8-749-016-81	PHOTO COUPLER PC123Y22		
2885		G	IC LINK	△	PS6001	1-576-607-11	FUSE 6.3A 125V		
2886		G	IC LINK	△	PS6002	1-249-393-11	CARBON 10 5% 1/4W		
2887		G	TRANSISTOR		Q6001	8-729-023-22	TRANSISTOR 2SD2114K		
2888		G	TRANSISTOR		Q6003	8-729-052-32	TRANSISTOR IRFIB7N50A-LF31		
2889		G	TRANSISTOR		Q6004	8-729-052-32	TRANSISTOR IRFIB7N50A-LF31		
2890		G	TRANSISTOR		Q6005	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2891		G	TRANSISTOR		Q6006	8-729-216-22	TRANSISTOR 2SA1162-G		
2892		G	TRANSISTOR		Q6010	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2893		G	TRANSISTOR		Q6011	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		
2894		G	TRANSISTOR		Q6012	8-729-140-96	TRANSISTOR 2SD774-34		
2895		G	TRANSISTOR		Q6014	8-729-010-25	TRANSISTOR MSD601-RT1		
2896		G	TRANSISTOR		Q6751	8-729-010-25	TRANSISTOR MSD601-RT1		
2897		G	RESISTOR		R6001	1-219-759-11	METAL 1M 5% 1/2W		
2898		G	RESISTOR		R6002	1-247-289-00	METAL 8.2M 5% 1W		
2899		G	RESISTOR		R6003	1-240-251-11	CEMENTED 6.8 5% 10W		
2900		G	RESISTOR		R6004	1-247-752-11	CARBON 1K 5% 1/2W		
2901		G	RESISTOR		R6005	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2902		G	RESISTOR		R6006	1-249-399-11	CARBON 33 5% 1/4W		
2903		G	RESISTOR		R6009	1-202-933-61	FUSE 0.1 10% 1/2W		
2904		G	RESISTOR		R6010	1-218-728-11	METAL CHIP 33K 0.5% 1/10W		
2905		G	RESISTOR		R6011	1-218-716-11	METAL CHIP 10K 0.5% 1/10W		
2906		G	RESISTOR		R6014	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
2907		G	RESISTOR		R6016	1-249-389-11	CARBON 4.7 5% 1/4W		
2908		G	RESISTOR		R6017	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
2909		G	RESISTOR		R6018	1-249-417-11	CARBON 1K 5% 1/4W		
2910		G	RESISTOR		R6019	1-249-393-11	CARBON 10 5% 1/4W		
2911		G	RESISTOR		R6020	1-249-393-11	CARBON 10 5% 1/4W		
2912		G	RESISTOR		R6021	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2913		G	RESISTOR		R6022	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2914		G	RESISTOR		R6025	1-218-642-11	METAL OXIDE 100K 5% 1W		
2915		G	RESISTOR		R6026	1-216-852-11	METAL CHIP 390K 5% 1/10W		
2916		G	RESISTOR		R6027	1-249-402-11	CARBON 56 5% 1/4W		
2917		G	RESISTOR		R6028	1-243-979-71	METAL OXIDE 0.1 5% 2W		
2918		G	RESISTOR		R6029	1-249-393-11	CARBON 10 5% 1/4W		
2919		G	RESISTOR		R6030	1-216-835-11	METAL CHIP 15K 5% 1/10W		
2920		G	RESISTOR		R6031	1-216-817-11	METAL CHIP 470 5% 1/10W		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2921		G	RESISTOR		R6032	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2922		G	RESISTOR		R6033	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2923		G	RESISTOR		R6034	1-249-417-11	CARBON 1K 5% 1/4W		
2924		G	RESISTOR		R6035	1-218-724-11	METAL CHIP 22K 0.5% 1/10W		
2925		G	RESISTOR		R6036	1-218-724-11	METAL CHIP 22K 0.5% 1/10W		
2926		G	RESISTOR		R6037	1-216-805-11	METAL CHIP 47 5% 1/10W		
2927		G	RESISTOR		R6038	1-216-041-00	RES-CHIP 470 5% 1/10W		
2928		G	RESISTOR		R6039	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2929		G	RESISTOR		R6043	1-249-405-11	CARBON 100 5% 1/4W		
2930		G	RESISTOR		R6044	1-218-712-11	METAL CHIP 6.8K 0.5% 1/10W		
2931		G	RESISTOR		R6045	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
2932		G	RESISTOR		R6047	1-218-716-11	METAL CHIP 10K 0.5% 1/10W		
2933		G	RESISTOR		R6048	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2934		G	RESISTOR		R6049	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2935		G	RESISTOR		R6050	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2936		G	RESISTOR		R6051	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2937		G	RESISTOR		R6052	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2938		G	RESISTOR		R6053	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2939		G	RESISTOR		R6054	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2940		G	RESISTOR		R6062	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2941		G	RESISTOR		R6063	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2942		G	RESISTOR		R6064	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2943		G	RESISTOR		R6065	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2944		G	RESISTOR		R6067	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2945		G	RESISTOR		R6068	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2946		G	RESISTOR		R6069	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2947		G	RESISTOR		R6070	1-216-864-11	SHORT CHIP 0		
2948		G	RESISTOR		R6071	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2949		G	RESISTOR		R6072	1-216-837-11	METAL CHIP 22K 5% 1/10W		
2950		G	RESISTOR		R6073	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2951		G	RESISTOR		R6075	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2952		G	RESISTOR		R6076	1-249-393-11	CARBON 10 5% 1/4W		
2953		G	RESISTOR		R6079	1-218-728-11	METAL CHIP 33K 0.5% 1/10W		
2954		G	RESISTOR		R6080	1-245-477-21	METAL 430K 1% 1/4W		
2955		G	RESISTOR		R6081	1-245-480-21	METAL 560K 1% 1/4W		
2956		G	RESISTOR		R6082	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2957		G	RESISTOR		R6084	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2958		G	RESISTOR		R6085	1-216-841-11	METAL CHIP 47K 5% 1/10W		
2959		G	RESISTOR		R6088	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2960		G	RESISTOR		R6101	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2961		G	RESISTOR		R6102	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
2962		G	RESISTOR		R6103	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2963		G	RESISTOR		R6751	1-216-821-11	METAL CHIP 1K 5% 1/10W		
2964		G	RESISTOR		R6752	1-216-833-11	METAL CHIP 10K 5% 1/10W		
2965		G	RESISTOR		R6753	1-216-295-91	SHORT CHIP 0		
2966		G	RESISTOR		R6754	1-216-295-91	SHORT CHIP 0		
2967		G	RESISTOR		R6755	1-216-295-91	SHORT CHIP 0		
2968		G	RESISTOR		R6756	1-216-295-91	SHORT CHIP 0		
2969		G	RESISTOR		R6758	1-216-864-11	SHORT CHIP 0		
2970		G	RESISTOR		R6760	1-216-864-11	SHORT CHIP 0		
2971		G	RESISTOR		R6761	1-216-845-11	METAL CHIP 100K 5% 1/10W		
2972		G	RESISTOR		R6762	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
2973		G	RESISTOR		R6763	1-216-641-11	METAL CHIP 390 0.5% 1/10W		
2974		G	RESISTOR		R6764	1-216-675-91	METAL CHIP 10K 0.5% 1/10W		
2975		G	RESISTOR		R6766	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2976		G	RESISTOR		R6767	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
2977		G	RESISTOR		R6768	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
2978		G	RESISTOR		R6769	1-216-809-11	METAL CHIP 100 5% 1/10W		
2979		G	RESISTOR		R6770	1-216-813-11	METAL CHIP 220 5% 1/10W		
2980		G	RESISTOR		R6771	1-216-803-11	METAL CHIP 33 5% 1/10W		
2981		G	RESISTOR		R6773	1-216-295-91	SHORT CHIP 0		
2982		G	RELAY		RY6001	1-755-388-11	RELAY (AC POWER)		
2983		G	RELAY		RY6002	1-755-407-11	RELAY (AC POWER)		
2984		G	SPARK GAP		SG6001	1-417-339-11	SURGE ARRESTERS		
2985		G	TRANSFORMER		T6003	1-443-116-11	DC-DC CONVERTER TRANSFORMER		
2986		G	TRANSFORMER		T6004	1-443-113-11	CONVERTER TRANSFORMER (PIT)		
2987		G	THERMISTOR		TH6001	1-803-586-41	THERMISTOR		
2988		G	VARISTOR		VD6001	1-803-830-31	VARISTOR (ERZV14D621)		
2989		G	VARISTOR		VD6002	1-803-830-31	VARISTOR (ERZV14D621)		
2990		DIC2	CAPACITOR		C1000	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2991		DIC2	CAPACITOR		C1001	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2992		DIC2	CAPACITOR		C1002	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2993		DIC2	CAPACITOR		C1003	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
2994		DIC2	CAPACITOR		C1004	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2995		DIC2	CAPACITOR		C1005	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2996		DIC2	CAPACITOR		C1006	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
2997		DIC2	CAPACITOR		C1009	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
2998		DIC2	CAPACITOR		C1010	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
2999		DIC2	CAPACITOR		C1011	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
3000		DIC2	CAPACITOR		C1012	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3001		DIC2	CAPACITOR		C1013	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3002		DIC2	CAPACITOR		C1014	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3003		DIC2	CAPACITOR		C1015	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3004		DIC2	CAPACITOR		C1016	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3005		DIC2	CAPACITOR		C1017	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3006		DIC2	CAPACITOR		C1018	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3007		DIC2	CAPACITOR		C1019	1-164-941-11	CERAMIC CHIP 0.0047UF 10.00% 16V		
3008		DIC2	CAPACITOR		C1020	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3009		DIC2	CAPACITOR		C1021	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
3010		DIC2	CAPACITOR		C1029	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3011		DIC2	CAPACITOR		C1030	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3012		DIC2	CAPACITOR		C1031	1-164-941-11	CERAMIC CHIP 0.0047UF 10.00% 16V		
3013		DIC2	CAPACITOR		C1032	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3014		DIC2	CAPACITOR		C1033	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3015		DIC2	CAPACITOR		C1034	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3016		DIC2	CAPACITOR		C1038	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3017		DIC2	CAPACITOR		C1040	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3018		DIC2	CAPACITOR		C1041	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
3019		DIC2	CAPACITOR		C1042	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3020		DIC2	CAPACITOR		C1043	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3021		DIC2	CAPACITOR		C1045	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3022		DIC2	CAPACITOR		C1047	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3023		DIC2	CAPACITOR		C1049	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3024		DIC2	CAPACITOR		C1051	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3025		DIC2	CAPACITOR		C1053	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3026		DIC2	CAPACITOR		C1055	1-164-937-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3027		DIC2	CAPACITOR		C1057	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3028		DIC2	CAPACITOR		C1063	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3029		DIC2	CAPACITOR		C1200	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3030		DIC2	CAPACITOR		C1201	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
3031		DIC2	CAPACITOR		C1202	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3032		DIC2	CAPACITOR		C1203	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3033		DIC2	CAPACITOR		C1204	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3034		DIC2	CAPACITOR		C1205	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3035		DIC2	CAPACITOR		C1206	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3036		DIC2	CAPACITOR		C1207	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3037		DIC2	CAPACITOR		C1208	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3038		DIC2	CAPACITOR		C1209	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
3039		DIC2	CAPACITOR		C1210	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
3040		DIC2	CAPACITOR		C1211	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
3041		DIC2	CAPACITOR		C1212	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
3042		DIC2	CAPACITOR		C1213	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3043		DIC2	CAPACITOR		C1214	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3044		DIC2	CAPACITOR		C1215	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3045		DIC2	CAPACITOR		C1216	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3046		DIC2	CAPACITOR		C1217	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3047		DIC2	CAPACITOR		C1218	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3048		DIC2	CAPACITOR		C1219	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3049		DIC2	CAPACITOR		C1220	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3050		DIC2	CAPACITOR		C1221	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3051		DIC2	CAPACITOR		C1222	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3052		DIC2	CAPACITOR		C1223	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3053		DIC2	CAPACITOR		C1224	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3054		DIC2	CAPACITOR		C1226	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3055		DIC2	CAPACITOR		C1227	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3056		DIC2	CAPACITOR		C1228	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3057		DIC2	CAPACITOR		C1229	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3058		DIC2	CAPACITOR		C1230	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3059		DIC2	CAPACITOR		C1231	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3060		DIC2	CAPACITOR		C1232	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3061		DIC2	CAPACITOR		C1233	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3062		DIC2	CAPACITOR		C1234	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3063		DIC2	CAPACITOR		C1235	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3064		DIC2	CAPACITOR		C1236	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3065		DIC2	CAPACITOR		C1237	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3066		DIC2	CAPACITOR		C1238	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		

No.	#	Board	Type	$\Delta/\%$	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3067		DIC2	CAPACITOR		C1239	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3068		DIC2	CAPACITOR		C1240	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3069		DIC2	CAPACITOR		C1241	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3070		DIC2	CAPACITOR		C1242	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3071		DIC2	CAPACITOR		C1243	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3072		DIC2	CAPACITOR		C1244	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3073		DIC2	CAPACITOR		C1245	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3074		DIC2	CAPACITOR		C1246	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3075		DIC2	CAPACITOR		C1247	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3076		DIC2	CAPACITOR		C1248	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3077		DIC2	CAPACITOR		C1249	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3078		DIC2	CAPACITOR		C1250	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3079		DIC2	CAPACITOR		C1251	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3080		DIC2	CAPACITOR		C1252	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3081		DIC2	CAPACITOR		C1253	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3082		DIC2	CAPACITOR		C1254	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3083		DIC2	CAPACITOR		C1255	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3084		DIC2	CAPACITOR		C1256	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3085		DIC2	CAPACITOR		C1257	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3086		DIC2	CAPACITOR		C1258	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3087		DIC2	CAPACITOR		C1259	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3088		DIC2	CAPACITOR		C1260	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3089		DIC2	CAPACITOR		C1261	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3090		DIC2	CAPACITOR		C1262	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3091		DIC2	CAPACITOR		C1263	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3092		DIC2	CAPACITOR		C1264	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3093		DIC2	CAPACITOR		C1265	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3094		DIC2	CAPACITOR		C1266	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3095		DIC2	CAPACITOR		C1267	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3096		DIC2	CAPACITOR		C1268	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3097		DIC2	CAPACITOR		C1269	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3098		DIC2	CAPACITOR		C1270	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3099		DIC2	CAPACITOR		C1271	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3100		DIC2	CAPACITOR		C1272	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3101		DIC2	CAPACITOR		C1273	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3102		DIC2	CAPACITOR		C1400	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
3103		DIC2	CAPACITOR		C1401	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3104		DIC2	CAPACITOR		C1403	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3105		DIC2	CAPACITOR		C1405	1-128-357-11	ELECT CHIP 10UF 20.00% 16V		
3106		DIC2	CAPACITOR		C1406	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
3107		DIC2	CAPACITOR		C1407	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
3108		DIC2	CAPACITOR		C1408	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
3109		DIC2	CAPACITOR		C1409	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3110		DIC2	CAPACITOR		C1410	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3111		DIC2	CAPACITOR		C1411	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3112		DIC2	CAPACITOR		C1412	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3113		DIC2	CAPACITOR		C1413	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3114		DIC2	CAPACITOR		C1414	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3115		DIC2	CAPACITOR		C1415	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3116		DIC2	CAPACITOR		C1416	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3117		DIC2	CAPACITOR		C1417	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3118		DIC2	CAPACITOR		C1418	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3119		DIC2	CAPACITOR		C1419	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3120		DIC2	CAPACITOR		C1420	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3121		DIC2	CAPACITOR		C1421	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3122		DIC2	CAPACITOR		C1422	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3123		DIC2	CAPACITOR		C1423	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3124		DIC2	CAPACITOR		C1424	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3125		DIC2	CAPACITOR		C1425	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3126		DIC2	CAPACITOR		C1426	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3127		DIC2	CAPACITOR		C1427	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3128		DIC2	CAPACITOR		C1428	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3129		DIC2	CAPACITOR		C1429	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3130		DIC2	CAPACITOR		C1430	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3131		DIC2	CAPACITOR		C1431	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3132		DIC2	CAPACITOR		C1432	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3133		DIC2	CAPACITOR		C1433	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3134		DIC2	CAPACITOR		C1434	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3135		DIC2	CAPACITOR		C1435	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3136		DIC2	CAPACITOR		C1436	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3137		DIC2	CAPACITOR		C1437	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3138		DIC2	CAPACITOR		C1438	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3139		DIC2	CAPACITOR		C1439	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3140		DIC2	CAPACITOR		C1440	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3141		DIC2	CAPACITOR		C1441	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3142		DIC2	CAPACITOR		C1442	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3143		DIC2	CAPACITOR		C1443	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3144		DIC2	CAPACITOR		C1444	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3145		DIC2	CAPACITOR		C1445	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3146		DIC2	CAPACITOR		C1446	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3147		DIC2	CAPACITOR		C1447	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3148		DIC2	CAPACITOR		C1448	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3149		DIC2	CAPACITOR		C1449	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3150		DIC2	CAPACITOR		C1450	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3151		DIC2	CAPACITOR		C1451	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3152		DIC2	CAPACITOR		C1452	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3153		DIC2	CAPACITOR		C1453	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3154		DIC2	CAPACITOR		C1454	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3155		DIC2	CAPACITOR		C1455	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3156		DIC2	CAPACITOR		C1456	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3157		DIC2	CAPACITOR		C1457	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3158		DIC2	CAPACITOR		C1458	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3159		DIC2	CAPACITOR		C1459	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3160		DIC2	CAPACITOR		C1600	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3161		DIC2	CAPACITOR		C1601	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3162		DIC2	CAPACITOR		C1604	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3163		DIC2	CAPACITOR		C1605	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
3164		DIC2	CAPACITOR		C1606	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3165		DIC2	CAPACITOR		C1608	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3166		DIC2	CAPACITOR		C1609	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3167		DIC2	CAPACITOR		C1610	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3168		DIC2	CAPACITOR		C1612	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3169		DIC2	CAPACITOR		C1613	1-127-715-91	CERAMIC CHIP 0.22UF 10% 16V		
3170		DIC2	CAPACITOR		C1614	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
3171		DIC2	CAPACITOR		C1615	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
3172		DIC2	CAPACITOR		C1616	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3173		DIC2	CAPACITOR		C1617	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3174		DIC2	CAPACITOR		C1618	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3175		DIC2	CAPACITOR		C1619	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3176		DIC2	CAPACITOR		C1620	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3177		DIC2	CAPACITOR		C1621	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3178		DIC2	CAPACITOR		C1622	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3179		DIC2	CAPACITOR		C1623	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3180		DIC2	CAPACITOR		C1624	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3181		DIC2	CAPACITOR		C1625	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3182		DIC2	CAPACITOR		C1626	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3183		DIC2	CAPACITOR		C1627	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3184		DIC2	CAPACITOR		C1628	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3185		DIC2	CAPACITOR		C1629	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3186		DIC2	CAPACITOR		C1630	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3187		DIC2	CAPACITOR		C1631	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3188		DIC2	CAPACITOR		C1632	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3189		DIC2	CAPACITOR		C1633	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3190		DIC2	CAPACITOR		C1634	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3191		DIC2	CAPACITOR		C1635	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3192		DIC2	CAPACITOR		C1636	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3193		DIC2	CAPACITOR		C1637	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3194		DIC2	CAPACITOR		C1638	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3195		DIC2	CAPACITOR		C1639	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3196		DIC2	CAPACITOR		C1640	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3197		DIC2	CAPACITOR		C1641	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3198		DIC2	CAPACITOR		C1643	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3199		DIC2	CAPACITOR		C1644	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3200		DIC2	CAPACITOR		C1645	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3201		DIC2	CAPACITOR		C1646	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3202		DIC2	CAPACITOR		C1647	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3203		DIC2	CAPACITOR		C1703	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3204		DIC2	CAPACITOR		C1704	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3205		DIC2	CAPACITOR		C1708	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3206		DIC2	CAPACITOR		C1710	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3207		DIC2	CAPACITOR		C1712	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3208		DIC2	CAPACITOR		C1713	1-126-246-11	ELECT CHIP 220UF 20.00% 4V		
3209		DIC2	CAPACITOR		C1714	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
3210		DIC2	CAPACITOR		C1715	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3211		DIC2	CAPACITOR		C1716	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3212		DIC2	CAPACITOR		C1717	1-165-643-21	ELECT CHIP 150UF 20% 4V		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3286		DIC2	CAPACITOR		C1804	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V		
3287		DIC2	CAPACITOR		C1900	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3288		DIC2	CAPACITOR		C1902	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3289		DIC2	CAPACITOR		C1903	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3290		DIC2	CAPACITOR		C1904	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3291		DIC2	CAPACITOR		C1905	1-119-923-11	CERAMIC CHIP 0.047UF 10.00% 10V		
3292		DIC2	CAPACITOR		C1906	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3293		DIC2	CAPACITOR		C1907	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3294		DIC2	CAPACITOR		C1908	1-164-943-11	CERAMIC CHIP 0.01UF 10.00% 16V		
3295		DIC2	CAPACITOR		C1910	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3296		DIC2	CAPACITOR		C1911	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3297		DIC2	CAPACITOR		C1912	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3298		DIC2	CAPACITOR		C1915	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3299		DIC2	CAPACITOR		C1916	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3300		DIC2	CAPACITOR		C1917	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3301		DIC2	CAPACITOR		C1918	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3302		DIC2	CAPACITOR		C1919	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3303		DIC2	CAPACITOR		C1920	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3304		DIC2	CAPACITOR		C1921	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3305		DIC2	CAPACITOR		C1922	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
3306		DIC2	CAPACITOR		C1923	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3307		DIC2	CAPACITOR		C1924	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3308		DIC2	CAPACITOR		C1925	1-100-503-11	CERAMIC CHIP 4.7UF 10% 10V		
3309		DIC2	CAPACITOR		C1926	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3310		DIC2	CAPACITOR		C1927	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3311		DIC2	CAPACITOR		C1928	1-100-503-11	CERAMIC CHIP 4.7UF 10% 10V		
3312		DIC2	CAPACITOR		C1929	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3313		DIC2	CAPACITOR		C1930	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3314		DIC2	CAPACITOR		C1931	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3315		DIC2	CAPACITOR		C1932	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3316		DIC2	CAPACITOR		C1933	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3317		DIC2	CAPACITOR		C1934	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V		
3318		DIC2	CAPACITOR		C1935	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3319		DIC2	CAPACITOR		C1936	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3320		DIC2	CAPACITOR		C1937	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
3321		DIC2	CAPACITOR		C1938	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V		
3322		DIC2	CAPACITOR		C1939	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
3323		DIC2	CAPACITOR		C1940	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3324		DIC2	DIODE		D1200	8-719-066-10	DIODE 1PS181-115		
3325		DIC2	DIODE		D1201	8-719-066-11	DIODE 1PS184-115		
3326		DIC2	DIODE		D1701	8-719-066-11	DIODE 1PS184-115		
3327		DIC2	DIODE		D1702	8-719-066-10	DIODE 1PS181-115		
3328		DIC2	DIODE		D1900	8-719-025-34	DIODE 02CZ6.8-TE85L		
3329		DIC2	DIODE		D1901	8-719-081-97	DIODE MMDL914T1		
3330		DIC2	DIODE		D1902	8-719-800-76	DIODE 1SS226		
3331		DIC2	DIODE		D1903	8-719-800-76	DIODE 1SS226		
3332		DIC2	FUSE	Δ	F1000	1-576-604-21	FUSE 1A 72V		
3333		DIC2	FUSE	Δ	F1001	1-576-604-21	FUSE 1A 72V		
3334		DIC2	FUSE	Δ	F1002	1-576-604-21	FUSE 1A 72V		
3335		DIC2	FERRITE BEAD		FB1000	1-414-228-11	FERRITE 0UH		
3336		DIC2	FERRITE BEAD		FB1001	1-414-228-11	FERRITE 0UH		
3337		DIC2	FERRITE BEAD		FB1002	1-414-228-11	FERRITE 0UH		
3338		DIC2	FERRITE BEAD		FB1003	1-414-228-11	FERRITE 0UH		
3339		DIC2	FERRITE BEAD		FB1004	1-414-228-11	FERRITE 0UH		
3340		DIC2	FERRITE BEAD		FB1005	1-414-228-11	FERRITE 0UH		
3341		DIC2	FERRITE BEAD		FB1200	1-414-234-22	FERRITE 0UH		
3342		DIC2	FERRITE BEAD		FB1701	1-414-445-11	FERRITE 0UH		
3343		DIC2	FERRITE BEAD		FB1703	1-414-445-11	FERRITE 0UH		
3344		DIC2	FILTER		FL1200	1-234-177-21	FERRITE 0UH		
3345		DIC2	FILTER		FL1201	1-234-560-21	FILTER, LOW PASS		
3346		DIC2	FILTER		FL1202	1-234-559-21	FILTER, LOW PASS		
3347		DIC2	FILTER		FL1203	1-234-559-21	FILTER, LOW PASS		
3348		DIC2	FILTER		FL1204	1-234-177-21	FERRITE 0UH		
3349		DIC2	FILTER		FL1205	1-234-177-21	FERRITE 0UH		
3350		DIC2	FILTER		FL1206	1-234-177-21	FERRITE 0UH		
3351		DIC2	FILTER		FL1207	1-234-177-21	FERRITE 0UH		
3352		DIC2	FILTER		FL1208	1-234-177-21	FERRITE 0UH		
3353		DIC2	IC		IC1000	6-701-680-01	IC PST3629NR		
3354		DIC2	IC		IC1001	6-701-680-01	IC PST3629NR		
3355		DIC2	IC		IC1002	8-759-677-29	IC TC74LVX125FT(EL)		
3356		DIC2	IC		IC1003	6-703-073-01	IC THC63LVDM83C-T		
3357		DIC2	IC		IC1006	8-759-677-29	IC TC74LVX125FT(EL)		
3358		DIC2	IC		IC1200	8-759-712-65	IC PQ070XZ01ZP		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3359		DIC2	IC		IC1201	6-705-529-01	IC LMH6658MMX/J5000172		
3360		DIC2	IC		IC1202	6-705-529-01	IC LMH6658MMX/J5000172		
3361		DIC2	IC		IC1203	8-752-425-02	IC CXD3802BQ		
3362		DIC2	IC		IC1204	6-703-430-01	IC MT48LC2M32B2TG-6-Y94W		
3363		DIC2	IC		IC1402	8-752-425-02	IC CXD3802BQ		
3364		DIC2	IC		IC1600	8-759-669-78	IC TLC2933IPWR-12		
3365		DIC2	IC		IC1602	8-759-676-70	IC MSM56V16160F-10TS-K		
3366		DIC2	IC		IC1603	8-752-422-52	IC CXD2097BQ		
3367		DIC2	IC		IC1702	6-700-120-01	IC IMISM560BZD		
3368		DIC2	IC		IC1703	6-704-992-01	IC CXD9707DGP		
3369		DIC2	IC		IC1704	6-703-430-01	IC MT48LC2M32B2TG-6-Y94W		
3370		DIC2	IC		IC1705	6-703-430-01	IC MT48LC2M32B2TG-6-Y94W		
3371		DIC2	IC		IC1900	6-702-688-01	IC M24C64-WMN6T(B)		
3372		DIC2	IC		IC1901	8-759-349-11	IC PST9145NL		
3373		DIC2	IC		IC1902	8-752-937-39	IC CXP964032-003R		
3374		DIC2	IC		IC1903	8-752-937-39	IC CXP964032-003R		
3375		DIC2	IC		IC1910	6-803-756-01	IC MB94P918PF-G-166A		
3376		DIC2	COIL		L1000	1-412-029-11	INDUCTOR 10UH		
3377		DIC2	COIL		L1003	1-412-058-11	INDUCTOR 10UH		
3378		DIC2	COIL		L1004	1-412-058-11	INDUCTOR 10UH		
3379		DIC2	COIL		L1200	1-469-555-21	INDUCTOR 10UH		
3380		DIC2	COIL		L1201	1-469-549-21	INDUCTOR 1UH		
3381		DIC2	COIL		L1202	1-469-549-21	INDUCTOR 1UH		
3382		DIC2	COIL		L1203	1-469-549-21	INDUCTOR 1UH		
3383		DIC2	COIL		L1204	1-469-549-21	INDUCTOR 1UH		
3384		DIC2	COIL		L1205	1-469-549-21	INDUCTOR 1UH		
3385		DIC2	COIL		L1206	1-412-029-11	INDUCTOR 10UH		
3386		DIC2	COIL		L1207	1-469-549-21	INDUCTOR 1UH		
3387		DIC2	COIL		L1208	1-469-549-21	INDUCTOR 1UH		
3388		DIC2	COIL		L1209	1-469-549-21	INDUCTOR 1UH		
3389		DIC2	COIL		L1210	1-469-549-21	INDUCTOR 1UH		
3390		DIC2	COIL		L1400	1-469-555-21	INDUCTOR 10UH		
3391		DIC2	COIL		L1401	1-412-029-11	INDUCTOR 10UH		
3392		DIC2	COIL		L1600	1-412-064-11	INDUCTOR 100UH		
3393		DIC2	COIL		L1601	1-412-064-11	INDUCTOR 100UH		
3394		DIC2	COIL		L1602	1-412-058-11	INDUCTOR 10UH		
3395		DIC2	COIL		L1603	1-469-549-21	INDUCTOR 1UH		
3396		DIC2	COIL		L1604	1-412-058-11	INDUCTOR 10UH		
3397		DIC2	COIL		L1605	1-469-549-21	INDUCTOR 1UH		
3398		DIC2	COIL		L1701	1-412-053-21	INDUCTOR 1.5UH		
3399		DIC2	COIL		L1702	1-412-053-21	INDUCTOR 1.5UH		
3400		DIC2	COIL		L1703	1-469-555-21	INDUCTOR 10UH		
3401		DIC2	COIL		L1704	1-469-549-21	INDUCTOR 1UH		
3402		DIC2	COIL		L1705	1-469-549-21	INDUCTOR 1UH		
3403		DIC2	COIL		L1706	1-469-549-21	INDUCTOR 1UH		
3404		DIC2	COIL		L1707	1-469-549-21	INDUCTOR 1UH		
3405		DIC2	COIL		L1708	1-469-549-21	INDUCTOR 1UH		
3406		DIC2	COIL		L1709	1-469-549-21	INDUCTOR 1UH		
3407		DIC2	COIL		L1900	1-412-058-11	INDUCTOR 10UH		
3408		DIC2	COIL		L1901	1-469-555-21	INDUCTOR 10UH		
3409		DIC2	COIL		L1902	1-469-555-21	INDUCTOR 10UH		
3410		DIC2	COIL		L1903	1-469-555-21	INDUCTOR 10UH		
3411		DIC2	TRANSISTOR		Q1000	8-729-117-73	TRANSISTOR 2SC4178-F14		
3412		DIC2	TRANSISTOR		Q1002	8-729-117-73	TRANSISTOR 2SC4178-F14		
3413		DIC2	TRANSISTOR		Q1003	8-729-117-73	TRANSISTOR 2SC4178-F14		
3414		DIC2	TRANSISTOR		Q1007	8-729-117-73	TRANSISTOR 2SC4178-F14		
3415		DIC2	TRANSISTOR		Q1008	8-729-117-73	TRANSISTOR 2SC4178-F14		
3416		DIC2	TRANSISTOR		Q1200	8-729-122-63	TRANSISTOR 2SA1226-E4		
3417		DIC2	TRANSISTOR		Q1201	8-729-122-63	TRANSISTOR 2SA1226-E4		
3418		DIC2	TRANSISTOR		Q1202	8-729-122-63	TRANSISTOR 2SA1226-E4		
3419		DIC2	TRANSISTOR		Q1203	8-729-030-53	TRANSISTOR MSD1819A-RT1		
3420		DIC2	TRANSISTOR		Q1204	8-729-117-73	TRANSISTOR 2SC4178-F14		
3421		DIC2	TRANSISTOR		Q1205	8-729-117-73	TRANSISTOR 2SC4178-F14		
3422		DIC2	TRANSISTOR		Q1206	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
3423		DIC2	TRANSISTOR		Q1208	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
3424		DIC2	TRANSISTOR		Q1209	8-729-030-53	TRANSISTOR MSD1819A-RT1		
3425		DIC2	TRANSISTOR		Q1400	8-729-122-63	TRANSISTOR 2SA1226-E4		
3426		DIC2	TRANSISTOR		Q1401	8-729-122-63	TRANSISTOR 2SA1226-E4		
3427		DIC2	TRANSISTOR		Q1403	8-729-030-53	TRANSISTOR MSD1819A-RT1		
3428		DIC2	TRANSISTOR		Q1407	8-729-030-53	TRANSISTOR MSD1819A-RT1		
3429		DIC2	TRANSISTOR		Q1600	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		
3430		DIC2	TRANSISTOR		Q1601	8-729-905-35	TRANSISTOR 2SC4081-R		
3431		DIC2	TRANSISTOR		Q1701	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		


No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3432		DIC2	TRANSISTOR		Q1702	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
3433		DIC2	TRANSISTOR		Q1900	8-729-043-29	TRANSISTOR PDTCT144EK-115		
3434		DIC2	TRANSISTOR		Q1901	8-729-030-54	TRANSISTOR MSB1218A-RT1		
3435		DIC2	TRANSISTOR		Q1903	8-729-030-54	TRANSISTOR MSB1218A-RT1		
3436		DIC2	TRANSISTOR		Q1904	8-729-028-97	TRANSISTOR DTC114TUA-T106		
3437		DIC2	TRANSISTOR		Q1905	8-729-030-54	TRANSISTOR MSB1218A-RT1		
3438		DIC2	TRANSISTOR		Q1906	8-729-030-54	TRANSISTOR MSB1218A-RT1		
3439		DIC2	TRANSISTOR		Q1907	8-729-030-53	TRANSISTOR MSD1819A-RT1		
3440		DIC2	TRANSISTOR		Q1908	8-729-030-53	TRANSISTOR MSD1819A-RT1		
3441		DIC2	RESISTOR		R1000	1-216-864-11	SHORT CHIP 0		
3442		DIC2	RESISTOR		R1003	1-218-990-11	SHORT CHIP 0		
3443		DIC2	RESISTOR		R1004	1-218-990-11	SHORT CHIP 0		
3444		DIC2	RESISTOR		R1005	1-218-990-11	SHORT CHIP 0		
3445		DIC2	RESISTOR		R1006	1-218-990-11	SHORT CHIP 0		
3446		DIC2	RESISTOR		R1007	1-218-990-11	SHORT CHIP 0		
3447		DIC2	RESISTOR		R1014	1-216-864-11	SHORT CHIP 0		
3448		DIC2	RESISTOR		R1016	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3449		DIC2	RESISTOR		R1017	1-218-990-11	SHORT CHIP 0		
3450		DIC2	RESISTOR		R1018	1-218-933-11	RES-CHIP 22 5% 1/16W		
3451		DIC2	RESISTOR		R1019	1-218-933-11	RES-CHIP 22 5% 1/16W		
3452		DIC2	RESISTOR		R1020	1-218-933-11	RES-CHIP 22 5% 1/16W		
3453		DIC2	RESISTOR		R1021	1-218-937-11	RES-CHIP 47 5% 1/16W		
3454		DIC2	RESISTOR		R1023	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3455		DIC2	RESISTOR		R1026	1-218-937-11	RES-CHIP 47 5% 1/16W		
3456		DIC2	RESISTOR		R1028	1-218-937-11	RES-CHIP 47 5% 1/16W		
3457		DIC2	RESISTOR		R1030	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3458		DIC2	RESISTOR		R1031	1-218-949-11	RES-CHIP 470 5% 1/16W		
3459		DIC2	RESISTOR		R1032	1-218-937-11	RES-CHIP 47 5% 1/16W		
3460		DIC2	RESISTOR		R1036	1-218-937-11	RES-CHIP 47 5% 1/16W		
3461		DIC2	RESISTOR		R1040	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3462		DIC2	RESISTOR		R1041	1-218-949-11	RES-CHIP 470 5% 1/16W		
3463		DIC2	RESISTOR		R1049	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3464		DIC2	RESISTOR		R1050	1-218-941-81	RES-CHIP 100 5% 1/16W		
3465		DIC2	RESISTOR		R1051	1-218-941-81	RES-CHIP 100 5% 1/16W		
3466		DIC2	RESISTOR		R1052	1-218-941-81	RES-CHIP 100 5% 1/16W		
3467		DIC2	RESISTOR		R1053	1-218-941-81	RES-CHIP 100 5% 1/16W		
3468		DIC2	RESISTOR		R1056	1-216-864-11	SHORT CHIP 0		
3469		DIC2	RESISTOR		R1059	1-216-296-11	SHORT CHIP 0		
3470		DIC2	RESISTOR		R1060	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3471		DIC2	RESISTOR		R1062	1-218-990-11	SHORT CHIP 0		
3472		DIC2	RESISTOR		R1063	1-216-296-11	SHORT CHIP 0		
3473		DIC2	RESISTOR		R1064	1-218-941-81	RES-CHIP 100 5% 1/16W		
3474		DIC2	RESISTOR		R1065	1-218-941-81	RES-CHIP 100 5% 1/16W		
3475		DIC2	RESISTOR		R1066	1-218-968-11	RES-CHIP 18K 5% 1/16W		
3476		DIC2	RESISTOR		R1068	1-216-864-11	SHORT CHIP 0		
3477		DIC2	RESISTOR		R1070	1-216-864-11	SHORT CHIP 0		
3478		DIC2	RESISTOR		R1076	1-218-941-81	RES-CHIP 100 5% 1/16W		
3479		DIC2	RESISTOR		R1077	1-218-990-11	SHORT CHIP 0		
3480		DIC2	RESISTOR		R1078	1-218-941-81	RES-CHIP 100 5% 1/16W		
3481		DIC2	RESISTOR		R1080	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3482		DIC2	RESISTOR		R1081	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3483		DIC2	RESISTOR		R1085	1-218-990-11	SHORT CHIP 0		
3484		DIC2	RESISTOR		R1088	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3485		DIC2	RESISTOR		R1089	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3486		DIC2	RESISTOR		R1200	1-216-864-11	SHORT CHIP 0		
3487		DIC2	RESISTOR		R1201	1-216-864-11	SHORT CHIP 0		
3488		DIC2	RESISTOR		R1202	1-220-174-11	METAL CHIP 200 5% 1/16W		
3489		DIC2	RESISTOR		R1203	1-208-874-81	METAL CHIP 300 0.5% 1/16W		
3490		DIC2	RESISTOR		R1204	1-208-874-81	METAL CHIP 300 0.5% 1/16W		
3491		DIC2	RESISTOR		R1205	1-220-174-11	METAL CHIP 200 5% 1/16W		
3492		DIC2	RESISTOR		R1206	1-208-874-81	METAL CHIP 300 0.5% 1/16W		
3493		DIC2	RESISTOR		R1207	1-208-874-81	METAL CHIP 300 0.5% 1/16W		
3494		DIC2	RESISTOR		R1208	1-218-941-81	RES-CHIP 100 5% 1/16W		
3495		DIC2	RESISTOR		R1209	1-218-941-81	RES-CHIP 100 5% 1/16W		
3496		DIC2	RESISTOR		R1210	1-218-941-81	RES-CHIP 100 5% 1/16W		
3497		DIC2	RESISTOR		R1211	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
3498		DIC2	RESISTOR		R1212	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
3499		DIC2	RESISTOR		R1214	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3500		DIC2	RESISTOR		R1215	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3501		DIC2	RESISTOR		R1216	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3502		DIC2	RESISTOR		R1217	1-218-990-11	SHORT CHIP 0		
3503		DIC2	RESISTOR		R1218	1-218-990-11	SHORT CHIP 0		
3504		DIC2	RESISTOR		R1219	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3505		DIC2	RESISTOR		R1220	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
3506		DIC2	RESISTOR		R1225	1-208-643-11	METAL CHIP 22 0.5% 1/16W		
3507		DIC2	RESISTOR		R1226	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
3508		DIC2	RESISTOR		R1227	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
3509		DIC2	RESISTOR		R1228	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3510		DIC2	RESISTOR		R1229	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
3511		DIC2	RESISTOR		R1230	1-218-979-11	RES-CHIP 150K 5% 1/16W		
3512		DIC2	RESISTOR		R1231	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
3513		DIC2	RESISTOR		R1232	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
3514		DIC2	RESISTOR		R1235	1-208-675-11	METAL CHIP 470 0.5% 1/16W		
3515		DIC2	RESISTOR		R1236	1-218-941-11	METAL CHIP 100 5% 1/16W		
3516		DIC2	RESISTOR		R1238	1-218-951-11	RES-CHIP 680 5% 1/16W		
3517		DIC2	RESISTOR		R1239	1-216-864-11	SHORT CHIP 0		
3518		DIC2	RESISTOR		R1240	1-216-864-11	SHORT CHIP 0		
3519		DIC2	RESISTOR		R1241	1-218-990-11	SHORT CHIP 0		
3520		DIC2	RESISTOR		R1242	1-218-990-11	SHORT CHIP 0		
3521		DIC2	RESISTOR		R1243	1-218-941-11	METAL CHIP 100 5% 1/16W		
3522		DIC2	RESISTOR		R1244	1-216-864-11	SHORT CHIP 0		
3523		DIC2	RESISTOR		R1246	1-218-990-11	SHORT CHIP 0		
3524		DIC2	RESISTOR		R1247	1-216-864-11	SHORT CHIP 0		
3525		DIC2	RESISTOR		R1248	1-218-951-11	RES-CHIP 680 5% 1/16W		
3526		DIC2	RESISTOR		R1250	1-218-990-11	SHORT CHIP 0		
3527		DIC2	RESISTOR		R1251	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3528		DIC2	RESISTOR		R1252	1-218-990-11	SHORT CHIP 0		
3529		DIC2	RESISTOR		R1253	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3530		DIC2	RESISTOR		R1255	1-208-908-11	METAL CHIP 7.5K 0.5% 1/16W		
3531		DIC2	RESISTOR		R1256	1-208-692-11	METAL CHIP 2.4K 0.5% 1/16W		
3532		DIC2	RESISTOR		R1258	1-218-990-11	SHORT CHIP 0		
3533		DIC2	RESISTOR		R1259	1-218-990-11	SHORT CHIP 0		
3534		DIC2	RESISTOR		R1260	1-218-990-11	SHORT CHIP 0		
3535		DIC2	RESISTOR		R1263	1-218-990-11	SHORT CHIP 0		
3536		DIC2	RESISTOR		R1268	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3537		DIC2	RESISTOR		R1269	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3538		DIC2	RESISTOR		R1270	1-218-937-11	RES-CHIP 47 5% 1/16W		
3539		DIC2	RESISTOR		R1271	1-218-937-11	RES-CHIP 47 5% 1/16W		
3540		DIC2	RESISTOR		R1272	1-218-990-11	SHORT CHIP 0		
3541		DIC2	RESISTOR		R1273	1-218-933-11	RES-CHIP 22 5% 1/16W		
3542		DIC2	RESISTOR		R1274	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3543		DIC2	RESISTOR		R1275	1-218-990-11	SHORT CHIP 0		
3544		DIC2	RESISTOR		R1276	1-218-990-11	SHORT CHIP 0		
3545		DIC2	RESISTOR		R1277	1-218-990-11	SHORT CHIP 0		
3546		DIC2	RESISTOR		R1278	1-218-990-11	SHORT CHIP 0		
3547		DIC2	RESISTOR		R1279	1-218-990-11	SHORT CHIP 0		
3548		DIC2	RESISTOR		R1280	1-218-990-11	SHORT CHIP 0		
3549		DIC2	RESISTOR		R1281	1-218-990-11	SHORT CHIP 0		
3550		DIC2	RESISTOR		R1282	1-218-937-11	RES-CHIP 47 5% 1/16W		
3551		DIC2	RESISTOR		R1283	1-218-937-11	RES-CHIP 47 5% 1/16W		
3552		DIC2	RESISTOR		R1284	1-218-990-11	SHORT CHIP 0		
3553		DIC2	RESISTOR		R1285	1-218-990-11	SHORT CHIP 0		
3554		DIC2	RESISTOR		R1286	1-218-990-11	SHORT CHIP 0		
3555		DIC2	RESISTOR		R1287	1-218-990-11	SHORT CHIP 0		
3556		DIC2	RESISTOR		R1288	1-218-990-11	SHORT CHIP 0		
3557		DIC2	RESISTOR		R1289	1-218-990-11	SHORT CHIP 0		
3558		DIC2	RESISTOR		R1290	1-218-933-11	RES-CHIP 22 5% 1/16W		
3559		DIC2	RESISTOR		R1291	1-216-864-11	SHORT CHIP 0		
3560		DIC2	RESISTOR		R1292	1-218-933-11	RES-CHIP 22 5% 1/16W		
3561		DIC2	RESISTOR		R1293	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3562		DIC2	RESISTOR		R1294	1-218-990-11	SHORT CHIP 0		
3563		DIC2	RESISTOR		R1295	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3564		DIC2	RESISTOR		R1296	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3565		DIC2	RESISTOR		R1297	1-218-937-11	RES-CHIP 47 5% 1/16W		
3566		DIC2	RESISTOR		R1298	1-218-937-11	RES-CHIP 47 5% 1/16W		
3567		DIC2	RESISTOR		R1300	1-218-937-11	RES-CHIP 47 5% 1/16W		
3568		DIC2	RESISTOR		R1301	1-218-937-11	RES-CHIP 47 5% 1/16W		
3569		DIC2	RESISTOR		R1302	1-218-937-11	RES-CHIP 47 5% 1/16W		
3570		DIC2	RESISTOR		R1311	1-218-990-11	SHORT CHIP 0		
3571		DIC2	RESISTOR		R1312	1-218-990-11	SHORT CHIP 0		
3572		DIC2	RESISTOR		R1400	1-216-864-11	SHORT CHIP 0		
3573		DIC2	RESISTOR		R1404	1-218-933-11	RES-CHIP 22 5% 1/16W		
3574		DIC2	RESISTOR		R1411	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3575		DIC2	RESISTOR		R1412	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3576		DIC2	RESISTOR		R1413	1-218-955-11	RES-CHIP 1.5K 5% 1/16W		
3577		DIC2	RESISTOR		R1416	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3578		DIC2	RESISTOR		R1417	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
3579		DIC2	RESISTOR		R1419	1-218-990-11	SHORT CHIP 0		
3580		DIC2	RESISTOR		R1420	1-218-990-11	SHORT CHIP 0		
3581		DIC2	RESISTOR		R1422	1-208-643-11	METAL CHIP 22 0.5% 1/16W		
3582		DIC2	RESISTOR		R1426	1-218-979-11	RES-CHIP 150K 5% 1/16W		
3583		DIC2	RESISTOR		R1427	1-218-939-11	METAL CHIP 68 5% 1/16W		
3584		DIC2	RESISTOR		R1429	1-218-939-11	METAL CHIP 68 5% 1/16W		
3585		DIC2	RESISTOR		R1434	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3586		DIC2	RESISTOR		R1440	1-218-990-11	SHORT CHIP 0		
3587		DIC2	RESISTOR		R1443	1-218-990-11	SHORT CHIP 0		
3588		DIC2	RESISTOR		R1444	1-218-990-11	SHORT CHIP 0		
3589		DIC2	RESISTOR		R1446	1-208-908-11	METAL CHIP 7.5K 0.5% 1/16W		
3590		DIC2	RESISTOR		R1447	1-208-692-11	METAL CHIP 2.4K 0.5% 1/16W		
3591		DIC2	RESISTOR		R1449	1-218-990-11	SHORT CHIP 0		
3592		DIC2	RESISTOR		R1452	1-218-990-11	SHORT CHIP 0		
3593		DIC2	RESISTOR		R1453	1-218-937-11	RES-CHIP 47 5% 1/16W		
3594		DIC2	RESISTOR		R1454	1-218-937-11	RES-CHIP 47 5% 1/16W		
3595		DIC2	RESISTOR		R1455	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3596		DIC2	RESISTOR		R1456	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3597		DIC2	RESISTOR		R1457	1-218-990-11	SHORT CHIP 0		
3598		DIC2	RESISTOR		R1458	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3599		DIC2	RESISTOR		R1459	1-218-990-11	SHORT CHIP 0		
3600		DIC2	RESISTOR		R1460	1-218-990-11	SHORT CHIP 0		
3601		DIC2	RESISTOR		R1461	1-218-990-11	SHORT CHIP 0		
3602		DIC2	RESISTOR		R1462	1-218-941-81	RES-CHIP 100 5% 1/16W		
3603		DIC2	RESISTOR		R1463	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3604		DIC2	RESISTOR		R1464	1-218-990-11	SHORT CHIP 0		
3605		DIC2	RESISTOR		R1465	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3606		DIC2	RESISTOR		R1466	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3607		DIC2	RESISTOR		R1467	1-218-933-11	RES-CHIP 22 5% 1/16W		
3608		DIC2	RESISTOR		R1468	1-218-937-11	RES-CHIP 47 5% 1/16W		
3609		DIC2	RESISTOR		R1469	1-218-937-11	RES-CHIP 47 5% 1/16W		
3610		DIC2	RESISTOR		R1475	1-218-937-11	RES-CHIP 47 5% 1/16W		
3611		DIC2	RESISTOR		R1476	1-218-937-11	RES-CHIP 47 5% 1/16W		
3612		DIC2	RESISTOR		R1477	1-218-937-11	RES-CHIP 47 5% 1/16W		
3613		DIC2	RESISTOR		R1479	1-218-941-81	RES-CHIP 100 5% 1/16W		
3614		DIC2	RESISTOR		R1480	1-218-941-81	RES-CHIP 100 5% 1/16W		
3615		DIC2	RESISTOR		R1482	1-218-990-11	SHORT CHIP 0		
3616		DIC2	RESISTOR		R1483	1-218-990-11	SHORT CHIP 0		
3617		DIC2	RESISTOR		R1484	1-218-990-11	SHORT CHIP 0		
3618		DIC2	RESISTOR		R1600	1-218-945-11	RES-CHIP 220 5% 1/16W		
3619		DIC2	RESISTOR		R1601	1-218-947-11	RES-CHIP 330 5% 1/16W		
3620		DIC2	RESISTOR		R1602	1-218-941-81	RES-CHIP 100 5% 1/16W		
3621		DIC2	RESISTOR		R1603	1-218-990-11	SHORT CHIP 0		
3622		DIC2	RESISTOR		R1604	1-218-941-81	RES-CHIP 100 5% 1/16W		
3623		DIC2	RESISTOR		R1605	1-218-990-11	SHORT CHIP 0		
3624		DIC2	RESISTOR		R1606	1-218-985-11	RES-CHIP 470K 5% 1/16W		
3625		DIC2	RESISTOR		R1607	1-218-990-11	SHORT CHIP 0		
3626		DIC2	RESISTOR		R1608	1-218-969-11	RES-CHIP 22K 5% 1/16W		
3627		DIC2	RESISTOR		R1609	1-218-945-11	RES-CHIP 220 5% 1/16W		
3628		DIC2	RESISTOR		R1610	1-208-898-11	METAL CHIP 3K 0.5% 1/16W		
3629		DIC2	RESISTOR		R1612	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3630		DIC2	RESISTOR		R1614	1-216-295-91	SHORT CHIP 0		
3631		DIC2	RESISTOR		R1615	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
3632		DIC2	RESISTOR		R1617	1-218-985-11	RES-CHIP 470K 5% 1/16W		
3633		DIC2	RESISTOR		R1618	1-218-990-11	SHORT CHIP 0		
3634		DIC2	RESISTOR		R1619	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3635		DIC2	RESISTOR		R1621	1-218-937-11	RES-CHIP 47 5% 1/16W		
3636		DIC2	RESISTOR		R1622	1-218-937-11	RES-CHIP 47 5% 1/16W		
3637		DIC2	RESISTOR		R1623	1-218-942-11	RES-CHIP 120 5% 1/16W		
3638		DIC2	RESISTOR		R1624	1-218-942-11	RES-CHIP 120 5% 1/16W		
3639		DIC2	RESISTOR		R1625	1-218-935-11	RES-CHIP 33 5% 1/16W		
3640		DIC2	RESISTOR		R1626	1-218-937-11	RES-CHIP 47 5% 1/16W		
3641		DIC2	RESISTOR		R1627	1-218-935-11	RES-CHIP 33 5% 1/16W		
3642		DIC2	RESISTOR		R1628	1-218-941-81	RES-CHIP 100 5% 1/16W		
3643		DIC2	RESISTOR		R1629	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3644		DIC2	RESISTOR		R1630	1-218-941-81	RES-CHIP 100 5% 1/16W		
3645		DIC2	RESISTOR		R1631	1-218-941-81	RES-CHIP 100 5% 1/16W		
3646		DIC2	RESISTOR		R1632	1-218-941-81	RES-CHIP 100 5% 1/16W		
3647		DIC2	RESISTOR		R1633	1-218-937-11	RES-CHIP 47 5% 1/16W		
3648		DIC2	RESISTOR		R1634	1-216-295-91	SHORT CHIP 0		
3649		DIC2	RESISTOR		R1635	1-218-937-11	RES-CHIP 47 5% 1/16W		
3650		DIC2	RESISTOR		R1636	1-218-990-11	SHORT CHIP 0		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3651		DIC2	RESISTOR		R1704	1-218-990-11	SHORT CHIP 0		
3652		DIC2	RESISTOR		R1705	1-218-961-11	RES-CHIP 4.7K 5% 1/16W		
3653		DIC2	RESISTOR		R1707	1-218-990-11	SHORT CHIP 0		
3654		DIC2	RESISTOR		R1709	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3655		DIC2	RESISTOR		R1712	1-218-990-11	SHORT CHIP 0		
3656		DIC2	RESISTOR		R1715	1-218-935-11	RES-CHIP 33 5% 1/16W		
3657		DIC2	RESISTOR		R1716	1-218-990-11	SHORT CHIP 0		
3658		DIC2	RESISTOR		R1717	1-216-295-91	SHORT CHIP 0		
3659		DIC2	RESISTOR		R1719	1-218-935-11	RES-CHIP 33 5% 1/16W		
3660		DIC2	RESISTOR		R1730	1-218-990-11	SHORT CHIP 0		
3661		DIC2	RESISTOR		R1731	1-218-990-11	SHORT CHIP 0		
3662		DIC2	RESISTOR		R1732	1-218-933-11	RES-CHIP 22 5% 1/16W		
3663		DIC2	RESISTOR		R1733	1-218-933-11	RES-CHIP 22 5% 1/16W		
3664		DIC2	RESISTOR		R1734	1-218-937-11	RES-CHIP 47 5% 1/16W		
3665		DIC2	RESISTOR		R1736	1-218-990-11	SHORT CHIP 0		
3666		DIC2	RESISTOR		R1737	1-218-990-11	SHORT CHIP 0		
3667		DIC2	RESISTOR		R1738	1-218-990-11	SHORT CHIP 0		
3668		DIC2	RESISTOR		R1739	1-218-990-11	SHORT CHIP 0		
3669		DIC2	RESISTOR		R1740	1-218-933-11	RES-CHIP 22 5% 1/16W		
3670		DIC2	RESISTOR		R1741	1-218-990-11	SHORT CHIP 0		
3671		DIC2	RESISTOR		R1742	1-218-933-11	RES-CHIP 22 5% 1/16W		
3672		DIC2	RESISTOR		R1743	1-218-937-11	RES-CHIP 47 5% 1/16W		
3673		DIC2	RESISTOR		R1745	1-218-990-11	SHORT CHIP 0		
3674		DIC2	RESISTOR		R1747	1-218-990-11	SHORT CHIP 0		
3675		DIC2	RESISTOR		R1750	1-218-933-11	RES-CHIP 22 5% 1/16W		
3676		DIC2	RESISTOR		R1751	1-218-937-11	RES-CHIP 47 5% 1/16W		
3677		DIC2	RESISTOR		R1752	1-218-990-11	SHORT CHIP 0		
3678		DIC2	RESISTOR		R1753	1-218-933-11	RES-CHIP 22 5% 1/16W		
3679		DIC2	RESISTOR		R1754	1-218-990-11	SHORT CHIP 0		
3680		DIC2	RESISTOR		R1755	1-218-945-11	METAL CHIP 220 5% 1/16W		
3681		DIC2	RESISTOR		R1756	1-218-990-11	SHORT CHIP 0		
3682		DIC2	RESISTOR		R1758	1-218-990-11	SHORT CHIP 0		
3683		DIC2	RESISTOR		R1759	1-218-937-11	RES-CHIP 47 5% 1/16W		
3684		DIC2	RESISTOR		R1760	1-218-937-11	RES-CHIP 47 5% 1/16W		
3685		DIC2	RESISTOR		R1761	1-218-990-11	SHORT CHIP 0		
3686		DIC2	RESISTOR		R1762	1-218-990-11	SHORT CHIP 0		
3687		DIC2	RESISTOR		R1763	1-218-990-11	SHORT CHIP 0		
3688		DIC2	RESISTOR		R1764	1-218-990-11	SHORT CHIP 0		
3689		DIC2	RESISTOR		R1765	1-218-990-11	SHORT CHIP 0		
3690		DIC2	RESISTOR		R1766	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3691		DIC2	RESISTOR		R1767	1-218-990-11	SHORT CHIP 0		
3692		DIC2	RESISTOR		R1768	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3693		DIC2	RESISTOR		R1769	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3694		DIC2	RESISTOR		R1770	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3695		DIC2	RESISTOR		R1771	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3696		DIC2	RESISTOR		R1772	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3697		DIC2	RESISTOR		R1773	1-218-990-11	SHORT CHIP 0		
3698		DIC2	RESISTOR		R1774	1-218-990-11	SHORT CHIP 0		
3699		DIC2	RESISTOR		R1775	1-218-933-11	RES-CHIP 22 5% 1/16W		
3700		DIC2	RESISTOR		R1776	1-218-933-11	RES-CHIP 22 5% 1/16W		
3701		DIC2	RESISTOR		R1777	1-218-933-11	RES-CHIP 22 5% 1/16W		
3702		DIC2	RESISTOR		R1779	1-218-990-11	SHORT CHIP 0		
3703		DIC2	RESISTOR		R1780	1-218-933-11	RES-CHIP 22 5% 1/16W		
3704		DIC2	RESISTOR		R1781	1-218-933-11	RES-CHIP 22 5% 1/16W		
3705		DIC2	RESISTOR		R1782	1-218-933-11	RES-CHIP 22 5% 1/16W		
3706		DIC2	RESISTOR		R1783	1-218-933-11	RES-CHIP 22 5% 1/16W		
3707		DIC2	RESISTOR		R1784	1-218-933-11	RES-CHIP 22 5% 1/16W		
3708		DIC2	RESISTOR		R1786	1-218-933-11	RES-CHIP 22 5% 1/16W		
3709		DIC2	RESISTOR		R1787	1-218-933-11	RES-CHIP 22 5% 1/16W		
3710		DIC2	RESISTOR		R1788	1-218-933-11	RES-CHIP 22 5% 1/16W		
3711		DIC2	RESISTOR		R1789	1-218-933-11	RES-CHIP 22 5% 1/16W		
3712		DIC2	RESISTOR		R1790	1-218-933-11	RES-CHIP 22 5% 1/16W		
3713		DIC2	RESISTOR		R1791	1-208-635-11	METAL CHIP 10 0.5% 1/16W		
3714		DIC2	RESISTOR		R1792	1-216-295-91	SHORT CHIP 0		
3715		DIC2	RESISTOR		R1793	1-216-295-91	SHORT CHIP 0		
3716		DIC2	RESISTOR		R1796	1-218-990-11	SHORT CHIP 0		
3717		DIC2	RESISTOR		R1797	1-218-990-11	SHORT CHIP 0		
3718		DIC2	RESISTOR		R1901	1-218-937-11	RES-CHIP 47 5% 1/16W		
3719		DIC2	RESISTOR		R1903	1-218-937-11	RES-CHIP 47 5% 1/16W		
3720		DIC2	RESISTOR		R1905	1-218-949-11	RES-CHIP 470 5% 1/16W		
3721		DIC2	RESISTOR		R1914	1-218-990-11	SHORT CHIP 0		
3722		DIC2	RESISTOR		R1915	1-218-941-81	RES-CHIP 100 5% 1/16W		
3723		DIC2	RESISTOR		R1918	1-218-941-81	RES-CHIP 100 5% 1/16W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3724		DIC2	RESISTOR		R1919	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
3725		DIC2	RESISTOR		R1920	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3726		DIC2	RESISTOR		R1921	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
3727		DIC2	RESISTOR		R1923	1-218-977-11	RES-CHIP 100K 5% 1/16W		
3728		DIC2	RESISTOR		R1924	1-218-977-11	RES-CHIP 100K 5% 1/16W		
3729		DIC2	RESISTOR		R1925	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3730		DIC2	RESISTOR		R1926	1-218-990-11	SHORT CHIP 0		
3731		DIC2	RESISTOR		R1928	1-218-990-11	SHORT CHIP 0		
3732		DIC2	RESISTOR		R1929	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3733		DIC2	RESISTOR		R1930	1-218-941-81	RES-CHIP 100 5% 1/16W		
3734		DIC2	RESISTOR		R1931	1-218-941-81	RES-CHIP 100 5% 1/16W		
3735		DIC2	RESISTOR		R1932	1-218-941-81	RES-CHIP 100 5% 1/16W		
3736		DIC2	RESISTOR		R1935	1-218-941-81	RES-CHIP 100 5% 1/16W		
3737		DIC2	RESISTOR		R1938	1-218-947-11	RES-CHIP 330 5% 1/16W		
3738		DIC2	RESISTOR		R1939	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3739		DIC2	RESISTOR		R1944	1-216-295-91	SHORT CHIP 0		
3740		DIC2	RESISTOR		R1945	1-218-941-81	RES-CHIP 100 5% 1/16W		
3741		DIC2	RESISTOR		R1946	1-218-941-81	RES-CHIP 100 5% 1/16W		
3742		DIC2	RESISTOR		R1947	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3743		DIC2	RESISTOR		R1948	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3744		DIC2	RESISTOR		R1949	1-218-937-11	RES-CHIP 47 5% 1/16W		
3745		DIC2	RESISTOR		R1950	1-218-937-11	RES-CHIP 47 5% 1/16W		
3746		DIC2	RESISTOR		R1951	1-218-937-11	RES-CHIP 47 5% 1/16W		
3747		DIC2	RESISTOR		R1952	1-218-937-11	RES-CHIP 47 5% 1/16W		
3748		DIC2	RESISTOR		R1953	1-218-990-11	SHORT CHIP 0		
3749		DIC2	RESISTOR		R1954	1-218-990-11	SHORT CHIP 0		
3750		DIC2	RESISTOR		R1955	1-218-989-11	RES-CHIP 1M 5% 1/16W		
3751		DIC2	RESISTOR		R1956	1-218-989-11	RES-CHIP 1M 5% 1/16W		
3752		DIC2	RESISTOR		R1957	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3753		DIC2	RESISTOR		R1958	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
3754		DIC2	RESISTOR		R1959	1-218-965-11	RES-CHIP 10K 5% 1/16W		
3755		DIC2	RESISTOR		R1960	1-208-697-11	METAL CHIP 3.9K 0.5% 1/16W		
3756		DIC2	RESISTOR		R1961	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
3757		DIC2	RESISTOR		R1962	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
3758		DIC2	RESISTOR		R1963	1-208-683-11	METAL CHIP 1K 0.5% 1/16W		
3759		DIC2	RESISTOR		R1964	1-218-959-11	RES-CHIP 3.3K 5% 1/16W		
3760		DIC2	RESISTOR		R1965	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
3761		DIC2	RESISTOR		R1966	1-218-957-11	RES-CHIP 2.2K 5% 1/16W		
3762		DIC2	RESISTOR		R1967	1-218-971-11	RES-CHIP 33K 5% 1/16W		
3763		DIC2	RESISTOR		R1968	1-218-971-11	RES-CHIP 33K 5% 1/16W		
3764		DIC2	RESISTOR		R1969	1-208-689-11	METAL CHIP 1.8K 0.5% 1/16W		
3765		DIC2	RESISTOR		R1970	1-208-689-11	METAL CHIP 1.8K 0.5% 1/16W		
3766		DIC2	RESISTOR		R1971	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3767		DIC2	RESISTOR		R1972	1-218-937-11	RES-CHIP 47 5% 1/16W		
3768		DIC2	RESISTOR		R1973	1-218-937-11	RES-CHIP 47 5% 1/16W		
3769		DIC2	RESISTOR		R1974	1-218-953-11	RES-CHIP 1K 5% 1/16W		
3770		DIC2	NETWORK		RB1204	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3771		DIC2	NETWORK		RB1205	1-234-795-21	RES, NETWORK 0X4 (2010)		
3772		DIC2	NETWORK		RB1206	1-234-372-21	RES, NETWORK 100X4 (1005)		
3773		DIC2	NETWORK		RB1207	1-234-372-21	RES, NETWORK 100X4 (1005)		
3774		DIC2	NETWORK		RB1208	1-234-372-21	RES, NETWORK 100X4 (1005)		
3775		DIC2	NETWORK		RB1209	1-234-795-21	RES, NETWORK 0X4 (2010)		
3776		DIC2	NETWORK		RB1210	1-234-372-21	RES, NETWORK 100X4 (1005)		
3777		DIC2	NETWORK		RB1211	1-234-795-21	RES, NETWORK 0X4 (2010)		
3778		DIC2	NETWORK		RB1212	1-234-372-21	RES, NETWORK 100X4 (1005)		
3779		DIC2	NETWORK		RB1213	1-234-372-21	RES, NETWORK 100X4 (1005)		
3780		DIC2	NETWORK		RB1214	1-234-372-21	RES, NETWORK 100X4 (1005)		
3781		DIC2	NETWORK		RB1215	1-234-372-21	RES, NETWORK 100X4 (1005)		
3782		DIC2	NETWORK		RB1216	1-234-369-21	RES, NETWORK 10X4 (1005)		
3783		DIC2	NETWORK		RB1217	1-234-369-21	RES, NETWORK 10X4 (1005)		
3784		DIC2	NETWORK		RB1218	1-234-369-21	RES, NETWORK 10X4 (1005)		
3785		DIC2	NETWORK		RB1219	1-234-369-21	RES, NETWORK 10X4 (1005)		
3786		DIC2	NETWORK		RB1221	1-234-371-21	RES, NETWORK 47X4 (1005)		
3787		DIC2	NETWORK		RB1222	1-234-371-21	RES, NETWORK 47X4 (1005)		
3788		DIC2	NETWORK		RB1223	1-234-371-21	RES, NETWORK 47X4 (1005)		
3789		DIC2	NETWORK		RB1224	1-234-371-21	RES, NETWORK 47X4 (1005)		
3790		DIC2	NETWORK		RB1225	1-234-371-21	RES, NETWORK 47X4 (1005)		
3791		DIC2	NETWORK		RB1226	1-234-372-21	RES, NETWORK 100X4 (1005)		
3792		DIC2	NETWORK		RB1400	1-234-702-11	RES, NETWORK 68X4 (1005)		
3793		DIC2	NETWORK		RB1401	1-234-702-11	RES, NETWORK 68X4 (1005)		
3794		DIC2	NETWORK		RB1402	1-234-702-11	RES, NETWORK 68X4 (1005)		
3795		DIC2	NETWORK		RB1403	1-234-702-11	RES, NETWORK 68X4 (1005)		
3796		DIC2	NETWORK		RB1404	1-234-379-21	RES, NETWORK 22KX4 (1005)		

No.	#	Board	Type		Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3797		DIC2	NETWORK		RB1405	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3798		DIC2	NETWORK		RB1406	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3799		DIC2	NETWORK		RB1407	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3800		DIC2	NETWORK		RB1408	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3801		DIC2	NETWORK		RB1409	1-234-369-21	RES, NETWORK 10X4 (1005)		
3802		DIC2	NETWORK		RB1410	1-234-369-21	RES, NETWORK 10X4 (1005)		
3803		DIC2	NETWORK		RB1411	1-234-369-21	RES, NETWORK 10X4 (1005)		
3804		DIC2	NETWORK		RB1412	1-234-369-21	RES, NETWORK 10X4 (1005)		
3805		DIC2	NETWORK		RB1418	1-234-371-21	RES, NETWORK 47X4 (1005)		
3806		DIC2	NETWORK		RB1419	1-234-371-21	RES, NETWORK 47X4 (1005)		
3807		DIC2	NETWORK		RB1420	1-234-371-21	RES, NETWORK 47X4 (1005)		
3808		DIC2	NETWORK		RB1421	1-234-371-21	RES, NETWORK 47X4 (1005)		
3809		DIC2	NETWORK		RB1422	1-234-371-21	RES, NETWORK 47X4 (1005)		
3810		DIC2	NETWORK		RB1423	1-234-372-21	RES, NETWORK 100X4 (1005)		
3811		DIC2	NETWORK		RB1424	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3812		DIC2	NETWORK		RB1425	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3813		DIC2	NETWORK		RB1426	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3814		DIC2	NETWORK		RB1427	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3815		DIC2	NETWORK		RB1428	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3816		DIC2	NETWORK		RB1429	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3817		DIC2	NETWORK		RB1430	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3818		DIC2	NETWORK		RB1431	1-234-379-21	RES, NETWORK 22KX4 (1005)		
3819		DIC2	NETWORK		RB1600	1-234-372-21	RES, NETWORK 100X4 (1005)		
3820		DIC2	NETWORK		RB1601	1-234-372-21	RES, NETWORK 100X4 (1005)		
3821		DIC2	NETWORK		RB1602	1-234-372-21	RES, NETWORK 100X4 (1005)		
3822		DIC2	NETWORK		RB1603	1-234-372-21	RES, NETWORK 100X4 (1005)		
3823		DIC2	NETWORK		RB1604	1-234-372-21	RES, NETWORK 100X4 (1005)		
3824		DIC2	NETWORK		RB1605	1-234-372-21	RES, NETWORK 100X4 (1005)		
3825		DIC2	NETWORK		RB1606	1-234-372-21	RES, NETWORK 100X4 (1005)		
3826		DIC2	NETWORK		RB1607	1-234-372-21	RES, NETWORK 100X4 (1005)		
3827		DIC2	NETWORK		RB1608	1-234-372-21	RES, NETWORK 100X4 (1005)		
3828		DIC2	NETWORK		RB1609	1-234-372-21	RES, NETWORK 100X4 (1005)		
3829		DIC2	NETWORK		RB1610	1-234-372-21	RES, NETWORK 100X4 (1005)		
3830		DIC2	NETWORK		RB1700	1-234-370-21	RES, NETWORK 22X4 (1005)		
3831		DIC2	NETWORK		RB1701	1-234-370-21	RES, NETWORK 22X4 (1005)		
3832		DIC2	NETWORK		RB1702	1-234-370-21	RES, NETWORK 22X4 (1005)		
3833		DIC2	NETWORK		RB1703	1-234-370-21	RES, NETWORK 22X4 (1005)		
3834		DIC2	NETWORK		RB1704	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3835		DIC2	NETWORK		RB1705	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3836		DIC2	NETWORK		RB1706	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3837		DIC2	NETWORK		RB1707	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3838		DIC2	NETWORK		RB1708	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3839		DIC2	NETWORK		RB1709	1-234-378-21	RES, NETWORK 10KX4 (1005)		
3840		DIC2	NETWORK		RB1710	1-234-370-21	RES, NETWORK 22X4 (1005)		
3841		DIC2	NETWORK		RB1711	1-234-370-21	RES, NETWORK 22X4 (1005)		
3842		DIC2	NETWORK		RB1900	1-234-371-21	RES, NETWORK 47X4 (1005)		
3843		DIC2	NETWORK		RB1901	1-234-371-21	RES, NETWORK 47X4 (1005)		
3844		DIC2	CRYSTAL		X1200	1-795-951-21	QUARTZ CRYSTAL OSCILLATOR(SMD)		
3845		DIC2	CRYSTAL		X1700	1-795-951-21	QUARTZ CRYSTAL OSCILLATOR(SMD)		
3846		DIC2	CRYSTAL		X1702	1-813-114-21	VIBRATOR, CRYSTAL		
3847		DIC2	CRYSTAL		X1900	1-781-945-21	VIBRATOR, CERAMIC		
3848		DIC2	CRYSTAL		X1901	1-795-244-11	VIBRATOR, CERAMIC		
3849		DIC2	CRYSTAL		X1902	1-795-244-11	VIBRATOR, CERAMIC		
3850		IF	CONNECTOR		CN9851	1-817-900-11	CONNECTOR, BOARD TO BOARD 100P		
3851		QT	CAPACITOR		C7901	1-128-551-11	ELECT 22UF 20.00% 63V		
3852		QT	CAPACITOR		C7902	1-162-995-11	CERAMIC CHIP 0.022UF 50V		
3853		QT	CAPACITOR		C7903	1-162-995-11	CERAMIC CHIP 0.022UF 50V		
3854		QT	CAPACITOR		C7904	1-126-963-11	ELECT 4.7UF 20.00% 50V		
3855		QT	CAPACITOR		C7905	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
3856		QT	CAPACITOR		C7906	1-126-964-11	ELECT 10UF 20.00% 50V		
3857		QT	CAPACITOR		C7907	1-126-933-11	ELECT 100UF 20.00% 16V		
3858		QT	CAPACITOR		C7908	1-126-933-11	ELECT 100UF 20.00% 16V		
3859		QT	CAPACITOR		C7909	1-126-935-11	ELECT 470UF 20.00% 16V		
3860		QT	CAPACITOR		C7910	1-126-964-11	ELECT 10UF 20.00% 50V		
3861		QT	CAPACITOR		C7911	1-126-933-11	ELECT 100UF 20.00% 16V		
3862		QT	CAPACITOR		C7912	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3863		QT	CAPACITOR		C7913	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3864		QT	CAPACITOR		C7914	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3865		QT	CAPACITOR		C7915	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
3866		QT	CAPACITOR		C7916	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3867		QT	CAPACITOR		C7917	1-126-947-11	ELECT 47UF 20.00% 35V		
3868		QT	CAPACITOR		C7918	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3869		QT	CAPACITOR		C7923	1-164-156-11	CERAMIC CHIP 0.1UF 25V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3870		QT	CAPACITOR		C7924	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3871		QT	CAPACITOR		C7925	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3872		QT	CAPACITOR		C7926	1-104-665-11	ELECT 100UF 20.00% 25V		
3873		QT	CAPACITOR		C7927	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3874		QT	CAPACITOR		C7928	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
3875		QT	CAPACITOR		C7929	1-128-551-11	ELECT 22UF 20.00% 63V		
3876		QT	CAPACITOR		C7930	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3877		QT	CAPACITOR		C7931	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3878		QT	CAPACITOR		C7932	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
3879		QT	CAPACITOR		C7933	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3880		QT	CONNECTOR	*	CN7900	1-817-700-11	CONNECTOR, BOARD TO BOARD 24P		
3881		QT	CONNECTOR		CN7902	6-600-234-01	IC GP1FA313TZ0F		
3882		QT	DIODE		D7900	8-719-046-91	DIODE MA2S111		
3883		QT	DIODE		D7901	8-719-066-99	DIODE SML-210VTT86		
3884		QT	DIODE		D7902	8-719-060-99	DIODE SML-210MT-T86		
3885		QT	FERRITE BEAD		FB7900	1-414-135-11	FERRITE 0UH		
3886		QT	FERRITE BEAD		FB7901	1-414-135-11	FERRITE 0UH		
3887		QT	FERRITE BEAD		FB7903	1-469-835-21	FERRITE 0UH		
3888		QT	FERRITE BEAD		FB7904	1-414-135-11	FERRITE 0UH		
3889		QT	FERRITE BEAD		FB7905	1-216-864-11	SHORT CHIP 0		
3890		QT	IC		IC7900	8-749-925-00	IC TK11819MTL		
3891		QT	IC		IC7903	8-759-832-05	IC BA18BC0FP-E2		
3892		QT	IC		IC7904	8-759-475-12	IC TC74LCX08F(EL)		
3893		QT	COIL		L7901	1-414-755-11	INDUCTOR 22UH		
3894		QT	COIL		L7902	1-410-120-11	INDUCTOR 1.2MH		
3895		QT	COIL		L7903	1-408-615-31	INDUCTOR 100UH		
3896		QT	COIL		L7904	1-414-754-11	INDUCTOR 10UH		
3897		QT	COIL		L7905	1-414-754-11	INDUCTOR 10UH		
3898		QT	COIL		L7906	1-414-754-11	INDUCTOR 10UH		
3899		QT	COIL		L7907	1-414-754-11	INDUCTOR 10UH		
3900		QT	COIL		L7908	1-414-754-11	INDUCTOR 10UH		
3901		QT	TRANSISTOR		Q7900	8-719-012-57	DIODE UZ-2.0BS-TP		
3902		QT	TRANSISTOR		Q7901	8-719-012-57	DIODE UZ-2.0BS-TP		
3903		QT	TRANSISTOR		Q7902	8-729-037-52	TRANSISTOR 2SD2216J-QR(TX).SO		
3904		QT	TRANSISTOR		Q7903	8-729-037-52	TRANSISTOR 2SD2216J-QR(TX).SO		
3905		QT	RESISTOR		R7900	1-216-821-11	METAL CHIP 1K 5% 1/10W		
3906		QT	RESISTOR		R7901	1-216-845-11	METAL CHIP 100K 5% 1/10W		
3907		QT	RESISTOR		R7902	1-216-821-11	METAL CHIP 1K 5% 1/10W		
3908		QT	RESISTOR		R7903	1-216-864-11	SHORT CHIP 0		
3909		QT	RESISTOR		R7904	1-216-864-11	SHORT CHIP 0		
3910		QT	RESISTOR		R7907	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3911		QT	RESISTOR		R7908	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3912		QT	RESISTOR		R7909	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3913		QT	RESISTOR		R7910	1-216-833-11	METAL CHIP 10K 5% 1/10W		
3914		QT	RESISTOR		R7927	1-216-801-11	METAL CHIP 22 5% 1/10W		
3915		QT	RESISTOR		R7928	1-216-801-11	METAL CHIP 22 5% 1/10W		
3916		QT	RESISTOR		R7930	1-216-801-11	METAL CHIP 22 5% 1/10W		
3917		QT	RESISTOR		R7931	1-216-809-11	METAL CHIP 100 5% 1/10W		
3918		QT	RESISTOR		R7932	1-216-809-11	METAL CHIP 100 5% 1/10W		
3919		QT	RESISTOR		R7934	1-216-801-11	METAL CHIP 22 5% 1/10W		
3920		QT	RESISTOR		R7935	1-216-801-11	METAL CHIP 22 5% 1/10W		
3921		QT	RESISTOR		R7936	1-216-817-11	METAL CHIP 470 5% 1/10W		
3922		QT	RESISTOR		R7937	1-216-841-11	METAL CHIP 47K 5% 1/10W		
3923		QT	RESISTOR		R7938	1-216-817-11	METAL CHIP 470 5% 1/10W		
3924		QT	RESISTOR		R7939	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
3925		QT	RESISTOR		R7940	1-216-817-11	METAL CHIP 470 5% 1/10W		
3926		QT	RESISTOR		R7941	1-216-805-11	METAL CHIP 47 5% 1/10W		
3927		QT	RESISTOR		R7943	1-216-805-11	METAL CHIP 47 5% 1/10W		
3928		QT	RESISTOR		R7944	1-216-805-11	METAL CHIP 47 5% 1/10W		
3929		QT	RESISTOR		R7945	1-216-809-11	METAL CHIP 100 5% 1/10W		
3930		QT	RESISTOR		R7947	1-216-864-11	SHORT CHIP 0		
3931		QT	RESISTOR		R7948	1-216-864-11	SHORT CHIP 0		
3932		QT	RESISTOR		R7949	1-216-864-11	SHORT CHIP 0		
3933		QT	RESISTOR		R7950	1-216-864-11	SHORT CHIP 0		
3934		QT	TUNER		TU7900	8-598-647-00	TUNER UNIT,DIGITAL BT-D-UA402SC		
3935		QI	CAPACITOR		C601	1-165-845-21	TANTAL. CHIP 47UF 20% 6.3V		
3936		QI	CAPACITOR		C602	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3937		QI	CAPACITOR		C603	1-165-845-21	TANTAL. CHIP 47UF 20% 6.3V		
3938		QI	CAPACITOR		C604	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
3939		QI	CAPACITOR		C605	1-165-845-21	TANTAL. CHIP 47UF 20% 6.3V		
3940		QI	CAPACITOR		C606	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3941		QI	CAPACITOR		C607	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3942		QI	CAPACITOR		C608	1-164-156-11	CERAMIC CHIP 0.1UF 25V		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
3943		QI	CAPACITOR		C609	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
3944		QI	CAPACITOR		C610	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3945		QI	CAPACITOR		C611	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3946		QI	CAPACITOR		C612	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3947		QI	CAPACITOR		C613	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3948		QI	CAPACITOR		C614	1-100-566-91	CERAMIC CHIP 0.1UF 10.00% 25V		
3949		QI	CAPACITOR		C615	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3950		QI	CAPACITOR		C616	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3951		QI	CAPACITOR		C617	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3952		QI	CAPACITOR		C618	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3953		QI	CAPACITOR		C619	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3954		QI	CAPACITOR		C620	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3955		QI	CAPACITOR		C621	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
3956		QI	CAPACITOR		C702	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3957		QI	CAPACITOR		C703	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3958		QI	CAPACITOR		C704	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3959		QI	CAPACITOR		C705	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3960		QI	CAPACITOR		C706	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3961		QI	CAPACITOR		C707	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3962		QI	CAPACITOR		C708	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3963		QI	CAPACITOR		C709	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3964		QI	CAPACITOR		C710	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3965		QI	CAPACITOR		C711	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3966		QI	CAPACITOR		C712	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3967		QI	CAPACITOR		C713	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3968		QI	CAPACITOR		C714	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3969		QI	CAPACITOR		C715	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3970		QI	CAPACITOR		C716	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3971		QI	CAPACITOR		C717	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3972		QI	CAPACITOR		C718	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3973		QI	CAPACITOR		C719	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3974		QI	CAPACITOR		C720	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3975		QI	CAPACITOR		C721	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3976		QI	CAPACITOR		C722	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3977		QI	CAPACITOR		C723	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3978		QI	CAPACITOR		C724	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3979		QI	CAPACITOR		C725	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
3980		QI	CAPACITOR		C726	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
3981		QI	CAPACITOR		C727	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3982		QI	CAPACITOR		C728	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3983		QI	CAPACITOR		C729	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3984		QI	CAPACITOR		C730	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3985		QI	CAPACITOR		C731	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3986		QI	CAPACITOR		C732	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3987		QI	CAPACITOR		C733	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V		
3988		QI	CAPACITOR		C734	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
3989		QI	CAPACITOR		C735	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
3990		QI	CAPACITOR		C736	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
3991		QI	CAPACITOR		C737	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
3992		QI	CAPACITOR		C738	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
3993		QI	CAPACITOR		C739	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
3994		QI	CAPACITOR		C740	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
3995		QI	CAPACITOR		C741	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
3996		QI	CAPACITOR		C742	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
3997		QI	CAPACITOR		C743	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
3998		QI	CAPACITOR		C744	1-125-838-11	CERAMIC CHIP 2.2UF 10% 6.3V		
3999		QI	CAPACITOR		C745	1-164-388-91	CERAMIC CHIP 270PF 5.00% 50V		
4000		QI	CAPACITOR		C746	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4001		QI	CAPACITOR		C747	1-164-388-91	CERAMIC CHIP 270PF 5.00% 50V		
4002		QI	CAPACITOR		C748	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4003		QI	CAPACITOR		C749	1-164-388-91	CERAMIC CHIP 270PF 5.00% 50V		
4004		QI	CAPACITOR		C750	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4005		QI	CAPACITOR		C803	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4006		QI	CAPACITOR		C804	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4007		QI	CAPACITOR		C805	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4008		QI	CAPACITOR		C806	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4009		QI	CAPACITOR		C807	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4010		QI	CAPACITOR		C808	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4011		QI	CAPACITOR		C809	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4012		QI	CAPACITOR		C810	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4013		QI	CAPACITOR		C811	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4014		QI	CAPACITOR		C812	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4015		QI	CAPACITOR		C813	1-164-156-11	CERAMIC CHIP 0.1UF 25V		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4016		QI	CAPACITOR		C814	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4017		QI	CAPACITOR		C815	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4018		QI	CAPACITOR		C816	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4019		QI	CAPACITOR		C817	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4020		QI	CAPACITOR		C818	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4021		QI	CAPACITOR		C819	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
4022		QI	CAPACITOR		C820	1-165-989-11	CERAMIC CHIP 10UF 10% 6.3V		
4023		QI	CAPACITOR		C821	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
4024		QI	CAPACITOR		C822	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4025		QI	CAPACITOR		C823	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
4026		QI	CAPACITOR		C824	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4027		QI	CAPACITOR		C825	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4028		QI	CAPACITOR		C826	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4029		QI	CAPACITOR		C828	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4030		QI	CAPACITOR		C829	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
4031		QI	CAPACITOR		C830	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
4032		QI	CAPACITOR		C832	1-162-971-11	CERAMIC CHIP 0.001UF 10.00% 50V		
4033		QI	CAPACITOR		C833	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
4034		QI	CAPACITOR		C834	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
4035		QI	CAPACITOR		C835	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4036		QI	CAPACITOR		C836	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4037		QI	CAPACITOR		C837	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4038		QI	CAPACITOR		C838	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4039		QI	CAPACITOR		C839	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4040		QI	CAPACITOR		C840	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4041		QI	CAPACITOR		C841	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4042		QI	CONNECTOR	*	CN602	1-817-738-11	CONNECTOR, BOARD TO BOARD 80P		
4043		QI	CONNECTOR	*	CN701	1-817-737-11	CONNECTOR, BOARD TO BOARD 40P		
4044		QI	CONNECTOR		CN702	1-815-033-21	CONNECTOR, I LINK (FLANGE TYPE)		
4045		QI	CONNECTOR	*	CN703	1-815-164-21	CONNECTOR, I LINK (FLANGE TYPE)		
4046		QI	CONNECTOR	*	CN704	1-815-164-21	CONNECTOR, I LINK (FLANGE TYPE)		
4047		QI	DIODE		D701	8-719-421-71	DIODE MA132WA		
4048		QI	DIODE		D702	8-719-421-71	DIODE MA132WA		
4049		QI	DIODE		D703	8-719-421-71	DIODE MA132WA		
4050		QI	FERRITE BEAD		FB601	1-469-835-21	FERRITE 0UH		
4051		QI	FERRITE BEAD		FB602	1-469-835-21	FERRITE 0UH		
4052		QI	FERRITE BEAD		FB801	1-469-835-21	FERRITE 0UH		
4053		QI	FERRITE BEAD		FB802	1-469-835-21	FERRITE 0UH		
4054		QI	IC		IC601	6-702-958-01	IC CXD9740GA		
4055		QI	IC		IC602	8-759-832-05	IC BA18BC0FP-E2		
4056		QI	IC		IC703	6-705-722-01	IC MT48LC8M16A2TG-75-Y15WTR		
4057		QI	IC		IC704	6-704-487-01	IC TC74LVX74FT(EL)		
4058		QI	IC		IC802	6-704-488-01	IC UPD72894GD-LML-A		
4059		QI	IC		IC803	8-759-031-84	IC SC7S04F		
4060		QI	IC		IC804	8-759-031-84	IC SC7S04F		
4061		QI	IC		IC805	6-702-552-01	IC BU2374FV-E2		
4062		QI	IC		IC807	6-704-285-01	IC IC42S16101-7TG(T&R)		
4063		QI	IC		IC808	6-704-487-01	IC TC74LVX74FT(EL)		
4064		QI	COIL		L601	1-414-394-11	INDUCTOR 2.2UH		
4065		QI	COIL		L701	1-414-394-11	INDUCTOR 2.2UH		
4066		QI	COIL		L702	1-216-296-11	SHORT CHIP 0		
4067		QI	COIL		L703	1-781-667-22	INDUCTOR 0UH		
4068		QI	COIL		L704	1-781-667-22	INDUCTOR 0UH		
4069		QI	COIL		L705	1-781-667-22	INDUCTOR 0UH		
4070		QI	COIL		L706	1-781-667-22	INDUCTOR 0UH		
4071		QI	COIL		L707	1-781-667-22	INDUCTOR 0UH		
4072		QI	COIL		L708	1-781-667-22	INDUCTOR 0UH		
4073		QI	COIL		L801	1-414-394-11	INDUCTOR 2.2UH		
4074		QI	RESISTOR		R601	1-216-801-11	METAL CHIP 22 5% 1/10W		
4075		QI	RESISTOR		R602	1-216-801-11	METAL CHIP 22 5% 1/10W		
4076		QI	RESISTOR		R603	1-216-801-11	METAL CHIP 22 5% 1/10W		
4077		QI	RESISTOR		R604	1-216-801-11	METAL CHIP 22 5% 1/10W		
4078		QI	RESISTOR		R605	1-216-801-11	METAL CHIP 22 5% 1/10W		
4079		QI	RESISTOR		R606	1-216-801-11	METAL CHIP 22 5% 1/10W		
4080		QI	RESISTOR		R607	1-216-801-11	METAL CHIP 22 5% 1/10W		
4081		QI	RESISTOR		R608	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4082		QI	RESISTOR		R609	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4083		QI	RESISTOR		R610	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4084		QI	RESISTOR		R611	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4085		QI	RESISTOR		R612	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4086		QI	RESISTOR		R613	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4087		QI	RESISTOR		R614	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4088		QI	RESISTOR		R616	1-216-845-11	METAL CHIP 100K 5% 1/10W		

No.	#	Board	Type	Δ/μ^*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4089		QI	RESISTOR		R617	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4090		QI	RESISTOR		R618	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4091		QI	RESISTOR		R619	1-216-864-11	SHORT CHIP 0		
4092		QI	RESISTOR		R620	1-216-864-11	SHORT CHIP 0		
4093		QI	RESISTOR		R621	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4094		QI	RESISTOR		R622	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4095		QI	RESISTOR		R623	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4096		QI	RESISTOR		R624	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4097		QI	RESISTOR		R625	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4098		QI	RESISTOR		R627	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4099		QI	RESISTOR		R701	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4100		QI	RESISTOR		R702	1-216-801-11	METAL CHIP 22 5% 1/10W		
4101		QI	RESISTOR		R704	1-216-801-11	METAL CHIP 22 5% 1/10W		
4102		QI	RESISTOR		R707	1-216-801-11	METAL CHIP 22 5% 1/10W		
4103		QI	RESISTOR		R708	1-218-672-11	METAL CHIP 150 0.5% 1/10W		
4104		QI	RESISTOR		R709	1-216-801-11	METAL CHIP 22 5% 1/10W		
4105		QI	RESISTOR		R710	1-218-711-11	METAL CHIP 6.2K 0.5% 1/10W		
4106		QI	RESISTOR		R711	1-216-801-11	METAL CHIP 22 5% 1/10W		
4107		QI	RESISTOR		R712	1-216-801-11	METAL CHIP 22 5% 1/10W		
4108		QI	RESISTOR		R713	1-216-801-11	METAL CHIP 22 5% 1/10W		
4109		QI	RESISTOR		R714	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
4110		QI	RESISTOR		R715	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
4111		QI	RESISTOR		R716	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
4112		QI	RESISTOR		R717	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
4113		QI	RESISTOR		R719	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
4114		QI	RESISTOR		R721	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
4115		QI	RESISTOR		R723	1-216-857-11	METAL CHIP 1M 5% 1/10W		
4116		QI	RESISTOR		R724	1-216-857-11	METAL CHIP 1M 5% 1/10W		
4117		QI	RESISTOR		R725	1-216-857-11	METAL CHIP 1M 5% 1/10W		
4118		QI	RESISTOR		R726	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
4119		QI	RESISTOR		R727	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
4120		QI	RESISTOR		R728	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
4121		QI	RESISTOR		R729	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
4122		QI	RESISTOR		R730	1-218-709-11	METAL CHIP 5.1K 0.5% 1/10W		
4123		QI	RESISTOR		R731	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
4124		QI	RESISTOR		R732	1-218-709-11	METAL CHIP 5.1K 0.5% 1/10W		
4125		QI	RESISTOR		R733	1-218-662-11	METAL CHIP 56 0.5% 1/10W		
4126		QI	RESISTOR		R734	1-218-709-11	METAL CHIP 5.1K 0.5% 1/10W		
4127		QI	RESISTOR		R735	1-216-864-11	SHORT CHIP 0		
4128		QI	RESISTOR		R736	1-216-864-11	SHORT CHIP 0		
4129		QI	RESISTOR		R737	1-216-864-11	SHORT CHIP 0		
4130		QI	RESISTOR		R801	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4131		QI	RESISTOR		R802	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4132		QI	RESISTOR		R803	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4133		QI	RESISTOR		R804	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4134		QI	RESISTOR		R805	1-216-864-11	SHORT CHIP 0		
4135		QI	RESISTOR		R806	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4136		QI	RESISTOR		R807	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4137		QI	RESISTOR		R808	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4138		QI	RESISTOR		R809	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4139		QI	RESISTOR		R810	1-216-809-11	METAL CHIP 100 5% 1/10W		
4140		QI	RESISTOR		R811	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4141		QI	RESISTOR		R812	1-216-864-11	SHORT CHIP 0		
4142		QI	RESISTOR		R813	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4143		QI	RESISTOR		R814	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4144		QI	RESISTOR		R815	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4145		QI	RESISTOR		R816	1-216-803-11	METAL CHIP 33 5% 1/10W		
4146		QI	RESISTOR		R817	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4147		QI	RESISTOR		R818	1-216-801-11	METAL CHIP 22 5% 1/10W		
4148		QI	RESISTOR		R820	1-216-803-11	METAL CHIP 33 5% 1/10W		
4149		QI	RESISTOR		R821	1-218-699-11	METAL CHIP 2K 0.5% 1/10W		
4150		QI	RESISTOR		R822	1-216-803-11	METAL CHIP 33 5% 1/10W		
4151		QI	RESISTOR		R823	1-216-841-11	METAL CHIP 47K 5% 1/10W		
4152		QI	RESISTOR		R824	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4153		QI	RESISTOR		R825	1-216-841-11	METAL CHIP 47K 5% 1/10W		
4154		QI	RESISTOR		R826	1-216-841-11	METAL CHIP 47K 5% 1/10W		
4155		QI	NETWORK		RB601	1-234-370-21	RES, NETWORK 22X4 (1005)		
4156		QI	NETWORK		RB602	1-234-370-21	RES, NETWORK 22X4 (1005)		
4157		QI	NETWORK		RB603	1-234-370-21	RES, NETWORK 22X4 (1005)		
4158		QI	NETWORK		RB604	1-234-370-21	RES, NETWORK 22X4 (1005)		
4159		QI	NETWORK		RB605	1-234-370-21	RES, NETWORK 22X4 (1005)		
4160		QI	NETWORK		RB606	1-234-370-21	RES, NETWORK 22X4 (1005)		
4161		QI	NETWORK		RB607	1-234-370-21	RES, NETWORK 22X4 (1005)		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4162		QI	NETWORK		RB608	1-234-370-21	RES, NETWORK 22X4 (1005)		
4163		QI	NETWORK		RB609	1-234-370-21	RES, NETWORK 22X4 (1005)		
4164		QI	NETWORK		RB610	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4165		QI	NETWORK		RB611	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4166		QI	NETWORK		RB612	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4167		QI	NETWORK		RB613	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4168		QI	NETWORK		RB614	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4169		QI	NETWORK		RB701	1-234-370-21	RES, NETWORK 22X4 (1005)		
4170		QI	NETWORK		RB702	1-234-370-21	RES, NETWORK 22X4 (1005)		
4171		QI	NETWORK		RB703	1-234-370-21	RES, NETWORK 22X4 (1005)		
4172		QI	NETWORK		RB704	1-234-370-21	RES, NETWORK 22X4 (1005)		
4173		QI	NETWORK		RB705	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4174		QI	NETWORK		RB706	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4175		QI	NETWORK		RB707	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4176		QI	NETWORK		RB708	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4177		QI	NETWORK		RB709	1-234-371-21	RES, NETWORK 47X4 (1005)		
4178		QI	NETWORK		RB710	1-234-371-21	RES, NETWORK 47X4 (1005)		
4179		QI	NETWORK		RB711	1-234-371-21	RES, NETWORK 47X4 (1005)		
4180		QI	NETWORK		RB712	1-234-371-21	RES, NETWORK 47X4 (1005)		
4181		QI	NETWORK		RB713	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4182		QI	NETWORK		RB714	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4183		QI	NETWORK		RB715	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4184		QI	NETWORK		RB716	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4185		QI	NETWORK		RB801	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4186		QI	NETWORK		RB802	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4187		QI	NETWORK		RB803	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4188		QI	NETWORK		RB804	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4189		QI	NETWORK		RB814	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4190		QI	NETWORK		RB815	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4191		QI	NETWORK		RB816	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4192		QI	NETWORK		RB817	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4193		QI	NETWORK		RB818	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4194		QI	NETWORK		RB819	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4195		QI	NETWORK		RB820	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4196		QI	NETWORK		RB821	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4197		QI	NETWORK		RB822	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4198		QI	NETWORK		RB823	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4199		QI	NETWORK		RB824	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4200		QI	NETWORK		RB825	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4201		QI	NETWORK		RB826	1-234-372-21	RES, NETWORK 100X4 (1005)		
4202		QI	NETWORK		RB827	1-234-372-21	RES, NETWORK 100X4 (1005)		
4203		QI	NETWORK		RB828	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4204		QI	NETWORK		RB829	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4205		QI	NETWORK		RB830	1-234-372-21	RES, NETWORK 100X4 (1005)		
4206		QI	NETWORK		RB831	1-234-372-21	RES, NETWORK 100X4 (1005)		
4207		QI	NETWORK		RB832	1-234-372-21	RES, NETWORK 100X4 (1005)		
4208		QI	NETWORK		RB833	1-234-372-21	RES, NETWORK 100X4 (1005)		
4209		QI	NETWORK		RB834	1-234-372-21	RES, NETWORK 100X4 (1005)		
4210		QI	NETWORK		RB835	1-234-372-21	RES, NETWORK 100X4 (1005)		
4211		QI	NETWORK		RB836	1-234-372-21	RES, NETWORK 100X4 (1005)		
4212		QI	NETWORK		RB837	1-234-372-21	RES, NETWORK 100X4 (1005)		
4213		QI	NETWORK		RB838	1-234-372-21	RES, NETWORK 100X4 (1005)		
4214		QI	NETWORK		RB839	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4215		QI	NETWORK		RB840	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4216		QI	NETWORK		RB841	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4217		QI	NETWORK		RB842	1-234-378-21	RES, NETWORK 10KX4 (1005)		
4218		QI	CRYSTAL		X701	1-795-415-21	VIBRATOR, CRYSTAL		
4219		QI	CRYSTAL		X801	1-813-058-21	OSCILLATOR, CRYSTAL		
4220		QM	CAPACITOR		C7301	1-165-811-91	CERAMIC CHIP 22UF 10% 16V		
4221		QM	CAPACITOR		C7302	1-164-346-11	CERAMIC CHIP 1UF 16V		
4222		QM	CAPACITOR		C7303	1-164-346-11	CERAMIC CHIP 1UF 16V		
4223		QM	CAPACITOR		C7304	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
4224		QM	CAPACITOR		C7305	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4225		QM	CAPACITOR		C7306	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4226		QM	CAPACITOR		C7307	1-125-827-91	CERAMIC CHIP 1UF 10.00% 25V		
4227		QM	CAPACITOR		C7308	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4228		QM	CAPACITOR		C7309	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4229		QM	CAPACITOR		C7310	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4230		QM	CAPACITOR		C7311	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4231		QM	CAPACITOR		C7312	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4232		QM	CAPACITOR		C7313	1-164-346-11	CERAMIC CHIP 1UF 16V		
4233		QM	CAPACITOR		C7314	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4234		QM	CAPACITOR		C7315	1-164-346-11	CERAMIC CHIP 1UF 16V		

No.	#	Board	Type	$\Delta/\%$	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4235		QM	CAPACITOR		C7316	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V		
4236		QM	CAPACITOR		C7317	1-162-962-11	CERAMIC CHIP 470PF 10.00% 50V		
4237		QM	CAPACITOR		C7318	1-100-118-21	ELECT CHIP 82UF 20% 16V		
4238		QM	CAPACITOR		C7319	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4239		QM	CAPACITOR		C7320	1-100-118-21	ELECT CHIP 82UF 20% 16V		
4240		QM	CAPACITOR		C7321	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4241		QM	CAPACITOR		C7322	1-137-897-21	ELECT CHIP 150UF 20% 4V		
4242		QM	CAPACITOR		C7323	1-137-897-21	ELECT CHIP 150UF 20% 4V		
4243		QM	CAPACITOR		C7326	1-137-897-21	ELECT CHIP 150UF 20% 4V		
4244		QM	CAPACITOR		C7327	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4245		QM	CAPACITOR		C7328	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4246		QM	CAPACITOR		C7329	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4247		QM	CAPACITOR		C7330	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4248		QM	CAPACITOR		C7331	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4249		QM	CAPACITOR		C7332	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4250		QM	CAPACITOR		C7333	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4251		QM	CAPACITOR		C7334	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4252		QM	CAPACITOR		C7335	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4253		QM	CAPACITOR		C7336	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4254		QM	CAPACITOR		C7337	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4255		QM	CAPACITOR		C7338	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4256		QM	CAPACITOR		C7339	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4257		QM	CAPACITOR		C7340	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4258		QM	CAPACITOR		C7341	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4259		QM	CAPACITOR		C7342	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4260		QM	CAPACITOR		C7343	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4261		QM	CAPACITOR		C7344	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4262		QM	CAPACITOR		C7345	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4263		QM	CAPACITOR		C7346	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4264		QM	CAPACITOR		C7347	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4265		QM	CAPACITOR		C7348	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4266		QM	CAPACITOR		C7349	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4267		QM	CAPACITOR		C7350	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4268		QM	CAPACITOR		C7351	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4269		QM	CAPACITOR		C7352	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4270		QM	CAPACITOR		C7353	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4271		QM	CAPACITOR		C7354	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4272		QM	CAPACITOR		C7355	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4273		QM	CAPACITOR		C7356	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4274		QM	CAPACITOR		C7357	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4275		QM	CAPACITOR		C7358	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4276		QM	CAPACITOR		C7359	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4277		QM	CAPACITOR		C7360	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4278		QM	CAPACITOR		C7361	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4279		QM	CAPACITOR		C7362	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4280		QM	CAPACITOR		C7363	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4281		QM	CAPACITOR		C7364	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4282		QM	CAPACITOR		C7365	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4283		QM	CAPACITOR		C7366	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4284		QM	CAPACITOR		C7367	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4285		QM	CAPACITOR		C7368	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4286		QM	CAPACITOR		C7369	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4287		QM	CAPACITOR		C7370	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4288		QM	CAPACITOR		C7371	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4289		QM	CAPACITOR		C7372	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4290		QM	CAPACITOR		C7373	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4291		QM	CAPACITOR		C7374	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4292		QM	CAPACITOR		C7375	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4293		QM	CAPACITOR		C7376	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4294		QM	CAPACITOR		C7377	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4295		QM	CAPACITOR		C7378	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4296		QM	CAPACITOR		C7379	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4297		QM	CAPACITOR		C7380	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4298		QM	CAPACITOR		C7381	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4299		QM	CAPACITOR		C7382	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4300		QM	CAPACITOR		C7383	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4301		QM	CAPACITOR		C7384	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4302		QM	CAPACITOR		C7385	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4303		QM	CAPACITOR		C7386	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4304		QM	CAPACITOR		C7387	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4305		QM	CAPACITOR		C7388	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4306		QM	CAPACITOR		C7389	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4307		QM	CAPACITOR		C7390	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4308		QM	CAPACITOR		C7391	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4309		QM	CAPACITOR		C7392	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4310		QM	CAPACITOR		C7393	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4311		QM	CAPACITOR		C7394	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4312		QM	CAPACITOR		C7395	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4313		QM	CAPACITOR		C7396	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4314		QM	CAPACITOR		C7397	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4315		QM	CAPACITOR		C7398	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4316		QM	CAPACITOR		C7399	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4317		QM	CAPACITOR		C7400	1-162-910-11	CERAMIC CHIP 5PF 0.25PF 50V		
4318		QM	CAPACITOR		C7401	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4319		QM	CAPACITOR		C7402	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4320		QM	CAPACITOR		C7403	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4321		QM	CAPACITOR		C7404	1-162-911-11	CERAMIC CHIP 6PF 0.50PF 50V		
4322		QM	CAPACITOR		C7405	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4323		QM	CAPACITOR		C7406	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4324		QM	CAPACITOR		C7407	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4325		QM	CAPACITOR		C7408	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4326		QM	CAPACITOR		C7409	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4327		QM	CAPACITOR		C7410	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4328		QM	CAPACITOR		C7411	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4329		QM	CAPACITOR		C7412	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4330		QM	CAPACITOR		C7413	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4331		QM	CAPACITOR		C7414	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4332		QM	CAPACITOR		C7415	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4333		QM	CAPACITOR		C7416	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4334		QM	CAPACITOR		C7417	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4335		QM	CAPACITOR		C7418	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4336		QM	CAPACITOR		C7419	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4337		QM	CAPACITOR		C7420	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4338		QM	CAPACITOR		C7421	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4339		QM	CAPACITOR		C7422	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4340		QM	CAPACITOR		C7423	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4341		QM	CAPACITOR		C7424	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4342		QM	CAPACITOR		C7425	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4343		QM	CAPACITOR		C7426	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4344		QM	CAPACITOR		C7428	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4345		QM	CAPACITOR		C7429	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4346		QM	CAPACITOR		C7430	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4347		QM	CAPACITOR		C7431	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4348		QM	CAPACITOR		C7432	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4349		QM	CAPACITOR		C7433	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4350		QM	CAPACITOR		C7434	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4351		QM	CAPACITOR		C7435	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4352		QM	CAPACITOR		C7436	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4353		QM	CAPACITOR		C7437	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4354		QM	CAPACITOR		C7438	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4355		QM	CAPACITOR		C7439	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4356		QM	CAPACITOR		C7440	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4357		QM	CAPACITOR		C7441	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4358		QM	CAPACITOR		C7442	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4359		QM	CAPACITOR		C7443	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4360		QM	CAPACITOR		C7444	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4361		QM	CAPACITOR		C7445	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4362		QM	CAPACITOR		C7446	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4363		QM	CAPACITOR		C7447	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4364		QM	CAPACITOR		C7448	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4365		QM	CAPACITOR		C7449	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4366		QM	CAPACITOR		C7450	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4367		QM	CAPACITOR		C7451	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4368		QM	CAPACITOR		C7452	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4369		QM	CAPACITOR		C7453	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4370		QM	CAPACITOR		C7454	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4371		QM	CAPACITOR		C7455	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4372		QM	CAPACITOR		C7456	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4373		QM	CAPACITOR		C7457	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4374		QM	CAPACITOR		C7458	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4375		QM	CAPACITOR		C7459	1-127-692-11	CERAMIC CHIP 10UF 10% 16V		
4376		QM	CAPACITOR		C7460	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4377		QM	CAPACITOR		C7461	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4378		QM	CAPACITOR		C7462	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4379		QM	CAPACITOR		C7463	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4380		QM	CAPACITOR		C7464	1-164-156-11	CERAMIC CHIP 0.1UF 25V		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4381		QM	CAPACITOR		C7465	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4382		QM	CAPACITOR		C7466	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4383		QM	CAPACITOR		C7467	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4384		QM	CAPACITOR		C7468	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4385		QM	CAPACITOR		C7469	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4386		QM	CAPACITOR		C7470	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4387		QM	CAPACITOR		C7472	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4388		QM	CAPACITOR		C7473	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4389		QM	CAPACITOR		C7474	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4390		QM	CAPACITOR		C7475	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
4391		QM	CAPACITOR		C7476	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4392		QM	CAPACITOR		C7477	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4393		QM	CAPACITOR		C7478	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4394		QM	CAPACITOR		C7479	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4395		QM	CAPACITOR		C7480	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4396		QM	CAPACITOR		C7481	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4397		QM	CAPACITOR		C7482	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
4398		QM	CAPACITOR		C7483	1-164-346-11	CERAMIC CHIP 1UF 16V		
4399		QM	CAPACITOR		C7484	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4400		QM	CAPACITOR		C7485	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4401		QM	CAPACITOR		C7486	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4402		QM	CAPACITOR		C7487	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4403		QM	CAPACITOR		C7488	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4404		QM	CAPACITOR		C7489	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
4405		QM	CAPACITOR		C7491	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4406		QM	CAPACITOR		C7492	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4407		QM	CAPACITOR		C7494	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
4408		QM	CAPACITOR		C7495	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
4409		QM	CAPACITOR		C7496	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
4410		QM	CAPACITOR		C7497	1-162-965-11	CERAMIC CHIP 0.0015UF 10.00% 50V		
4411		QM	CAPACITOR		C7498	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4412		QM	CAPACITOR		C7499	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4413		QM	CAPACITOR		C7501	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
4414		QM	CAPACITOR		C7502	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4415		QM	CAPACITOR		C7503	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4416		QM	CAPACITOR		C7504	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4417		QM	CAPACITOR		C7506	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
4418		QM	CAPACITOR		C7509	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
4419		QM	CAPACITOR		C7511	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
4420		QM	CAPACITOR		C7528	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
4421		QM	CAPACITOR		C7532	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
4422		QM	CAPACITOR		C7539	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4423		QM	CAPACITOR		C7540	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4424		QM	CAPACITOR		C7541	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4425		QM	CAPACITOR		C7542	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4426		QM	CONNECTOR	*	CN7300	1-816-598-11	PIN, CONNECTOR 12P		
4427		QM	CONNECTOR	*	CN7303	1-817-702-11	CONNECTOR, BOARD TO BOARD 4P		
4428		QM	CONNECTOR	*	CN7305	1-817-717-11	CONNECTOR, BOARD TO BOARD 80P		
4429		QM	CONNECTOR	*	CN7306	1-817-701-11	CONNECTOR, BOARD TO BOARD 24P		
4430		QM	CONNECTOR	*	CN7308	1-817-718-11	CONNECTOR, BOARD TO BOARD 40P		
4431		QM	CONNECTOR		CN7309	1-815-468-11	PIN, CONNECTOR (PC BOARD)		
4432		QM	CONNECTOR	*	CN7310	1-793-141-21	PIN, CONNECTOR (PC BOARD) 15P		
4433		QM	CONNECTOR		CN7311	1-785-842-11	CONNECTOR, USB (VERTICAL TYPE)		
4434		QM	DIODE		D7300	8-719-404-50	DIODE MA111-TX		
4435		QM	DIODE		D7301	8-719-404-50	DIODE MA111-TX		
4436		QM	DIODE		D7302	8-719-404-50	DIODE MA111-TX		
4437		QM	DIODE		D7303	8-719-404-50	DIODE MA111-TX		
4438		QM	DIODE		D7304	8-719-404-50	DIODE MA111-TX		
4439		QM	DIODE		D7305	8-719-404-50	DIODE MA111-TX		
4440		QM	DIODE		D7306	8-719-060-99	DIODE SML-210MT-T86		
4441		QM	DIODE		D7308	8-719-988-61	DIODE 1SS355TE-17		
4442		QM	DIODE		D7309	8-719-048-40	DIODE MBRS140T3		
4443		QM	DIODE		D7310	8-719-048-40	DIODE MBRS140T3		
4444		QM	FERRITE BEAD		FB7300	1-400-089-21	FERRITE 0UH		
4445		QM	FERRITE BEAD		FB7301	1-400-089-21	FERRITE 0UH		
4446		QM	FERRITE BEAD		FB7302	1-469-835-21	FERRITE 0UH		
4447		QM	FERRITE BEAD		FB7303	1-500-241-22	FERRITE 0UH		
4448		QM	FERRITE BEAD		FB7304	1-469-835-21	FERRITE 0UH		
4449		QM	FERRITE BEAD		FB7305	1-469-835-21	FERRITE 0UH		
4450		QM	FERRITE BEAD		FB7306	1-414-229-11	FERRITE 0UH		
4451		QM	FERRITE BEAD		FB7307	1-414-229-11	FERRITE 0UH		
4452		QM	FERRITE BEAD		FB7308	1-469-835-21	FERRITE 0UH		
4453		QM	FERRITE BEAD		FB7309	1-414-229-11	FERRITE 0UH		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4454		QM	FERRITE BEAD		FB7310	1-414-229-11	FERRITE 0UH		
4455		QM	FERRITE BEAD		FB7311	1-414-229-11	FERRITE 0UH		
4456		QM	FERRITE BEAD		FB7312	1-414-229-11	FERRITE 0UH		
4457		QM	FERRITE BEAD		FB7313	1-400-180-21	INDUCTOR 0UH		
4458		QM	FERRITE BEAD		FB7314	1-400-180-21	INDUCTOR 0UH		
4459		QM	FERRITE BEAD		FB7315	1-469-835-21	FERRITE 0UH		
4460		QM	FERRITE BEAD		FB7317	1-400-089-21	FERRITE 0UH		
4461		QM	FERRITE BEAD		FB7318	1-400-089-21	FERRITE 0UH		
4462		QM	FERRITE BEAD		FB7319	1-216-295-91	SHORT CHIP 0		
4463		QM	FERRITE BEAD		FB7321	1-469-835-21	FERRITE 0UH		
4464		QM	FERRITE BEAD		FB7322	1-469-835-21	FERRITE 0UH		
4465		QM	FERRITE BEAD		FB7323	1-469-835-21	FERRITE 0UH		
4466		QM	FILTER		FL7300	1-781-667-22	INDUCTOR 0UH		
4467		QM	IC		IC7300	6-704-629-01	IC 215H25AKA13G		
4468		QM	IC		IC7301	6-703-182-01	IC IRU3037CS		
4469		QM	IC		IC7302	6-703-182-01	IC IRU3037CS		
4470		QM	IC		IC7303	8-759-592-47	IC TC7SZ08FU(TE85R)		
4471		QM	IC		IC7304	8-759-592-47	IC TC7SZ08FU(TE85R)		
4472		QM	IC		IC7305	6-701-116-01	IC TPS3823-33DBVR		
4473		QM	IC		IC7306	8-729-044-83	TRANSISTOR IRF7313-TR		
4474		QM	IC		IC7307	8-729-044-83	TRANSISTOR IRF7313-TR		
4475		QM	IC		IC7308	8-759-538-95	IC TC74LVX08FT(EL)		
4476		QM	IC		IC7309	6-704-622-01	IC PQ015Y3H3ZP		
4477		QM	IC		IC7310	6-703-048-01	IC XC6209B182MR		
4478		QM	IC		IC7311	6-703-048-01	IC XC6209B182MR		
4479		QM	IC		IC7312	6-703-048-01	IC XC6209B182MR		
4480		QM	IC		IC7313	6-703-048-01	IC XC6209B182MR		
4481		QM	IC		IC7314	6-703-048-01	IC XC6209B182MR		
4482		QM	IC		IC7315	8-759-698-08	IC SN74CBTLV1G125DCKR		
4483		QM	IC		IC7316	8-759-694-36	IC SN74CBTLV3257PWR		
4484		QM	IC		IC7317	8-759-058-54	IC TC7S00FU(TE85R)		
4485		QM	IC		IC7318	6-705-336-01	IC K9F2808U0C-PCB0T		
4486		QM	IC		IC7319	6-705-336-01	IC K9F2808U0C-PCB0T		
4487		QM	IC		IC7320	6-703-866-01	IC M25P10-AVMN6T		
4488		QM	IC		IC7322	6-704-849-01	IC MT46V8M16P-6T		
4489		QM	IC		IC7323	6-704-849-01	IC MT46V8M16P-6T		
4490		QM	IC		IC7324	6-704-849-01	IC MT46V8M16P-6T		
4491		QM	IC		IC7325	6-704-849-01	IC MT46V8M16P-6T		
4492		QM	IC		IC7326	6-702-688-01	IC M24C64-WMN6T(B)		
4493		QM	IC		IC7327	6-704-819-01	IC CS4335-KSZR		
4494		QM	IC		IC7330	8-759-672-72	IC LM3526MX-H		
4495		QM	IC		IC7335	8-759-592-47	IC TC7SZ08FU(TE85R)		
4496		QM	IC		IC7336	8-759-592-47	IC TC7SZ08FU(TE85R)		
4497		QM	IC		IC7337	8-759-592-50	IC TC7SZ126FU(TE85R)		
4498		QM	COIL		L7300	1-469-349-11	INDUCTOR 1UH		
4499		QM	COIL		L7301	1-416-948-21	INDUCTOR 10UH		
4500		QM	COIL		L7302	1-419-491-21	INDUCTOR 10UH		
4501		QM	COIL		L7303	1-414-751-11	INDUCTOR 1UH		
4502		QM	COIL		L7304	1-410-989-11	INDUCTOR 0.47UH		
4503		QM	COIL		L7305	1-410-989-11	INDUCTOR 0.47UH		
4504		QM	COIL		L7306	1-410-989-11	INDUCTOR 0.47UH		
4505		QM	COIL		L7307	1-410-989-11	INDUCTOR 0.47UH		
4506		QM	COIL		L7308	1-410-989-11	INDUCTOR 0.47UH		
4507		QM	COIL		L7309	1-410-989-11	INDUCTOR 0.47UH		
4508		QM	COIL		L7312	1-414-751-11	INDUCTOR 1UH		
4509		QM	TRANSISTOR		Q7300	8-729-422-27	TRANSISTOR 2SD601A-Q		
4510		QM	TRANSISTOR		Q7301	8-729-422-27	TRANSISTOR 2SD601A-Q		
4511		QM	TRANSISTOR		Q7302	8-729-422-27	TRANSISTOR 2SD601A-Q		
4512		QM	TRANSISTOR		Q7303	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
4513		QM	TRANSISTOR		Q7304	8-729-422-27	TRANSISTOR 2SD601A-Q		
4514		QM	TRANSISTOR		Q7305	8-729-422-27	TRANSISTOR 2SD601A-Q		
4515		QM	RESISTOR		R7300	1-216-864-11	SHORT CHIP 0		
4516		QM	RESISTOR		R7301	1-216-864-11	SHORT CHIP 0		
4517		QM	RESISTOR		R7303	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4518		QM	RESISTOR		R7304	1-216-809-11	METAL CHIP 100 5% 1/10W		
4519		QM	RESISTOR		R7305	1-216-809-11	METAL CHIP 100 5% 1/10W		
4520		QM	RESISTOR		R7306	1-216-864-11	SHORT CHIP 0		
4521		QM	RESISTOR		R7307	1-216-864-11	SHORT CHIP 0		
4522		QM	RESISTOR		R7308	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
4523		QM	RESISTOR		R7309	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
4524		QM	RESISTOR		R7310	1-216-801-11	METAL CHIP 22 5% 1/10W		
4525		QM	RESISTOR		R7311	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4526		QM	RESISTOR		R7312	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4527		QM	RESISTOR		R7313	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		
4528		QM	RESISTOR		R7314	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
4529		QM	RESISTOR		R7315	1-216-864-11	SHORT CHIP 0		
4530		QM	RESISTOR		R7316	1-216-864-11	SHORT CHIP 0		
4531		QM	RESISTOR		R7317	1-216-809-11	METAL CHIP 100 5% 1/10W		
4532		QM	RESISTOR		R7318	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4533		QM	RESISTOR		R7319	1-216-838-11	METAL CHIP 27K 5% 1/10W		
4534		QM	RESISTOR		R7320	1-216-864-11	SHORT CHIP 0		
4535		QM	RESISTOR		R7321	1-216-809-11	METAL CHIP 100 5% 1/10W		
4536		QM	RESISTOR		R7322	1-216-801-11	METAL CHIP 22 5% 1/10W		
4537		QM	RESISTOR		R7324	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4538		QM	RESISTOR		R7326	1-216-809-11	METAL CHIP 100 5% 1/10W		
4539		QM	RESISTOR		R7328	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4540		QM	RESISTOR		R7329	1-216-793-11	METAL CHIP 4.7 5% 1/10W		
4541		QM	RESISTOR		R7330	1-216-793-11	METAL CHIP 4.7 5% 1/10W		
4542		QM	RESISTOR		R7332	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4543		QM	RESISTOR		R7333	1-216-864-11	SHORT CHIP 0		
4544		QM	RESISTOR		R7335	1-216-801-11	METAL CHIP 22 5% 1/10W		
4545		QM	RESISTOR		R7336	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4546		QM	RESISTOR		R7337	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4547		QM	RESISTOR		R7338	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4548		QM	RESISTOR		R7339	1-216-809-11	METAL CHIP 100 5% 1/10W		
4549		QM	RESISTOR		R7340	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4550		QM	RESISTOR		R7342	1-216-801-11	METAL CHIP 22 5% 1/10W		
4551		QM	RESISTOR		R7343	1-216-801-11	METAL CHIP 22 5% 1/10W		
4552		QM	RESISTOR		R7345	1-216-864-11	SHORT CHIP 0		
4553		QM	RESISTOR		R7346	1-216-864-11	SHORT CHIP 0		
4554		QM	RESISTOR		R7347	1-216-864-11	SHORT CHIP 0		
4555		QM	RESISTOR		R7348	1-216-864-11	SHORT CHIP 0		
4556		QM	RESISTOR		R7349	1-216-864-11	SHORT CHIP 0		
4557		QM	RESISTOR		R7350	1-216-864-11	SHORT CHIP 0		
4558		QM	RESISTOR		R7351	1-216-864-11	SHORT CHIP 0		
4559		QM	RESISTOR		R7352	1-216-864-11	SHORT CHIP 0		
4560		QM	RESISTOR		R7353	1-216-864-11	SHORT CHIP 0		
4561		QM	RESISTOR		R7354	1-216-864-11	SHORT CHIP 0		
4562		QM	RESISTOR		R7355	1-216-801-11	METAL CHIP 22 5% 1/10W		
4563		QM	RESISTOR		R7356	1-216-857-11	METAL CHIP 1M 5% 1/10W		
4564		QM	RESISTOR		R7357	1-216-801-11	METAL CHIP 22 5% 1/10W		
4565		QM	RESISTOR		R7358	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4566		QM	RESISTOR		R7359	1-216-864-11	SHORT CHIP 0		
4567		QM	RESISTOR		R7360	1-216-864-11	SHORT CHIP 0		
4568		QM	RESISTOR		R7361	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4569		QM	RESISTOR		R7363	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4570		QM	RESISTOR		R7364	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4571		QM	RESISTOR		R7365	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4572		QM	RESISTOR		R7366	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4573		QM	RESISTOR		R7368	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4574		QM	RESISTOR		R7370	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4575		QM	RESISTOR		R7374	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4576		QM	RESISTOR		R7375	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4577		QM	RESISTOR		R7378	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4578		QM	RESISTOR		R7379	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4579		QM	RESISTOR		R7381	1-216-864-11	SHORT CHIP 0		
4580		QM	RESISTOR		R7382	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4581		QM	RESISTOR		R7384	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4582		QM	RESISTOR		R7385	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4583		QM	RESISTOR		R7386	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4584		QM	RESISTOR		R7387	1-216-801-11	METAL CHIP 22 5% 1/10W		
4585		QM	RESISTOR		R7388	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4586		QM	RESISTOR		R7389	1-216-809-11	METAL CHIP 100 5% 1/10W		
4587		QM	RESISTOR		R7390	1-216-809-11	METAL CHIP 100 5% 1/10W		
4588		QM	RESISTOR		R7391	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4589		QM	RESISTOR		R7392	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4590		QM	RESISTOR		R7393	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4591		QM	RESISTOR		R7400	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4592		QM	RESISTOR		R7401	1-218-667-11	METAL CHIP 91 0.5% 1/10W		
4593		QM	RESISTOR		R7402	1-218-667-11	METAL CHIP 91 0.5% 1/10W		
4594		QM	RESISTOR		R7403	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
4595		QM	RESISTOR		R7404	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
4596		QM	RESISTOR		R7405	1-216-801-11	METAL CHIP 22 5% 1/10W		
4597		QM	RESISTOR		R7406	1-216-801-11	METAL CHIP 22 5% 1/10W		
4598		QM	RESISTOR		R7407	1-216-801-11	METAL CHIP 22 5% 1/10W		
4599		QM	RESISTOR		R7408	1-216-801-11	METAL CHIP 22 5% 1/10W		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4600		QM	RESISTOR		R7410	1-216-801-11	METAL CHIP 22 5% 1/10W		
4601		QM	RESISTOR		R7411	1-216-801-11	METAL CHIP 22 5% 1/10W		
4602		QM	RESISTOR		R7413	1-216-803-11	METAL CHIP 33 5% 1/10W		
4603		QM	RESISTOR		R7414	1-216-803-11	METAL CHIP 33 5% 1/10W		
4604		QM	RESISTOR		R7415	1-216-803-11	METAL CHIP 33 5% 1/10W		
4605		QM	RESISTOR		R7416	1-216-803-11	METAL CHIP 33 5% 1/10W		
4606		QM	RESISTOR		R7417	1-216-803-11	METAL CHIP 33 5% 1/10W		
4607		QM	RESISTOR		R7418	1-216-803-11	METAL CHIP 33 5% 1/10W		
4608		QM	RESISTOR		R7419	1-216-803-11	METAL CHIP 33 5% 1/10W		
4609		QM	RESISTOR		R7420	1-216-803-11	METAL CHIP 33 5% 1/10W		
4610		QM	RESISTOR		R7421	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4611		QM	RESISTOR		R7422	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4612		QM	RESISTOR		R7423	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4613		QM	RESISTOR		R7424	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4614		QM	RESISTOR		R7425	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4615		QM	RESISTOR		R7426	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4616		QM	RESISTOR		R7427	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4617		QM	RESISTOR		R7428	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4618		QM	RESISTOR		R7429	1-216-809-11	METAL CHIP 100 5% 1/10W		
4619		QM	RESISTOR		R7430	1-216-809-11	METAL CHIP 100 5% 1/10W		
4620		QM	RESISTOR		R7431	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4621		QM	RESISTOR		R7432	1-216-864-11	SHORT CHIP 0		
4622		QM	RESISTOR		R7433	1-216-864-11	SHORT CHIP 0		
4623		QM	RESISTOR		R7434	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4624		QM	RESISTOR		R7435	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4625		QM	RESISTOR		R7436	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4626		QM	RESISTOR		R7437	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4627		QM	RESISTOR		R7438	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4628		QM	RESISTOR		R7439	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4629		QM	RESISTOR		R7440	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4630		QM	RESISTOR		R7441	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4631		QM	RESISTOR		R7442	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4632		QM	RESISTOR		R7443	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4633		QM	RESISTOR		R7444	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4634		QM	RESISTOR		R7445	1-216-864-11	SHORT CHIP 0		
4635		QM	RESISTOR		R7448	1-216-864-11	SHORT CHIP 0		
4636		QM	RESISTOR		R7451	1-216-864-11	SHORT CHIP 0		
4637		QM	RESISTOR		R7452	1-216-801-11	METAL CHIP 22 5% 1/10W		
4638		QM	RESISTOR		R7453	1-216-801-11	METAL CHIP 22 5% 1/10W		
4639		QM	RESISTOR		R7454	1-216-864-11	SHORT CHIP 0		
4640		QM	RESISTOR		R7455	1-216-809-11	METAL CHIP 100 5% 1/10W		
4641		QM	RESISTOR		R7456	1-216-801-11	METAL CHIP 22 5% 1/10W		
4642		QM	RESISTOR		R7457	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4643		QM	RESISTOR		R7458	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4644		QM	RESISTOR		R7459	1-216-801-11	METAL CHIP 22 5% 1/10W		
4645		QM	RESISTOR		R7460	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4646		QM	RESISTOR		R7461	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4647		QM	RESISTOR		R7462	1-218-690-11	METAL CHIP 820 0.5% 1/10W		
4648		QM	RESISTOR		R7463	1-218-690-11	METAL CHIP 820 0.5% 1/10W		
4649		QM	RESISTOR		R7464	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
4650		QM	RESISTOR		R7465	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
4651		QM	RESISTOR		R7466	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4652		QM	RESISTOR		R7468	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4653		QM	RESISTOR		R7469	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4654		QM	RESISTOR		R7470	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4655		QM	RESISTOR		R7471	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4656		QM	RESISTOR		R7472	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4657		QM	RESISTOR		R7473	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4658		QM	RESISTOR		R7474	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4659		QM	RESISTOR		R7475	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4660		QM	RESISTOR		R7476	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
4661		QM	RESISTOR		R7477	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4662		QM	RESISTOR		R7478	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4663		QM	RESISTOR		R7479	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4664		QM	RESISTOR		R7480	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4665		QM	RESISTOR		R7481	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4666		QM	RESISTOR		R7482	1-218-665-11	METAL CHIP 75 0.5% 1/10W		
4667		QM	RESISTOR		R7483	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4668		QM	RESISTOR		R7484	1-216-850-11	METAL CHIP 270K 5% 1/10W		
4669		QM	RESISTOR		R7485	1-216-850-11	METAL CHIP 270K 5% 1/10W		
4670		QM	RESISTOR		R7486	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4671		QM	RESISTOR		R7487	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4672		QM	RESISTOR		R7488	1-216-818-11	METAL CHIP 560 5% 1/10W		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4673		QM	RESISTOR		R7489	1-216-818-11	METAL CHIP 560 5% 1/10W		
4674		QM	RESISTOR		R7490	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4675		QM	RESISTOR		R7491	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4676		QM	RESISTOR		R7493	1-216-809-11	METAL CHIP 100 5% 1/10W		
4677		QM	RESISTOR		R7494	1-216-809-11	METAL CHIP 100 5% 1/10W		
4678		QM	RESISTOR		R7497	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4679		QM	RESISTOR		R7498	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4680		QM	RESISTOR		R7499	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4681		QM	RESISTOR		R7500	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4682		QM	RESISTOR		R7501	1-216-841-11	METAL CHIP 47K 5% 1/10W		
4683		QM	RESISTOR		R7502	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4684		QM	RESISTOR		R7503	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4685		QM	RESISTOR		R7504	1-216-864-11	SHORT CHIP 0		
4686		QM	RESISTOR		R7505	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4687		QM	RESISTOR		R7506	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4688		QM	RESISTOR		R7507	1-216-845-11	METAL CHIP 100K 5% 1/10W		
4689		QM	RESISTOR		R7508	1-216-864-11	SHORT CHIP 0		
4690		QM	RESISTOR		R7509	1-216-801-11	METAL CHIP 22 5% 1/10W		
4691		QM	RESISTOR		R7510	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4692		QM	RESISTOR		R7512	1-216-864-11	SHORT CHIP 0		
4693		QM	RESISTOR		R7513	1-216-864-11	SHORT CHIP 0		
4694		QM	RESISTOR		R7514	1-216-864-11	SHORT CHIP 0		
4695		QM	RESISTOR		R7515	1-216-864-11	SHORT CHIP 0		
4696		QM	RESISTOR		R7516	1-216-864-11	SHORT CHIP 0		
4697		QM	RESISTOR		R7517	1-216-835-11	METAL CHIP 15K 5% 1/10W		
4698		QM	RESISTOR		R7518	1-216-835-11	METAL CHIP 15K 5% 1/10W		
4699		QM	RESISTOR		R7519	1-216-835-11	METAL CHIP 15K 5% 1/10W		
4700		QM	RESISTOR		R7520	1-216-835-11	METAL CHIP 15K 5% 1/10W		
4701		QM	RESISTOR		R7543	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4702		QM	RESISTOR		R7546	1-216-864-11	SHORT CHIP 0		
4703		QM	RESISTOR		R7547	1-216-864-11	SHORT CHIP 0		
4704		QM	RESISTOR		R7549	1-216-801-11	METAL CHIP 22 5% 1/10W		
4705		QM	RESISTOR		R7550	1-216-801-11	METAL CHIP 22 5% 1/10W		
4706		QM	RESISTOR		R7551	1-216-801-11	METAL CHIP 22 5% 1/10W		
4707		QM	RESISTOR		R7552	1-216-801-11	METAL CHIP 22 5% 1/10W		
4708		QM	RESISTOR		R7554	1-216-809-11	METAL CHIP 100 5% 1/10W		
4709		QM	RESISTOR		R7556	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4710		QM	RESISTOR		R7557	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4711		QM	RESISTOR		R7558	1-216-809-11	METAL CHIP 100 5% 1/10W		
4712		QM	RESISTOR		R7559	1-216-833-11	METAL CHIP 10K 5% 1/10W		
4713		QM	RESISTOR		R7562	1-216-801-11	METAL CHIP 22 5% 1/10W		
4714		QM	RESISTOR		R7563	1-216-801-11	METAL CHIP 22 5% 1/10W		
4715		QM	RESISTOR		R7564	1-216-864-11	SHORT CHIP 0		
4716		QM	RESISTOR		R7565	1-216-864-11	SHORT CHIP 0		
4717		QM	RESISTOR		R7566	1-216-864-11	SHORT CHIP 0		
4718		QM	RESISTOR		R7567	1-216-864-11	SHORT CHIP 0		
4719		QM	RESISTOR		R7568	1-216-864-11	SHORT CHIP 0		
4720		QM	RESISTOR		R7569	1-216-864-11	SHORT CHIP 0		
4721		QM	RESISTOR		R7570	1-216-864-11	SHORT CHIP 0		
4722		QM	RESISTOR		R7571	1-216-864-11	SHORT CHIP 0		
4723		QM	RESISTOR		R7572	1-216-864-11	SHORT CHIP 0		
4724		QM	RESISTOR		R7573	1-216-864-11	SHORT CHIP 0		
4725		QM	NETWORK		RB7300	1-234-370-21	RES, NETWORK 22X4 (1005)		
4726		QM	NETWORK		RB7301	1-234-370-21	RES, NETWORK 22X4 (1005)		
4727		QM	NETWORK		RB7302	1-234-370-21	RES, NETWORK 22X4 (1005)		
4728		QM	NETWORK		RB7303	1-234-370-21	RES, NETWORK 22X4 (1005)		
4729		QM	NETWORK		RB7304	1-234-370-21	RES, NETWORK 22X4 (1005)		
4730		QM	NETWORK		RB7305	1-234-370-21	RES, NETWORK 22X4 (1005)		
4731		QM	NETWORK		RB7306	1-234-370-21	RES, NETWORK 22X4 (1005)		
4732		QM	NETWORK		RB7307	1-234-370-21	RES, NETWORK 22X4 (1005)		
4733		QM	NETWORK		RB7308	1-236-908-11	RES, CHIP NETWORK 10K		
4734		QM	NETWORK		RB7315	1-236-908-11	RES, CHIP NETWORK 10K		
4735		QM	NETWORK		RB7316	1-236-908-11	RES, CHIP NETWORK 10K		
4736		QM	NETWORK		RB7317	1-234-370-21	RES, NETWORK 22X4 (1005)		
4737		QM	NETWORK		RB7318	1-234-370-21	RES, NETWORK 22X4 (1005)		
4738		QM	NETWORK		RB7319	1-234-370-21	RES, NETWORK 22X4 (1005)		
4739		QM	NETWORK		RB7320	1-234-370-21	RES, NETWORK 22X4 (1005)		
4740		QM	NETWORK		RB7321	1-234-370-21	RES, NETWORK 22X4 (1005)		
4741		QM	NETWORK		RB7322	1-234-370-21	RES, NETWORK 22X4 (1005)		
4742		QM	NETWORK		RB7323	1-234-370-21	RES, NETWORK 22X4 (1005)		
4743		QM	NETWORK		RB7324	1-234-370-21	RES, NETWORK 22X4 (1005)		
4744		QM	NETWORK		RB7325	1-234-370-21	RES, NETWORK 22X4 (1005)		
4745		QM	NETWORK		RB7326	1-234-370-21	RES, NETWORK 22X4 (1005)		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4746		QM	NETWORK		RB7327	1-234-370-21	RES, NETWORK 22X4 (1005)		
4747		QM	NETWORK		RB7328	1-234-370-21	RES, NETWORK 22X4 (1005)		
4748		QM	NETWORK		RB7329	1-242-963-21	RES, NETWORK 33X4 (1005)		
4749		QM	NETWORK		RB7330	1-242-963-21	RES, NETWORK 33X4 (1005)		
4750		QM	NETWORK		RB7331	1-242-963-21	RES, NETWORK 33X4 (1005)		
4751		QM	NETWORK		RB7332	1-242-963-21	RES, NETWORK 33X4 (1005)		
4752		QM	NETWORK		RB7333	1-242-963-21	RES, NETWORK 33X4 (1005)		
4753		QM	NETWORK		RB7334	1-242-963-21	RES, NETWORK 33X4 (1005)		
4754		QM	NETWORK		RB7335	1-242-963-21	RES, NETWORK 33X4 (1005)		
4755		QM	NETWORK		RB7336	1-242-963-21	RES, NETWORK 33X4 (1005)		
4756		QM	NETWORK		RB7337	1-242-963-21	RES, NETWORK 33X4 (1005)		
4757		QM	NETWORK		RB7338	1-242-963-21	RES, NETWORK 33X4 (1005)		
4758		QM	NETWORK		RB7339	1-242-963-21	RES, NETWORK 33X4 (1005)		
4759		QM	NETWORK		RB7340	1-242-963-21	RES, NETWORK 33X4 (1005)		
4760		QM	NETWORK		RB7341	1-242-963-21	RES, NETWORK 33X4 (1005)		
4761		QM	NETWORK		RB7342	1-242-963-21	RES, NETWORK 33X4 (1005)		
4762		QM	NETWORK		RB7343	1-242-963-21	RES, NETWORK 33X4 (1005)		
4763		QM	NETWORK		RB7344	1-242-963-21	RES, NETWORK 33X4 (1005)		
4764		QM	NETWORK		RB7345	1-234-370-21	RES, NETWORK 22X4 (1005)		
4765		QM	NETWORK		RB7346	1-234-370-21	RES, NETWORK 22X4 (1005)		
4766		QM	NETWORK		RB7347	1-234-370-21	RES, NETWORK 22X4 (1005)		
4767		QM	NETWORK		RB7348	1-234-370-21	RES, NETWORK 22X4 (1005)		
4768		QM	NETWORK		RB7349	1-234-370-21	RES, NETWORK 22X4 (1005)		
4769		QM	NETWORK		RB7350	1-234-370-21	RES, NETWORK 22X4 (1005)		
4770		QM	NETWORK		RB7351	1-234-370-21	RES, NETWORK 22X4 (1005)		
4771		QM	NETWORK		RB7352	1-234-370-21	RES, NETWORK 22X4 (1005)		
4772		QM	NETWORK		RB7353	1-234-370-21	RES, NETWORK 22X4 (1005)		
4773		QM	NETWORK		RB7354	1-234-370-21	RES, NETWORK 22X4 (1005)		
4774		QM	NETWORK		RB7355	1-234-370-21	RES, NETWORK 22X4 (1005)		
4775		QM	NETWORK		RB7356	1-234-370-21	RES, NETWORK 22X4 (1005)		
4776		QM	NETWORK		RB7357	1-234-370-21	RES, NETWORK 22X4 (1005)		
4777		QM	NETWORK		RB7360	1-234-370-21	RES, NETWORK 22X4 (1005)		
4778		QM	NETWORK		RB7361	1-234-370-21	RES, NETWORK 22X4 (1005)		
4779		QM	NETWORK		RB7362	1-234-370-21	RES, NETWORK 22X4 (1005)		
4780		QM	NETWORK		RB7363	1-234-370-21	RES, NETWORK 22X4 (1005)		
4781		QM	NETWORK		RB7364	1-234-370-21	RES, NETWORK 22X4 (1005)		
4782		QM	NETWORK		RB7365	1-234-370-21	RES, NETWORK 22X4 (1005)		
4783		QM	NETWORK		RB7366	1-234-370-21	RES, NETWORK 22X4 (1005)		
4784		QM	NETWORK		RB7367	1-234-370-21	RES, NETWORK 22X4 (1005)		
4785		QM	NETWORK		RB7368	1-234-370-21	RES, NETWORK 22X4 (1005)		
4786		QM	NETWORK		RB7369	1-234-370-21	RES, NETWORK 22X4 (1005)		
4787		QM	CRYSTAL		X7300	1-579-922-11	VIBRATOR, CRYSTAL (CHIP TYPE)		
4788		H1	CAPACITOR		C9504	1-163-031-91	CERAMIC CHIP 0.01UF 50V		
4789		H1	CAPACITOR		C9506	1-163-038-91	CERAMIC CHIP 0.1UF 25V		
4790		H1	CAPACITOR		C9507	1-163-038-91	CERAMIC CHIP 0.1UF 25V		
4791		H1	CONNECTOR	*	CN9503	1-760-388-11	CONNECTOR PIN (SMD) 9P		
4792		H1	DIODE		D9520	6-500-487-01	DIODE SMLU12D16W		
4793		H1	DIODE		D9521	8-719-081-23	DIODE L-53SRD-H		
4794		H1	DIODE		D9525	8-719-081-23	DIODE L-53SRD-H		
4795		H1	TRANSISTOR		Q9511	8-729-216-22	TRANSISTOR 2SA1162-G		
4796		H1	TRANSISTOR		Q9512	1-801-806-11	TR DTC144EKA		
4797		H1	TRANSISTOR		Q9513	1-801-806-11	TR DTC144EKA		
4798		H1	TRANSISTOR		Q9514	1-801-806-11	TR DTC144EKA		
4799		H1	TRANSISTOR		Q9515	8-729-216-22	TRANSISTOR 2SA1162-G		
4800		H1	TRANSISTOR		Q9516	1-801-806-11	TR DTC144EKA		
4801		H1	TRANSISTOR		Q9517	1-801-806-11	TR DTC144EKA		
4802		H1	RESISTOR		R9517	1-216-295-91	SHORT CHIP 0		
4803		H1	RESISTOR		R9518	1-216-049-11	RES-CHIP 1K 5% 1/10W		
4804		H1	RESISTOR		R9519	1-216-073-91	METAL CHIP 10K 5% 1/10W		
4805		H1	RESISTOR		R9520	1-216-029-00	RES-CHIP 150 5% 1/10W		
4806		H1	RESISTOR		R9521	1-216-073-91	METAL CHIP 10K 5% 1/10W		
4807		H1	RESISTOR		R9522	1-216-049-11	RES-CHIP 1K 5% 1/10W		
4808		H1	RESISTOR		R9523	1-216-073-91	METAL CHIP 10K 5% 1/10W		
4809		H1	RESISTOR		R9524	1-216-033-00	RES-CHIP 220 5% 1/10W		
4810		H1	RESISTOR		R9525	1-216-041-00	RES-CHIP 470 5% 1/10W		
4811		H1	RESISTOR		R9526	1-216-073-91	METAL CHIP 10K 5% 1/10W		
4812		H1	RESISTOR		R9527	1-216-041-00	RES-CHIP 470 5% 1/10W		
4813		H1	RESISTOR		R9529	1-216-073-91	METAL CHIP 10K 5% 1/10W		
4814		H1	RESISTOR		R9530	1-216-073-91	METAL CHIP 10K 5% 1/10W		
4815		H1	RESISTOR		R9533	1-216-046-00	RES-CHIP 750 5% 1/10W		
4816		H1	SWITCH		S9501	1-554-419-00	SWITCH, PUSH (1 KEY)		
4817		H2	CAPACITOR		C9602	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V		
4818		H2	CAPACITOR		C9603	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		

No.	#	Board	Type	Δ/Δ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4819		H2	CAPACITOR		C9604	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V		
4820		H2	CAPACITOR		C9605	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4821		H2	CAPACITOR		C9606	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4822		H2	CAPACITOR		C9801	1-165-875-11	CERAMIC CHIP 10UF 10% 10V		
4823		H2	CAPACITOR		C9802	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V		
4824		H2	CAPACITOR		C9803	1-163-031-91	CERAMIC CHIP 0.01UF 50V		
4825		H2	CAPACITOR		C9804	1-163-031-91	CERAMIC CHIP 0.01UF 50V		
4826		H2	CONNECTOR	*	CN9601	1-764-007-11	PIN, CONNECTOR (SMD) 12P		
4827		H2	CONNECTOR	*	CN9802	1-764-097-11	PIN, CONNECTOR (PC BOARD) 12P		
4828		H2	CONNECTOR	*	CN9803	1-760-388-11	CONNECTOR PIN (SMD) 9P		
4829		H2	DIODE		D9601	8-719-977-28	DIODE DTZ10B		
4830		H2	DIODE		D9603	8-719-977-28	DIODE DTZ10B		
4831		H2	DIODE		D9604	8-719-977-28	DIODE DTZ10B		
4832		H2	DIODE		D9605	8-719-977-28	DIODE DTZ10B		
4833		H2	DIODE		D9606	8-719-977-28	DIODE DTZ10B		
4834		H2	DIODE		D9607	8-719-977-28	DIODE DTZ10B		
4835		H2	DIODE		D9801	6-500-763-01	DIODE E1L49-AW0C2-01		
4836		H2	DIODE		D9802	6-500-763-01	DIODE E1L49-AW0C2-01		
4837		H2	DIODE		D9803	6-500-763-01	DIODE E1L49-AW0C2-01		
4838		H2	DIODE		D9804	6-500-763-01	DIODE E1L49-AW0C2-01		
4839		H2	DIODE		D9805	6-500-763-01	DIODE E1L49-AW0C2-01		
4840		H2	DIODE		D9806	6-500-763-01	DIODE E1L49-AW0C2-01		
4841		H2	DIODE		D9807	8-719-024-77	DIODE HN1D03FU-TE85L		
4842		H2	DIODE		D9809	8-719-069-55	DIODE UDZSTE-175.6B		
4843		H2	DIODE		D9812	6-500-763-01	DIODE E1L49-AW0C2-01		
4844		H2	IC		IC9801	8-759-567-08	IC MB88141APF-ER		
4845		H2	JACK		J9601	1-694-980-31	TERMINAL BOARD (S TERMINAL+3P)		
4846		H2	TRANSISTOR		Q9801	1-801-806-11	TR DTC144EKA		
4847		H2	TRANSISTOR		Q9802	1-801-806-11	TR DTC144EKA		
4848		H2	TRANSISTOR		Q9803	1-801-806-11	TR DTC144EKA		
4849		H2	TRANSISTOR		Q9804	1-801-806-11	TR DTC144EKA		
4850		H2	TRANSISTOR		Q9805	1-801-806-11	TR DTC144EKA		
4851		H2	TRANSISTOR		Q9806	1-801-806-11	TR DTC144EKA		
4852		H2	TRANSISTOR		Q9807	1-801-806-11	TR DTC144EKA		
4853		H2	RESISTOR		R9601	1-216-029-00	RES-CHIP 150 5% 1/10W		
4854		H2	RESISTOR		R9602	1-216-029-00	RES-CHIP 150 5% 1/10W		
4855		H2	RESISTOR		R9603	1-216-029-00	RES-CHIP 150 5% 1/10W		
4856		H2	RESISTOR		R9604	1-216-105-91	RES-CHIP 220K 5% 1/10W		
4857		H2	RESISTOR		R9605	1-216-105-91	RES-CHIP 220K 5% 1/10W		
4858		H2	RESISTOR		R9606	1-216-029-00	RES-CHIP 150 5% 1/10W		
4859		H2	RESISTOR		R9607	1-216-029-00	RES-CHIP 150 5% 1/10W		
4860		H2	RESISTOR		R9608	1-216-029-00	RES-CHIP 150 5% 1/10W		
4861		H2	RESISTOR		R9802	1-216-025-11	RES-CHIP 100 5% 1/10W		
4862		H2	RESISTOR		R9803	1-216-025-11	RES-CHIP 100 5% 1/10W		
4863		H2	RESISTOR		R9804	1-216-025-11	RES-CHIP 100 5% 1/10W		
4864		H2	RESISTOR		R9805	1-216-295-91	SHORT CHIP 0		
4865		H2	RESISTOR		R9806	1-216-025-11	RES-CHIP 100 5% 1/10W		
4866		H2	RESISTOR		R9807	1-216-025-11	RES-CHIP 100 5% 1/10W		
4867		H2	RESISTOR		R9808	1-216-025-11	RES-CHIP 100 5% 1/10W		
4868		H2	RESISTOR		R9809	1-216-025-11	RES-CHIP 100 5% 1/10W		
4869		H2	RESISTOR		R9810	1-216-025-11	RES-CHIP 100 5% 1/10W		
4870		H2	RESISTOR		R9811	1-216-025-11	RES-CHIP 100 5% 1/10W		
4871		H2	RESISTOR		R9812	1-216-025-11	RES-CHIP 100 5% 1/10W		
4872		H2	RESISTOR		R9813	1-216-295-91	SHORT CHIP 0		
4873		H2	RESISTOR		R9816	1-216-295-91	SHORT CHIP 0		
4874		H3	CONNECTOR	*	CN9705	1-580-055-21	PIN, CONNECTOR (SMD) 2P		
4875		H3	RESISTOR		R9702	1-216-679-11	METAL CHIP 15K 0.5% 1/10W		
4876		H3	RESISTOR		R9704	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		
4877		H3	RESISTOR		R9706	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W		
4878		H3	RESISTOR		R9708	1-216-651-11	METAL CHIP 1K 0.5% 1/10W		
4879		H3	RESISTOR		R9710	1-216-647-11	METAL CHIP 680 0.5% 1/10W		
4880		H3	SWITCH		S9702	1-572-921-11	SWITCH, KEY BOARD		
4881		H3	SWITCH		S9704	1-572-921-11	SWITCH, KEY BOARD		
4882		H3	SWITCH		S9706	1-572-921-11	SWITCH, KEY BOARD		
4883		H3	SWITCH		S9708	1-572-921-11	SWITCH, KEY BOARD		
4884		H3	SWITCH		S9710	1-572-921-11	SWITCH, KEY BOARD		
4885		H3	SWITCH		S9712	1-572-921-11	SWITCH, KEY BOARD		
4886		H4	CONNECTOR	*	CN9704	1-580-055-21	PIN, CONNECTOR (SMD) 2P		
4887		H4	CONNECTOR		CN9707	1-580-056-21	PIN, CONNECTOR (SMD) 3P		
4888		H4	RESISTOR		R9703	1-216-667-11	METAL CHIP 4.7K 0.5% 1/10W		
4889		H4	RESISTOR		R9705	1-216-659-11	METAL CHIP 2.2K 0.5% 1/10W		
4890		H4	RESISTOR		R9707	1-216-651-11	METAL CHIP 1K 0.5% 1/10W		
4891		H4	RESISTOR		R9709	1-216-647-11	METAL CHIP 680 0.5% 1/10W		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4892		H4	RESISTOR		R9711	1-216-643-11	METAL CHIP 470 0.5% 1/10W		
4893		H4	RESISTOR		R9712	1-216-643-11	METAL CHIP 470 0.5% 1/10W		
4894		H4	SWITCH		S9701	1-572-921-11	SWITCH, KEY BOARD		
4895		H4	SWITCH		S9703	1-572-921-11	SWITCH, KEY BOARD		
4896		H4	SWITCH		S9705	1-572-921-11	SWITCH, KEY BOARD		
4897		H4	SWITCH		S9707	1-572-921-11	SWITCH, KEY BOARD		
4898		H4	SWITCH		S9709	1-572-921-11	SWITCH, KEY BOARD		
4899		H4	SWITCH		S9711	1-572-921-11	SWITCH, KEY BOARD		
4900		H4	SWITCH		S9713	1-572-921-11	SWITCH, KEY BOARD		
4901		QH	CAPACITOR		C7203	1-162-910-11	CERAMIC CHIP 5PF 0.25PF 50V		
4902		QH	CAPACITOR		C7204	1-162-911-11	CERAMIC CHIP 6PF 0.50PF 50V		
4903		QH	CAPACITOR		C7205	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4904		QH	CAPACITOR		C7206	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4905		QH	CAPACITOR		C7207	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4906		QH	CAPACITOR		C7208	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4907		QH	CAPACITOR		C7209	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4908		QH	CAPACITOR		C7210	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
4909		QH	CAPACITOR		C7211	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V		
4910		QH	CAPACITOR		C7212	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4911		QH	CAPACITOR		C7213	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4912		QH	CAPACITOR		C7215	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4913		QH	CAPACITOR		C7216	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4914		QH	CAPACITOR		C7217	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
4915		QH	CAPACITOR		C7218	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4916		QH	CAPACITOR		C7219	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4917		QH	CAPACITOR		C7220	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4918		QH	CAPACITOR		C7221	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4919		QH	CAPACITOR		C7224	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4920		QH	CONNECTOR	*	CN7201	1-784-010-11	CONNECTOR, USB (B)		
4921		QH	CONNECTOR		CN7202	1-695-915-11	TAB (CONTACT)		
4922		QH	CONNECTOR	*	CN7204	1-816-402-12	CONNECTOR, MEMORY STICK		
4923		QH	DIODE		D7201	8-719-800-76	DIODE 1SS226		
4924		QH	DIODE		D7202	8-719-083-58	DIODE UDZSTE-173.9B		
4925		QH	DIODE		D7210	6-500-182-01	DIODE L1503CB/ID		
4926		QH	DIODE		D7212	8-719-083-58	DIODE UDZSTE-173.9B		
4927		QH	FERRITE BEAD		FB7201	1-414-921-11	FERRITE 0UH		
4928		QH	FERRITE BEAD		FB7202	1-414-921-11	FERRITE 0UH		
4929		QH	FERRITE BEAD		FB7203	1-414-921-11	FERRITE 0UH		
4930		QH	IC		IC7201	6-703-076-01	IC XC6204B332MR		
4931		QH	IC		IC7202	6-704-548-01	IC 90C36LC1B		
4932		QH	IC		IC7203	6-704-067-01	IC M24128-BWMN6T(A)		
4933		QH	COIL		L7201	1-414-394-11	INDUCTOR 2.2UH		
4934		QH	TRANSISTOR		Q7201	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
4935		QH	TRANSISTOR		Q7202	8-729-422-27	TRANSISTOR 2SD601A-Q		
4936		QH	RESISTOR		R7201	1-216-864-11	SHORT CHIP 0		
4937		QH	RESISTOR		R7202	1-414-228-11	FERRITE 0UH		
4938		QH	RESISTOR		R7203	1-216-837-11	METAL CHIP 22K 5% 1/10W		
4939		QH	RESISTOR		R7204	1-216-809-11	METAL CHIP 100 5% 1/10W		
4940		QH	RESISTOR		R7206	1-216-857-11	METAL CHIP 1M 5% 1/10W		
4941		QH	RESISTOR		R7209	1-414-228-11	FERRITE 0UH		
4942		QH	RESISTOR		R7210	1-216-803-11	METAL CHIP 33 5% 1/10W		
4943		QH	RESISTOR		R7211	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4944		QH	RESISTOR		R7212	1-216-803-11	METAL CHIP 33 5% 1/10W		
4945		QH	RESISTOR		R7214	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
4946		QH	RESISTOR		R7215	1-414-228-11	FERRITE 0UH		
4947		QH	RESISTOR		R7216	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4948		QH	RESISTOR		R7217	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4949		QH	RESISTOR		R7218	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
4950		QH	RESISTOR		R7219	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W		
4951		QH	RESISTOR		R7221	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4952		QH	RESISTOR		R7222	1-216-811-11	METAL CHIP 150 5% 1/10W		
4953		QH	RESISTOR		R7223	1-216-809-11	METAL CHIP 100 5% 1/10W		
4954		QH	RESISTOR		R7224	1-216-809-11	METAL CHIP 100 5% 1/10W		
4955		QH	RESISTOR		R7225	1-216-809-11	METAL CHIP 100 5% 1/10W		
4956		QH	RESISTOR		R7226	1-216-864-11	SHORT CHIP 0		
4957		QH	RESISTOR		R7227	1-216-864-11	SHORT CHIP 0		
4958		QH	RESISTOR		R7228	1-216-864-11	SHORT CHIP 0		
4959		QH	RESISTOR		R7229	1-216-821-11	METAL CHIP 1K 5% 1/10W		
4960		QH	RESISTOR		R7231	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
4961		QH	CRYSTAL		X7201	1-760-965-21	VIBRATOR, CRYSTAL		
4962		UD	CAPACITOR		C7000	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4963		UD	CAPACITOR		C7001	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4964		UD	CAPACITOR		C7002	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
4965		UD	CAPACITOR		C7003	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4966		UD	CAPACITOR		C7004	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4967		UD	CAPACITOR		C7005	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4968		UD	CAPACITOR		C7006	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4969		UD	CAPACITOR		C7007	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4970		UD	CAPACITOR		C7008	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4971		UD	CAPACITOR		C7009	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4972		UD	CAPACITOR		C7010	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4973		UD	CAPACITOR		C7011	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
4974		UD	CAPACITOR		C7012	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4975		UD	CAPACITOR		C7013	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4976		UD	CAPACITOR		C7014	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4977		UD	CAPACITOR		C7016	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4978		UD	CAPACITOR		C7017	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
4979		UD	CAPACITOR		C7018	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
4980		UD	CAPACITOR		C7020	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
4981		UD	CAPACITOR		C7022	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4982		UD	CAPACITOR		C7023	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4983		UD	CAPACITOR		C7025	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4984		UD	CAPACITOR		C7026	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V		
4985		UD	CAPACITOR		C7027	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V		
4986		UD	CAPACITOR		C7028	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4987		UD	CAPACITOR		C7030	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4988		UD	CAPACITOR		C7031	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4989		UD	CAPACITOR		C7032	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4990		UD	CAPACITOR		C7033	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4991		UD	CAPACITOR		C7034	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4992		UD	CAPACITOR		C7035	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4993		UD	CAPACITOR		C7036	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4994		UD	CAPACITOR		C7037	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4995		UD	CAPACITOR		C7038	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4996		UD	CAPACITOR		C7039	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
4997		UD	CAPACITOR		C7040	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4998		UD	CAPACITOR		C7041	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
4999		UD	CAPACITOR		C7042	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5000		UD	CAPACITOR		C7043	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5001		UD	CAPACITOR		C7048	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5002		UD	CAPACITOR		C7050	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V		
5003		UD	CAPACITOR		C7051	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V		
5004		UD	CAPACITOR		C7052	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5005		UD	CAPACITOR		C7053	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5006		UD	CAPACITOR		C7054	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5007		UD	CAPACITOR		C7055	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5008		UD	CAPACITOR		C7056	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5009		UD	CAPACITOR		C7057	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5010		UD	CAPACITOR		C7058	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
5011		UD	CAPACITOR		C7059	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5012		UD	CAPACITOR		C7060	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5013		UD	CAPACITOR		C7061	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5014		UD	CAPACITOR		C7062	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5015		UD	CAPACITOR		C7063	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5016		UD	CAPACITOR		C7064	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5017		UD	CAPACITOR		C7065	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5018		UD	CAPACITOR		C7066	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5019		UD	CAPACITOR		C7067	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5020		UD	CAPACITOR		C7068	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5021		UD	CAPACITOR		C7069	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5022		UD	CAPACITOR		C7070	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
5023		UD	CAPACITOR		C7071	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
5024		UD	CAPACITOR		C7072	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V		
5025		UD	CAPACITOR		C7073	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5026		UD	CAPACITOR		C7074	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5027		UD	CAPACITOR		C7075	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
5028		UD	CAPACITOR		C7076	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5029		UD	CAPACITOR		C7079	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5030		UD	CAPACITOR		C7080	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5031		UD	CAPACITOR		C7081	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5032		UD	CAPACITOR		C7082	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5033		UD	CAPACITOR		C7083	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5034		UD	CAPACITOR		C7085	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5035		UD	CAPACITOR		C7086	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5036		UD	CAPACITOR		C7087	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5037		UD	CAPACITOR		C7088	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5038		UD	CONNECTOR		CN7001	1-816-228-11	CONNECTOR, DVI		
5039		UD	CONNECTOR	*	CN7002	1-695-208-21	PIN, CONNECTOR (PC BOARD) 7P		
5040		UD	CONNECTOR	*	CN7003	1-695-890-21	PIN, CONNECTOR (PC BOARD) 12P		
5041		UD	DIODE		D7000	8-719-069-55	DIODE UDZSTE-175.6B		
5042		UD	DIODE		D7001	8-719-069-55	DIODE UDZSTE-175.6B		
5043		UD	DIODE		D7002	8-719-069-55	DIODE UDZSTE-175.6B		
5044		UD	DIODE		D7003	8-719-069-55	DIODE UDZSTE-175.6B		
5045		UD	DIODE		D7004	8-719-069-55	DIODE UDZSTE-175.6B		
5046		UD	DIODE		D7005	8-719-069-55	DIODE UDZSTE-175.6B		
5047		UD	DIODE		D7006	8-719-914-43	DIODE DAN202K		
5048		UD	DIODE		D7007	8-719-977-28	DIODE DTZ10B		
5049		UD	DIODE		D7008	8-719-977-28	DIODE DTZ10B		
5050		UD	FERRITE BEAD		FB7000	1-414-760-21	FERRITE 0UH		
5051		UD	FERRITE BEAD		FB7001	1-414-760-21	FERRITE 0UH		
5052		UD	FERRITE BEAD		FB7002	1-414-760-21	FERRITE 0UH		
5053		UD	FERRITE BEAD		FB7003	1-414-760-21	FERRITE 0UH		
5054		UD	FERRITE BEAD		FB7004	1-414-760-21	FERRITE 0UH		
5055		UD	FERRITE BEAD		FB7005	1-414-760-21	FERRITE 0UH		
5056		UD	FERRITE BEAD		FB7006	1-469-836-21	FERRITE 0UH		
5057		UD	FERRITE BEAD		FB7007	1-469-836-21	FERRITE 0UH		
5058		UD	FERRITE BEAD		FB7008	1-469-836-21	FERRITE 0UH		
5059		UD	FILTER		FL7000	1-234-560-21	FILTER, LOW PASS		
5060		UD	FILTER		FL7001	1-234-559-21	FILTER, LOW PASS		
5061		UD	FILTER		FL7002	1-234-559-21	FILTER, LOW PASS		
5062		UD	FILTER		FL7003	1-400-087-21	FILTER, EMI REMOVAL (SMD)		
5063		UD	IC		IC7000	6-702-170-01	IC PACDN006S		
5064		UD	IC		IC7001	6-702-170-01	IC PACDN006S		
5065		UD	IC		IC7002	6-802-346-01	IC ST72631K4M1/NNLTR		
5066		UD	IC		IC7003	6-702-170-01	IC PACDN006S		
5067		UD	IC		IC7004	6-702-080-01	IC GM7030-H		
5068		UD	IC		IC7005	6-704-001-01	IC BR24L02F-WE2		
5069		UD	IC		IC7006	6-704-004-01	IC BR24L16F-WE2		
5070		UD	IC		IC7007	8-749-015-18	IC PQ07VZ012ZP		
5071		UD	IC		IC7008	8-749-015-18	IC PQ07VZ012ZP		
5072		UD	JACK		J7001	1-794-623-11	JACK, PIN 2P		
5073		UD	COIL		L7000	1-469-856-21	INDUCTOR 10UH		
5074		UD	COIL		L7001	1-412-058-11	INDUCTOR 10UH		
5075		UD	COIL		L7002	1-469-856-21	INDUCTOR 10UH		
5076		UD	RESISTOR		R7001	1-216-813-11	METAL CHIP 220 5% 1/10W		
5077		UD	RESISTOR		R7002	1-216-813-11	METAL CHIP 220 5% 1/10W		
5078		UD	RESISTOR		R7006	1-216-803-11	METAL CHIP 33 5% 1/10W		
5079		UD	RESISTOR		R7009	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5080		UD	RESISTOR		R7010	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5081		UD	RESISTOR		R7014	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5082		UD	RESISTOR		R7015	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5083		UD	RESISTOR		R7016	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5084		UD	RESISTOR		R7017	1-216-803-11	METAL CHIP 33 5% 1/10W		
5085		UD	RESISTOR		R7019	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5086		UD	RESISTOR		R7020	1-216-864-11	SHORT CHIP 0		
5087		UD	RESISTOR		R7022	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5088		UD	RESISTOR		R7023	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5089		UD	RESISTOR		R7024	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5090		UD	RESISTOR		R7025	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5091		UD	RESISTOR		R7026	1-216-864-11	SHORT CHIP 0		
5092		UD	RESISTOR		R7027	1-216-864-11	SHORT CHIP 0		
5093		UD	RESISTOR		R7028	1-216-864-11	SHORT CHIP 0		
5094		UD	RESISTOR		R7029	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5095		UD	RESISTOR		R7030	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5096		UD	RESISTOR		R7031	1-218-692-11	METAL CHIP 1K 0.5% 1/10W		
5097		UD	RESISTOR		R7032	1-414-760-21	FERRITE 0UH		
5098		UD	RESISTOR		R7033	1-414-760-21	FERRITE 0UH		
5099		UD	RESISTOR		R7034	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5100		UD	RESISTOR		R7035	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5101		UD	RESISTOR		R7036	1-216-805-11	METAL CHIP 47 5% 1/10W		
5102		UD	RESISTOR		R7037	1-216-805-11	METAL CHIP 47 5% 1/10W		
5103		UD	RESISTOR		R7038	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5104		UD	RESISTOR		R7039	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		
5105		UD	RESISTOR		R7040	1-216-806-11	METAL CHIP 56 5% 1/10W		
5106		UD	RESISTOR		R7041	1-216-806-11	METAL CHIP 56 5% 1/10W		
5107		UD	RESISTOR		R7042	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5108		UD	RESISTOR		R7043	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W		
5109		UD	RESISTOR		R7044	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5110		UD	RESISTOR		R7046	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5111		UD	RESISTOR		R7048	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5112		UD	RESISTOR		R7050	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5113		UD	RESISTOR		R7052	1-216-805-11	METAL CHIP 47 5% 1/10W		
5114		UD	RESISTOR		R7053	1-216-805-11	METAL CHIP 47 5% 1/10W		
5115		UD	RESISTOR		R7055	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5116		UD	RESISTOR		R7056	1-216-805-11	METAL CHIP 47 5% 1/10W		
5117		UD	RESISTOR		R7057	1-216-805-11	METAL CHIP 47 5% 1/10W		
5118		UD	RESISTOR		R7058	1-216-805-11	METAL CHIP 47 5% 1/10W		
5119		UD	RESISTOR		R7059	1-216-864-11	SHORT CHIP 0		
5120		UD	RESISTOR		R7061	1-216-864-11	SHORT CHIP 0		
5121		UD	RESISTOR		R7064	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5122		UD	RESISTOR		R7065	1-216-864-11	SHORT CHIP 0		
5123		UD	RESISTOR		R7066	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5124		UD	RESISTOR		R7067	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5125		UD	RESISTOR		R7068	1-216-864-11	SHORT CHIP 0		
5126		UD	RESISTOR		R7070	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5127		UD	RESISTOR		R7071	1-414-760-21	FERRITE 0UH		
5128		UD	RESISTOR		R7072	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
5129		UD	RESISTOR		R7073	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
5130		UD	RESISTOR		R7074	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
5131		UD	RESISTOR		R7075	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
5132		UD	RESISTOR		R7076	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
5133		UD	RESISTOR		R7077	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
5134		UD	RESISTOR		R7079	1-216-864-11	SHORT CHIP 0		
5135		UD	RESISTOR		R7081	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
5136		UD	RESISTOR		R7083	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
5137		UD	RESISTOR		R7084	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5138		UD	RESISTOR		R7085	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5139		UD	RESISTOR		R7086	1-218-676-11	METAL CHIP 220 0.5% 1/10W		
5140		UD	RESISTOR		R7087	1-218-680-11	METAL CHIP 330 0.5% 1/10W		
5141		UD	RESISTOR		R7088	1-218-680-11	METAL CHIP 330 0.5% 1/10W		
5142		UD	RESISTOR		R7089	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5143		UD	RESISTOR		R7090	1-218-852-11	METAL CHIP 1.6K 0.5% 1/10W		
5144		UD	RESISTOR		R7091	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W		
5145		UD	RESISTOR		R7092	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		
5146		UD	RESISTOR		R7093	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W		
5147		UD	RESISTOR		R7094	1-216-849-11	METAL CHIP 220K 5% 1/10W		
5148		UD	RESISTOR		R7095	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5149		UD	RESISTOR		R7096	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5150		UD	RESISTOR		R7097	1-216-849-11	METAL CHIP 220K 5% 1/10W		
5151		UD	CRYSTAL		X7000	1-795-568-21	VIBRATOR, CRYSTAL		
5152		UD	CRYSTAL		X7001	1-795-567-21	VIBRATOR, CRYSTAL		
5153		M	CAPACITOR		C4000	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5154		M	CAPACITOR		C4001	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5155		M	CAPACITOR		C4003	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
5156		M	CAPACITOR		C4004	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
5157		M	CAPACITOR		C4005	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5158		M	CAPACITOR		C4006	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5159		M	CAPACITOR		C4007	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5160		M	CAPACITOR		C4008	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5161		M	CAPACITOR		C4009	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5162		M	CAPACITOR		C4010	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5163		M	CAPACITOR		C4011	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5164		M	CAPACITOR		C4012	1-128-416-11	ELECT CHIP 100UF 20.00% 16V		
5165		M	CAPACITOR		C4013	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5166		M	CAPACITOR		C4014	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5167		M	CAPACITOR		C4015	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5168		M	CAPACITOR		C4016	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5169		M	CAPACITOR		C4017	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5170		M	CAPACITOR		C4018	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5171		M	CAPACITOR		C4019	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
5172		M	CAPACITOR		C4020	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
5173		M	CAPACITOR		C4021	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5174		M	CAPACITOR		C4022	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5175		M	CAPACITOR		C4023	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5176		M	CAPACITOR		C4024	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
5177		M	CAPACITOR		C4025	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5178		M	CAPACITOR		C4026	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5179		M	CAPACITOR		C4027	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5180		M	CAPACITOR		C4028	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5181		M	CAPACITOR		C4029	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
5182		M	CAPACITOR		C4031	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5183		M	CAPACITOR		C4032	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5184		M	CAPACITOR		C4033	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5185		M	CAPACITOR		C4034	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5186		M	CAPACITOR		C4035	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5187		M	CAPACITOR		C4036	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5188		M	CAPACITOR		C4037	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5189		M	CAPACITOR		C4038	1-164-360-11	CERAMIC CHIP 0.1UF 16V		
5190		M	CAPACITOR		C4039	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5191		M	CAPACITOR		C4040	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5192		M	CAPACITOR		C4041	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5193		M	CAPACITOR		C4042	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5194		M	CAPACITOR		C4043	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5195		M	CAPACITOR		C4044	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5196		M	CAPACITOR		C4045	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5197		M	CAPACITOR		C4046	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5198		M	CAPACITOR		C4047	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5199		M	CAPACITOR		C4048	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5200		M	CAPACITOR		C4049	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5201		M	CAPACITOR		C4050	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5202		M	CAPACITOR		C4051	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5203		M	CAPACITOR		C4052	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5204		M	CAPACITOR		C4053	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5205		M	CAPACITOR		C4054	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5206		M	CAPACITOR		C4055	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5207		M	CAPACITOR		C4056	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5208		M	CAPACITOR		C4057	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5209		M	CAPACITOR		C4058	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5210		M	CAPACITOR		C4059	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5211		M	CAPACITOR		C4060	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5212		M	CAPACITOR		C4061	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5213		M	CAPACITOR		C4062	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5214		M	CAPACITOR		C4063	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5215		M	CAPACITOR		C4064	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5216		M	CAPACITOR		C4065	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
5217		M	CAPACITOR		C4100	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5218		M	CAPACITOR		C4101	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5219		M	CAPACITOR		C4102	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5220		M	CAPACITOR		C4103	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5221		M	CAPACITOR		C4104	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5222		M	CAPACITOR		C4105	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5223		M	CAPACITOR		C4106	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5224		M	CAPACITOR		C4108	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5225		M	CAPACITOR		C4109	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5226		M	CAPACITOR		C4110	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5227		M	CAPACITOR		C4111	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5228		M	CAPACITOR		C4200	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5229		M	CAPACITOR		C4201	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5230		M	CAPACITOR		C4202	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5231		M	CAPACITOR		C4203	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V		
5232		M	CAPACITOR		C4204	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5233		M	CAPACITOR		C4205	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5234		M	CAPACITOR		C4206	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5235		M	CAPACITOR		C4207	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5236		M	CAPACITOR		C4208	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5237		M	CAPACITOR		C4209	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5238		M	CAPACITOR		C4210	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5239		M	CAPACITOR		C4211	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5240		M	CAPACITOR		C4212	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5241		M	CAPACITOR		C4213	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5242		M	CAPACITOR		C4214	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5243		M	CAPACITOR		C4215	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5244		M	CAPACITOR		C4216	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V		
5245		M	CAPACITOR		C4217	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5246		M	CAPACITOR		C4218	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5247		M	CAPACITOR		C4219	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5248		M	CAPACITOR		C4220	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5249		M	CAPACITOR		C4221	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5250		M	CAPACITOR		C4222	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5251		M	CAPACITOR		C4223	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5252		M	CAPACITOR		C4224	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5253		M	CAPACITOR		C4225	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5254		M	CAPACITOR		C4226	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5255		M	CAPACITOR		C4227	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5256		M	CAPACITOR		C4228	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V		

No.	#	Board	Type	Δ/\ast	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5257		M	CAPACITOR		C4229	1-162-920-11	CERAMIC CHIP 27PF 5.00% 50V		
5258		M	CAPACITOR		C4230	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5259		M	CAPACITOR		C4231	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5260		M	CAPACITOR		C4232	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5261		M	CAPACITOR		C4234	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V		
5262		M	CAPACITOR		C4235	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5263		M	CAPACITOR		C4236	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5264		M	CAPACITOR		C4237	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5265		M	CAPACITOR		C4238	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5266		M	CAPACITOR		C4239	1-164-392-11	CERAMIC CHIP 390PF 5.00% 50V		
5267		M	CAPACITOR		C4302	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5268		M	CAPACITOR		C4304	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5269		M	CAPACITOR		C4305	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5270		M	CAPACITOR		C4306	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V		
5271		M	CAPACITOR		C4307	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5272		M	CAPACITOR		C4308	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5273		M	CAPACITOR		C4309	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5274		M	CAPACITOR		C4312	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5275		M	CAPACITOR		C4313	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5276		M	CAPACITOR		C4314	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5277		M	CAPACITOR		C4315	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5278		M	CAPACITOR		C4316	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5279		M	CAPACITOR		C4400	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5280		M	CAPACITOR		C4401	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5281		M	CAPACITOR		C4402	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5282		M	CAPACITOR		C4403	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5283		M	CAPACITOR		C4404	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5284		M	CAPACITOR		C4406	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5285		M	CAPACITOR		C4407	1-104-607-11	ELECT CHIP 47UF 20.00% 16V		
5286		M	CAPACITOR		C4409	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5287		M	CAPACITOR		C4410	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5288		M	CAPACITOR		C4411	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5289		M	CAPACITOR		C4412	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
5290		M	CAPACITOR		C4414	1-126-204-11	ELECT CHIP 47UF 20.00% 16V		
5291		M	CAPACITOR		C4415	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5292		M	CAPACITOR		C4416	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
5293		M	CAPACITOR		C4417	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
5294		M	CAPACITOR		C4418	1-124-779-00	ELECT CHIP 10UF 20.00% 16V		
5295		M	CAPACITOR		C4419	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5296		M	CAPACITOR		C4420	1-126-395-11	ELECT CHIP 22UF 20.00% 16V		
5297		M	CAPACITOR		C4421	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5298		M	CAPACITOR		C4422	1-162-967-11	CERAMIC CHIP 0.0033UF 10.00% 50V		
5299		M	CAPACITOR		C4423	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
5300		M	CAPACITOR		C4426	1-162-912-11	CERAMIC CHIP 7PF 0.50PF 50V		
5301		M	CAPACITOR		C4427	1-162-912-11	CERAMIC CHIP 7PF 0.50PF 50V		
5302		M	CAPACITOR		C4428	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V		
5303		M	CAPACITOR		C4430	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5304		M	CAPACITOR		C4432	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5305		M	CAPACITOR		C4433	1-162-974-11	CERAMIC CHIP 0.01UF 50V		
5306		M	CAPACITOR		C4434	1-115-156-11	CERAMIC CHIP 1UF 10V		
5307		M	CAPACITOR		C4435	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V		
5308		M	CAPACITOR		C4442	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
5309		M	CAPACITOR		C4445	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V		
5310		M	CAPACITOR		C4501	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V		
5311		M	CAPACITOR		C4502	1-117-681-11	ELECT CHIP 100UF 20.00% 16V		
5312		M	CAPACITOR		C4601	1-164-156-11	CERAMIC CHIP 0.1UF 25V		
5313		M	CAPACITOR		C4602	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V		
5314		M	CONNECTOR		CN4100	1-817-120-11	CONNECTOR, DVI-D		
5315		M	CONNECTOR		CN4300	1-817-112-11	HALF PITCH CONNECTOR (26PIN)		
5316		M	CONNECTOR		CN4301	1-784-210-21	CONNECTOR 7P		
5317		M	CONNECTOR	*	CN4401	1-695-210-21	PIN, CONNECTOR (PC BOARD) 15P		
5318		M	CONNECTOR		CN4403	1-766-382-21	PIN, CONNECTOR (1.5MM)(SMD)10P		
5319		M	CONNECTOR		CN4406	1-816-466-21	PIN, CONNECTOR 10P		
5320		M	CONNECTOR		CN4501	1-580-057-11	PIN, CONNECTOR (SMD) 4P		
5321		M	DIODE		D4000	8-719-050-37	DIODE M1MA152WA-T1		
5322		M	DIODE		D4001	8-719-050-38	DIODE M1MA152WK-T1		
5323		M	DIODE		D4100	8-719-024-77	DIODE HN1D03FU-TE85L		
5324		M	DIODE		D4101	8-719-024-77	DIODE HN1D03FU-TE85L		
5325		M	DIODE		D4102	8-719-024-77	DIODE HN1D03FU-TE85L		
5326		M	DIODE		D4103	8-719-024-77	DIODE HN1D03FU-TE85L		
5327		M	DIODE		D4104	8-719-024-77	DIODE HN1D03FU-TE85L		
5328		M	DIODE		D4105	8-719-941-86	DIODE DAN202U		
5329		M	DIODE		D4106	8-719-069-55	DIODE UDZSTE-175.6B		

No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5330		M	DIODE		D4107	8-719-069-55	DIODE UDZSTE-175.6B		
5331		M	DIODE		D4200	8-719-404-50	DIODE MA111-TX		
5332		M	DIODE		D4300	8-719-069-55	DIODE UDZSTE-175.6B		
5333		M	DIODE		D4301	8-719-069-55	DIODE UDZSTE-175.6B		
5334		M	DIODE		D4304	8-719-069-55	DIODE UDZSTE-175.6B		
5335		M	DIODE		D4306	8-719-024-77	DIODE HN1D03FU-TE85L		
5336		M	DIODE		D4307	8-719-024-77	DIODE HN1D03FU-TE85L		
5337		M	DIODE		D4308	8-719-024-77	DIODE HN1D03FU-TE85L		
5338		M	DIODE		D4309	8-719-024-77	DIODE HN1D03FU-TE85L		
5339		M	DIODE		D4312	8-719-404-50	DIODE MA111-TX		
5340		M	DIODE		D4313	8-719-941-86	DIODE DAN202U		
5341		M	DIODE		D4314	8-719-404-50	DIODE MA111-TX		
5342		M	DIODE		D4316	8-719-069-55	DIODE UDZSTE-175.6B		
5343		M	DIODE		D4319	8-719-069-55	DIODE UDZSTE-175.6B		
5344		M	DIODE		D4320	8-719-069-55	DIODE UDZSTE-175.6B		
5345		M	DIODE		D4400	8-719-914-43	DIODE DAN202K		
5346		M	DIODE		D4401	8-719-914-44	DIODE DAP202K		
5347		M	DIODE		D4404	8-719-914-43	DIODE DAN202K		
5348		M	DIODE		D4405	8-719-914-44	DIODE DAP202K		
5349		M	DIODE		D4406	8-719-404-50	DIODE MA111-TX		
5350		M	DIODE		D4407	8-719-914-43	DIODE DAN202K		
5351		M	DIODE		D4410	8-719-404-50	DIODE MA111-TX		
5352		M	DIODE		D4411	8-719-404-50	DIODE MA111-TX		
5353		M	DIODE		D4412	8-719-404-50	DIODE MA111-TX		
5354		M	DIODE		D4413	8-719-914-43	DIODE DAN202K		
5355		M	DIODE		D4502	8-719-083-57	DIODE UDZSTE-173.6B		
5356		M	DIODE		D4503	8-719-083-57	DIODE UDZSTE-173.6B		
5357		M	FERRITE BEAD		FB4000	1-414-229-11	FERRITE 0UH		
5358		M	FERRITE BEAD		FB4100	1-414-445-11	FERRITE 0UH		
5359		M	FERRITE BEAD		FB4101	1-414-445-11	FERRITE 0UH		
5360		M	FERRITE BEAD		FB4102	1-414-445-11	FERRITE 0UH		
5361		M	FERRITE BEAD		FB4103	1-414-229-11	FERRITE 0UH		
5362		M	FERRITE BEAD		FB4104	1-414-229-11	FERRITE 0UH		
5363		M	FERRITE BEAD		FB4105	1-414-229-11	FERRITE 0UH		
5364		M	FERRITE BEAD		FB4106	1-414-229-11	FERRITE 0UH		
5365		M	FERRITE BEAD		FB4107	1-414-229-11	FERRITE 0UH		
5366		M	FERRITE BEAD		FB4108	1-414-229-11	FERRITE 0UH		
5367		M	FERRITE BEAD		FB4200	1-414-598-11	FERRITE 0UH		
5368		M	FERRITE BEAD		FB4201	1-414-598-11	FERRITE 0UH		
5369		M	FERRITE BEAD		FB4202	1-414-598-11	FERRITE 0UH		
5370		M	FERRITE BEAD		FB4203	1-414-598-11	FERRITE 0UH		
5371		M	FERRITE BEAD		FB4204	1-414-598-11	FERRITE 0UH		
5372		M	FERRITE BEAD		FB4205	1-414-598-11	FERRITE 0UH		
5373		M	FERRITE BEAD		FB4206	1-414-598-11	FERRITE 0UH		
5374		M	FERRITE BEAD		FB4207	1-414-598-11	FERRITE 0UH		
5375		M	FERRITE BEAD		FB4208	1-216-864-11	SHORT CHIP 0		
5376		M	FERRITE BEAD		FB4209	1-216-864-11	SHORT CHIP 0		
5377		M	FERRITE BEAD		FB4210	1-216-864-11	SHORT CHIP 0		
5378		M	FERRITE BEAD		FB4211	1-414-229-11	FERRITE 0UH		
5379		M	FERRITE BEAD		FB4212	1-414-229-11	FERRITE 0UH		
5380		M	FERRITE BEAD		FB4301	1-414-229-11	FERRITE 0UH		
5381		M	FERRITE BEAD		FB4302	1-414-229-11	FERRITE 0UH		
5382		M	FERRITE BEAD		FB4303	1-414-229-11	FERRITE 0UH		
5383		M	FERRITE BEAD		FB4401	1-414-228-11	FERRITE 0UH		
5384		M	FERRITE BEAD		FB4402	1-414-228-11	FERRITE 0UH		
5385		M	FERRITE BEAD		FB4403	1-414-228-11	FERRITE 0UH		
5386		M	FERRITE BEAD		FB4404	1-414-228-11	FERRITE 0UH		
5387		M	FERRITE BEAD		FB4405	1-414-228-11	FERRITE 0UH		
5388		M	FERRITE BEAD		FB4406	1-414-228-11	FERRITE 0UH		
5389		M	FERRITE BEAD		FB4407	1-414-228-11	FERRITE 0UH		
5390		M	FERRITE BEAD		FB4408	1-414-228-11	FERRITE 0UH		
5391		M	FERRITE BEAD		FB4410	1-414-228-11	FERRITE 0UH		
5392		M	FERRITE BEAD		FB4411	1-414-228-11	FERRITE 0UH		
5393		M	FERRITE BEAD		FB4412	1-414-234-22	FERRITE 0UH		
5394		M	FERRITE BEAD		FB4413	1-414-228-11	FERRITE 0UH		
5395		M	FERRITE BEAD		FB4414	1-414-228-11	FERRITE 0UH		
5396		M	FERRITE BEAD		FB4418	1-414-228-11	FERRITE 0UH		
5397		M	FERRITE BEAD		FB4419	1-414-228-11	FERRITE 0UH		
5398		M	FERRITE BEAD		FB4420	1-414-233-22	FERRITE 0UH		
5399		M	FERRITE BEAD		FB4421	1-414-228-11	FERRITE 0UH		
5400		M	FERRITE BEAD		FB4422	1-414-228-11	FERRITE 0UH		
5401		M	FERRITE BEAD		FB4423	1-414-228-11	FERRITE 0UH		
5402		M	FERRITE BEAD		FB4424	1-414-228-11	FERRITE 0UH		

No.	#	Board	Type		Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5403		M	FERRITE BEAD		FB4425	1-414-228-11	FERRITE 0UH		
5404		M	FERRITE BEAD		FB4426	1-414-228-11	FERRITE 0UH		
5405		M	FERRITE BEAD		FB4427	1-414-228-11	FERRITE 0UH		
5406		M	FERRITE BEAD		FB4428	1-414-228-11	FERRITE 0UH		
5407		M	FERRITE BEAD		FB4429	1-414-228-11	FERRITE 0UH		
5408		M	FERRITE BEAD		FB4430	1-414-228-11	FERRITE 0UH		
5409		M	FERRITE BEAD		FB4431	1-414-228-11	FERRITE 0UH		
5410		M	FERRITE BEAD		FB4432	1-414-228-11	FERRITE 0UH		
5411		M	FERRITE BEAD		FB4433	1-414-228-11	FERRITE 0UH		
5412		M	FERRITE BEAD		FB4434	1-414-228-11	FERRITE 0UH		
5413		M	FERRITE BEAD		FB4435	1-414-228-11	FERRITE 0UH		
5414		M	FERRITE BEAD		FB4436	1-414-228-11	FERRITE 0UH		
5415		M	FERRITE BEAD		FB4437	1-414-228-11	FERRITE 0UH		
5416		M	FERRITE BEAD		FB4438	1-414-228-11	FERRITE 0UH		
5417		M	FERRITE BEAD		FB4439	1-414-228-11	FERRITE 0UH		
5418		M	FERRITE BEAD		FB4441	1-414-228-11	FERRITE 0UH		
5419		M	FERRITE BEAD		FB4443	1-414-228-11	FERRITE 0UH		
5420		M	FERRITE BEAD		FB4445	1-414-228-11	FERRITE 0UH		
5421		M	FERRITE BEAD		FB4446	1-414-228-11	FERRITE 0UH		
5422		M	FERRITE BEAD		FB4447	1-414-228-11	FERRITE 0UH		
5423		M	FERRITE BEAD		FB4448	1-414-228-11	FERRITE 0UH		
5424		M	FERRITE BEAD		FB4449	1-414-228-11	FERRITE 0UH		
5425		M	FERRITE BEAD		FB4450	1-414-228-11	FERRITE 0UH		
5426		M	FERRITE BEAD		FB4451	1-414-228-11	FERRITE 0UH		
5427		M	FERRITE BEAD		FB4453	1-414-228-11	FERRITE 0UH		
5428		M	FERRITE BEAD		FB4456	1-414-228-11	FERRITE 0UH		
5429		M	FERRITE BEAD		FB4457	1-414-228-11	FERRITE 0UH		
5430		M	FERRITE BEAD		FB4458	1-414-228-11	FERRITE 0UH		
5431		M	FERRITE BEAD		FB4460	1-414-228-11	FERRITE 0UH		
5432		M	FERRITE BEAD		FB4461	1-414-228-11	FERRITE 0UH		
5433		M	FERRITE BEAD		FB4462	1-414-228-11	FERRITE 0UH		
5434		M	FERRITE BEAD		FB4463	1-414-228-11	FERRITE 0UH		
5435		M	FERRITE BEAD		FB4464	1-414-228-11	FERRITE 0UH		
5436		M	FERRITE BEAD		FB4501	1-469-324-21	FERRITE 0UH		
5437		M	FILTER		FL4001	1-400-087-21	FILTER, EMI REMOVAL (SMD)		
5438		M	FILTER		FL4200	1-234-177-21	FERRITE 0UH		
5439		M	FILTER		FL4201	1-234-177-21	FERRITE 0UH		
5440		M	FILTER		FL4301	1-400-087-21	FILTER, EMI REMOVAL (SMD)		
5441		M	IC		IC4000	6-701-870-01	IC THC63LVDF84B-T		
5442		M	IC		IC4001	6-702-982-01	IC TC7SA00FU(TE85R)		
5443		M	IC		IC4002	8-759-712-65	IC PQ070XZ01ZP		
5444		M	IC		IC4003	8-759-712-65	IC PQ070XZ01ZP		
5445		M	IC		IC4004	6-703-365-01	IC PST9220NL		
5446		M	IC		IC4005	6-702-684-01	IC PST9225NL		
5447		M	IC		IC4006	6-702-973-01	IC CXD9690Q		
5448		M	IC		IC4007	8-759-712-65	IC PQ070XZ01ZP		
5449		M	IC		IC4100	6-703-364-01	IC TFP510PAP		
5450		M	IC		IC4200	8-759-641-26	IC NJM2391DL1-33(TE1)		
5451		M	IC		IC4201	8-759-100-96	IC UPC4558G2		
5452		M	IC		IC4202	8-759-579-68	IC AK4524		
5453		M	IC		IC4203	6-702-979-01	IC AK4114VQ-L		
5454		M	IC		IC4204	6-704-208-01	IC S-80845CNUA-B86T2G		
5455		M	IC		IC4300	8-759-688-12	IC TC74VHCT125AFT(EL)		
5456		M	IC		IC4301	6-700-150-01	IC M24C04-WMN6T(A)		
5457		M	IC		IC4302	8-759-675-46	IC SN65LVDS1050PWR		
5458		M	IC		IC4303	6-700-596-01	IC TC74LVX4053FT(EL)		
5459		M	IC		IC4304	6-700-596-01	IC TC74LVX4053FT(EL)		
5460		M	IC		IC4305	8-759-598-39	IC TC75W58FK(TE85R)		
5461		M	IC		IC4306	8-759-570-08	IC TC7SET32FU(TE85R)		
5462		M	IC		IC4307	8-759-058-54	IC TC7S00FU(TE85R)		
5463		M	IC		IC4400	6-702-983-01	IC TC74LCX273FT(EL)		
5464		M	IC		IC4401	8-759-683-99	IC BA8274F-E2		
5465		M	IC		IC4402	6-700-596-01	IC TC74LVX4053FT(EL)		
5466		M	IC		IC4404	8-759-592-43	IC TC7SZ02FU(TE85R)		
5467		M	IC		IC4405	8-759-475-39	IC TC74LCX74FT(EL)		
5468		M	IC		IC4406	8-759-596-29	IC SN74LV4066APWR		
5469		M	IC		IC4407	6-801-402-01	IC BD4729GTR		
5470		M	IC		IC4408	6-704-067-01	IC M24128-BWMN6T(A)		
5471		M	IC		IC4409	8-759-641-26	IC NJM2391DL1-33(TE1)		
5472		M	IC		IC4410	6-803-994-01	IC M306V7MH-112FP		
5473		M	IC		IC4411	6-703-224-01	IC S-80828CNNB-B8NT2G		
5474		M	IC		IC4601	8-759-082-61	IC TC4W53FU		
5475		M	COIL		L4000	1-412-029-11	INDUCTOR 10UH		


No.	#	Board	Type	△/*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5476		M	COIL		L4001	1-412-029-11	INDUCTOR 10UH		
5477		M	COIL		L4002	1-412-029-11	INDUCTOR 10UH		
5478		M	COIL		L4003	1-412-030-11	INDUCTOR 22UH		
5479		M	COIL		L4004	1-412-030-11	INDUCTOR 22UH		
5480		M	COIL		L4005	1-412-029-11	INDUCTOR 10UH		
5481		M	COIL		L4006	1-412-029-11	INDUCTOR 10UH		
5482		M	COIL		L4007	1-412-029-11	INDUCTOR 10UH		
5483		M	COIL		L4008	1-412-029-11	INDUCTOR 10UH		
5484		M	COIL		L4009	1-412-029-11	INDUCTOR 10UH		
5485		M	COIL		L4010	1-412-029-11	INDUCTOR 10UH		
5486		M	COIL		L4011	1-412-029-11	INDUCTOR 10UH		
5487		M	COIL		L4012	1-412-029-11	INDUCTOR 10UH		
5488		M	COIL		L4200	1-412-029-11	INDUCTOR 10UH		
5489		M	COIL		L4201	1-412-029-11	INDUCTOR 10UH		
5490		M	COIL		L4202	1-412-029-11	INDUCTOR 10UH		
5491		M	COIL		L4300	1-419-370-21	INDUCTOR 0UH		
5492		M	COIL		L4301	1-419-370-21	INDUCTOR 0UH		
5493		M	COIL		L4302	1-419-370-21	INDUCTOR 0UH		
5494		M	COIL		L4303	1-419-370-21	INDUCTOR 0UH		
5495		M	COIL		L4400	1-412-026-11	INDUCTOR 1UH		
5496		M	COIL		L4401	1-412-029-11	INDUCTOR 10UH		
5497		M	COIL		L4402	1-412-029-11	INDUCTOR 10UH		
5498		M	COIL		L4501	1-416-510-21	INDUCTOR 100UH		
5499		M	TRANSISTOR		Q4000	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
5500		M	TRANSISTOR		Q4001	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		
5501		M	TRANSISTOR		Q4100	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
5502		M	TRANSISTOR		Q4101	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
5503		M	TRANSISTOR		Q4102	8-729-928-90	TRANSISTOR DTC114EE		
5504		M	TRANSISTOR		Q4103	8-729-928-90	TRANSISTOR DTC114EE		
5505		M	TRANSISTOR		Q4104	8-729-928-90	TRANSISTOR DTC114EE		
5506		M	TRANSISTOR		Q4105	6-550-014-01	TRANSISTOR SSM6N15FU(TE85R)		
5507		M	TRANSISTOR		Q4300	8-729-900-53	TRANSISTOR DTC114EK		
5508		M	TRANSISTOR		Q4301	8-729-900-53	TRANSISTOR DTC114EK		
5509		M	TRANSISTOR		Q4303	8-729-900-53	TRANSISTOR DTC114EK		
5510		M	TRANSISTOR		Q4400	8-729-422-27	TRANSISTOR 2SD601A-Q		
5511		M	TRANSISTOR		Q4402	8-729-422-27	TRANSISTOR 2SD601A-Q		
5512		M	TRANSISTOR		Q4404	8-729-422-27	TRANSISTOR 2SD601A-Q		
5513		M	TRANSISTOR		Q4405	8-729-422-27	TRANSISTOR 2SD601A-Q		
5514		M	TRANSISTOR		Q4406	8-729-422-27	TRANSISTOR 2SD601A-Q		
5515		M	TRANSISTOR		Q4407	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
5516		M	TRANSISTOR		Q4408	8-729-422-27	TRANSISTOR 2SD601A-Q		
5517		M	TRANSISTOR		Q4409	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
5518		M	TRANSISTOR		Q4411	8-729-422-27	TRANSISTOR 2SD601A-Q		
5519		M	TRANSISTOR		Q4413	8-729-901-47	TRANSISTOR DTA143EK		
5520		M	TRANSISTOR		Q4414	8-729-422-27	TRANSISTOR 2SD601A-Q		
5521		M	TRANSISTOR		Q4415	8-729-422-27	TRANSISTOR 2SD601A-Q		
5522		M	TRANSISTOR		Q4417	8-729-422-27	TRANSISTOR 2SD601A-Q		
5523		M	TRANSISTOR		Q4419	8-729-422-27	TRANSISTOR 2SD601A-Q		
5524		M	TRANSISTOR		Q4420	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
5525		M	TRANSISTOR		Q4421	8-729-422-27	TRANSISTOR 2SD601A-Q		
5526		M	TRANSISTOR		Q4424	8-729-422-27	TRANSISTOR 2SD601A-Q		
5527		M	TRANSISTOR		Q4425	8-729-422-27	TRANSISTOR 2SD601A-Q		
5528		M	TRANSISTOR		Q4426	8-729-027-23	TRANSISTOR DTA114EKA-T146		
5529		M	TRANSISTOR		Q4427	8-729-422-27	TRANSISTOR 2SD601A-Q		
5530		M	TRANSISTOR		Q4428	8-729-422-27	TRANSISTOR 2SD601A-Q		
5531		M	TRANSISTOR		Q4429	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX		
5532		M	TRANSISTOR		Q4501	8-729-422-29	TRANSISTOR 2SD601A-S		
5533		M	TRANSISTOR		Q4502	8-729-422-29	TRANSISTOR 2SD601A-S		
5534		M	RESISTOR		R4000	1-216-809-11	METAL CHIP 100 5% 1/10W		
5535		M	RESISTOR		R4001	1-216-809-11	METAL CHIP 100 5% 1/10W		
5536		M	RESISTOR		R4002	1-216-809-11	METAL CHIP 100 5% 1/10W		
5537		M	RESISTOR		R4003	1-216-809-11	METAL CHIP 100 5% 1/10W		
5538		M	RESISTOR		R4004	1-216-809-11	METAL CHIP 100 5% 1/10W		
5539		M	RESISTOR		R4005	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5540		M	RESISTOR		R4007	1-216-864-11	SHORT CHIP 0		
5541		M	RESISTOR		R4008	1-216-864-11	SHORT CHIP 0		
5542		M	RESISTOR		R4009	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5543		M	RESISTOR		R4010	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5544		M	RESISTOR		R4011	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5545		M	RESISTOR		R4012	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5546		M	RESISTOR		R4013	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5547		M	RESISTOR		R4014	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5548		M	RESISTOR		R4016	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		

No.	#	Board	Type	Δ/μ *	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5549		M	RESISTOR		R4019	1-216-809-11	METAL CHIP 100 5% 1/10W		
5550		M	RESISTOR		R4020	1-216-809-11	METAL CHIP 100 5% 1/10W		
5551		M	RESISTOR		R4021	1-216-805-11	METAL CHIP 47 5% 1/10W		
5552		M	RESISTOR		R4022	1-216-801-11	METAL CHIP 22 5% 1/10W		
5553		M	RESISTOR		R4023	1-216-801-11	METAL CHIP 22 5% 1/10W		
5554		M	RESISTOR		R4024	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5555		M	RESISTOR		R4025	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5556		M	RESISTOR		R4028	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5557		M	RESISTOR		R4029	1-216-864-11	SHORT CHIP 0		
5558		M	RESISTOR		R4030	1-216-864-11	SHORT CHIP 0		
5559		M	RESISTOR		R4031	1-216-864-11	SHORT CHIP 0		
5560		M	RESISTOR		R4032	1-216-864-11	SHORT CHIP 0		
5561		M	RESISTOR		R4033	1-216-864-11	SHORT CHIP 0		
5562		M	RESISTOR		R4034	1-216-864-11	SHORT CHIP 0		
5563		M	RESISTOR		R4035	1-216-864-11	SHORT CHIP 0		
5564		M	RESISTOR		R4036	1-216-864-11	SHORT CHIP 0		
5565		M	RESISTOR		R4037	1-216-864-11	SHORT CHIP 0		
5566		M	RESISTOR		R4038	1-216-864-11	SHORT CHIP 0		
5567		M	RESISTOR		R4039	1-216-864-11	SHORT CHIP 0		
5568		M	RESISTOR		R4040	1-216-864-11	SHORT CHIP 0		
5569		M	RESISTOR		R4041	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5570		M	RESISTOR		R4042	1-216-864-11	SHORT CHIP 0		
5571		M	RESISTOR		R4043	1-216-864-11	SHORT CHIP 0		
5572		M	RESISTOR		R4044	1-216-801-11	METAL CHIP 22 5% 1/10W		
5573		M	RESISTOR		R4045	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5574		M	RESISTOR		R4047	1-216-864-11	SHORT CHIP 0		
5575		M	RESISTOR		R4048	1-216-809-11	METAL CHIP 100 5% 1/10W		
5576		M	RESISTOR		R4049	1-216-809-11	METAL CHIP 100 5% 1/10W		
5577		M	RESISTOR		R4050	1-216-805-11	METAL CHIP 47 5% 1/10W		
5578		M	RESISTOR		R4051	1-216-805-11	METAL CHIP 47 5% 1/10W		
5579		M	RESISTOR		R4052	1-216-805-11	METAL CHIP 47 5% 1/10W		
5580		M	RESISTOR		R4053	1-216-805-11	METAL CHIP 47 5% 1/10W		
5581		M	RESISTOR		R4054	1-216-805-11	METAL CHIP 47 5% 1/10W		
5582		M	RESISTOR		R4055	1-216-805-11	METAL CHIP 47 5% 1/10W		
5583		M	RESISTOR		R4056	1-216-805-11	METAL CHIP 47 5% 1/10W		
5584		M	RESISTOR		R4057	1-216-805-11	METAL CHIP 47 5% 1/10W		
5585		M	RESISTOR		R4058	1-216-809-11	METAL CHIP 100 5% 1/10W		
5586		M	RESISTOR		R4060	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5587		M	RESISTOR		R4061	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5588		M	RESISTOR		R4062	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W		
5589		M	RESISTOR		R4064	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5590		M	RESISTOR		R4100	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5591		M	RESISTOR		R4101	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5592		M	RESISTOR		R4102	1-218-840-11	METAL CHIP 510 0.5% 1/10W		
5593		M	RESISTOR		R4103	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5594		M	RESISTOR		R4104	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5595		M	RESISTOR		R4105	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5596		M	RESISTOR		R4106	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5597		M	RESISTOR		R4107	1-218-272-11	METAL CHIP 5.1K 5% 1/10W		
5598		M	RESISTOR		R4109	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5599		M	RESISTOR		R4110	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5600		M	RESISTOR		R4111	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5601		M	RESISTOR		R4112	1-216-864-11	SHORT CHIP 0		
5602		M	RESISTOR		R4113	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5603		M	RESISTOR		R4114	1-216-033-00	RES-CHIP 220 5% 1/10W		
5604		M	RESISTOR		R4115	1-216-033-00	RES-CHIP 220 5% 1/10W		
5605		M	RESISTOR		R4116	1-216-864-11	SHORT CHIP 0		
5606		M	RESISTOR		R4117	1-216-864-11	SHORT CHIP 0		
5607		M	RESISTOR		R4118	1-216-864-11	SHORT CHIP 0		
5608		M	RESISTOR		R4200	1-216-809-11	METAL CHIP 100 5% 1/10W		
5609		M	RESISTOR		R4201	1-216-809-11	METAL CHIP 100 5% 1/10W		
5610		M	RESISTOR		R4202	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5611		M	RESISTOR		R4203	1-216-828-11	METAL CHIP 3.9K 5% 1/10W		
5612		M	RESISTOR		R4204	1-216-834-11	METAL CHIP 12K 5% 1/10W		
5613		M	RESISTOR		R4205	1-216-834-11	METAL CHIP 12K 5% 1/10W		
5614		M	RESISTOR		R4206	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5615		M	RESISTOR		R4207	1-216-834-11	METAL CHIP 12K 5% 1/10W		
5616		M	RESISTOR		R4208	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5617		M	RESISTOR		R4209	1-216-834-11	METAL CHIP 12K 5% 1/10W		
5618		M	RESISTOR		R4210	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5619		M	RESISTOR		R4211	1-216-809-11	METAL CHIP 100 5% 1/10W		
5620		M	RESISTOR		R4212	1-216-809-11	METAL CHIP 100 5% 1/10W		
5621		M	RESISTOR		R4213	1-216-833-11	METAL CHIP 10K 5% 1/10W		

No.	#	Board	Type	Δ/μ	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5622		M	RESISTOR		R4214	1-216-809-11	METAL CHIP 100 5% 1/10W		
5623		M	RESISTOR		R4215	1-216-809-11	METAL CHIP 100 5% 1/10W		
5624		M	RESISTOR		R4216	1-216-793-11	METAL CHIP 4.7 5% 1/10W		
5625		M	RESISTOR		R4217	1-216-809-11	METAL CHIP 100 5% 1/10W		
5626		M	RESISTOR		R4218	1-216-801-11	METAL CHIP 22 5% 1/10W		
5627		M	RESISTOR		R4219	1-216-809-11	METAL CHIP 100 5% 1/10W		
5628		M	RESISTOR		R4220	1-216-797-11	METAL CHIP 10 5% 1/10W		
5629		M	RESISTOR		R4222	1-216-797-11	METAL CHIP 10 5% 1/10W		
5630		M	RESISTOR		R4223	1-216-809-11	METAL CHIP 100 5% 1/10W		
5631		M	RESISTOR		R4224	1-216-797-11	METAL CHIP 10 5% 1/10W		
5632		M	RESISTOR		R4225	1-216-797-11	METAL CHIP 10 5% 1/10W		
5633		M	RESISTOR		R4226	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5634		M	RESISTOR		R4227	1-216-864-11	SHORT CHIP 0		
5635		M	RESISTOR		R4229	1-216-797-11	METAL CHIP 10 5% 1/10W		
5636		M	RESISTOR		R4230	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5637		M	RESISTOR		R4231	1-216-797-11	METAL CHIP 10 5% 1/10W		
5638		M	RESISTOR		R4232	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5639		M	RESISTOR		R4234	1-216-797-11	METAL CHIP 10 5% 1/10W		
5640		M	RESISTOR		R4235	1-216-864-11	SHORT CHIP 0		
5641		M	RESISTOR		R4237	1-216-864-11	SHORT CHIP 0		
5642		M	RESISTOR		R4238	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5643		M	RESISTOR		R4239	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5644		M	RESISTOR		R4240	1-216-809-11	METAL CHIP 100 5% 1/10W		
5645		M	RESISTOR		R4241	1-216-836-11	METAL CHIP 18K 5% 1/10W		
5646		M	RESISTOR		R4242	1-216-809-11	METAL CHIP 100 5% 1/10W		
5647		M	RESISTOR		R4243	1-216-809-11	METAL CHIP 100 5% 1/10W		
5648		M	RESISTOR		R4244	1-216-809-11	METAL CHIP 100 5% 1/10W		
5649		M	RESISTOR		R4300	1-216-864-11	SHORT CHIP 0		
5650		M	RESISTOR		R4301	1-216-864-11	SHORT CHIP 0		
5651		M	RESISTOR		R4302	1-216-864-11	SHORT CHIP 0		
5652		M	RESISTOR		R4304	1-216-864-11	SHORT CHIP 0		
5653		M	RESISTOR		R4305	1-216-864-11	SHORT CHIP 0		
5654		M	RESISTOR		R4306	1-216-857-11	METAL CHIP 1M 5% 1/10W		
5655		M	RESISTOR		R4308	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5656		M	RESISTOR		R4311	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5657		M	RESISTOR		R4321	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5658		M	RESISTOR		R4322	1-216-864-11	SHORT CHIP 0		
5659		M	RESISTOR		R4323	1-216-864-11	SHORT CHIP 0		
5660		M	RESISTOR		R4324	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5661		M	RESISTOR		R4325	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5662		M	RESISTOR		R4326	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5663		M	RESISTOR		R4327	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5664		M	RESISTOR		R4329	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5665		M	RESISTOR		R4330	1-216-809-11	METAL CHIP 100 5% 1/10W		
5666		M	RESISTOR		R4331	1-216-801-11	METAL CHIP 22 5% 1/10W		
5667		M	RESISTOR		R4332	1-216-801-11	METAL CHIP 22 5% 1/10W		
5668		M	RESISTOR		R4333	1-216-809-11	METAL CHIP 100 5% 1/10W		
5669		M	RESISTOR		R4334	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5670		M	RESISTOR		R4336	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5671		M	RESISTOR		R4337	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5672		M	RESISTOR		R4339	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5673		M	RESISTOR		R4340	1-216-801-11	METAL CHIP 22 5% 1/10W		
5674		M	RESISTOR		R4341	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5675		M	RESISTOR		R4342	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5676		M	RESISTOR		R4343	1-216-801-11	METAL CHIP 22 5% 1/10W		
5677		M	RESISTOR		R4344	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5678		M	RESISTOR		R4345	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5679		M	RESISTOR		R4346	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		
5680		M	RESISTOR		R4347	1-216-853-11	METAL CHIP 470K 5% 1/10W		
5681		M	RESISTOR		R4348	1-216-847-11	METAL CHIP 150K 5% 1/10W		
5682		M	RESISTOR		R4349	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5683		M	RESISTOR		R4350	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5684		M	RESISTOR		R4351	1-216-853-11	METAL CHIP 470K 5% 1/10W		
5685		M	RESISTOR		R4352	1-216-847-11	METAL CHIP 150K 5% 1/10W		
5686		M	RESISTOR		R4354	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5687		M	RESISTOR		R4358	1-216-809-11	METAL CHIP 100 5% 1/10W		
5688		M	RESISTOR		R4359	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5689		M	RESISTOR		R4360	1-216-801-11	METAL CHIP 22 5% 1/10W		
5690		M	RESISTOR		R4361	1-216-801-11	METAL CHIP 22 5% 1/10W		
5691		M	RESISTOR		R4363	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5692		M	RESISTOR		R4364	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5693		M	RESISTOR		R4365	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5694		M	RESISTOR		R4368	1-216-821-11	METAL CHIP 1K 5% 1/10W		

No.	#	Board	Type	Δ/μ^*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5695		M	RESISTOR		R4370	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5696		M	RESISTOR		R4400	1-216-801-11	METAL CHIP 22 5% 1/10W		
5697		M	RESISTOR		R4401	1-216-801-11	METAL CHIP 22 5% 1/10W		
5698		M	RESISTOR		R4402	1-216-801-11	METAL CHIP 22 5% 1/10W		
5699		M	RESISTOR		R4403	1-216-801-11	METAL CHIP 22 5% 1/10W		
5700		M	RESISTOR		R4407	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5701		M	RESISTOR		R4408	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5702		M	RESISTOR		R4409	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5703		M	RESISTOR		R4411	1-216-801-11	METAL CHIP 22 5% 1/10W		
5704		M	RESISTOR		R4412	1-216-801-11	METAL CHIP 22 5% 1/10W		
5705		M	RESISTOR		R4413	1-216-801-11	METAL CHIP 22 5% 1/10W		
5706		M	RESISTOR		R4414	1-216-801-11	METAL CHIP 22 5% 1/10W		
5707		M	RESISTOR		R4415	1-216-801-11	METAL CHIP 22 5% 1/10W		
5708		M	RESISTOR		R4417	1-216-801-11	METAL CHIP 22 5% 1/10W		
5709		M	RESISTOR		R4418	1-216-801-11	METAL CHIP 22 5% 1/10W		
5710		M	RESISTOR		R4419	1-216-801-11	METAL CHIP 22 5% 1/10W		
5711		M	RESISTOR		R4421	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5712		M	RESISTOR		R4426	1-216-839-11	METAL CHIP 33K 5% 1/10W		
5713		M	RESISTOR		R4427	1-216-864-11	SHORT CHIP 0		
5714		M	RESISTOR		R4430	1-216-864-11	SHORT CHIP 0		
5715		M	RESISTOR		R4431	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
5716		M	RESISTOR		R4434	1-216-809-11	METAL CHIP 100 5% 1/10W		
5717		M	RESISTOR		R4435	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5718		M	RESISTOR		R4436	1-216-864-11	SHORT CHIP 0		
5719		M	RESISTOR		R4437	1-216-823-11	METAL CHIP 1.5K 5% 1/10W		
5720		M	RESISTOR		R4439	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5721		M	RESISTOR		R4440	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5722		M	RESISTOR		R4441	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5723		M	RESISTOR		R4442	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5724		M	RESISTOR		R4443	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5725		M	RESISTOR		R4444	1-216-801-11	METAL CHIP 22 5% 1/10W		
5726		M	RESISTOR		R4445	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5727		M	RESISTOR		R4446	1-216-817-11	METAL CHIP 470 5% 1/10W		
5728		M	RESISTOR		R4447	1-216-809-11	METAL CHIP 100 5% 1/10W		
5729		M	RESISTOR		R4448	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5730		M	RESISTOR		R4449	1-216-805-11	METAL CHIP 47 5% 1/10W		
5731		M	RESISTOR		R4450	1-216-805-11	METAL CHIP 47 5% 1/10W		
5732		M	RESISTOR		R4452	1-216-809-11	METAL CHIP 100 5% 1/10W		
5733		M	RESISTOR		R4453	1-216-809-11	METAL CHIP 100 5% 1/10W		
5734		M	RESISTOR		R4454	1-216-801-11	METAL CHIP 22 5% 1/10W		
5735		M	RESISTOR		R4455	1-216-805-11	METAL CHIP 47 5% 1/10W		
5736		M	RESISTOR		R4456	1-216-805-11	METAL CHIP 47 5% 1/10W		
5737		M	RESISTOR		R4457	1-216-805-11	METAL CHIP 47 5% 1/10W		
5738		M	RESISTOR		R4458	1-216-805-11	METAL CHIP 47 5% 1/10W		
5739		M	RESISTOR		R4459	1-216-805-11	METAL CHIP 47 5% 1/10W		
5740		M	RESISTOR		R4460	1-216-809-11	METAL CHIP 100 5% 1/10W		
5741		M	RESISTOR		R4461	1-216-809-11	METAL CHIP 100 5% 1/10W		
5742		M	RESISTOR		R4462	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5743		M	RESISTOR		R4464	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5744		M	RESISTOR		R4465	1-216-813-11	METAL CHIP 220 5% 1/10W		
5745		M	RESISTOR		R4466	1-216-857-11	METAL CHIP 1M 5% 1/10W		
5746		M	RESISTOR		R4467	1-216-805-11	METAL CHIP 47 5% 1/10W		
5747		M	RESISTOR		R4468	1-216-805-11	METAL CHIP 47 5% 1/10W		
5748		M	RESISTOR		R4469	1-216-801-11	METAL CHIP 22 5% 1/10W		
5749		M	RESISTOR		R4470	1-216-801-11	METAL CHIP 22 5% 1/10W		
5750		M	RESISTOR		R4471	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		
5751		M	RESISTOR		R4472	1-216-809-11	METAL CHIP 100 5% 1/10W		
5752		M	RESISTOR		R4473	1-216-809-11	METAL CHIP 100 5% 1/10W		
5753		M	RESISTOR		R4474	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5754		M	RESISTOR		R4475	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5755		M	RESISTOR		R4476	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5756		M	RESISTOR		R4477	1-216-801-11	METAL CHIP 22 5% 1/10W		
5757		M	RESISTOR		R4478	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5758		M	RESISTOR		R4479	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5759		M	RESISTOR		R4482	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5760		M	RESISTOR		R4483	1-216-805-11	METAL CHIP 47 5% 1/10W		
5761		M	RESISTOR		R4484	1-216-805-11	METAL CHIP 47 5% 1/10W		
5762		M	RESISTOR		R4485	1-216-805-11	METAL CHIP 47 5% 1/10W		
5763		M	RESISTOR		R4486	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5764		M	RESISTOR		R4487	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5765		M	RESISTOR		R4488	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5766		M	RESISTOR		R4489	1-216-809-11	METAL CHIP 100 5% 1/10W		
5767		M	RESISTOR		R4490	1-216-809-11	METAL CHIP 100 5% 1/10W		

No.	#	Board	Type	Δ /*	Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5768		M	RESISTOR		R4491	1-218-668-11	METAL CHIP 100 0.5% 1/10W		
5769		M	RESISTOR		R4492	1-216-809-11	METAL CHIP 100 5% 1/10W		
5770		M	RESISTOR		R4493	1-216-805-11	METAL CHIP 47 5% 1/10W		
5771		M	RESISTOR		R4494	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5772		M	RESISTOR		R4495	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5773		M	RESISTOR		R4497	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5774		M	RESISTOR		R4498	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5775		M	RESISTOR		R4499	1-216-805-11	METAL CHIP 47 5% 1/10W		
5776		M	RESISTOR		R4500	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5777		M	RESISTOR		R4501	1-216-805-11	METAL CHIP 47 5% 1/10W		
5778		M	RESISTOR		R4502	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5779		M	RESISTOR		R4503	1-216-805-11	METAL CHIP 47 5% 1/10W		
5780		M	RESISTOR		R4504	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5781		M	RESISTOR		R4505	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5782		M	RESISTOR		R4506	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5783		M	RESISTOR		R4507	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5784		M	RESISTOR		R4508	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5785		M	RESISTOR		R4509	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5786		M	RESISTOR		R4510	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5787		M	RESISTOR		R4511	1-216-864-11	SHORT CHIP 0		
5788		M	RESISTOR		R4512	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5789		M	RESISTOR		R4513	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5790		M	RESISTOR		R4514	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5791		M	RESISTOR		R4515	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5792		M	RESISTOR		R4516	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5793		M	RESISTOR		R4518	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5794		M	RESISTOR		R4520	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5795		M	RESISTOR		R4521	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5796		M	RESISTOR		R4522	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5797		M	RESISTOR		R4523	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5798		M	RESISTOR		R4524	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5799		M	RESISTOR		R4525	1-216-809-11	METAL CHIP 100 5% 1/10W		
5800		M	RESISTOR		R4526	1-216-839-11	METAL CHIP 33K 5% 1/10W		
5801		M	RESISTOR		R4527	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5802		M	RESISTOR		R4529	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5803		M	RESISTOR		R4530	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5804		M	RESISTOR		R4531	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5805		M	RESISTOR		R4532	1-216-809-11	METAL CHIP 100 5% 1/10W		
5806		M	RESISTOR		R4533	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5807		M	RESISTOR		R4534	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5808		M	RESISTOR		R4535	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5809		M	RESISTOR		R4536	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5810		M	RESISTOR		R4537	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5811		M	RESISTOR		R4539	1-216-809-11	METAL CHIP 100 5% 1/10W		
5812		M	RESISTOR		R4540	1-216-809-11	METAL CHIP 100 5% 1/10W		
5813		M	RESISTOR		R4541	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5814		M	RESISTOR		R4542	1-216-809-11	METAL CHIP 100 5% 1/10W		
5815		M	RESISTOR		R4544	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5816		M	RESISTOR		R4545	1-216-801-11	METAL CHIP 22 5% 1/10W		
5817		M	RESISTOR		R4546	1-216-835-11	METAL CHIP 15K 5% 1/10W		
5818		M	RESISTOR		R4547	1-216-832-11	METAL CHIP 8.2K 5% 1/10W		
5819		M	RESISTOR		R4548	1-216-809-11	METAL CHIP 100 5% 1/10W		
5820		M	RESISTOR		R4549	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5821		M	RESISTOR		R4550	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5822		M	RESISTOR		R4551	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5823		M	RESISTOR		R4552	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5824		M	RESISTOR		R4553	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5825		M	RESISTOR		R4554	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5826		M	RESISTOR		R4555	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5827		M	RESISTOR		R4559	1-216-845-11	METAL CHIP 100K 5% 1/10W		
5828		M	RESISTOR		R4560	1-216-817-11	METAL CHIP 470 5% 1/10W		
5829		M	RESISTOR		R4561	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5830		M	RESISTOR		R4563	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5831		M	RESISTOR		R4564	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5832		M	RESISTOR		R4565	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5833		M	RESISTOR		R4566	1-216-864-11	SHORT CHIP 0		
5834		M	RESISTOR		R4567	1-216-864-11	SHORT CHIP 0		
5835		M	RESISTOR		R4568	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5836		M	RESISTOR		R4572	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5837		M	RESISTOR		R4573	1-216-864-11	SHORT CHIP 0		
5838		M	RESISTOR		R4574	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5839		M	RESISTOR		R4576	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5840		M	RESISTOR		R4577	1-216-839-11	METAL CHIP 33K 5% 1/10W		

No.	#	Board	Type		Ref. No.	Part No.	Description	Remarks-1	Remarks-2
5841		M	RESISTOR		R4578	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5842		M	RESISTOR		R4579	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5843		M	RESISTOR		R4580	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5844		M	RESISTOR		R4583	1-216-864-11	SHORT CHIP 0		
5845		M	RESISTOR		R4584	1-216-864-11	SHORT CHIP 0		
5846		M	RESISTOR		R4585	1-216-864-11	SHORT CHIP 0		
5847		M	RESISTOR		R4586	1-216-864-11	SHORT CHIP 0		
5848		M	RESISTOR		R4587	1-216-864-11	SHORT CHIP 0		
5849		M	RESISTOR		R4588	1-216-864-11	SHORT CHIP 0		
5850		M	RESISTOR		R4589	1-216-864-11	SHORT CHIP 0		
5851		M	RESISTOR		R4592	1-216-864-11	SHORT CHIP 0		
5852		M	RESISTOR		R4593	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5853		M	RESISTOR		R4594	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5854		M	RESISTOR		R4595	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5855		M	RESISTOR		R4596	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5856		M	RESISTOR		R4597	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5857		M	RESISTOR		R4599	1-216-864-11	SHORT CHIP 0		
5858		M	RESISTOR		R4601	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		
5859		M	RESISTOR		R4603	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5860		M	RESISTOR		R4604	1-216-864-11	SHORT CHIP 0		
5861		M	RESISTOR		R4606	1-216-864-11	SHORT CHIP 0		
5862		M	RESISTOR		R4607	1-216-864-11	SHORT CHIP 0		
5863		M	RESISTOR		R4608	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5864		M	RESISTOR		R4609	1-216-833-11	METAL CHIP 10K 5% 1/10W		
5865		M	RESISTOR		R4612	1-216-821-11	METAL CHIP 1K 5% 1/10W		
5866		M	RESISTOR		R4613	1-216-809-11	METAL CHIP 100 5% 1/10W		
5867		M	RESISTOR		R4614	1-216-864-11	SHORT CHIP 0		
5868		M	RESISTOR		R4615	1-216-864-11	SHORT CHIP 0		
5869		M	RESISTOR		R4616	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W		
5870		M	RESISTOR		R4617	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W		
5871		M	RESISTOR		R4619	1-216-864-11	SHORT CHIP 0		
5872		M	RESISTOR		R4620	1-216-864-11	SHORT CHIP 0		
5873		M	RESISTOR		R4623	1-216-864-11	SHORT CHIP 0		
5874		M	RESISTOR		R4631	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5875		M	RESISTOR		R4632	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5876		M	RESISTOR		R4633	1-216-841-11	METAL CHIP 47K 5% 1/10W		
5877		M	RESISTOR		R4635	1-216-837-11	METAL CHIP 22K 5% 1/10W		
5878		M	NETWORK		RB4000	1-234-370-21	RES, NETWORK 22X4 (1005)		
5879		M	NETWORK		RB4001	1-234-370-21	RES, NETWORK 22X4 (1005)		
5880		M	NETWORK		RB4002	1-234-370-21	RES, NETWORK 22X4 (1005)		
5881		M	NETWORK		RB4003	1-234-370-21	RES, NETWORK 22X4 (1005)		
5882		M	NETWORK		RB4004	1-234-370-21	RES, NETWORK 22X4 (1005)		
5883		M	NETWORK		RB4005	1-233-796-11	RES, NETWORK (1608)		
5884		M	NETWORK		RB4006	1-239-711-91	NETWORK RESISTOR (CHIP) 0		
5885		M	NETWORK		RB4007	1-239-711-91	NETWORK RESISTOR (CHIP) 0		
5886		M	NETWORK		RB4008	1-233-796-11	RES, NETWORK (1608)		
5887		M	NETWORK		RB4009	1-234-371-21	RES, NETWORK 47X4 (1005)		
5888		M	NETWORK		RB4010	1-234-371-21	RES, NETWORK 47X4 (1005)		
5889		M	NETWORK		RB4011	1-234-371-21	RES, NETWORK 47X4 (1005)		
5890		M	NETWORK		RB4012	1-234-371-21	RES, NETWORK 47X4 (1005)		
5891		M	NETWORK		RB4013	1-234-371-21	RES, NETWORK 47X4 (1005)		
5892		M	NETWORK		RB4014	1-234-371-21	RES, NETWORK 47X4 (1005)		
5893		M	NETWORK		RB4015	1-234-371-21	RES, NETWORK 47X4 (1005)		
5894		M	VARISTOR		VD4100	1-805-043-11	ABSORBER, CHIP SURGE		
5895		M	VARISTOR		VD4101	1-805-043-11	ABSORBER, CHIP SURGE		
5896		M	VARISTOR		VD4102	1-805-043-11	ABSORBER, CHIP SURGE		
5897		M	VARISTOR		VD4103	1-805-043-11	ABSORBER, CHIP SURGE		
5898		M	VARISTOR		VD4104	1-805-043-11	ABSORBER, CHIP SURGE		
5899		M	VARISTOR		VD4105	1-805-043-11	ABSORBER, CHIP SURGE		
5900		M	VARISTOR		VD4106	1-805-043-11	ABSORBER, CHIP SURGE		
5901		M	VARISTOR		VD4107	1-805-043-11	ABSORBER, CHIP SURGE		
5902		M	VARISTOR		VD4108	1-805-043-11	ABSORBER, CHIP SURGE		
5903		M	VARISTOR		VD4109	1-805-043-11	ABSORBER, CHIP SURGE		
5904		M	CRYSTAL		X4000	1-795-739-22	CRYSTAL OSCILLATOR (SMD)		
5905		M	CRYSTAL		X4200	1-781-465-21	VIBRATOR, CRYSTAL		
5906		M	CRYSTAL		X4400	1-781-829-22	OSCILLATOR, CRYSTAL (SMD)		
5907		M	CRYSTAL		X4401	1-813-095-11	VIBRATOR, CRYSTAL		

